


- S2 Front Seat Inner Belt Assembly LH
- S3 Parking Brake Switch Assembly
- S4 Front Door Courtesy Light Switch Assembly RH
- S6 Front Door Courtesy Light Switch Assembly LH
- S7 No. 3 Room Light Assembly
- S8 No. 3 Room Light Assembly
- S15 Parking Brake Switch Assembly
- S30 Tire Pressure Warning ECU and Receiver
- S31 Front Seat Belt Warning Occupant Detection Sensor LH
- S32 Front Seat Inner Belt Assembly LH
- S33 Tire Pressure Warning ECU and Receiver
- T3 Fuel Pump
- T4 Fuel Sender Gage Assembly (Rear)
- T10 Trailer Socket
- T11 Back Buzzer Assembly
- T12 License Plate Light Assembly RH
- T13 License Plate Light Assembly RH
- T14 Rear Combination Light Assembly RH
- T15 License Plate Light Assembly LH
- T16 License Plate Light Assembly LH
- T17 Rear Combination Light Assembly LH
- T18 Rear Fog Light Socket & Wire
- V1 Rear Differential Lock Position Switch
- V2 Differential Lock Shift Actuator
- V3 Rear Speed Sensor (Skid Control Sensor Wire)
- W1 Fuel Tank Solenoid Return Valve Assembly
- W2 Fuel Tank Solenoid Main Valve Assembly
- X1 Fuel Sender Gage Assembly (Rear)
- X2 Fuel Pump (Sub)
- i1 Outer Rear View Mirror Assembly LH
- j1 Outer Rear View Mirror Assembly RH

Position of Parts in Body (LHD 2-Door Pick-Up)

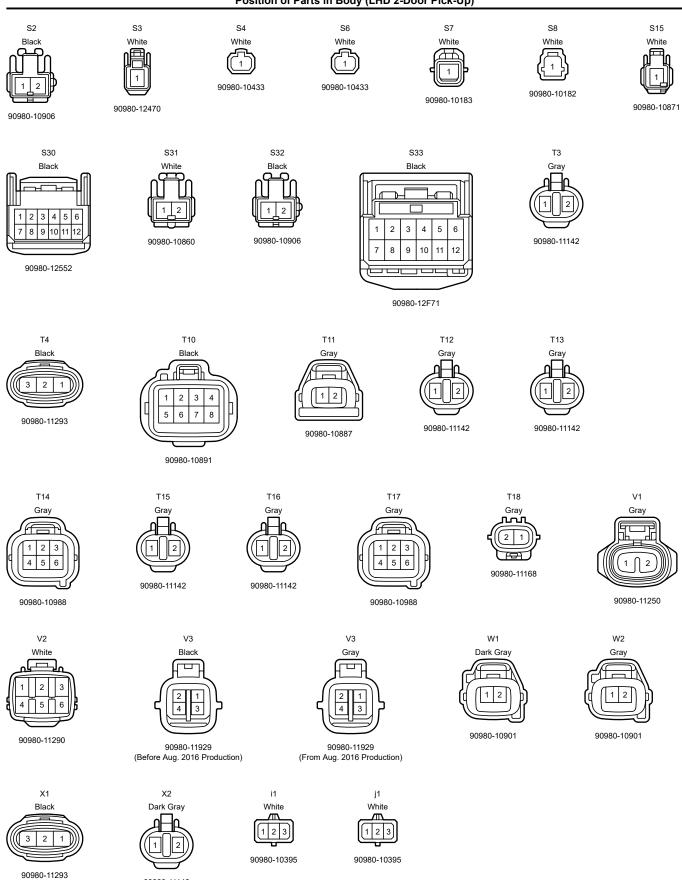

90980-11142