


- C23 Magnet Clutch Assembly
- Power Steering Oil Pressure Switch C28
- C30 Engine Oil Pressure Switch Assembly
- Back-Up Light Switch Assembly C32
- Center Differential Lock Indicator Switch (No. 1 Transfer Indicator Switch) C35
- Transfer L4 Position Switch (No. 1 Transfer Indicator Switch) C36
- C39
- C41 Intake Mass Air Flow Meter Sub-Assembly
- C42 Crank Position Sensor
- Generator Assembly C43
- C44 Generator Assembly
- C45 Glow Plug Assembly No. 1
- C47 EGR Valve Assembly (Bank 1)
- C48 Injector Assembly No. 1
- Injector Assembly No. 3 C49
- Diesel Throttle Body Assembly (Bank 1) C50
- Injector Assembly No. 5 C51
- Injector Driver (EDU) (No. 2) C52
- Injector Driver (EDU) (No. 2) C53
- Injector Driver (EDU) (No. 1) C54
- Injector Driver (EDU) (No. 1) C55
- Injector Assembly No. 7
- C57
- Diesel Throttle Body Assembly (Bank 1) C58
- C60 Intake Air Temperature Sensor
- Diesel Throttle Body Assembly (Bank 2) C61
- C62 Glow Plug Assembly No. 2
- Injector Assembly No. 8 C63
- Injector Assembly No. 6 C64
- Diesel Throttle Body Assembly (Bank 2) C65
- No. 2 EGR Valve Assembly (Bank 2) C66
- Injector Assembly No. 2 C67
- C68 Cam Position Sensor
- C69 Diesel Engine Coolant Temperature Sensor
- Oil Pressure Sender Gage Assembly C74
- C106 EGR Valve Assembly (Bank 1)
- C107 Injector Assembly No. 1
- C108 Injector Assembly No. 3
- C109 Injector Assembly No. 5
- C110 Injector Assembly No. 7
- C113 Injector Assembly No. 6

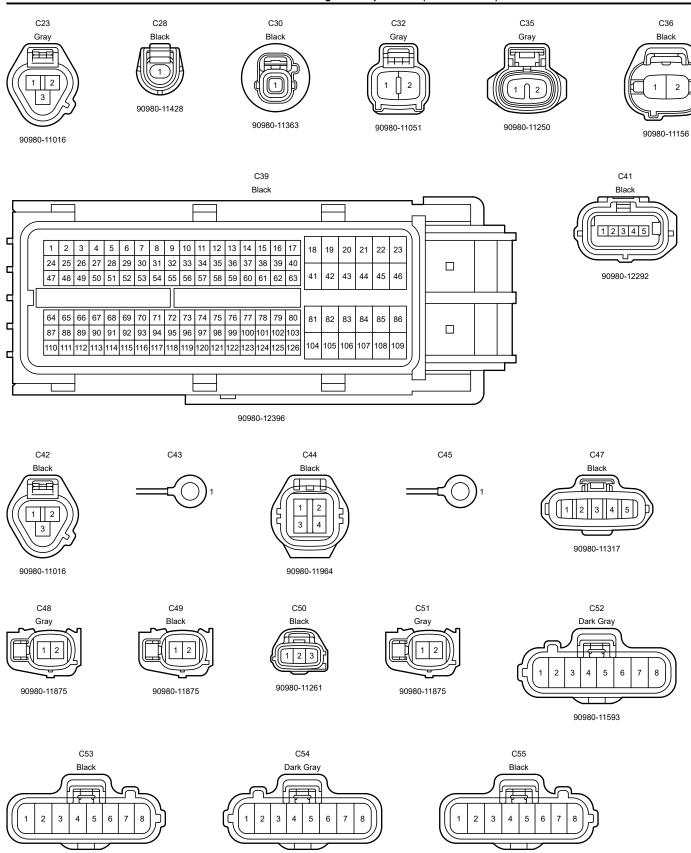

90980-11592

90980-11593

90980-11592

