







Keyboard Controller

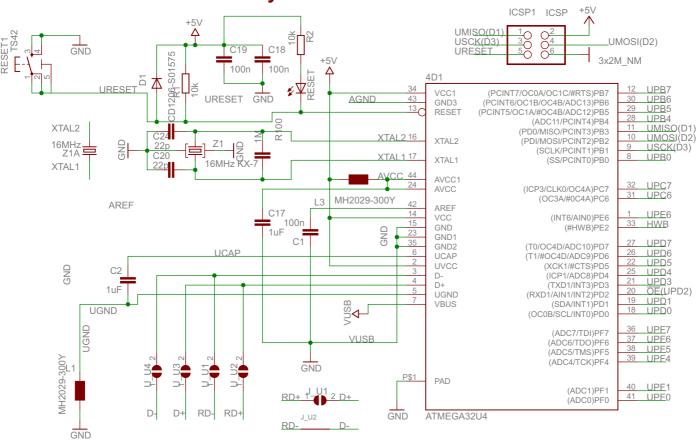

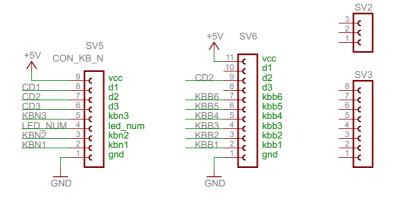

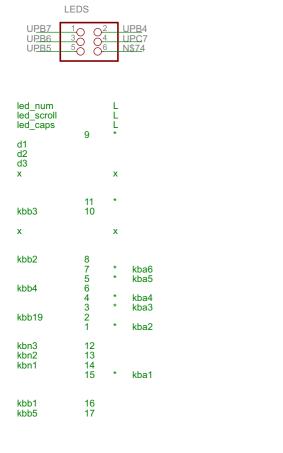

_D0
D1
_D2
_D3
_D4
MOSI8535
MISO8535
SCK8535
PPC0(BS2)
SWCLK(XTAL1)
PPC1(RB)
PPC2(OE)
PPC3(WR)
PPC4(BS1)
PPC5(XA0)
PPC6(XA1)
PPC7(PAGEL)
VTG
TRST(RESET)

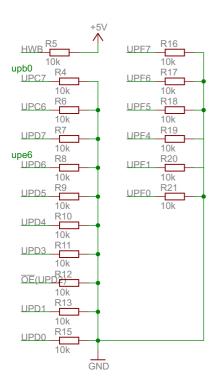

HVPP JP

