TAPE·FOUR

MODEL TF-4 · 4-TRACK CASSETTE MULTITRACKER

OWNER'S MANUAL

How to record with TAPE·FOUR: the deck, the cassettes, the tape switch, noise reduction, instruments and MIDI. Each control comes with what you should expect to hear when you use it.



WINDOWS · MACOS · LINUX

OCTOBER 2026

CONTENTS

1 **WELCOME**
What TAPE·FOUR is and how it differs from a DAW

2 **GETTING STARTED**
Install, audio interface, MIDI, plug-ins

3 **THE FRONT PANEL**
Every control, at a glance

4 **CASSETTES**
Inserting tapes, the shelf, label and inlay

5 **THE FOUR TAPE TYPES**
BASIC, SD, XR and MX, and how they sound

6 **THE TAPE SWITCH**
Bias and EQ, and what each mismatch does

7 **TRANSPORT AND COUNTER**
Recording, punch-in, return to zero

8 **SIGNAL CHAINS**
Inputs, instruments, effects, hardware synths, bounces

9 **THE MIXER**
Gain, EQ, pan, faders, meters, mute, solo, arm

10 **SPEED AND PITCH**
1⅞ and 3¾ ips, varispeed

11 **NOISE REDUCTION**
The three types, and how they meet the tape

12 **TAPE CHARACTER**
Hiss, wow, flutter, drive and the rest

13 **MIDI, MIDI LEARN AND THE DECK STATE**
Controllers, MPE, synths out, learn, MMC, recall

14 **REFERENCE**
Shortcuts, files, troubleshooting, measurements

1 WELCOME

TAPE·FOUR is a four-track cassette recorder that runs on your computer. It records onto a virtual cassette, works with any audio interface your computer has, on Windows, macOS or Linux, and plays plug-in instruments and effects (CLAP, VST3 and LV2 everywhere, Audio Units on a Mac and LADSPA on Linux) as if they were plugged into the deck.

It is deliberately not a DAW. Everything about it follows the workflow of a portable cassette multitracker:

- **Four mono tracks on one side of a tape, all running in one direction.** The tape is a C-46, C-60 or C-90, and the length of your song is limited by the length of the tape.
- **No undo.** Recording replaces whatever was on the tape under the armed tracks. To keep a take, don't record over it.
- **Everything goes to tape as audio.** There are no MIDI tracks. Each track has a signal chain in front of it, the way a rack of gear sits in front of a real deck: instruments (plug-ins, the built-ins or a hardware synth), MIDI effects and audio effects. You play it, and what comes out of the chain is recorded as sound.
- **The tape is part of the sound.** Each cassette type has its own headroom, treble limit, hiss and grain, taken from measurements of real tapes. The tape switch, noise reduction, speed and every bounce change the sound, just as they do on a real deck.

ABOUT THE SCREENSHOTS

The screenshots in this manual were taken on a test machine with no audio interface or MIDI devices connected. That's why the setup display reads `NO AUDIO DEVICE` and the audio tracks read `INPUT NOT ACTIVE`. On your computer these show your interface and its inputs.

2 GETTING STARTED


INSTALLING

Open the repository's **Actions** tab on GitHub, pick the latest green **Build** run, and download the one for your computer. Nothing needs installing. The version number (0.2.*build*) is in the window's title bar.

COMPUTER	DOWNLOAD	THEN
Windows, 64-bit	TapeFour-windows-x64	Unzip and run `TapeFour.exe`. Windows may warn that it comes from an unknown publisher, because it isn't code-signed: choose **More info → Run anyway**.
Mac, Apple silicon or Intel, macOS 11 or later	TapeFour-macos-universal	Unzip and move `TapeFour.app` to Applications. It isn't notarised, so the first time, right-click it and choose **Open**. Allow microphone access when asked: macOS asks this for any program that records from an audio input.
Linux, 64-bit	TapeFour-linux-x64	Extract the archive and run `TapeFour`. It uses ALSA, which every distribution has, and JACK when a JACK server is running. It plays CLAP, VST3, LV2 and LADSPA plug-ins.

AUDIO INTERFACE

Click the amber display at the top right of the deck (`SETUP ›`) to open Setup, then go to the **Audio** tab.

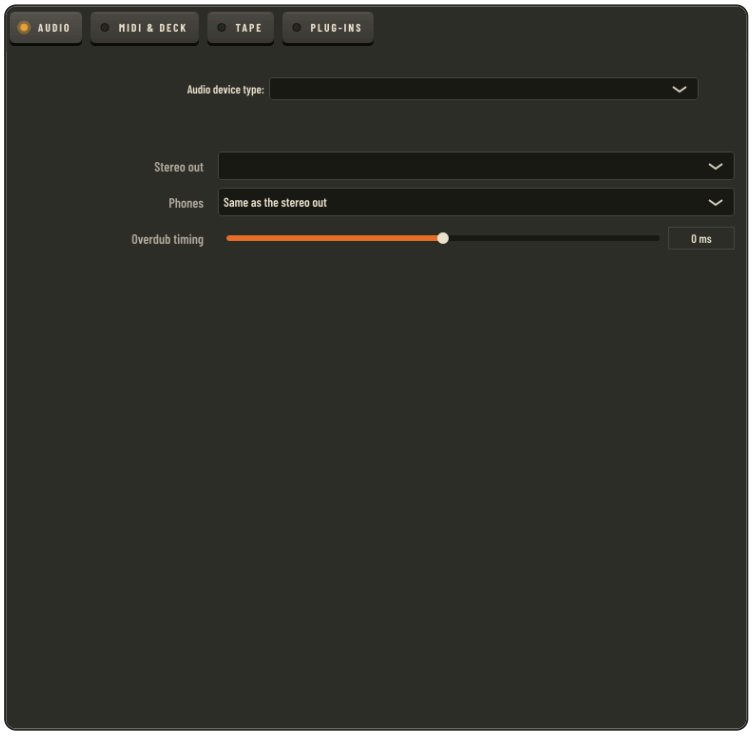

Setup → Audio. Choose the audio system and your interface, then the sample rate and buffer size, and the outputs.

SETTING	WHAT IT DOES	WHAT TO EXPECT
Audio device type, device	Chooses the audio system (see the table below) and the interface.	The setup display on the deck shows the system, sample rate, buffer size and round-trip latency. The first time you start, TapeFour opens the computer's usual device; on Windows it picks an ASIO driver if one is installed.
Sample rate, buffer	The interface's sample rate and block size.	A smaller buffer gives lower latency when you play live, but uses more CPU. 128 samples at 48 kHz is a good starting point.
Stereo out	The output pair the mix goes to.	The master fader controls this pair.
Phones	A second output pair, or the same as the stereo out.	The **PHONES** knob on the master strip sets its level, separately from the master fader.
Overdub timing	±50 ms trim on top of the latency the driver reports.	Use it if parts recorded through the interface (audio inputs and hardware synths) land slightly early or late against what is already on tape. Positive values move recordings earlier. Instruments and bounces don't go through the interface, so they aren't affected.

AUDIO SYSTEM	ON	WHAT TO EXPECT
ASIO	Windows	Your interface's own driver: the lowest latency. The best choice for overdubbing.
Windows Audio (WASAPI)	Windows	Works with any device, including the computer's own sound. **Exclusive Mode** and **Low Latency Mode** bring the latency down.
DirectSound	Windows	The oldest and slowest. For a device nothing else will open.
CoreAudio	macOS	Every Mac interface. To use two interfaces at once, combine them into an aggregate device in Audio MIDI Setup.
ALSA	Linux	Straight to the hardware. A `hw:` device gives the lowest latency, but no other program can use the interface at the same time.
JACK	Linux	Listed when a JACK server (or PipeWire's JACK support) is running. TapeFour shares the interface with other programs.

Whatever the system, recordings line up with what you heard while playing: TapeFour shifts each recording by the interface's reported latency. Parts played through the interface are shifted by the round trip (input and output); instruments only by the output, since they're made inside the computer; bounces not at all, since they come straight off the tape.

Every change is saved straight away. If the saved driver can't be opened at start-up (for example, because another program is using it), the deck tells you, and keeps your choice for next time.

MIDI CONTROLLERS AND SYNTHS

In **Setup → MIDI & Deck**, tick the controllers you want to use and the MIDI outputs your hardware synths are on. Chapter 13 covers this in full.

PLUG-INS

In **Setup → Plug-ins**, choose **Options...** and scan each format you use. Plug-ins found here (instruments, MIDI effects and audio effects) appear in each track's signal chain. Each plug-in is scanned in a separate helper copy of TAPE·FOUR, so a plug-in that crashes or hangs while being scanned can't take the program down: it is set aside and the scan carries on.

FORMAT	ON	LOOKED FOR IN
CLAP	Windows, macOS, Linux	Windows: `Common Files\CLAP` (in Program Files) and `%LOCALAPPDATA%\Programs\Common\CLAP`. Mac: `/Library/Audio/Plug-Ins/CLAP` and the same in your user Library. Linux: `~/.clap`, `/usr/lib/clap`, `/usr/local/lib/clap`. Also any folders in the `CLAP_PATH` environment variable.
VST3	Windows, macOS, Linux	The standard VST3 folders.
Audio Units	macOS	Whatever macOS has installed.
LV2	Windows, macOS, Linux	The standard LV2 folders (on Linux `~/.lv2`, `/usr/lib/lv2`, `/usr/local/lib/lv2`).
LADSPA	Linux	The standard LADSPA folders. LADSPA plug-ins are effects only.

Many plug-ins come in several formats. The list in a track's chain shows each plug-in once, in the best format you have: CLAP, then VST3, then Audio Units, LV2 and LADSPA. A deck you saved keeps the format it was made with. TAPE·FOUR also has two built-in instruments, **TF Poly Synth** and **TF Tine Piano**, and three built-in effects, **TF Plate**, **TF Spring Reverb** and **TF Tape Echo**, so you can start without any plug-ins.



Setup → Plug-ins. Scan once; the list is remembered.

3 THE FRONT PANEL

The deck is laid out like a portastudio: the mixer runs the full height on the left, and the tape section is a column on the right, with the cassette at the top and the transport below it. The window can be resized; the deck keeps its 16:9 shape.



Every key on the deck works the same way: the LED above its label lights when it's on, and the key itself never changes colour. The colours mean the same thing everywhere: red for record and arm, green for play and a tape that matches the switch, amber for a mode that's on or a mismatch, orange for mute and yellow for solo. Keys that just do something once (EJECT, RESET, RTZ) have no LED.

1. **Setup display.** Shows the audio driver and buffer. Click it to open Setup.
2. **MIDI IN / MIDI OUT lamps.** They flash when notes come in from a controller or go out to a hardware synth.
3. **Cassette.** The tape moves from the left spool to the right as it plays. Double-click the label to write on it.
4. **Inlay.** Click it to take the J-card out and write the track list.
5. **EJECT.** Puts in a new blank tape or loads one from the shelf. It fades while the tape is running: stop the tape first.
6. **Tape switch.** Three keys, NORMAL, CHROME and METAL bias and EQ; the lit one is where the switch is (chapter 6).
7. **Tape counter**, with **RESET** (set 000 here) and **RTZ** (return to 000).
8. **Status display.** Transport state, time remaining, and warnings such as mismatches.
9. **Transport keys**: REC, REW, F.FWD, PLAY, STOP. The LEDs in REC and PLAY light while they're engaged.
10. **Pitch**: varispeed, smoothly from −12% to +12%.
11. **Tape speed**: 1⅞ or 3¾ inches per second; the lit key is the speed.
12. **Noise reduction** on or off; its LED shows which.
13. **NR type display.** Click it to choose the type and the tape character in Setup.
14. **Track display.** What plays the track, which controller and input feed it, its signal chain as a row of blocks, and the NR, EQ and MIDI lamps. Click it to open the track's signal chain (chapter 8); double-click it to open the window of the first plug-in in the chain.
15. **Gain, EQ and pan.** HIGH, MID with its FREQ knob, and LOW.
16. **Meter and fader.** 0 VU on the meter is Dolby level on tape.
17. **MUTE, SOLO and ARM**, each with its own lamp. Mute silences the track, solo picks what you hear, and an armed track plays its live input and records when you press REC (chapter 9).


18 **Master strip.** Phones level, stereo meter and master fader.

19 **LEARN.** MIDI learn: map knobs, faders and buttons on your controller to the deck (chapter 13).

4 CASSETTES

PUTTING IN A TAPE

With the tape stopped, press **EJECT**. The menu's top half inserts a new blank tape: first choose the cassette (BASIC, SD, XR or MX), then the length. The bottom half, the **tape shelf**, lists every tape you have made. The tape that's in the deck is ticked.

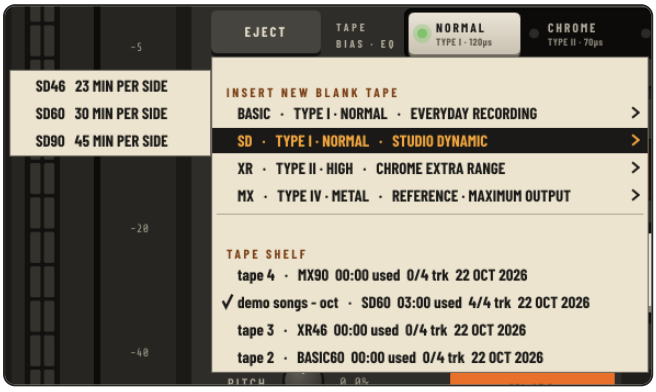

Inserting a blank. Choose the cassette, then the length.



The tape shelf. Each entry shows the label, cassette, minutes used, tracks used and date.

LENGTH	PER SIDE	AT 1⅞ IPS	AT 3¾ IPS	SPOOLS
C-46	23 min	23:00	11:30	Smallest packs
C-60	30 min	30:00	15:00	Medium
C-90	45 min	45:00	22:30	Largest packs


Like a real 4-track, TAPE·FOUR uses one side only, with all four tracks running the same way. When the tape reaches the end, the transport stops and the status display shows `END OF TAPE`.

SAVING

You never need to save. A tape is written to disk once it has been stopped for a second, and again whenever you change it. It is also saved when you eject it and when you quit. The deck remembers which tape was in when you quit and loads it next time.

LABEL AND INLAY

Double-click the label on the cassette to write on it. Click the inlay beside the cassette to take the J-card out of its case and write on it: the title, up to eight songs with their counter numbers, a note for each track, whether you recorded with NR, the speed, and the date. Click outside the card, press `Esc` or click **X** to put it back. The title on the inlay and the label on the cassette are the same text, so changing one changes the other.

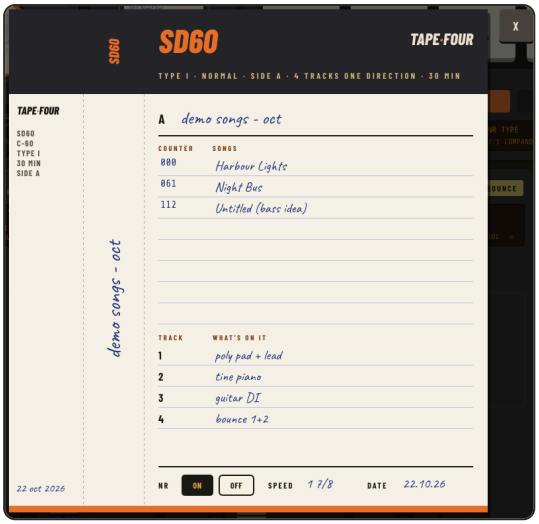

The inlay, opened out: back flap, spine and front. Its colours follow the cassette type.

5 THE FOUR TAPE TYPES

Each cassette in TAPE·FOUR behaves like a real tape. Its headroom, treble limit, hiss, grain and output level come from published lab measurements of a real cassette of that kind.

The figures are in dB relative to **Dolby level**, the tape's reference level. On TAPE·FOUR that is **0 VU** on the meters, or −12 dBFS. All figures are at 1⅞ ips without noise reduction.

TERM	MEANING	WHAT YOU HEAR
MOL 400 Hz	Maximum output level: where a 400 Hz tone reaches 3% distortion.	How loud you can record before the tape thickens and then distorts. Bass gets a little less room than the mids, as on real tape.
SOL 10 kHz	Saturation output level for treble.	How loud cymbals, hi-hats and bright synths can go before the tape squashes them. Treble saturates long before the mids, especially at 1⅞ ips.
S/N	Hiss on blank tape, A-weighted, below Dolby level.	The hiss in quiet passages.
Mod. noise	Modulation noise: grain that rides on the signal.	A fine roughness on sustained notes. It gets louder and quieter with the music, so noise reduction can't remove it.
Sensitivity	How loud the tape plays back what you recorded.	A small level shift on every pass through the tape. You notice it after several bounces.
EQ	The playback EQ time constant: 120 µs or 70 µs.	70 µs tapes have less treble hiss.



BASIC

TYPE I · NORMAL BIAS · 120 µs · MODELLED ON SONY HF

A budget ferric tape, the kind that came in multipacks. It has the least headroom and the most hiss and grain of the four. It sounds warm and slightly fuzzy, and compresses early if you record hot. It's good for sketches, lo-fi textures and anything you want to sound like an old demo.

MOL 400 / 100 Hz	+2.4 / +2.0 dB
SOL 10 kHz	−10.3 dB
S/N	54.3 dB(A)
Mod. noise	−36.1 dB
Sensitivity	−1.0 dB



SD

TYPE I · NORMAL BIAS · 120 µs · MODELLED ON TDK AD

A premium ferric tape and the all-rounder. It has good mid-range headroom, the best treble headroom of the Type I tapes, and moderate hiss. Tapes made before tape types existed play as SD. It's the tape to reach for when you don't have a reason to pick another.

MOL 400 / 100 Hz	+6.2 / +3.8 dB
SOL 10 kHz	−8.2 dB
S/N	60.3 dB(A)
Mod. noise	−44.3 dB
Sensitivity	−0.3 dB



XR

TYPE II · HIGH (CHROME) BIAS · 70 µs · MODELLED ON TDK SA

A chrome-position tape. Its 70 µs playback EQ makes the hiss quieter and less bright, and it plays back slightly hot. It has the least treble headroom of the four, so loud bright sounds dull and compress first, especially at 1⅞ ips. It's clean and quiet for vocals, acoustic instruments and pads. For bright, loud material, use 3¾ ips or MX.

MOL 400 / 100 Hz	+4.4 / +3.4 dB
SOL 10 kHz	−11.2 dB
S/N	60.9 dB(A)
Mod. noise	−47.2 dB
Sensitivity	+1.1 dB



MX

TYPE IV · METAL BIAS · 70 µs · MODELLED ON MAXELL MX

A metal tape. It has the most headroom everywhere (about 3 dB more mid-range and 1.4 dB more treble than SD), the lowest grain and the lowest hiss. It takes hot levels and bright material without complaint. It's the closest a cassette gets to transparent.

MOL 400 / 100 Hz	+9.1 / +8.0 dB
SOL 10 kHz	−6.8 dB
S/N	62.7 dB(A)
Mod. noise	−50.4 dB
Sensitivity	+0.8 dB

CHOOSING A TAPE: WHAT TO EXPECT

IF YOU…	BASIC	SD	XR	MX
record a vocal peaking at +3 VU	Audibly thick, a little gritty	Clean, slightly rounded	Clean	Clean
record hi-hats at 0 VU at 1⅞	Softened, a bit dull	Mostly intact	Noticeably dulled	Intact

IF YOU…	BASIC	SD	XR	MX
listen to blank tape (NR off)	Most hiss	About 6 dB less	Less, and darker	Least
hold a long synth note	Slight roughness	Faint	Very faint	Practically none
bounce three times	About 3 dB quieter	About 1 dB quieter	About 3 dB louder	About 2.4 dB louder

Generation loss comes from each tape's sensitivity, which is applied on every pass. Noise reduction doubles it (chapter 11).

6 THE TAPE SWITCH

The **TAPE · BIAS · EQ** switch under the cassette sets three things at once, as on a real deck: the record bias, the record EQ and the playback EQ.



A mismatch. An MX (metal) tape is loaded but the switch is at NORMAL. The LED on the NORMAL key is amber, and the status display reads `BIAS LOW: TYPE IV TAPE AT NORMAL`.

- **When a tape goes in, the switch moves to that tape's type.** After that it stays where you put it, so a mismatch is always your choice. Restarting the audio device doesn't move it.
- **One key is lit: where the switch is.** Its LED is green when that position suits the loaded cassette and amber when it doesn't. The status display then says which way the bias is off.
- **Every stretch of tape remembers the switch position it was recorded at**, just as it remembers noise reduction and speed.

BIAS: RECORDING AT THE WRONG POSITION

A Type II tape needs about 1.5 times the bias of a Type I, and a Type IV about 2.5 times.

- **Too little bias (under-bias)** leaves the tape bright and fuzzy. It distorts and compresses sooner and gets grainier.
- **Too much bias (over-bias)** wipes out the treble as it records. The tape sounds dull and a little quieter, but slightly cleaner.

These effects are recorded into the tape. The table assumes you play the tape back at the same position you recorded at.

TAPE ↓ · SWITCH →	NORMAL	CHROME	METAL
Type I: BASIC, SD	Correct.	Over-biased by 3.5 dB. About −7 dB at 10 kHz, −0.9 dB overall, slightly cleaner (+0.9 dB MOL). Muffled.	Over-biased by 8 dB. About −16 dB at 10 kHz and −2 dB overall. Very dull, like a worn head.
Type II: XR	Under-biased by 3.5 dB. About +2.6 dB at 10 kHz, MOL −5.3 dB, grain +4 dB. Bright and edgy; distorts early.	Correct.	Over-biased by 4.5 dB. About −9 dB at 10 kHz and −1.1 dB overall. Dull.
Type IV: MX	Under-biased by 8 dB. MOL −12 dB, grain +10 dB, −2.5 dB overall, treble about −1 dB. Heavily distorted and gritty. **Old recordings bleed through** (see below).	Under-biased by 4.5 dB. About +2.5 dB at 10 kHz, MOL −6.8 dB, grain +5 dB. Bright and crunchy.	Correct.

ABOUT THESE FIGURES

The bias ratios between tape types follow the tape standards. How much the treble, headroom and grain move per dB of bias error is an estimate of typical real-deck behaviour, not a published measurement. The automated tests check every row of this table.

PLAYBACK EQ: PLAYING BACK AT THE OTHER POSITION

NORMAL plays back with 120 µs EQ, while CHROME and METAL both use 70 µs. Each stretch of tape is played back through the EQ of the switch as it is now, compared with the EQ it was recorded with:

RECORDED AT	PLAYED AT	RESULT
CHROME or METAL (70 µs)	NORMAL (120 µs)	Treble lifted by a shelf starting near 1.3 kHz: about +4.5 dB at 8 kHz, up to +4.7 dB. Bright and hissy.
NORMAL (120 µs)	CHROME or METAL (70 µs)	The reverse: about −4.5 dB at 8 kHz. Muffled.
CHROME	METAL, or the other way round	No EQ change; both use 70 µs.

Blank-tape hiss follows the same rule: a Type II or IV tape played at NORMAL hisses brighter. You can combine both effects. For example, record a chrome tape at NORMAL (under-biased and bright), then play it back at CHROME.



The EQ lamp. These tracks were recorded at NORMAL and the switch is now at CHROME, so each track's EQ lamp is red and the lit switch key is amber. The EQ lamp flashes while the tape plays. It is green when the recording's EQ matches the switch, and off on blank tape.

METAL TAPE AT NORMAL: OLD MATERIAL BLEEDS THROUGH

On a NORMAL setting the erase head isn't strong enough to fully erase high-coercivity metal tape. If you record over an MX tape at NORMAL, about 30 dB of the old recording survives underneath the new one, mostly its bass. Treble erases more easily. Record over it at METAL and the old recording is fully gone (it measures below −90 dB).

TRY THIS

Record a bass line on an MX tape at METAL. Set the switch to NORMAL and record a new part over it on the same track. Play it back: the old bass line is still there underneath, faint and muffled, like a ghost of the earlier take.

7 TRANSPORT AND COUNTER

CONTROL	WHAT IT DOES	WHAT TO EXPECT
PLAY `Space`	Plays the tape.	Unarmed tracks play the tape; armed tracks keep playing their live input, so you can rehearse over the tape. The LED in the PLAY key lights.
STOP `Space`	Stops.	One second later the tape is saved.
REC `R`	Records on every armed track.	The LED in the REC key lights. If no track is armed, the status display says `ARM A TRACK FIRST`.
REC while playing	Punch-in.	Recording starts at once on the armed tracks. Press PLAY to punch out and keep playing. Tape before and after the punch is untouched. The new take fades in and out over 6 ms either side, like the gap between a deck's erase and record heads, so a punch never clicks.
REW, F.FWD	Wind the tape.	The tape speeds up and slows down like real spools. Winding stops at either end of the tape.
RESET	Sets the counter to 000 where the tape is now.	Use it to mark the start of a song.
RTZ `Home`	Return to zero.	Rewinds and stops at 000. The status display reads `RETURN TO ZERO`.

The counter is a three-digit mechanical-style counter. Like the counters on real decks, it doesn't count seconds: it advances one count for every two seconds of tape at 1⅞ ips. Write the counter number for each song on the inlay. The status display shows the time remaining at the current speed.

NO UNDO

Recording replaces what was on the tape under the armed tracks, from the moment you press REC until you stop or punch out. Nothing else is touched. To keep a take, record on a different track or a new tape.

8 SIGNAL CHAINS

Every track has a signal chain in front of the tape, like a rack of gear wired up before a real deck: up to eight blocks in a row. MIDI from your controller runs along the top of the chain and audio along the bottom, and whatever comes out of the last block is what the track records.

Click a track's display to drop down its chain. Click a block to select it, and its settings appear underneath. Click outside, click **X** or press `Esc` to close it.




Track 1's chain. The inputs, then TF Poly Synth, TF Tape Echo and TF Plate, then the tape. The blue line is MIDI: it stops at the synth, the last block that listens to it. The amber line is audio: it starts where the synth mixes in (`+ MIX`). TF Plate is selected; underneath are its controls and the list to replace it from.

TO	DO THIS
Add a block	Click **+** at the end of the chain and pick from the list.
Bypass a block	Click its lamp, or **BYPASS**. A bypassed block is dimmed and the signal passes it untouched.
Reorder	Drag a block left or right. A bar shows where it will land.
Open a plug-in's window	Double-click the block, or **EDIT**. The window stays on top, and `Space`, `R` and `Home` still work the transport from it.
Replace a block	Select it and pick another from the list beside it. The new block takes its place in the chain.
Remove a block	**REMOVE**, `Delete`, or right-click it.

THE INPUTS

The first block is the track's inputs: what plays it and what it hears.

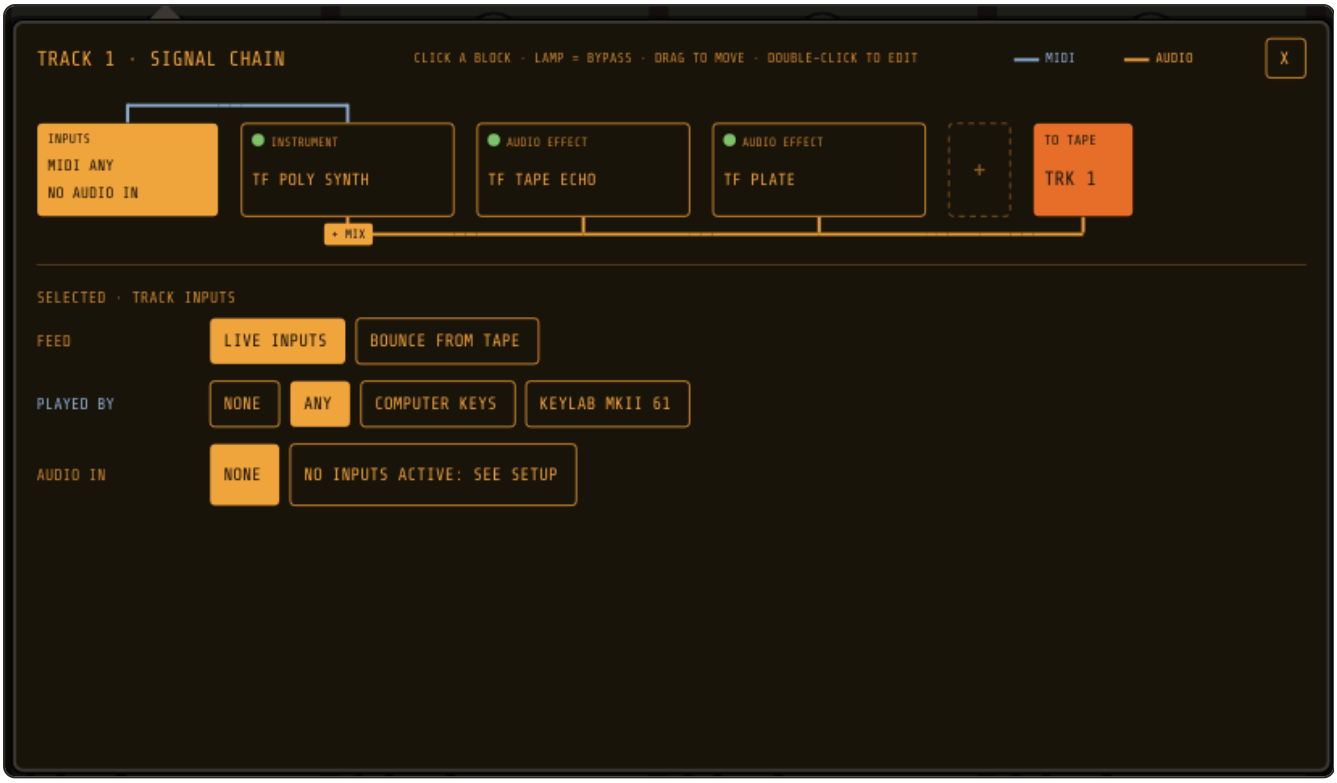

The inputs. On the test machine there is no interface, so no audio inputs are listed; on yours, each input appears with a level bar so you can see which one your instrument is plugged into.

SETTING	CHOICES	WHAT TO EXPECT
Feed	**LIVE INPUTS** or **BOUNCE FROM TAPE**	Live: the controller and audio input below feed the chain. Bounce: other tracks are mixed off the tape into the chain instead (see Bouncing, below).
Played by	**NONE**, **ANY**, or a named controller	Which controller's notes go into the chain. **Any**: every ticked controller. **A named controller** plays only this track, so different keyboards can play different armed tracks at once. Notes only reach the chain while the track is armed.
Audio in	**NONE**, **IN N**, or **IN N+M**	An input of your interface, or a pair mixed to mono. Tracks are mono; a stereo source on a pair is summed at half level per side. A track can have both a controller and an audio input: play a synth and sing through the same chain.

THE BLOCKS

There is one kind of chain, not separate instrument and effect slots. Each block does what it is:

BLOCK	WHAT IT DOES WITH MIDI	WHAT IT DOES WITH AUDIO
Instrument	Plays the notes that reach it.	Mixes its sound in with whatever is already in the chain (`+ MIX`), at its **LEVEL**. Two instruments one after the other layer, like two synths into a mixer. An instrument with an audio input (a vocoder, say) can instead **PROCESS INPUT**.
MIDI effect	Changes the notes for every block after it: an arpeggiator, a chord generator, or a retuner such as PitchGrid for MPE instruments. The lane after it is drawn brighter and tagged `CHANGES MIDI`.	Passes it through.

BLOCK	WHAT IT DOES WITH MIDI	WHAT IT DOES WITH AUDIO
Audio effect	Passes it through.	Processes the audio, blended with the dry signal by its **MIX**.
External instrument	Sends the notes out to a hardware synth.	Mixes in the synth's audio from the input it's plugged into.

Order matters, as it does with real gear. A MIDI effect only changes the blocks after it. An effect placed before an instrument doesn't hear that instrument, only what came before it. So a typical chain is *MIDI effects → instruments → audio effects*, but nothing stops you putting a reverb on the voice coming in, then a synth on top, then a delay over both.

Plug-in instruments come in 12 dB below their own output, so a full-level synth sits near 0 VU. The built-in instruments don't need it.

PICKING A BLOCK



Adding a block. The built-ins first, then hardware synths, then every scanned plug-in, grouped by maker.

The tabs narrow the list to **INSTRUMENTS**, **MIDI FX** or **AUDIO FX**. Type to search; `Return` takes the first match. Two plug-ins with the same name are both listed, with their folder and file so you can tell them apart. **FIND PLUG-INS…** takes you to Setup → Plug-ins to scan. Plug-ins load in the background; until one arrives its block reads `LOADING`, and the chain keeps its order.

BUILT-IN	KIND	WHAT TO EXPECT
TF Poly Synth	Instrument	A warm two-oscillator analogue-style polysynth. Responds to MPE.
TF Tine Piano	Instrument	An electric piano with a bell-like attack. Responds to MPE.

BUILT-IN	KIND	WHAT TO EXPECT
TF Plate	Audio effect	A smooth, dense plate reverb with pre-delay. Size, damping and pre-delay.
TF Spring Reverb	Audio effect	The boingy, dripping reverb of a guitar amp's spring tank.
TF Tape Echo	Audio effect	A tape delay whose repeats darken and wobble as they fade. Time, feedback, tone and wow.

HARDWARE SYNTHS



An external instrument: a Juno-106 on a USB MIDI interface.

Tick the synth's MIDI output in Setup → MIDI & Deck (you can name it there), then add it from **Hardware synths** in the list. Choose where its MIDI goes and on which channel (**AS PLAYED** keeps an MPE controller's notes on their own channels), and which input its audio comes back on. Changing the route sends all-notes-off so nothing hangs; **ALL NOTES OFF** does it by hand. Its audio is recorded in time with the tape, allowing for the round trip through the interface.

BOUNCING

Set a track's feed to **BOUNCE FROM TAPE** and tick the tracks to mix onto it. While recording, you hear the sources once, through their own EQ, pan and fader; use those to balance the bounce, then arm the destination and record. A muted source is left out. The bounce still goes through the track's chain, so you can put a reverb over a whole submix as you bounce it. It picks up another pass of the tape: a little more hiss and grain, and a level shift of the tape's sensitivity.

MISSING PLUG-INS

If a chain uses a plug-in this computer doesn't have (a tape made on another machine, or a plug-in that was removed), its block reads `MISSING` and is skipped. Its settings are kept: rescan in Setup → Plug-ins and it comes back as it was, or pick a replacement.

READING THE TRACK DISPLAY



Track displays. Line 1: what plays the track. Line 2: its controller and audio input. Line 3: the chain, as blocks (dim ones are bypassed). Line 4: what the track is doing, and three lamps.

The tag above the display says what feeds the track: `MIDI`, `AUDIO`, `AUDIO+MIDI` or `BOUNCE`. Line 4 reads `LIVE IN` when the track is armed (you hear its inputs, not the tape), `MUTED` when it's muted, and `→ TAPE` otherwise. When the tape under the head was recorded at a different speed from the one you're playing at, it shows the pitch shift in semitones instead, for example `-12.0 SEMITONES`.

LAMP	LIT	RED
NR	The tape under the head was recorded with noise reduction, or you're recording with NR on.	Flashes red while playing if the NR switch doesn't match how the tape was recorded.
EQ	Green: the tape here was recorded with the same playback EQ as the switch.	The switch's EQ differs from the recording's (chapter 6). It flashes while playing.
MIDI	Green flash: notes are reaching this track.	—

9 THE MIXER

Each of the four channel strips has its controls in a single column, top to bottom. Double-click any knob or fader to reset it: gain to 0 dB, EQ and pan to centre, FREQ to 1.2 kHz, fader to the 0 mark.

CONTROL	RANGE	WHAT TO EXPECT
GAIN	−20 to +40 dB (0 dB at the default)	Input trim before the tape. Use it to put peaks near 0 VU. Higher levels reach the tape's MOL and compress or distort (chapter 5).
HIGH	±12 dB shelf: about ±11.6 dB at 10 kHz, ±7 dB at 5 kHz, half way at 4.5 kHz	Presence and air, well inside what the tape can record. Full boost is clearly brighter, and also brings up hiss.
MID	±12 dB peak	Presence, honk or boxiness, depending on FREQ. A cut makes a part sit back.
FREQ	250 Hz to 5 kHz (1.2 kHz at the centre)	Where MID works; the smaller knob with the blue pointer. Around 250–500 Hz for body or mud, 1–2 kHz for honk, 3–5 kHz for bite and vocal presence. Sweep it with MID boosted to find a spot, then cut or boost.
LOW	±12 dB shelf: about ±11.6 dB at 100 Hz, ±6 dB at 250 Hz	Weight. A cut helps when bouncing several tracks together.
PAN	L100 to R100, constant power	Centre is −3 dB to each side. Hard left puts the full level on the left output only.
Fader	−∞ to +7 dB (0 at the mark)	The level into the mix and into bounces. On an armed track it also sets the level going to tape, as on a portastudio.
Meter	20 LEDs, 0 VU at −12 dBFS	Green below 0 VU, amber from 0 to +3, red above +3. Keep peaks around 0 VU for a clean recording, and push into the amber for tape colour.
MUTE	On or off (orange lamp)	Silences the track everywhere: in the mix, in bounces, and its live input. An armed track that's muted **still records to tape**: you just don't hear it.
SOLO	On or off (yellow lamp)	Changes only what you hear. With any track soloed, only soloed tracks are heard. Solo doesn't change what is recorded or bounced.
ARM	On or off (red lamp)	An armed track plays its live inputs through its chain instead of its tape, whatever the transport is doing, and the display reads `LIVE IN`. The lamp flashes while armed and stays lit while recording. Press REC on the transport and it records to tape. To hear a take, disarm the track: while it is armed you hear the input, not the tape.

Mute wins over solo. A track that is both soloed and muted stays silent. If every soloed track is also muted, nothing is heard, and the status display says `SOLOED TRACK IS MUTED` so you know why.

The **master strip** has a stereo meter, the master fader for the stereo out, and the **PHONES** knob, which sets the level of the phones output pair independently.

WHAT THE EQ AND GAIN RECORD, AND WHAT THEY DON'T

On a cassette 4-track the channel strip sits between the input and the tape. TAPE·FOUR works the same way: gain, EQ and the fader shape what is recorded on an armed track. On playback, the same strip

shapes what you hear from the tape. To fix a recording later, adjust the strip on playback, or bounce it through the strip onto another track.

10 SPEED AND PITCH

SETTING	WHAT IT DOES	WHAT TO EXPECT
1⅞ ips	Normal cassette speed.	The tape's full length. Treble saturates sooner and there's slightly more hiss.
3¾ ips	Double speed, as on many 4-track portastudios.	Half the recording time. About an octave more treble headroom (the treble limit moves up), and about 3 dB less hiss in the audible range.
Playing at the other speed	Every stretch of tape remembers the speed it was recorded at.	A recording made at 3¾ and played at 1⅞ sounds an octave lower at half speed, and the reverse sounds an octave higher. The track display shows the shift in semitones. Record at 1⅞ and play at 3¾ for chipmunk vocals; do the reverse for slow, dark textures.
PITCH	Varispeed, smoothly from −12% to +12% (about ±2 semitones). Double-click to return to 0.	Speeds up or slows down the tape and changes pitch and tempo together. The tape glides to a new setting over a fraction of a second, like a capstan motor, so turning it while the tape plays bends the pitch rather than jumping. Use it to tune the tape to an instrument, or to record a part slowed down and play it back at normal speed. The status display shows the setting, for example `PLAY 1⅞ +3.7%`.

Wow, flutter and drift (chapter 12) are added on top of the pitch setting, so the tape always moves slightly unevenly unless you turn them off.

11 NOISE REDUCTION

Noise reduction encodes what you record and decodes on playback. On the way to tape it boosts quiet sounds, mostly the treble. On the way back it turns them down again, and the tape hiss goes down with them. Turn it on with the **NOISE REDUCTION** button. Choose the type by clicking the **NR TYPE** display, or in **Setup → Tape**.

TYPE	HOW IT WORKS	HISS REDUCTION	CHARACTER
2:1 compander	Broadband 2:1 compression on record and 1:2 expansion on playback, with fixed treble pre-emphasis (dbx-style).	The most, roughly 30 dB	Very quiet. Can "pump": hiss and grain rise and fall behind loud bass notes.
Sliding band B	Lifts quiet treble up to 10 dB above about 1.5 kHz.	About 10 dB	Gentle and forgiving.
Sliding band C	A deeper band from about 700 Hz, up to 20 dB.	About 20 dB	Quieter than B, and more sensitive to level and treble errors.

MISMATCHED NR

Tape remembers whether it was recorded with NR. If you play it back with the switch the other way, the track's NR lamp flashes red. Encoded tape played without NR sounds bright and squashed, and the treble pumps. Plain tape played with NR sounds dull and lifeless.

HOW THE TAPE TYPE AND NOISE REDUCTION INTERACT

Noise reduction expects the tape to give back exactly what the encoder put on it. Anything that changes level or treble on the way through gets enlarged by the decoder, not just passed along. In TAPE·FOUR the encoder sits before the tape model and the decoder after it, so all of this happens on its own:

- **Hiss floor.** NR removes a fixed amount, so the tape's own hiss still matters. MX with C or 2:1 is the quietest combination, and BASIC with B the noisiest.
- **Level errors grow.** With 2:1, a 1 dB difference becomes 2 dB. SD (−0.3 dB) loses about 0.6 dB per pass with NR on. XR (+1.1 dB) gains about 2.2 dB. B and C mistrack in the treble on quiet passages.
- **Treble errors grow and move.** A bias or EQ mismatch is a treble error. B and C read it as a level change, so a bright mismatch gets brighter on quiet passages and a dull one duller. The treble "breathes" with the music. With 2:1 the treble error is doubled throughout.
- **Treble saturation.** The encoder lifts quiet treble before the tape. On tapes with little treble headroom (XR and BASIC, especially at 1⅞ ips), loud bright parts saturate after encoding. The decoder then mistracks, and cymbals turn dull and swishy. MX has the most room.
- **Grain.** NR can't remove modulation noise, which rides on the signal. A 2:1 compander's gain swings make it, and the hiss, rise and fall. That's most obvious on BASIC.

12 TAPE CHARACTER

Setup → Tape shows the loaded cassette's measured figures. Its sliders adjust the deck and the tape's condition on top of those figures. Double-click **HISS** or **TAPE DRIVE** to return it to the centre.



Setup → Tape, with an SD60 loaded.

CONTROL	RANGE	WHAT TO EXPECT
Hiss	Off, or −12 to +12 dB relative to the tape's measured hiss (centre = as measured)	Real cassettes without NR hiss at 54–63 dB below 0 VU. That is audible in quiet passages but not intrusive. Turn it up to taste for a dirtier tape, or off for a silent background.
Wow	0–0.5%	A slow pitch waver (under 1.5 Hz). It's most audible on sustained notes and piano.
Flutter	0–0.3%	A fast waver (6–12 Hz). It gives a slight shimmer, and above 0.15% a watery roughness.
Tape drive	−6 to +6 dB (centre = 0 VU at Dolby level)	Where 0 VU lands on the tape. More drive brings saturation and treble compression earlier, the way a deck calibrated hot would. Less drive keeps it cleaner. The playback level isn't changed.
HF loss	0 to −12 dB at 10 kHz	A worn or misaligned head. It dulls everything played back, hiss included.
Track crosstalk	Off, or −80 to −30 dB	Neighbouring tracks leak into each other. You may hear it as a faint ghost of track 2 behind track 1.
Dropouts	None to frequent	Brief dips in level, from 15 to 75 ms, as a damaged patch of tape passes the head.
Speed drift	0 to ±1%	The tape speed wanders slowly, every few seconds, as with tired motor belts.

CONTROL	RANGE	WHAT TO EXPECT
Noise reduction	2:1, B or C	See chapter 11.

CONDITION PRESETS

The presets set every slider except Tape drive, which is calibration rather than wear.

PRESET	HISS	WOW	FLUTTER	HF LOSS	CROSSTALK	DROPOUTS	DRIFT
Clean	off	0	0	0 dB	off	none	0
Well kept	+1.2 dB	0.15%	0.08%	−2.4 dB	−65 dB	rare	±0.2%
Worn	+6 dB	0.30%	0.15%	−6.6 dB	−55 dB	occasional	±0.4%
Chewed	+9.6 dB	0.45%	0.24%	−9.6 dB	−45 dB	frequent	±0.7%

13 MIDI, MIDI LEARN AND THE DECK STATE



Setup → MIDI & Deck. Controllers in, hardware synths out, MIDI control with the list of mappings, and deck recall.

The tick boxes in Setup are small LED keys too: lit is on.

CONTROLLERS IN

- **Use**: TAPE·FOUR only listens to controllers that are ticked. Each track then chooses its controller in its chain's inputs (chapter 8).
- **MPE**: tick it for MPE controllers (Osmose, Seaboard, LinnStrument and others). Known MPE controllers start ticked. A track played by an MPE controller tells its instrument about the MPE zone (lower zone, 15 channels). Each note then gets its own pitch bend, pressure and timbre (CC74). The built-in instruments respond directly. Plug-ins need MPE support, and some need it switched on in their own settings. CLAP plug-ins that take MIDI get MPE as it is played.
- **Bend range**: type the per-note pitch-bend range your controller sends (the Osmose default is 48 semitones). If it's wrong, bent notes land at the wrong pitch.
- **Computer keyboard**: `A W S E D F T G Y H U J K O L P ;` play notes like a piano keyboard, and `Z` and `X` change octave.

PLUGGING IN WHILE RUNNING

TAPE·FOUR notices MIDI devices being plugged in and out while it runs. Controllers and synth outputs you have ticked reconnect on their own, and tracks routed to them carry on. A controller TAPE·FOUR has never seen comes in switched on; untick it in Setup if you don't want it.

HARDWARE SYNTHS OUT

Tick the MIDI outputs your synths are on. You can give each one a name, such as "JUNO-106", which the chain and the track display then show instead of the port name. Add the synth to a track's chain as an external instrument (chapter 8). The MIDI OUT lamp at the top of the deck flashes when notes go out.

MIDI LEARN

Any knob, fader or button on your controller can move a control on the deck or a parameter of a plug-in.



Learn mode. Every control that can be learned is outlined: amber if it's free, green with a badge if it's already mapped (here, the KeyLab's CC 74 is on track 1's fader and a pad is on its mute).

1. Press **LEARN** at the top of the deck. Its lamp lights and the controls that can be learned are outlined.
2. Click a control. It turns orange and reads `MOVE A CONTROL`.
3. Move a knob or fader, or press a button, on your controller. The status display confirms it, for example `LEARNED: TRK 1 FADER ← CC 74`.
4. Click another control to learn the next, or press **LEARN** or `Esc` to finish.

Without entering learn mode, **right-click** any of these controls and choose **Learn MIDI control** or **Forget MIDI control**.

CAN BE LEARNED	CONTROLS
Each track	Gain, High, Mid, Freq, Low, Pan, Fader, Mute, Solo, Arm
The deck	Master fader, Phones, Pitch, Tape speed, Noise reduction
Transport	Play, Stop, Rec, Rew, F.Fwd, RTZ
Plug-ins	Any parameter of any block in a chain

To learn a plug-in parameter, open the track's chain, select the block and press **LEARN** there. Either touch the control in the plug-in's own window or pick it from the list, then move a control on your keyboard. The block's mappings are listed under it, each with an **X** to forget it.



Learning a plug-in parameter. Touching Feedback in the echo's window, or clicking it here, picks it.

HOW MAPPED CONTROLS BEHAVE

- **Pickup.** A knob or fader only takes over once it passes the control's current position, so nothing jumps when you first touch it. Until then the status display tells you which way to turn it. Pickup can be turned off per mapping in the list.
- **Endless encoders** are recognised while learning (the common relative formats) and nudge the control up and down, with no pickup needed.
- **14-bit controllers** that send a CC pair (0–31 with 32–63) are combined for fine resolution.
- **Buttons and pads** learned onto a switch (mute, solo, arm, tape speed, noise reduction) toggle it each press, and onto a transport key press that key.
- **A mapped control is kept for its job.** Its messages don't also reach the track's instruments, so a knob mapped to a fader doesn't sweep a synth's filter at the same time. Tick **Also plays** in the list to pass them on as well.

MIDI MACHINE CONTROL

Many keyboards and control surfaces have transport buttons that send MIDI Machine Control (MMC). With **Follow transport buttons that send MIDI Machine Control** ticked (the default), they play, stop, record, wind and return the tape with no learning needed. A button that sends a plain CC or note can be learned onto a transport key instead.

THE MAPPINGS LIST

Setup → MIDI & Deck lists every mapping: which controller and message it's from, what it controls, how it moves (knob, 14-bit, encoder or press), and its **Pickup** and **Also plays** settings. ✕ forgets one. Mappings to the deck are kept with your settings. Mappings to a plug-in's parameters are kept with that block, so they travel with the tape and come back when the deck is recalled.

RECALL THE DECK WITH EACH TAPE

Every tape remembers the deck it was last used with:

- each track's inputs and signal chain, with every plug-in's settings and MIDI mappings;
- MIDI routing;
- mute and solo;
- gain, EQ, pan and faders;
- master and phones;
- speed and pitch;
- tape character.

A plug-in's sound is saved when you close its window, a second after the tape stops, when the tape is saved or ejected, and when you quit. While a plug-in's window stays open it's also saved once a minute while the tape is stopped, so a crash costs at most a minute of tweaking. Big plug-ins are never asked for their sound while the tape is running.

With **Recall the deck with each tape** ticked, loading a tape puts the deck back exactly as it was. Unticked (the default), the deck stays as it is when you change tapes. The tape switch always moves to the new tape's type either way.

14 REFERENCE

KEYBOARD

KEY	ACTION
`Space`	Play / stop
`R`	Record (punch in while playing)
`Home`	Return to zero
`Esc`	Close the signal chain or inlay; leave learn mode
`Delete`	Remove the selected block from a chain
`A` ... `;`	Play notes; `Z` / `X` change octave

WHERE THINGS ARE KEPT

Tapes	`Documents/TapeFour/Tape Shelf/`: one folder per tape, holding the audio for each track, `tape.xml` (label, inlay and what's recorded where) and `deck.xml` (the deck that goes with the tape). Tapes are saved in the background: every five seconds while recording, so a crash costs seconds rather than a take; a second after the transport stops; and on eject and quit.
Settings	`TapeFour.settings`: audio device, MIDI, deck MIDI mappings, the deck and tape character. In `%APPDATA%\TapeFour` on Windows, `~/Library/Application Support/TapeFour` on a Mac, `~/.config/TapeFour` on Linux. Only written when something has changed.
Crash reports	`Crashes`, next to the settings. If TapeFour ever crashes it writes a report there (the version and a stack trace, and on Windows a `.dmp` file) and says so when it next starts.

TROUBLESHOOTING

PROBLEM	TRY THIS
NO AUDIO DEVICE	Open Setup → Audio and choose your device. If another program holds it (common with ASIO and exclusive-mode WASAPI), close that program, then reselect the device. On a Mac, check TapeFour is allowed the microphone in System Settings → Privacy & Security.
REC does nothing	Arm at least one track. The status display says `ARM A TRACK FIRST`.
A take seems to have recorded silence	While a track is armed you hear its live input, not the tape. Disarm it and play the take back.
An instrument doesn't play	Tick the controller in Setup → MIDI & Deck. Check **PLAYED BY** in the track's chain inputs, and arm the track: instruments only sound while armed. Check the instrument isn't bypassed or after a MIDI effect that filters notes out. Watch the MIDI IN lamp and the track's MIDI lamp.
Recordings sound distorted	Lower GAIN so peaks sit around 0 VU, use a tape with more headroom (MX), centre Tape drive, and check the tape switch matches the tape.

PROBLEM	TRY THIS
Everything sounds dull	Check the EQ lamps (playback EQ mismatch), the NR lamps (NR mismatch), the tape switch (over-bias) and HF loss in Setup → Tape.
Bounces get quieter or louder	That's the tape's sensitivity, doubled with 2:1 NR. Correct it with the faders before each bounce.
A plug-in doesn't appear after a scan	Scan its format: each format has its own **Scan for new or updated ... plug-ins** in Setup → Plug-ins → Options.... On Linux, LV2 plug-ins must be in an LV2 folder (one that holds `.lv2` bundles), and CLAP plug-ins in a CLAP folder or one named in `CLAP_PATH`.
A plug-in shows as failed after a scan	It crashed or hung while being scanned, so TAPE·FOUR set it aside. Update the plug-in, select it in Setup → Plug-ins, choose **Options... → Remove selected plug-in from list**, and scan again.
A controller plugged in later doesn't play	Check it's ticked in Setup → MIDI & Deck, that the track's **PLAYED BY** names it or is set to **Any**, and that the track is armed.
A plug-in is missing when a tape is recalled	Its block reads `MISSING`. Rescan in Setup → Plug-ins. The plug-in's settings are kept until it can be loaded again.
Nothing is heard and the status says `SOLOED TRACK IS MUTED`	Every soloed track is also muted, and mute wins. Unmute it or clear the solos.
A mapped knob does nothing at first	That's pickup: turn it past the control's current position (the status display says which way), or untick Pickup for it in Setup → MIDI & Deck.
A knob moves a control and a synth at once	Untick **Also plays** for that mapping.
`LAST SESSION CRASHED`	The report is in the Crashes folder (see above). The tape was saved up to five seconds before the crash.
A ghost of an old take is audible	You recorded over a metal tape at NORMAL. Record over it again at METAL to erase it fully.

CASSETTE MEASUREMENTS

CASSETTE	TYPE	MEASURED ON	MOL 400	MOL 100	SOL 10K	S/N (A)	MOD. NOISE	SENS.	EQ
BASIC	I	Sony HF	+2.4	+2.0	−10.3	54.3	−36.1	−1.0	120 µs
SD	I	TDK AD	+6.2	+3.8	−8.2	60.3	−44.3	−0.3	120 µs
XR	II	TDK SA	+4.4	+3.4	−11.2	60.9	−47.2	+1.1	70 µs
MX	IV	Maxell MX	+9.1	+8.0	−6.8	62.7	−50.4	+0.8	70 µs

dB relative to 400 Hz Dolby level (0 VU), at 1⅞ ips, without noise reduction. TAPE·FOUR's automated tests record tones through each cassette and check that these figures come out within about 1 dB, and that the tape switch's EQ and bias effects match chapter 6.

SOURCES

- Compact Cassette tape types and formulations, Wikipedia (including Roberson's measurements of retail cassettes): en.wikipedia.org/wiki/Compact_Cassette_tape_types_and_formulations
- Adaptive biasing, Wikipedia: en.wikipedia.org/wiki/Adaptive_biasing
- "Analog Tape 101, part 3: Bias Magic", Mix: mixonline.com/recording/analog-tape-101-part-3-bias-magic-373029
- TDK D, AD, SA and MA product pages, vintagecassettes.com

TAPE·FOUR is free software under the GNU GPL v3. Fonts: Barlow Condensed, Share Tech Mono and Caveat (SIL Open Font License); Inter (SIL Open Font License). Cassette names and designs in TAPE·FOUR are its own. The real tapes named above are referenced only as the source of the measurements.