Build Overview:

1 PSU Manifold & Lines Install

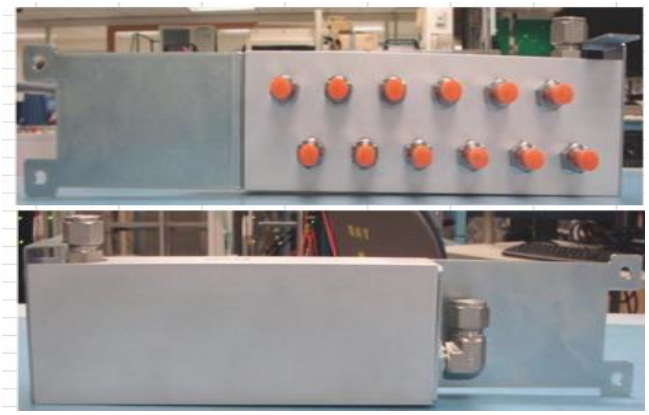

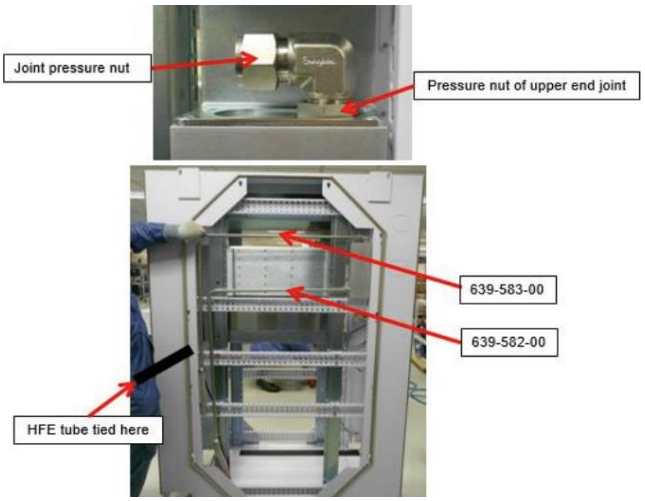

CHANGE HISTORY

Date	BPM Rev	Change Details	Updated by
	1	New Issue	JOSEPH AMAD

Prepared By:
JOSEPH R. AMAD
Manufacturing Engineer

Checked By:
IVAN NOWELL PANIQUE
Team Lead

Approved By:
SHERWIN ARIOSTE
Operations Manager

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL:

NO.	PART NUMBER	DESCRIPTION	QTY.
1	470-501-06	Flat pad	4
2	470-502-07	Spring cushion	2
3	470-933-01	Screw	2
4	472-426-12	Screw	1
5	602-621-01	Screw	2
6	614-766-90	Briquetting	2
7	633-694-01	MANIFOLD	1
8	634-175-01	Bracket	2
9	639-582-00	Steel Pipe	1
10	639-583-00	Steel Pipe	1

MACHINE:

NO.	PART NUMBER	DESCRIPTION	IMAGE
1	N/A	5mm hex bit 13.5 N.m	N/A
2	N/A	PH2 Phillips Torque Screwdriver 3.3 N.m	N/A
3	N/A	1 inch Open End Torque Wrench 6.8 N.m	N/A
4	N/A	5mm hex bit 1.6 N.m	N/A

METHOD:

Flow chart of operation steps

SIC preparation	See (1. Scope of application)
↓	
Preparation Tools	See (2. Tools/Materials/Parameters---1. Tools)
↓	
Prepare Materials	See (2. Tools/Materials/Parameters---2. Materials)
↓	
Complete Operation	See (3. Operation Steps)
↓	
Inventory	See (2. Tools/Materials/Parameters---2. Materials)
↓	
Operation Check	See (4. Matters needing attention)
↓	
Inventory collection tools	See (2. Tools/Materials/Parameters---1. Tools)
↓	
Inventory collections tools	See (2. Tools/Materials/Parameters---1. Tools)

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD: **3. Operation steps**

1.1 Take 1 Manifold (633-694-01) as shown in the picture.

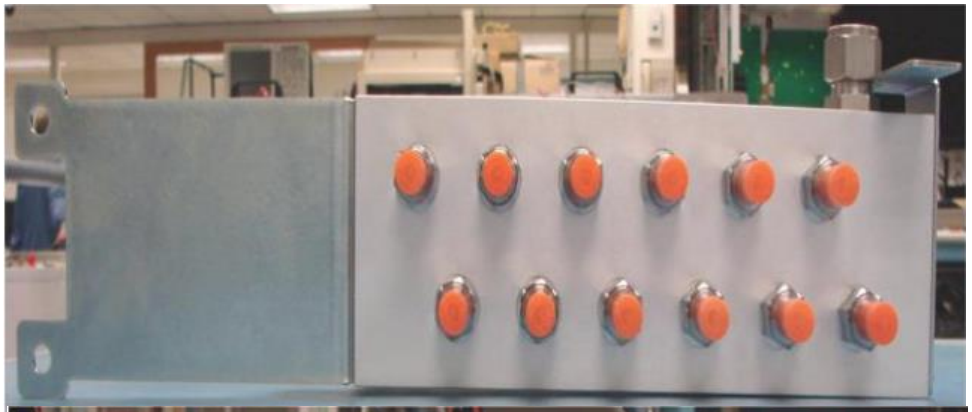

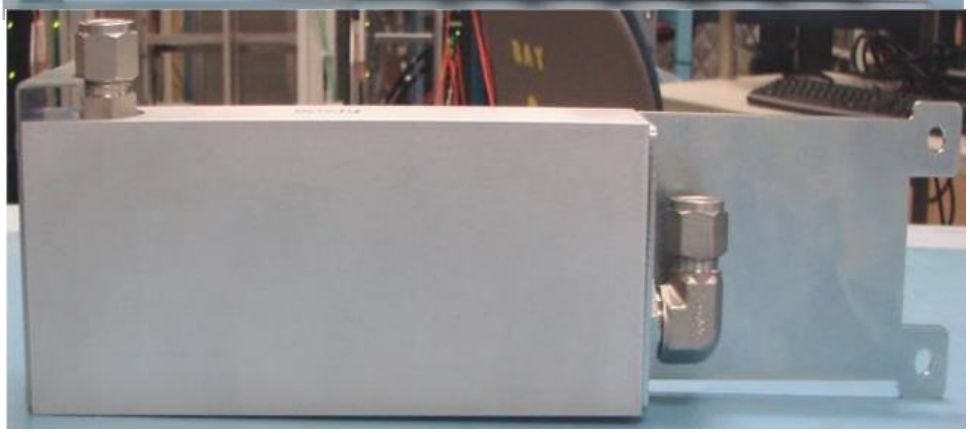

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

1.2 As shown in the figure, install two pressure blocks (614-766-90) on the upper left frame on the operating surface of the cabinet. Place one at the back of the stop. The 80mm×11mm×11mm long foam clamp is used to hold the pressure block and has to be assembled later.

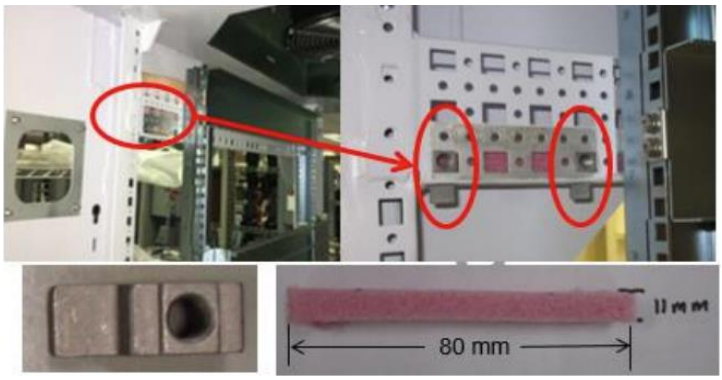

1.3 Install the QD Manifold block on the cabinet:

a. Install the Manifold block as shown in the picture, using 2 M8 spring washers (470-502-07), 2 8mm flat washers (470-501-06) and Fix it with 2 M8 screws (470-933-01), the tool is a 5mm hex bit, and the torque value is 13.5 N·m.

b. Install an M5 screw (472-426-12) at the bottom bracket position as shown in the figure. The tool is a PH2 Phillips torque screwdriver with a torque value of 3.3 N·m.

c. Remove the foam behind the press block.

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

1.4 The Manifold installation diagram is shown in the figure. The figure shows the external view of the cabinet.

Note: Do not tighten the nut on the Manifold at this time.

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

2.1 Internal components of the joint sleeve.

a. Pay attention to the orientation of the nut and 2 metal ferrules as shown in the figure. The key is to remove the metal ferrule from the nut and install it in the order and direction shown in the figure.

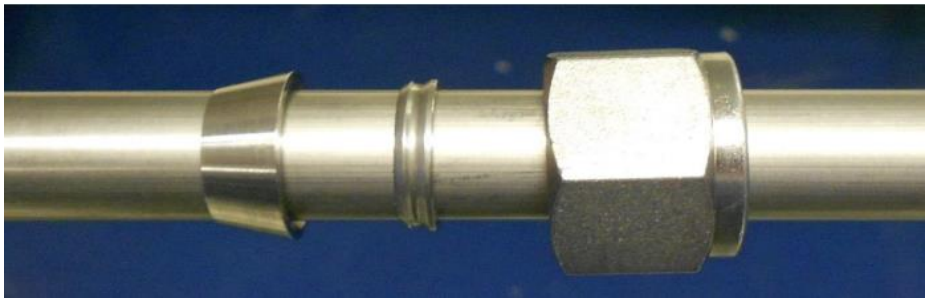

2.2 Fixing installation process of joint casing.

a. Insert the metal pipe firmly into the casing joint to ensure full insertion and manually tighten the casing joint.

b. Mark the metal joints and nuts as shown in the figure.

c. Use a 1-inch open-end wrench to tighten the nut to1 ¼ ring.

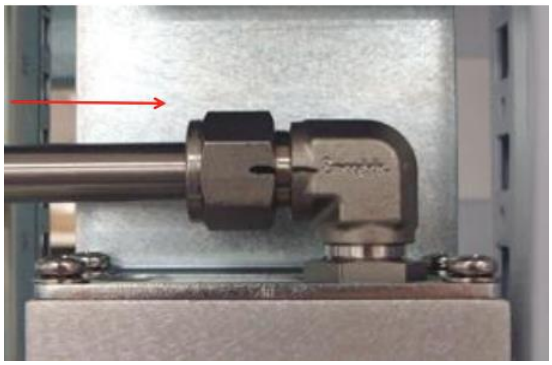

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

2.3 Reassemble the joint sleeve. (Use this page for rework or secondary assembly of joint casing)

You may disassemble or reassemble the joint casing several times. Please use this page to install.

Note: Before removing the joint casing part, it must be ensured that the system has been decompressed.

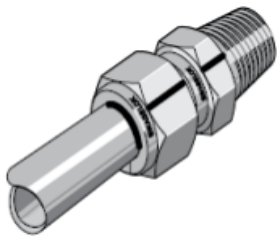

Before disassembly, make a mark and draw a line on the nut and sleeve joint at the back of the pipe.

The purpose of making these marks is to ensure that the nuts can be returned to their original positions when re-assembled and screwed back.

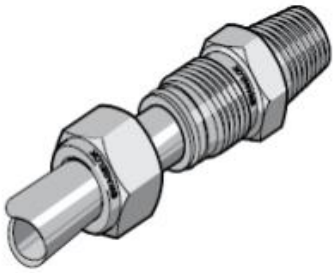

Insert the pipe with the pre-installed metal ferrule into the sleeve joint until the front metal ferrule is against the joint.

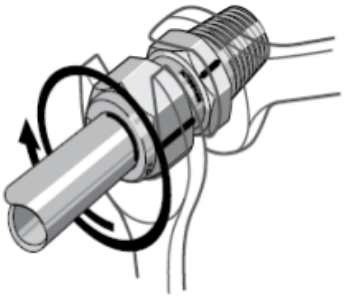

While using a wrench to clamp the casing joint, use another wrench to rotate the nut to the previously tightened position and keep it flush with the mark made before. At the same time, you will feel the resistance increase significantly, tighten the nut gently.

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

3.1 As shown in the figure, loosen the 2 pressure joint nuts on the upper and lower Manifold block gently.

3.2 Use a 1-inch open-end wrench to loosen the upper pressure joint nut as shown in the figure so that the elbow joint can be rotated left and right.

3.3 Place the elbow joint in the direction shown in the figure to install the pipe at the joint.

3.4 Insert a steel pipe (639-582-00) into the lower end pressure joint as shown in the figure. Fully insert the tube and tighten the pressure connector by hand. Leave the protective cap at the bottom of the tube.

3.5 Insert another steel pipe (639-583-00) into the upper pressure joint as shown in the figure. Fully insert the tube and tighten the pressure connector by hand. Leave the protective cap at the bottom of the tube.

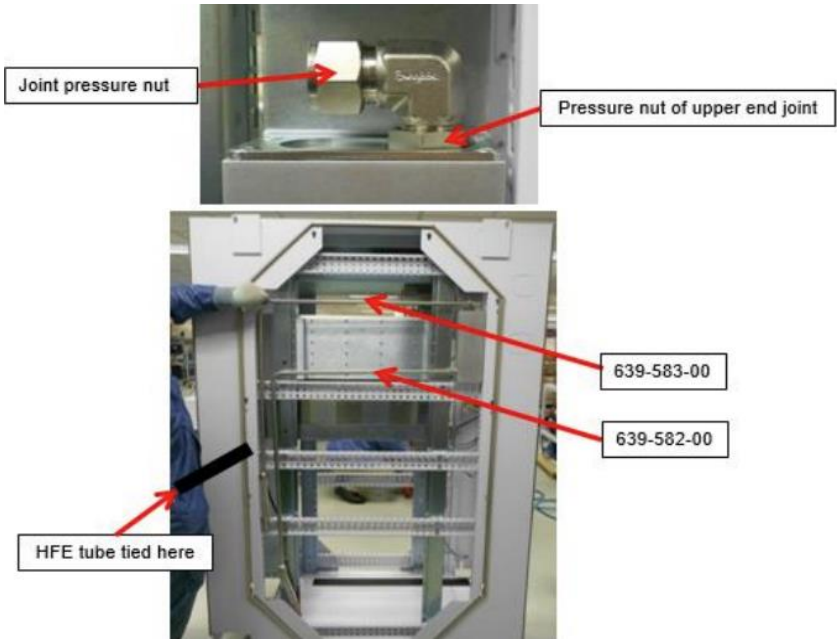

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

3.6 Pass the pipe through the two brackets (634-175-01) as shown in the figure and use two M8×30mm pan-head screws (602-621-01) and two M8 flat washers (470-501-06) Fix, the screw passes through the center hole of the cabinet rail-tighten it manually. The tube must be able to slide up and down in the bracket.

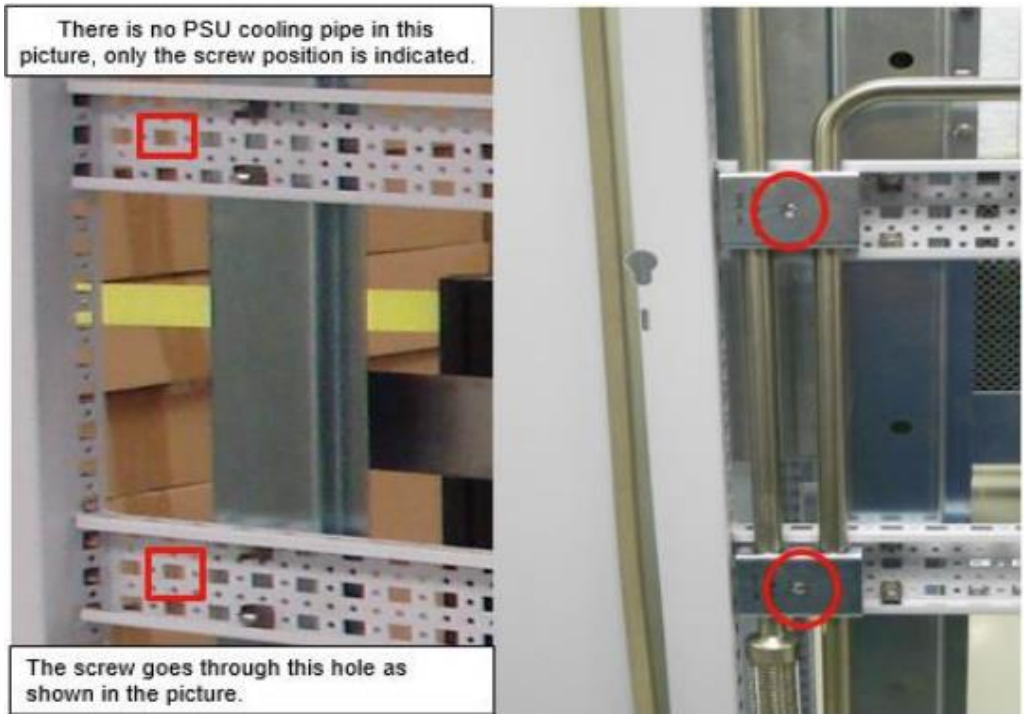

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

3.7 Ensure that the water pipe and the guide rail are level as shown in the figure.

3.8 Tighten the pipe joints in the following order.

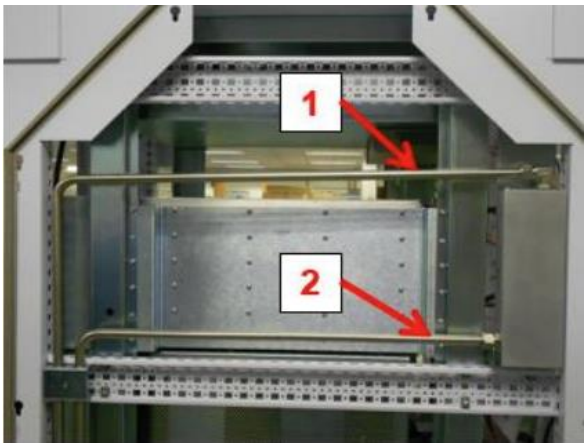

3.9 Fixing process of joint casing:

a. Insert the metal pipe firmly into the casing joint to ensure full insertion and manually tighten the casing joint.

b. Mark the metal joints and nuts as shown in the figure.

c. Use a 1-inch open-end wrench to tighten the nut to1 ¼ ring.

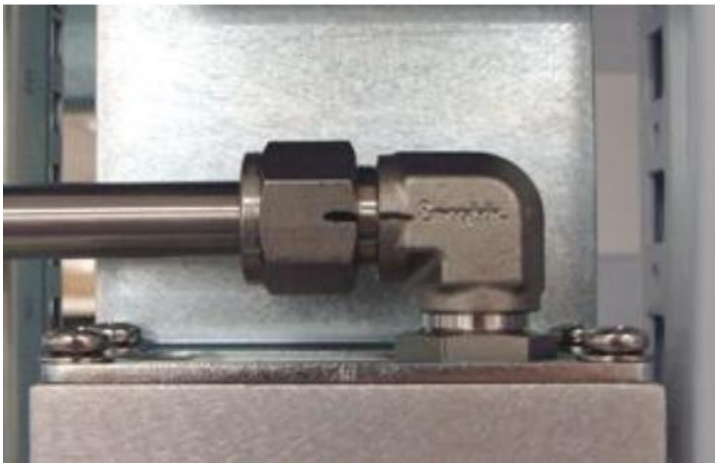

MAN: :CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

3.10 Use a 1-inch open-end wrench to fix the upper end pressure joint nut as shown in the figure, with a torque value of 6.8 N·m.

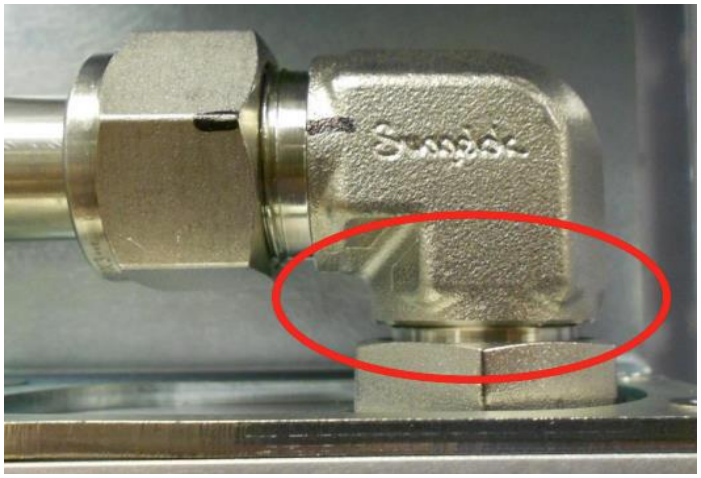

3.11 Fix the bracket on the guide rail as shown in the figure. The tool is a 5mm hexagon socket head with a torque value of 1.6 N·m.