Build Overview:

1 **Remove Skins**
2 **IPD install**

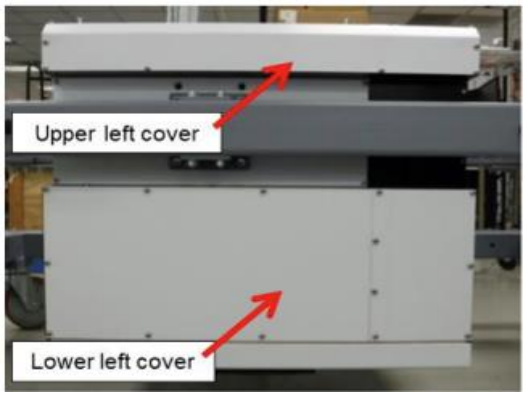

After the upper left cover and lower left cover are removed as shown

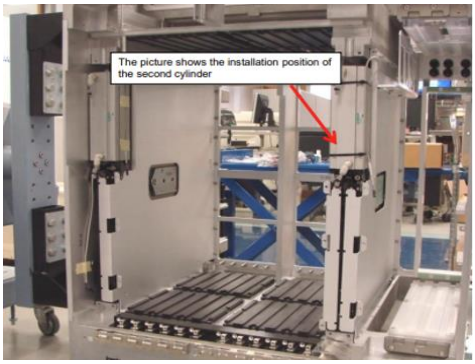

CHANGE HISTORY

Date	BPM Rev	Change Details	Updated by
	1	New Issue	JOSEPH AMAD

Prepared By:
JOSEPH R. AMAD
Manufacturing Engineer

Checked By:
IVAN NOWELL PANIQUE
Team Lead

Approved By:
SHERWIN ARIOSTE
Operations Manager

MAN: CERTIFIED TECHNICIANS.

MATERIAL:

NO.	PART NO.	DESCRIPTION	QTY.
1	633-338-01	ELEC-MECH, UF2 TH IPD HLA, FOR SEMI TEST	2
2	361-607-06	WASHER FLAT M6 6.4MMID SS	8
3	640-625-00	SCRW CP SKT HD M6X1.0P/60 MM SS W/NYLOK	8

METHOD:

Flow chart of operation steps

BPM preparation

Preparation Tools

Prepare Materials

Complete Operation

Inventory Materials

Operation Check

Inventory tool

TOOL NAME	TORQUE VALUE
PH2 cross cutter head	
8mm hexagon socket head torque wrench	27N·m.
5mm hex head torque wrench	5.6 N·m
4mm hex head torque wrench	1.6 N·m
4mm hex head torque wrench	5.6 N·m

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: PH2 philips head

METHOD:

2. Operation steps

Remove the test head cover

2.1 When looking at the T/H from the front of the gearbox, the left-hand side is the left side of the T/H, and the right-hand side is the right side of the T/H.

2.2 Use a PH2 Phillips head to remove the 14 screws on the upper left T/H cover. Do not discard the screws.

2.3 Remove the upper left cover of T/H, and carefully place this cover on the material truck for subsequent assembly and use.

2.4 Use a PH2 Phillips head to remove the 12 screws on the lower left T/H cover. Do not discard the screws.

2.5 Remove the T/H lower left cover, and carefully place this cover on the material truck for subsequent assembly and use.

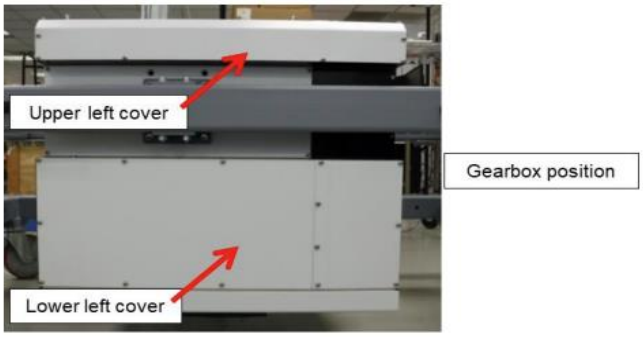

After the upper left cover and lower left cover are removed as shown

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL:

N/A

MACHINE:

PH2 philips head

METHOD:

2.6 Use the PH2 philips head to remove the 13 screws on the upper right T/H cover. Do not discard the screws.

2.7 Remove the upper right cover of T/H, and carefully place this cover on the material truck for subsequent assembly and use.

2.8 Use a PH2 philips head to remove the 15 screws on the lower right T/H cover. Do not discard the screws.

2.9 Remove the T/H lower right cover, and carefully place this cover on the material truck for subsequent assembly and use.

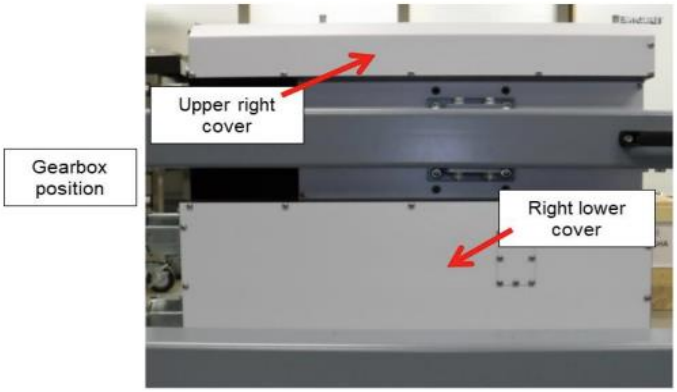

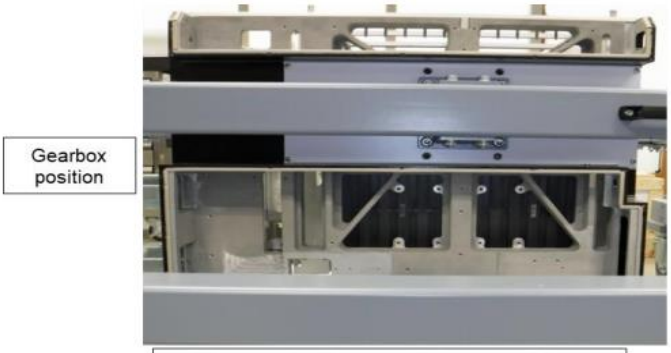

After removing the upper right cover and lower right cover as shown in the figure

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

2.10 Unlock the T/H door and remove the key.
2.11 Open the door and slide to remove the door.
2.12 Bind the door key to the inside of the door as shown by using cable tie.
2.13 Place the door on the trolley.

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

3. As shown in the figure, the storage cover is on the material truck.

Safety Tips: N/A

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: 4mm hex bit tool

METHOD:

Remove IPD cover from T/H

4.1 Shake the T/H direction to the position shown in the figure.

4.2 Use a 4mm hex bit tool to remove the IPD 1 front cover (650-469-00) and 1 rear cover (657-144-00),

A total of 9 M5 screws and 8 long screws of the lock extension block, the removed cover plate and screws will be used for subsequent assembly.

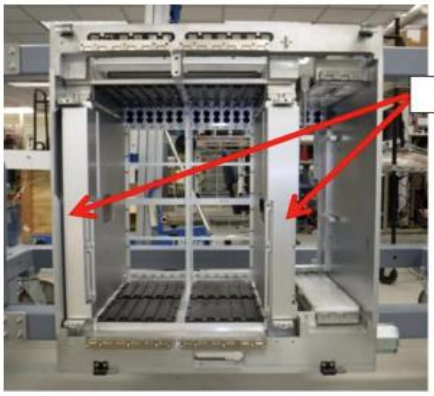

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL:

ITEM	PART NUMBER	DESCRIPTION	QTY
1	633-338-01	ELEC-MECH, UF2 TH IPD HLA, FOR SEMI TEST	2

MACHINE:

N/A

METHOD:

5.1 Shake the T/H direction as shown.

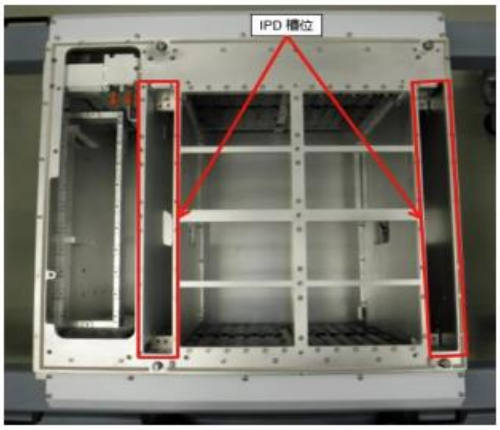

5.2 Unpack 2 IPDs (633-338-01).

Safety Tips: N/A

TQC: N/A

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

5.3 Two people lifted the IPD out of the wooden box and placed it on the table. Make sure to place the foam block (taken from the original wooden box) on the bottom of the IPD before placing it.

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: 4mm hex Bit

METHOD:

IPD cylinder disassembly

Note: If you cannot remove this screw, please refer to the instructions on the next page.

5.5 Loosen the two M6 locking screws in the red circle with a 4mm hex, and slowly pull the cylinder away from the IPD.

5.6 Keep this cylinder and M6 shoulder screw for subsequent assembly.

Repeat the above steps to remove the second IPD cylinder!

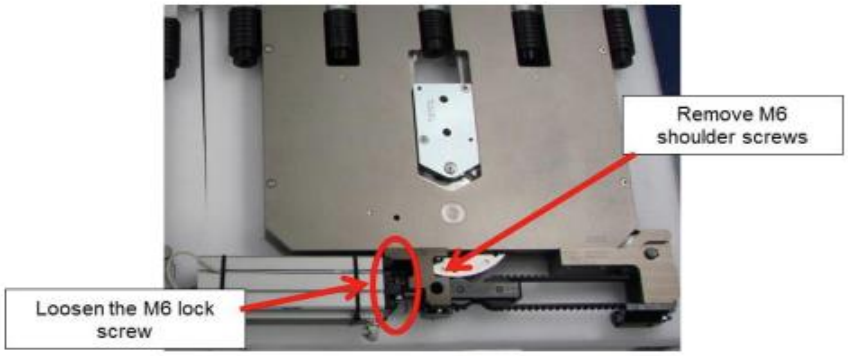

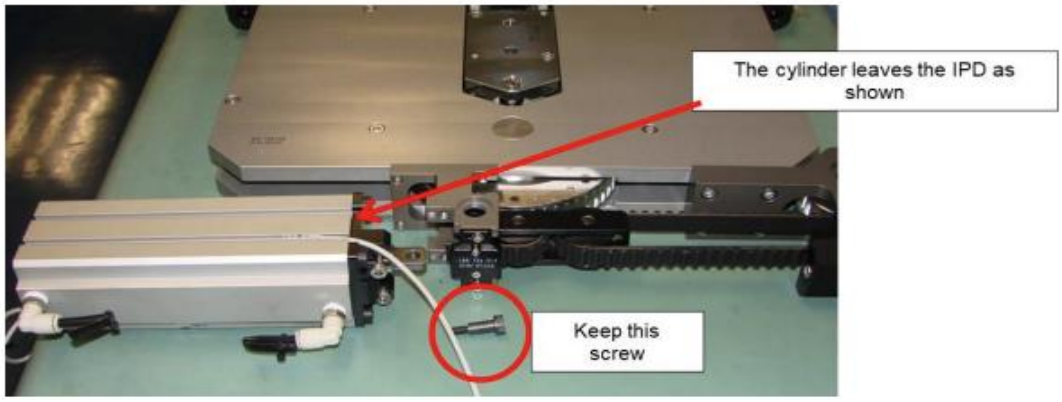

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

5.7 If the problem cannot be removed as shown in the figure, pull out the air pipe pointed by the arrow, an then push the track support to the position where the screw can be removed.
5.8 Reinsert the previous trachea.

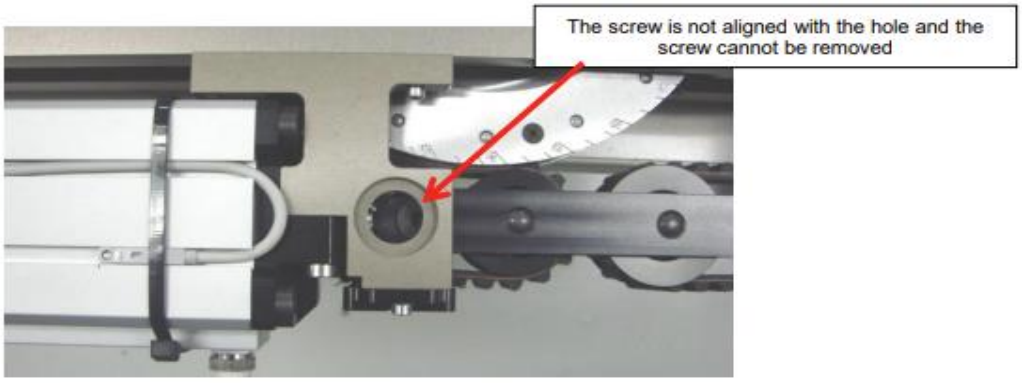

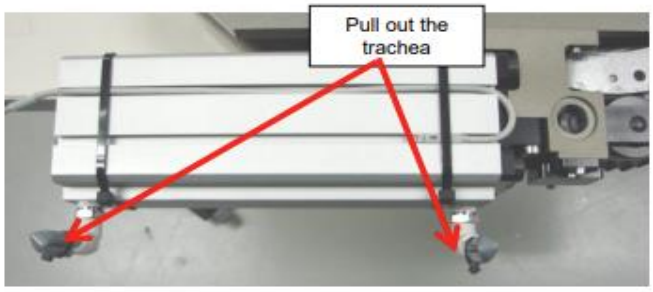

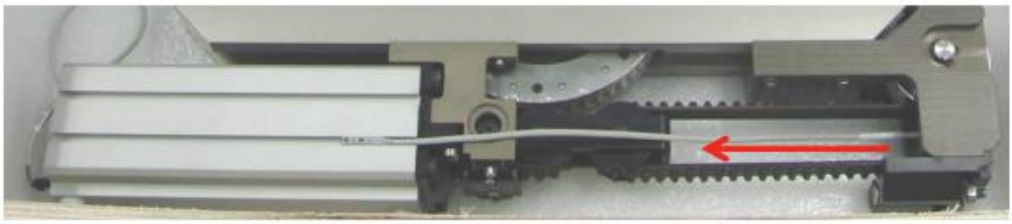

Safety Tips: N/A

TQC: N/A

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: 6mm hexagon socket head torque v

METHOD:

IPD installation

5.9 Place the IPD axis on the edge of the table as shown. Tighten the screw on the black lifting jig of the elevator into the M6 screw hole on the IPD shaft, use 6mm inner hexagon,

The torque is 27 N·m. Repeat the last action to install the black fixture on the other side.

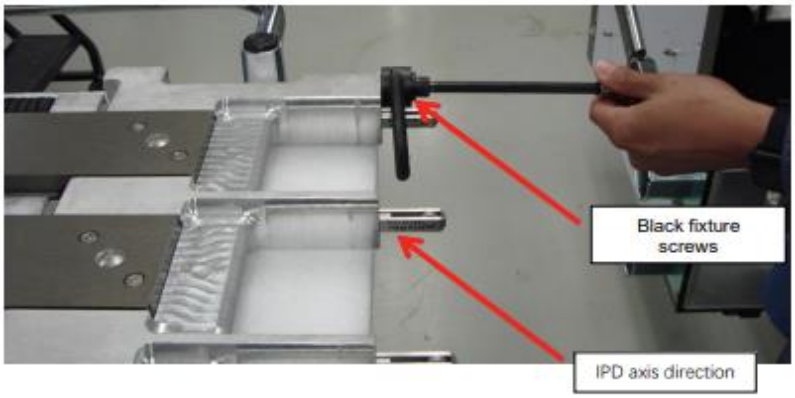

5.10 Install the two hooks to the installed IPD fixture as shown in the figure.

Safety Tips: N/A

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

5.11 As shown in the figure, two people cooperate to lift the IPD away from the table with a lifting elevator. One person is responsible for raising the IPD, and the other person supports the IPD to avoid swinging.
Push the elevator to place the IPD above the T/H card slot.

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

5.12 Position the IPD on the slot closest to the support backplane area as shown in the figure.
Note the direction of the IPD timing band relative to the HFE Mainifold. From the front, it is located on the left side of T/H.
5.13 One person grasps the slide rail of the IPD, and the other person slowly lowers the lifting elevator and puts the IPD into the T/H slot. Remove the lifting hook and clamp from the IPD.

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL:

ITEM	PART NUMBER	DESCRIPTION	QTY
2	470-501-05	WASHER FLAT M6 6.4MMID SS	8
3	406-515-60	SCRW CP SKT HD M6X1.0P/60 MM SS W/NYLOK	8

MACHINE:

5mm hex head torque wrench 5.6 N·m

METHOD:

5.14 Place a total of two M6 flat washers (470-501-05) and two M6 screws (406-515-60) at each position of the red circle as shown in the figure.

Use a 5mm hexagon socket with 5.6 N·m to tighten the screws.

5.15 Repeat the above actions to install another IPD into the T/H frame.

Note: Before shaking the T/H, please make sure that the 8 screws of the two IPDs are locked to 5.6 N·m.

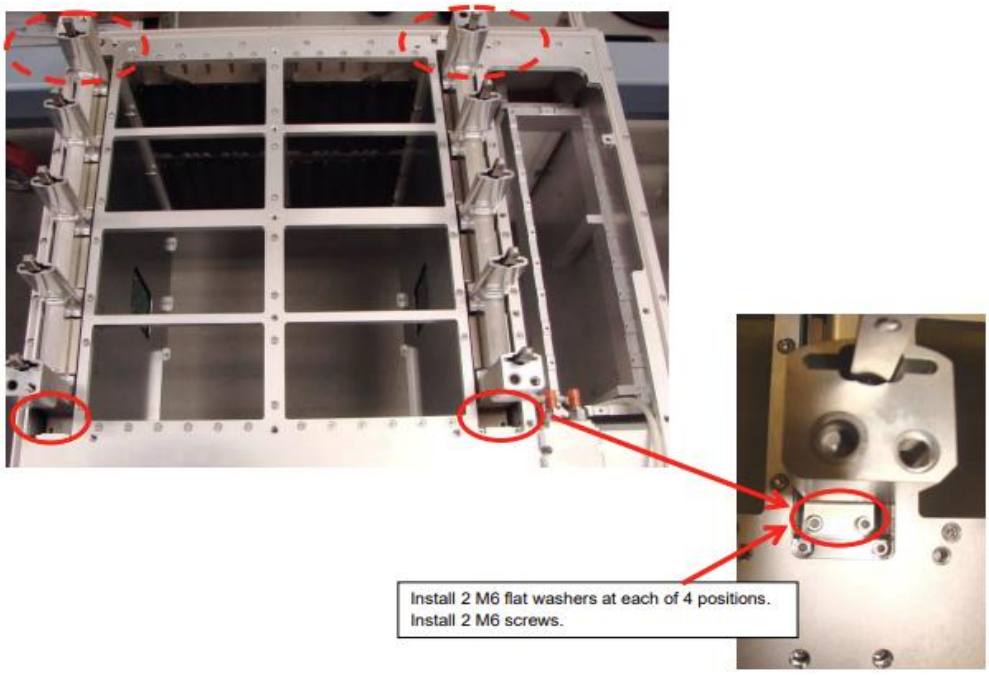

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: 4mm hex head torque wrench 1.6 N·m, 4mm hex head torque wrench 5.6 N·m

METHOD:

6.1 Shake the T/H direction to the direction shown in the figure.
6.2 Install the cylinder on the IPD, make sure that the sensor line on the left side of the cylinder goes down, and use standard tape to stick to the cabinet and the sensor cylinder as shown in the figure.
Tighten the locking screw, the tool is a 4mm hexagon socket, and the torque is 1.6 N·m.
6.3 Install the M6 shoulder screw to the position shown in the figure. Tighten the shoulder screw. The tool is a 4mm hexagon socket and the torque is 5.6 N·m.
6.4 Repeat the above actions to install another cylinder on the IPD.

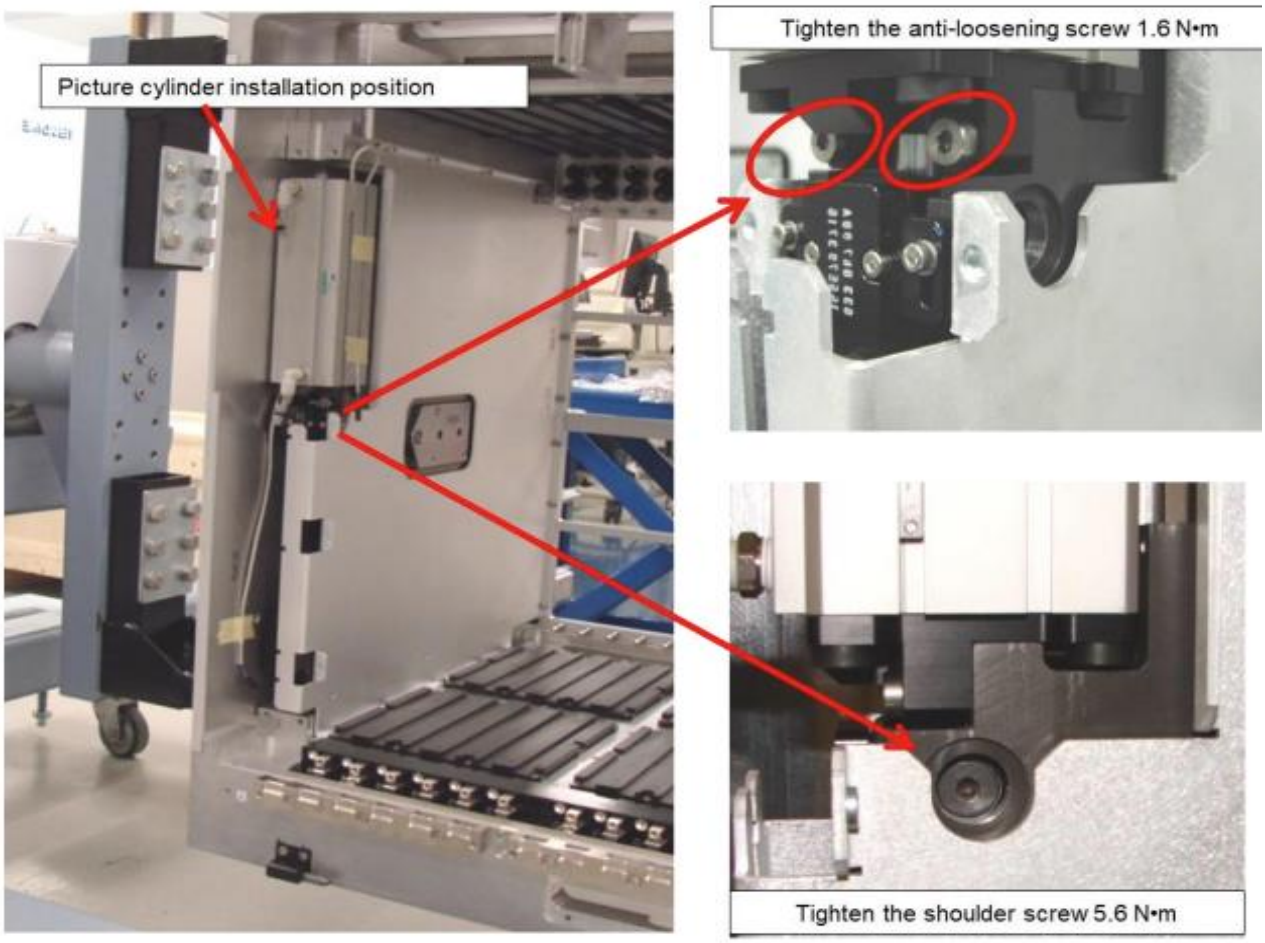

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE:
N/A

METHOD:

6.5 Repeat the above actions to install another cylinder on the IPD.

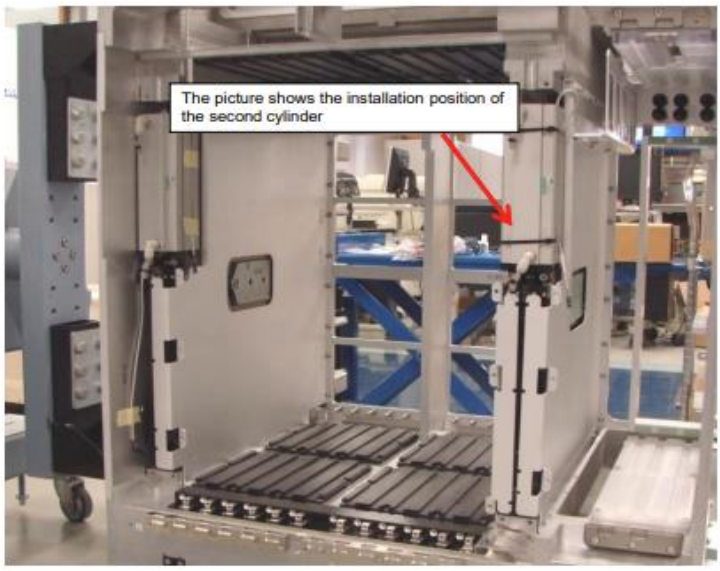
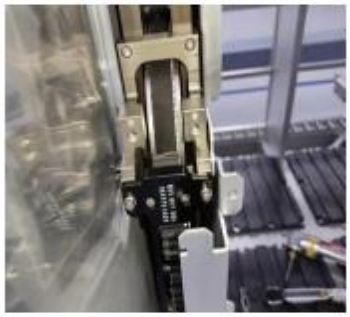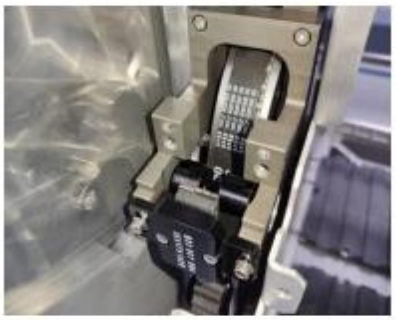
Make sure when reassembly the IPD cylinder, turn the belt to it origin position to tighten M6 shoulder screw