Build Overview:

1 **Remove Skins**
2 **Install IPD**

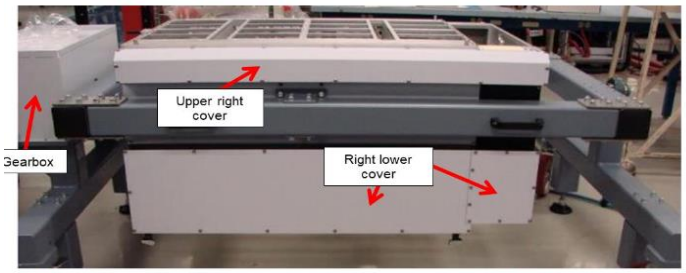

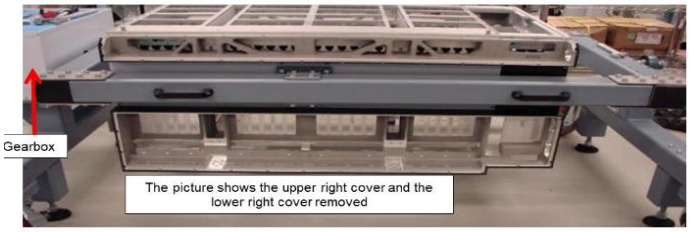

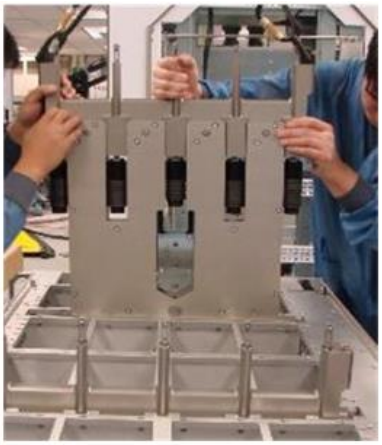

CHANGE HISTORY

Date	BPM Rev	Change Details	Updated by
	1	New Issue	JOSEPH AMAD

Prepared By:
JOSEPH R. AMAD
Manufacturing Engineer

Checked By:
IVAN NOWELL PANIQUE
Team Lead

Approved By:
SHERWIN ARIOSTE
Operations Manager

MAN: CERTIFIED TECHNICIANS.

MATERIAL:

NO.	PART NO.	DESCRIPTION	QTY.
1	633-338-01	ELEC-MECH, UF2 TH IPD HLA, FOR SEMI TEST	2
2	470-501-05	WASHER FLAT M6 6.4MMID SS	8
3	406-515-60	SCRW CP SKT HD M6X1.0P/60 MM SS W/NYLOK	8

METHOD:

Flow chart of operation steps

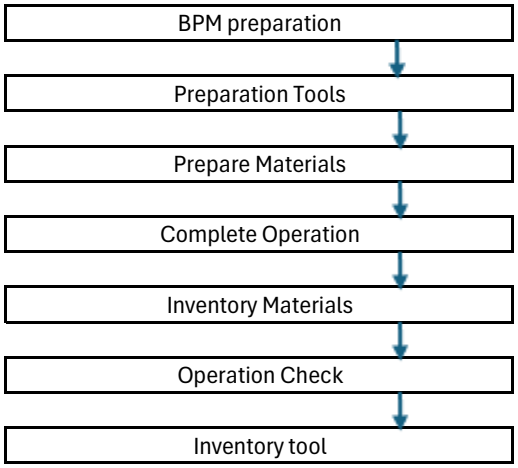

MACHINE:

TOOL NAME	TORQUE VALUE
5MM INNER HEXAGON	5.6 N.m
4MM INNER HEXAGON	1.6 N.m
4MM HEXAGON SOCKET	5.6 N.m
6MM INNER HEXAGON	13. N.m
PH2 PHILLIPS HEAD	N/A

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: PH2 Phillips Head

METHOD:

Operation Steps

1.1 In the direction shown in the figure, the gearbox is on the right side, and the T/H surface is the left side. The gearbox is on the left, and this T/H surface is the right side.

1.2 Remove the 18 screws from the upper left T/H cover with a PH2 Phillips head. Save the screws and do not discard them.

1.3 Remove the upper left cover of the T/H, and place this cover carefully on the material truck for subsequent assembly.

1.4 Remove the 21 screws from the lower left T/H cover with a PH2 Phillips head. Save the screws and do not discard them.

1.5 Remove the lower left cover of the T/H, and place this cover carefully on the material truck for subsequent assembly.

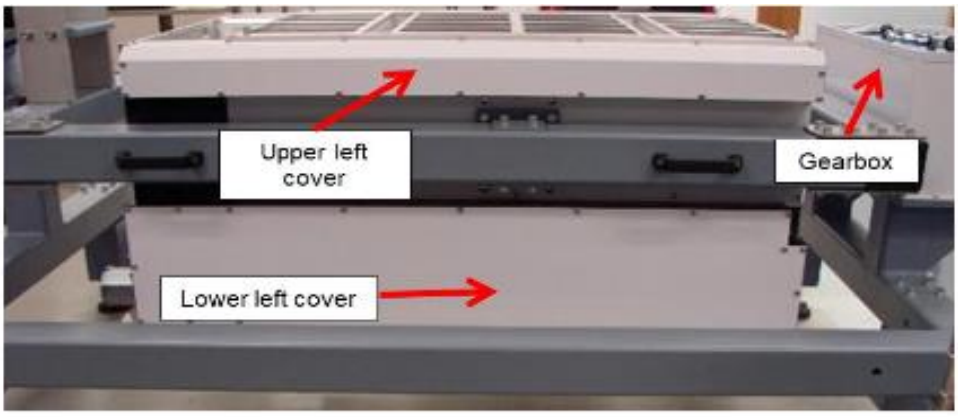

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: PH2 Phillips Head

METHOD:

1.6 Remove the 18 screws of the upper right T/H cover with a PH2 Phillips head, save the screws and do not discard them.
1.7 Remove the upper right cover of the T/H, and place this cover carefully on the material truck for subsequent assembly.
1.8 Remove the 23 screws from the lower right T/H cover with a PH2 Phillips head. Save the screws and do not discard them.
1.9 Remove the T/H right lower cover, and place this cover carefully on the material truck for subsequent assembly.

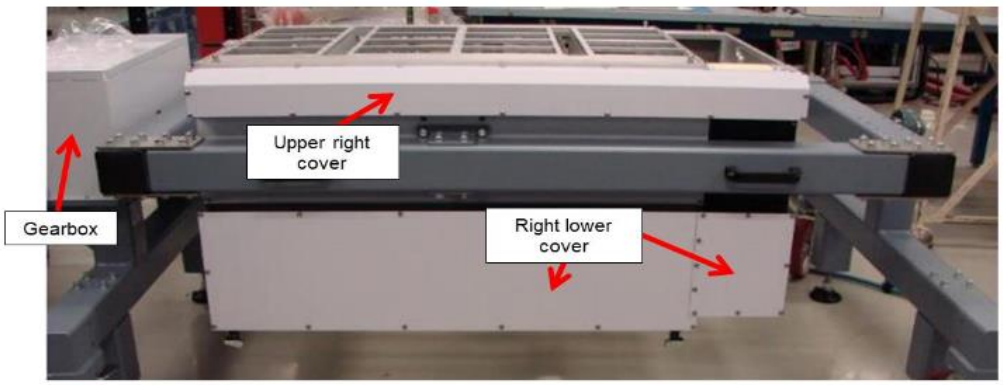

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: PH2 Phillips bit

METHOD:

1.10 Unlock the T/H door and remove the key.
1.11 Open the door and slide it to remove it.
1.12 Tie the door key to the inside of the door as shown in the picture.
1.13 Place the door on the cart.

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

2. The storage cover is on the material truck as shown in the figure.

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: 4mm Hex Bit

METHOD:

3.1 Shake the T/H direction as shown in the figure.

3.2 Use a 4mm hex bit tool to remove two IPD covers (636-899-00) with a total of 20 screws. The removed cover and screws will be used for subsequent assembly.

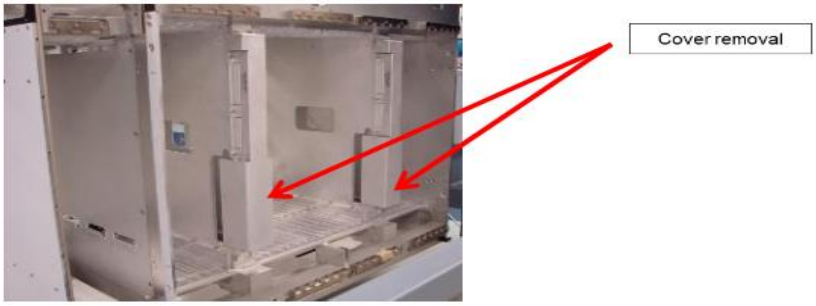

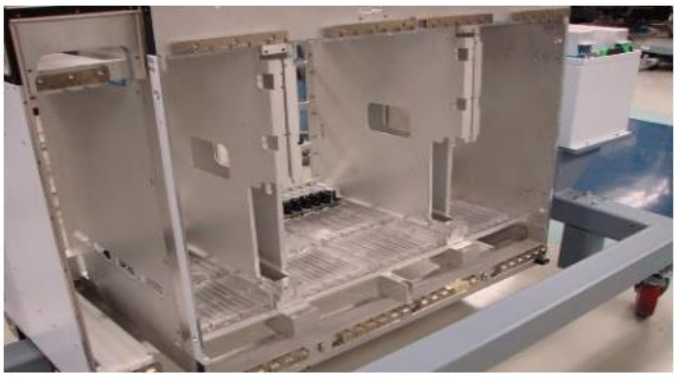

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL:

ITEM	PART NUMBER	DESCRIPTION	QTY
1	633-338-01	ELEC-MECH, UF2 TH IPD HLA, FOR SEMI TEST	2

MACHINE: N/A

METHOD:

4.1 Shake the T/H direction as shown in the figure.

4.2 Open 2 IPD packages (633-338-01).

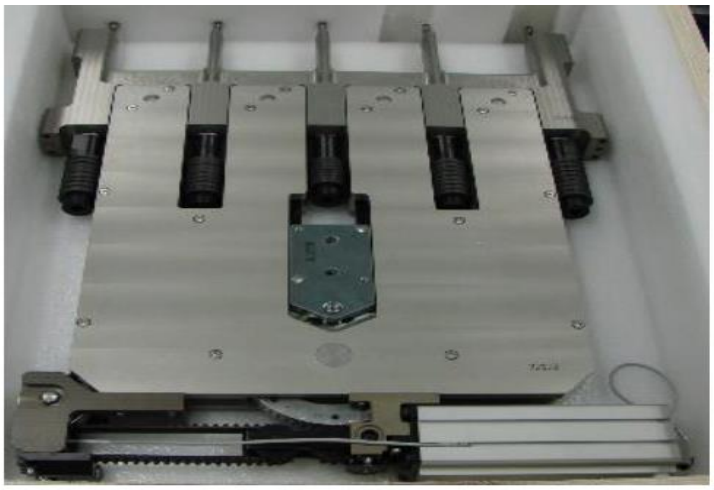

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

4.3 Two people lift the IPD out of the wooden box and place it on the table. Please make sure to place the foam block on the bottom of the IPD before placing it.

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: 4mm inner hexagon

METHOD:

4.4 Place the IPD as shown in the figure, and use a 4mm inner hexagon to remove a M6 shoulder screw pointed by the arrow.

Note: If you cannot remove this screw, please refer to 4.7-4.8 instructions.

4.5 Loosen the two M6 lock screws in the red circle with a 4mm inner hexagon, and slowly pull the cylinder out of the IPD.

4.6 Keep this cylinder and M6 shoulder screw for subsequent assembly.

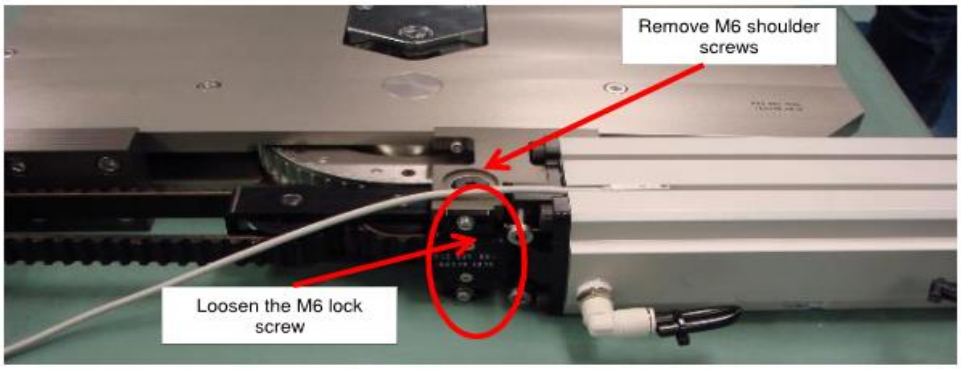

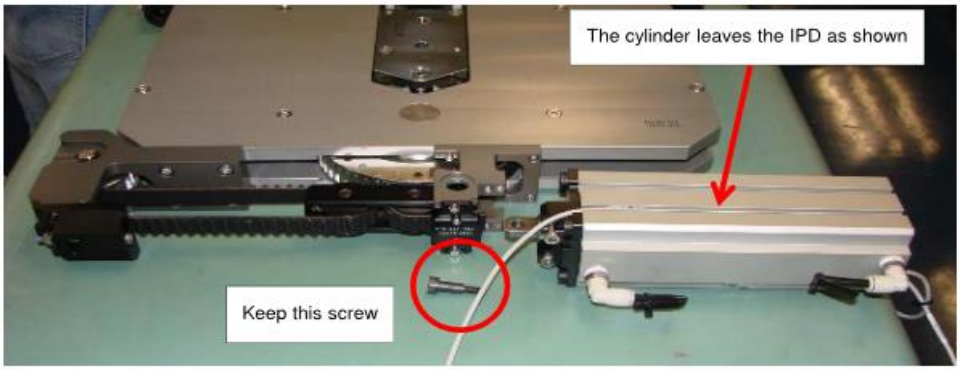

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

4.7 As shown in the figure, if you encounter this problem and cannot remove the screw, first pull out the air pipe pointed by the arrow, and then push the track bracket to the position where the screw can be removed.

4.8 Reinsert the previous trachea

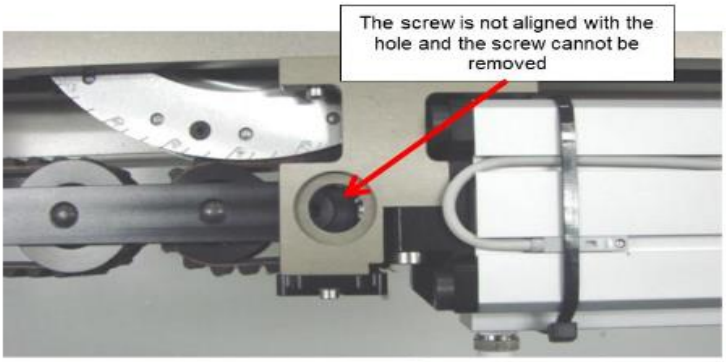

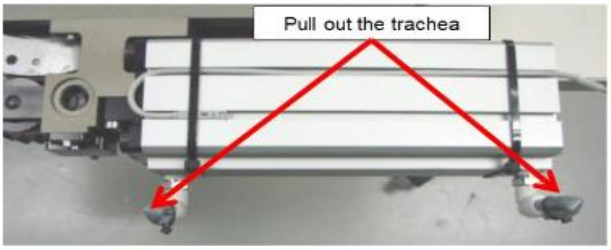

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: 6mm inner hexagon, 13.5 N.m

METHOD:

4.7 Place the IPD shaft on the edge of the table as shown in the figure. Screw the screw on the black lifting jig of the elevator into the M6 screw hole on the IPD shaft, the tool is 6mm inner hexagon and the torque is 13.5 N·m. Repeat the previous action to install the black fixture on the other side.

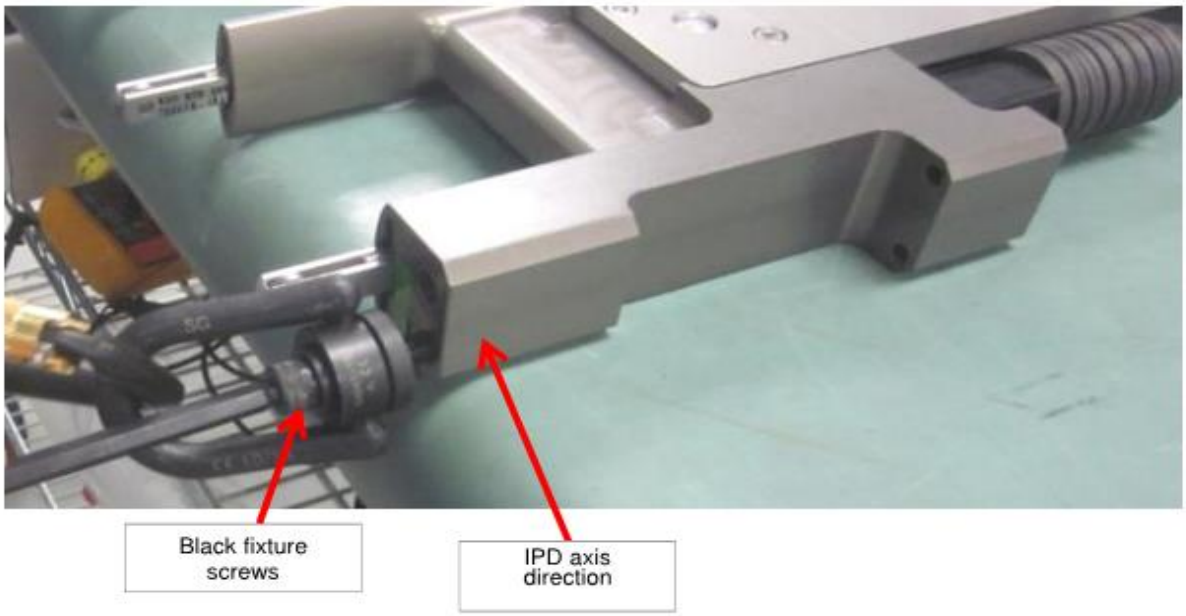

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

4.8 Install the hook on the fixture as shown in the figure, and use a lifting lift to lift the IPD off the table with two people. One person is responsible for lifting the IPD, and the other person supports the IPD to avoid swinging. Push the elevator to place the IPD above the T/H card slot.

Note: Please pay attention to the direction when pushing the elevator. Seen from the direction of the gear box, the IPD belt should be on the left side of the gear box.

T/H gear box

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: N/A

METHOD:

4.9 As shown in the figure, one person grabs the slide rail of the IPD, and the other person slowly descends the hoist and puts the IPD into the T/H slot. Remove the black clamp on the IPD.

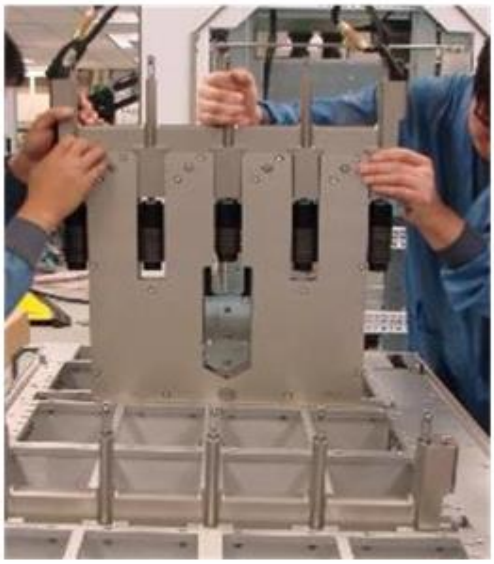

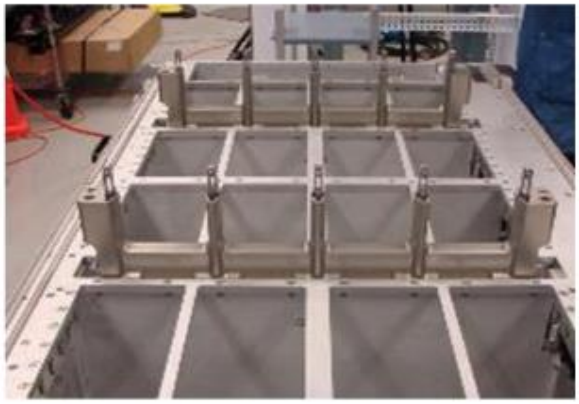

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL:

ITEM	PART NUMBER	DESCRIPTION	QTY
2	470-501-05	WASHER FLAT M6 6.4MMID SS	8
3	406-515-60	SCRW CP SKT HD M6X1.0P/60 MM SS W/NYLOK	8

MACHINE: 5mm inner hexagon, 5.6 N.m.

METHOD:

4.10 Place a total of 4 M6 flat washers (470-501-05) and 4 M6 screws (406-515-60) in the red circle as shown in the figure. Use a 5mm inner hexagon to tighten to a torque of 5.6 N·m.

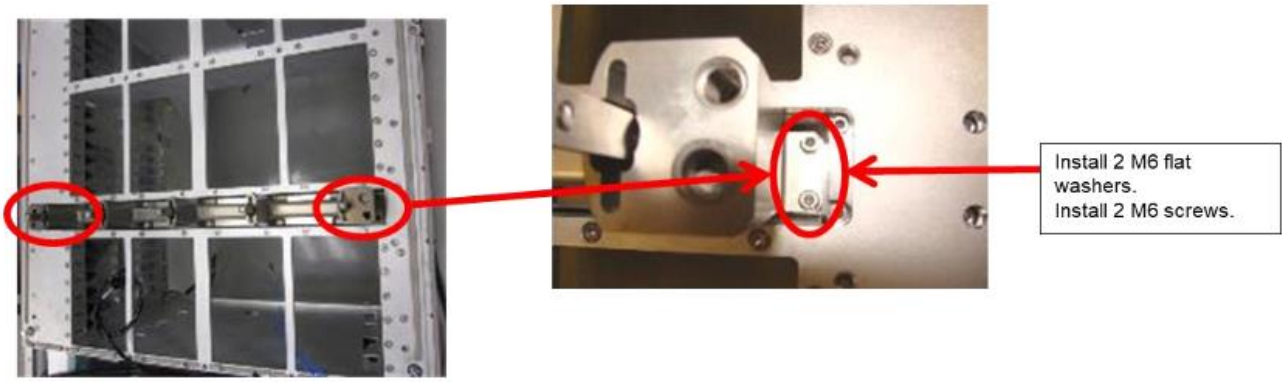

4.11 Repeat the above actions 4.3-4.10 to install another IPD into the T/H frame.

Note: Before shaking the T/H, please make sure that the 8 screws of the two IPDs have been locked to 5.6 N·m.

MAN: CERTIFIED OPERATOR, TECHNICIAN

MATERIAL: N/A

MACHINE: 4mm inner hexagon, 1.6 N.m and 4mm hexagon socket, 5.6 N.m.

METHOD:

5.1 Shake the T/H direction to the direction shown in the figure.

5.2 Install the cylinder on the IPD, tighten the anti-loosening screw, the tool is a 4mm inner hexagon and the torque is 1.6 N·m.

5.3 Install the M6 shoulder screw to the position shown in the figure, and tighten the shoulder screw. The tool is a 4mm hexagon socket and the torque is 5.6 N·m.
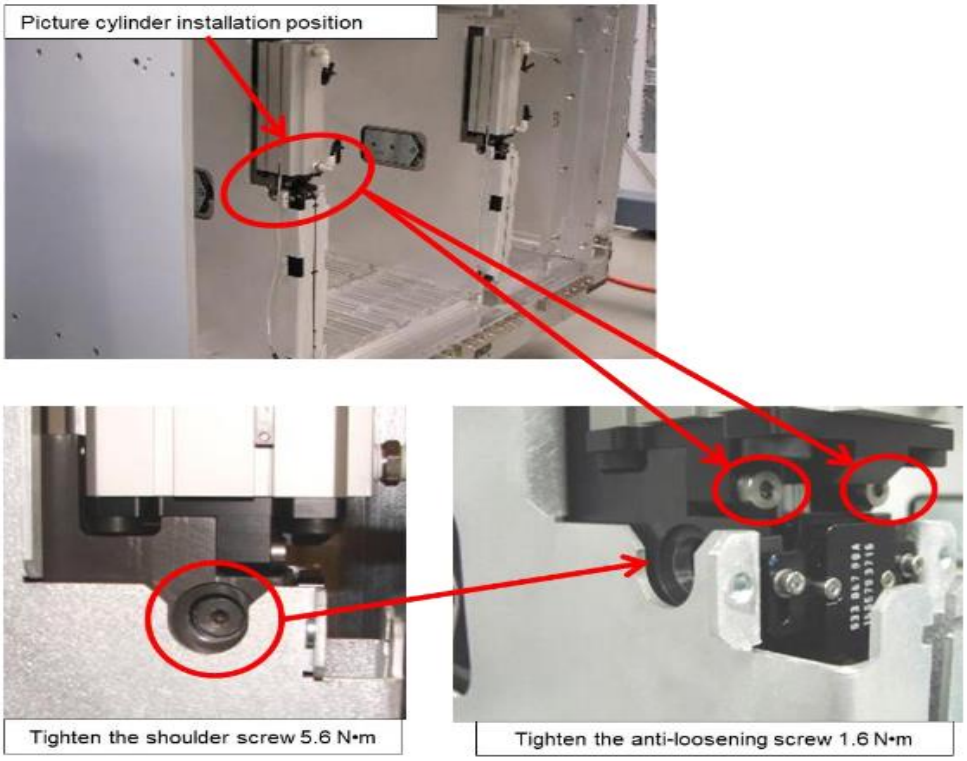
5.4 Repeat the above actions to install another cylinder on the IPD.