

YOUR LOGO

AIR HUMIDIFIER



Operating Instructions
for the Air Humidifier

Thank you for purchasing this air humidifier!

READ THIS MANUAL CAREFULLY
BEFORE USING THE DEVICE

This manual is a warranty document, so keep it for the entire service life of the unit.

The unit's specifications may be changed without prior notice in order to improve product quality.



WARNING: DO NOT USE LIQUIDS CONTAINING CHLORINE!

Do not use chlorine- or hypochlorite-based products for cleaning. This may damage the unit.

Contents

Safety Requirements 03

Air Humidifier Overview 05

Package Contents 06

Preparing for Use 09

Controls and Indicators 12

Draining Water from the Unit 14

Maintenance / Care 16

Troubleshooting 17

Technical Specifications 19

Warranty Card 20

Safety Requirements



WARNING: Operating the unit in violation of the requirements of this manual may damage the unit or cause electric shock.

- Do not disassemble or attempt to repair the unit yourself.
- Do not use the unit if the unit itself or its power cord has mechanical damage.
- When disconnecting the power cord from the mains or from the unit, always hold the plug or the main unit's power connector, not the cord itself.
- Do not connect the unit to the mains with a wet power plug or a wet main-unit power connector. Do not let water get onto the plug or the main unit's power connector.
- When cleaning the unit, always disconnect the power cord from the mains and from the main unit.
- Do not connect the unit to a power supply with different characteristics (the unit runs on a 220 V, 50 Hz AC power supply).
- Do not block the steam outlet or allow foreign objects to enter the steam outlet.
- Do not use the unit in places with high temperatures, for example, near heaters (closer than 1 m) or in direct sunlight. Do not place the unit on carpets, cloths, etc., as this may block the air intake on the underside of the housing. Also do not use the unit near other electronic devices such as laptops, TVs, etc. (steam may settle as condensation and disrupt their operation or cause damage).
- Do not leave the unit unattended while connected to the mains in a room with children or pets, and do not leave the unit plugged into the outlet when you are not using it.
- Do not store water in the water tank or in the main unit (use only fresh water).
- Do not use water above 40°C.
- Use only the water and aromatic additives recommended in this manual (distilled water, reverse-osmosis water, or tap water with a mineral content of up to 1000 mg/L is ideal).

Safety Requirements



WARNING: Operating the unit in violation of the requirements of this manual may damage the unit or cause electric shock.

- Do not use mineral water.
- Do not use aggressive substances (acetone, solvents, etc.), abrasives (dry cleaning powders or abrasive pastes), or chlorine- and hypochlorite-based cleaners to clean the unit.
- Do not pour water into the steam outlet openings.
- Store the unit only when dry and in a dry place.
- Do not clean the piezoelectric element by any method or with any agent other than those specified in this manual.
- Do not carry, tilt, or move the unit to another location while it is connected to the mains or operating.
- Do not pour water into the water tank while it is connected to the mains or operating.
- Do not use the unit on a tilted, wobbly, or unstable surface (place the unit only on a horizontal, level surface).
- Do not remove the water tank while the unit is operating.
- Do not wash the main unit in a dishwasher, under running water, or by immersing it in water.

Air Humidifier Overview

An air humidifier is a household electrical appliance designed to raise and maintain the humidity level in a room.

This device is an ultrasonic humidifier. It uses the high-frequency vibrations of an ultrasonic membrane to turn water into mist (fine water droplets), which is then distributed around the room by a fan.

Benefits of using an air humidifier:


- The recommended indoor relative humidity is 40–60%. The humidifier helps reach and maintain this level, which contributes to overall comfort.
- Humidified air prevents the skin and the mucous membranes of the nose and throat from drying out, reducing the risk of irritation and respiratory conditions.
- Maintaining stable humidity helps prevent warping of wooden furniture, floors, and musical instruments.
- Humidified air promotes deeper, more restful sleep.

For product details and support, visit [YOUR WEBSITE](#) or contact [YOUR PHONE](#) / [YOUR EMAIL](#).

YOUR QR CODE


Package Contents

Main Body Parts

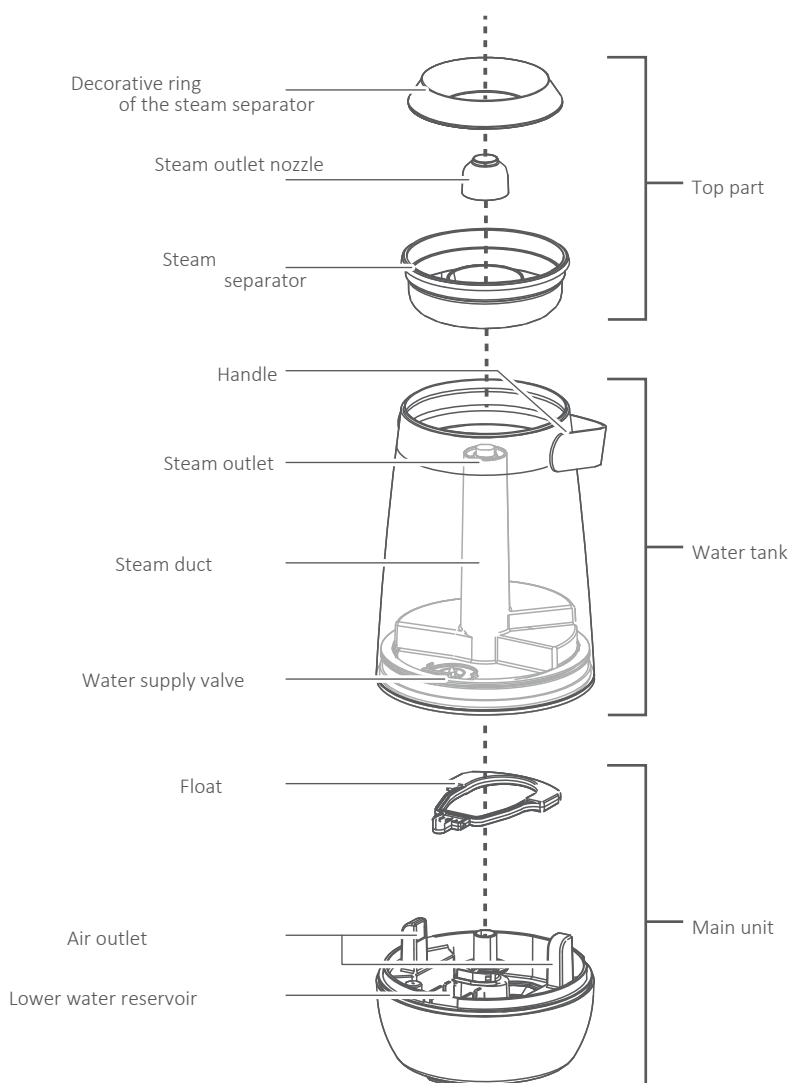


Package Contents


Front view

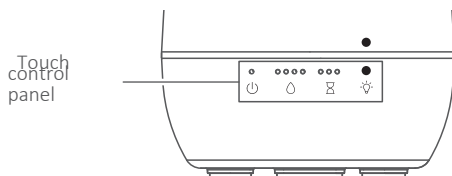


Rear view

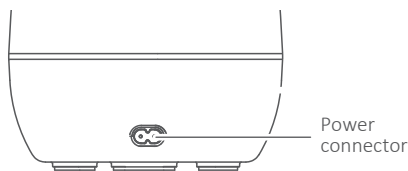


Bottom view

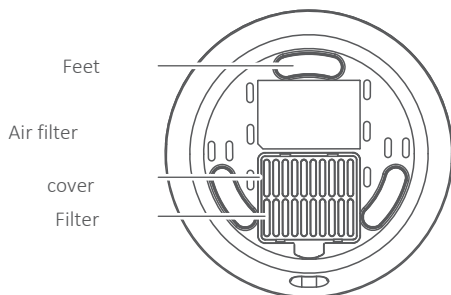

Top view of the main unit

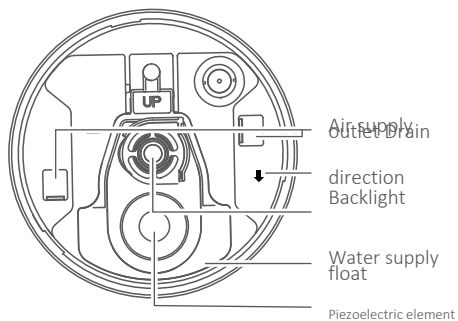

- Power cord (approx. 1.5 m)
- Cord power connector
- AC power plug

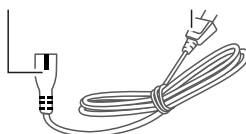

Package Contents

Air Filter

The air filter prevents dust from entering the unit through the air intake.

If dust gets into the unit, it will be hard to clean and may cause a malfunction, so be sure to install the air filter in the air intake opening on the underside of the unit.

- ※ If the air filter is clogged with dust, steam output may be insufficient. Rinse the air filter with water and reuse it, or replace it if it is worn out.



The unit comes with 3 air filters

(1 pre-installed in the main unit, 2 spare)

- ※ To purchase filters, please contact YOUR PHONE or YOUR WEBSITE.

Replacement filters are available from YOUR WEBSITE.

Preparing for Use


1 Installation Instructions

- Place the unit on a stable, level, and firm surface. Do not place the unit on tablecloths, carpets, etc.
- Install the unit leaving free space around it as shown in the figure below.



WARNING:

the water tank and the main unit are not rigidly locked to each other.

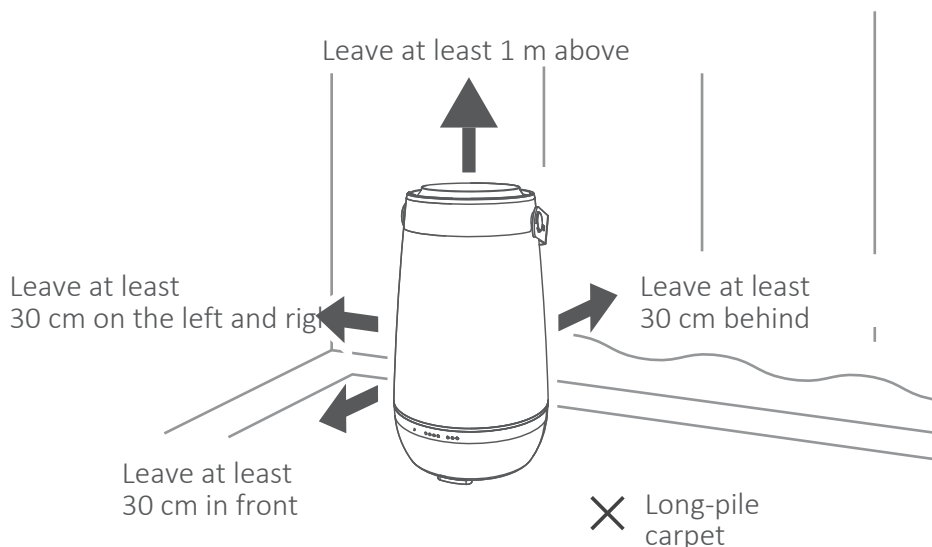

WARNING: Do not place the unit in the following locations:


- In places with high temperatures, for example, exposed to direct sunlight or near heating appliances (within 1 m).
- In places where steam may settle on electronic devices and appliances such as computers, TVs, etc.
- In places where steam may spray onto natural wooden furniture, musical instruments, walls, curtains, magazines, etc.

Preparing for Use

2 Filling the Tank with Water; Using Essential Oils

- Use tap water with a mineral content of up to 1000 mg/L; distilled water or reverse-osmosis water is ideal. You can also use 100% natural essential oils in the unit.
- Always use fresh water. • Remove the steam separator decorative ring and the steam separator. Fill the water tank as shown in the figure below; do not fill above the MAX line! Do not pour water into the steam outlet! • When using 100% natural essential oils: first pour in 1/3 of the water, add the oil, then top up the tank with water.

MAX line
maximum
water level

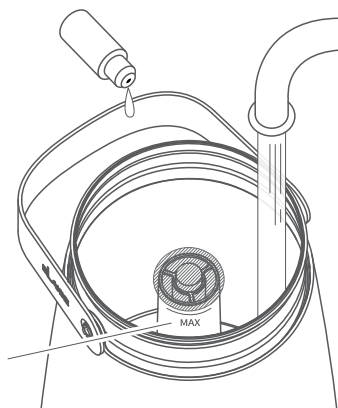

WARNING!


- Use only 100% natural essential oils. • Do not use aromatic oils that contain synthetic fragrances, impurities, or solid substances. • Do not let oils get onto the outer parts of the unit or its decorative elements — this may cause discoloration. • Add oil in small amounts, following the instructions.

Preparing for Use

3 Place the water tank on the main unit, aligning the marks.


WARNING! When placing the water tank on the main unit, align the dot-shaped marks on the front of the main unit and on the front of the water tank (shown in the figure below).

If the marks on the water tank and the main unit do not align, the unit will not operate. Four beeps will sound, all indicators will flash 10 times, and then the unit will stop.

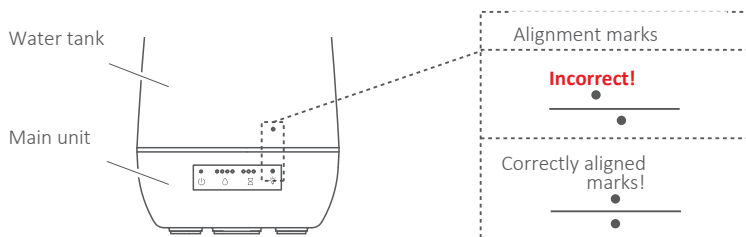


4 Connect the Power Cord

Insert the power cord into the main unit's power connector, then connect the device to the mains. When the unit is turned on, a beep will sound and all the lights will come on.

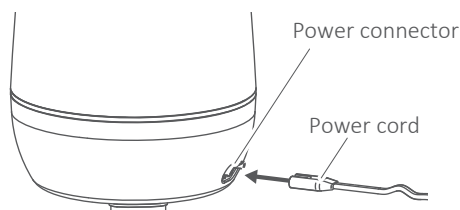

Controls and Indicators

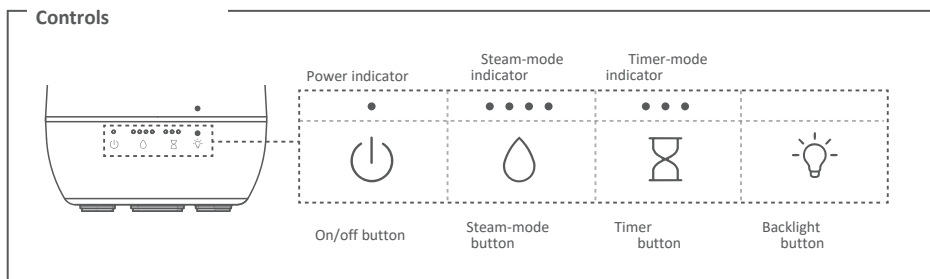

1 Turning On the Steam

Touch the on/off button. A double beep sounds, the power indicator and the steam-mode indicator light up, and the unit starts in minimum mode; steam is released at the minimum setting, and the steam backlight also turns on. If you touch the on/off button while the unit is running, a long beep sounds, the indicators and backlight switch off, and steam output stops.

2 Changing the Unit's Settings

- Tapping the steam-mode button lets you select one of four steam settings (low, medium, high, and night mode).
- Tapping the timer button lets you set a shutoff timer for steam output. The shutoff timer can be set to one of three options: 2, 4, or 6 hours.
 - ※ Even if you have not set the timer mode, the unit has an automatic shutoff function that turns the unit off 8 hours after it is switched on!
- Tapping the backlight button lets you turn on one of several modes. A button with an unlit indicator means the backlight is off. You can set: flicker mode (only in low, medium, or high steam mode) and candle mode (only in night steam mode).

3 Turning Off the Steam

- Touching the on/off button while the unit is running produces a long beep; the indicators and backlight switch off and steam output stops.


Controls and Indicators

Steam Mode Button

Each time you press the steam-mode button, a beep sounds, and the steam mode switches to one of four settings.

The active mode is shown by the light indicators, as shown in the figure below.

※ The light indication shows the current steam mode: [Low] — 1 white dot; [Medium] — 2 white dots; [High] — 3 white dots; [Night mode] — 1 green dot;

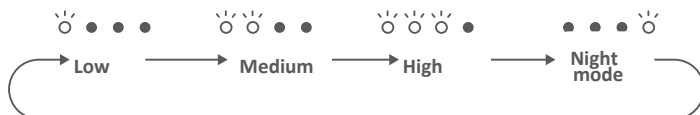

Timer Button

The first time you tap the timer button, a beep sounds and the first indicator lights white — this means the timer is set to 2 hours.

With each further tap of the timer button, the time increases:

4 hours — two indicators lit; 6 hours — three indicators lit.

The next tap turns the timer off — the indicators go out.

The timer switching sequence is shown in the figure below.




Backlight Button

When you tap the backlight button, a beep sounds and the steam light indication turns on.

Repeated taps change the backlight mode depending on the selected steam mode.

- If one of the steam modes [Low], [Medium], or [High] is on, you can turn on a steady backlight or flicker mode; each tap of the button changes the backlight mode

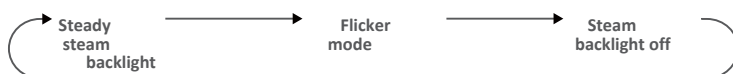

- When [Night steam mode] is on, the backlight can only be set to candle mode.




※ Flicker mode: the light brightness changes slowly depending on the selected mode.


※ Candle mode: the light flickers smoothly, imitating a burning candle.

Draining Water from the Unit

- 1** When draining water, always turn off the unit, unplug the power cord from the outlet, and disconnect the power cord from the unit.

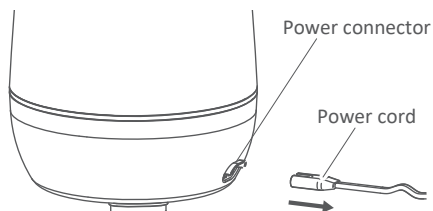


- 2** Remove the top part from the water tank (as an assembly) or one piece at a time, as shown in the figure below.

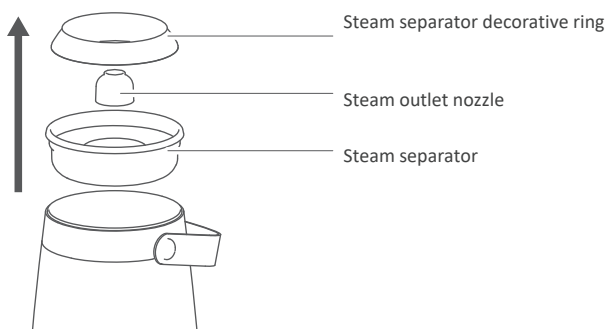

- 3** Lift the water tank off the main unit by its handle.

※ Be careful not to tilt the main unit when removing the water tank, as there is still water inside the main unit!

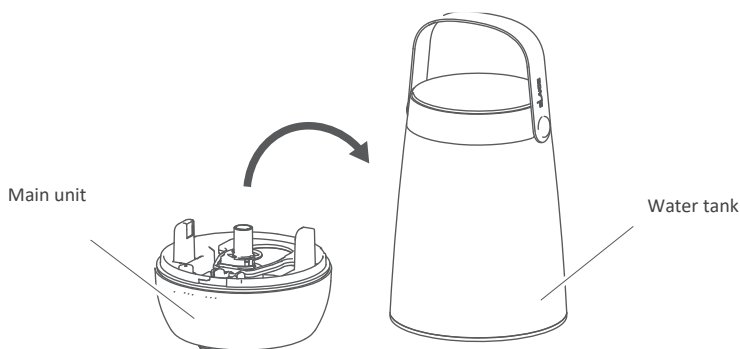


3 Drain the remaining water from the water tank and the main unit



WARNING: Drain water from the main unit in the direction of the drain arrow

- The water-drain direction arrow is printed on the main unit (shown in the figure below).
- Do not let water get into the air outlet during draining! Water entering the main unit through the air outlet openings can cause serious damage to the unit.

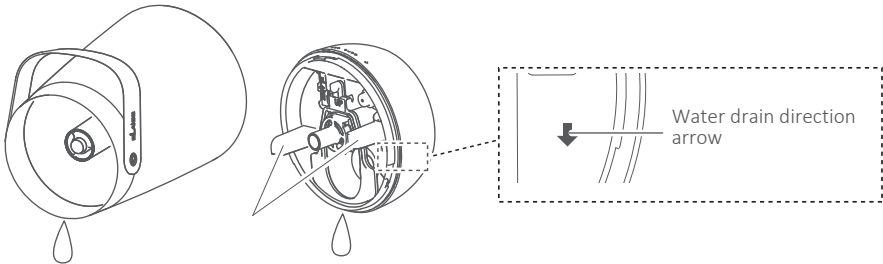


4 If the unit will not be used — for example, for storage or transport.



REQUIRED!

Fully dry the water tank and the main unit separately, as shown in the figure below.

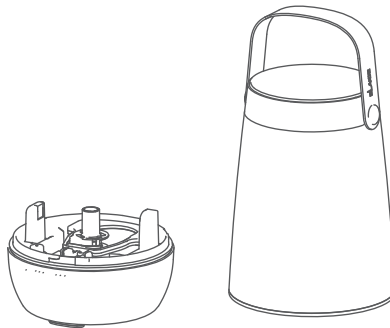

WARNING!

Fully drain the water from the tank and the main unit and store them dry and in a dry place! If the unit is stored with water inside or while wet, bacteria and mold can grow in it!

Maintenance / Care

To avoid malfunctions, it is recommended to clean and maintain the unit at least once a month with regular use. Before cleaning,

be sure to disconnect the power and unplug the AC plug from the outlet!

Also disconnect the power connector from the main unit. Drain the water from the main unit.

- Remove the top part (steam separator decorative ring, steam outlet nozzle, steam separator)
 - ※ If it is dirty, remove dirt or stains with a slightly damp soft cloth moistened with diluted neutral detergent or soapy water. Then rinse with warm water. Let it dry or wipe it dry with a soft towel.
- Remove the water tank and drain the water
 - ※ If it is heavily soiled, wipe off dirt or stains with a slightly damp soft cloth moistened with diluted neutral detergent or soapy water. Then rinse with warm water. Let it dry or wipe it dry with a soft towel.
- Main unit – drain the water from the lower reservoir (drain direction shown by the arrow). The float can be removed if needed.
 - ※ If the outside is heavily soiled, remove dirt or stains with a slightly damp soft cloth moistened with diluted neutral detergent or soapy water. Wipe dry with a soft towel. Wipe the water tank with a soft cloth moistened with warm water; do not apply strong force to the piezoelectric element! Let it dry for 2–3 hours.
- Piezoelectric element
 - ※ **Be careful not to apply strong force when cleaning the piezoelectric element, so as not to damage it! Gently wipe the surface of the piezoelectric element with a damp cotton swab moistened with warm water. The float can be removed: when lifted up, it turns on its axis and comes off. If it is heavily soiled, wipe off dirt or stains with a slightly damp soft cloth moistened with diluted neutral detergent or soapy water. Then rinse with warm water. Let it dry or wipe it dry with a soft towel. If white scale cannot be removed from the piezoelectric element, clean it using an acid solution (dissolve 20 g of citric acid in 200 mL of warm water).**
- Air filter
 - ※ **Open the air-intake cover on the underside of the unit and remove the air filter. Vacuum off any dust on the air-intake cover or in the slots inside. Rinse the air filter with tap water and dry it thoroughly before installing it!**
- Power cord
 - ※ Wipe off dirt and dust with a dry cloth.



WARNING!

- Do not use thinners, gasoline, alcohol, etc. to clean the unit, as this may cause discoloration and damage the unit.
- Do not use cleaning agents containing abrasive powder or chlorine- and hypochlorite-based products to clean the unit! Keep the unit clean and dry!

Troubleshooting

Does not turn on / turns on and immediately turns off

- Check whether the power plug is connected to the outlet and the power connector to the unit.
 - ※ Check the unit's connection to the mains and that the mains parameters match.
- Check that there is water in the water tank.
 - ※ The device will not start if the water tank is empty.
- Check whether the water tank is correctly installed on the main unit.
 - ※ If the water tank and the main unit are installed incorrectly, a fault will occur and the device will stop. Make sure the marks on the tank and the main unit align and that there are no foreign objects between them. The tank must sit on the main unit with no gaps, and the marks must align.

Water leaks from the bottom of the unit

- Water may have entered the steam duct while filling, or the water level may have exceeded the MAX mark.
 - ※ Water can overflow into the steam duct if the level exceeds the maximum mark indicated inside the water tank.
- There may be dirt or debris under the water supply valve.
 - ※ Wash the water tank, then rinse the water supply valve under running water. If water leaks from the bottom of the unit, disconnect it from the mains immediately! Before using it again, drain the water from the main unit! Let the main unit dry for 2–3 hours!

No steam or weak steam

- Water may have entered the steam duct while filling the water tank.
 - ※ Before using it again, stop the unit and drain the water from the main unit.
- The piezoelectric element may be dirty.
 - ※ If necessary, clean the piezoelectric element.
- The air intake may be blocked or the filter may be dirty.
 - ※ Place the unit so that the air intake on the bottom is not blocked. Check the filter and, if necessary, replace or rinse it.
- The steam may be dispersing because of a draft.
 - ※ Place the unit so that airflows from open windows, doors, fans, air conditioners, etc. do not affect its operation.

Steam comes out even when the power is off

- To clear residual steam inside the unit, the fan keeps running for 4–6 seconds after the unit is turned off.
 - ※ This is not a malfunction.

Troubleshooting

The unit does not respond to touching the control buttons, or turns on by itself.

- The control-panel buttons are touch-sensitive; the control-panel surface must be dry and clean! Remove dirt and moisture from its surface and wipe it dry.

※ If the skin on your fingers is too dry, the control buttons may not respond. Try lightly moistening your fingers with water and touching the buttons again.

White scale on the inner parts of the tank.

- In ultrasonic humidifiers, white scale forms when tap water or highly mineralized water is used. These are crystals of the minerals contained in the water. If white scale appears, clean the unit's surfaces immediately.

※ If white scale cannot be removed from the inner surfaces of the water tank, the inner water reservoir, and the piezoelectric element, clean them using a citric acid solution (dissolve 20 g of citric acid in 200 mL of warm water). Gently wipe the surfaces covered with white scale without applying strong force.

The unit stops producing steam and beeps.

- This may be a fault in the fan inside the main unit. The unit has a fan diagnostic mode: if the fan fails, the unit stops, beeps 10 times, and the power button flashes 10 times. Count the beeps and light signals. If this is confirmed, contact a service center to have the unit diagnosed.

Technical Specifications

Size	170 x 170 x 300 mm,
Weight without water, max	990 g,
Power cord length	1.5 m

Supply voltage	220 V AC
----------------	----------

Current frequency	50 Hz
-------------------	-------

Rated power	25 W
-------------	------

Water tank capacity	2.4 L
---------------------	-------

Humidification technology	Ultrasonic
---------------------------	------------

Humidification output	Low mode — approx. 100 mL/h Medium mode — approx. 200 mL/h High mode — approx. 300 mL/h Night mode (very low) — approx. 35 mL/h
-----------------------	--

Timer shutoff time	After 2 / 4 / 6 hours
--------------------	-----------------------

Automatic protection and diagnostics	Yes
--------------------------------------	-----

Material	PP ABS plastic
----------	----------------

VISIT US AT:

YOUR QR CODE

Warranty Card

SPACE FOR STICKER

Date of sale

Buyer

Seller

Seller's stamp

CONTACT INFORMATION

Phone:

YOUR PHONE

Email:

YOUR EMAIL

Website:

YOUR WEBSITE

YOUR LOGO

AIRØHUMIDIFIER

