

GRANDWORK

Grandwork Air Purifier

User Manual

CONTENTS

1. What's in the box	
2. Placement	
3. Safety instructions	
4. Specifications	
5. Getting started	
6. Control panel	
7. Operating modes	
8. Replacing the pre-filter	
9. Resetting the pre-filter timer	
10. Using the mobile app	
11. Care and cleaning	
12. Troubleshooting	

1. WHAT'S IN THE BOX

- Grandwork Air Purifier — 1 pc
- User manual — 1 pc
- Plug adapter (optional) — 1 pc



2. PLACEMENT

Place the Grandwork Air Purifier upright on a table, shelf or other raised, stable surface indoors. Keep the air inlets around the base and the outlet on top clear, and position the unit so the power plug can be reached easily.

Do not place it on the floor, in bathrooms or other damp areas, or next to heaters and stoves.



3. SAFETY INSTRUCTIONS

- Operate the Grandwork Air Purifier only as described in this manual.
- Install the unit so that the power plug remains easy to reach.
- Use indoors only, on a table or another raised surface. Do not use it on the floor.
- Do not operate the unit near a shower, bath, sink, or anywhere steam collects.
- Do not operate the unit near a stove or heater.
- Never touch the plug or the unit with wet hands.
- Always keep the air inlet and outlet openings unobstructed.
- Do not let liquid get inside the unit — this may cause a short circuit or electric shock.
- Always unplug the unit before servicing it or replacing the pre-filter.
- Do not use the unit if the power cord or plug is damaged.
- Keep children and pets away from the unit.
- Do not look at the UV LEDs through the top diffuser for prolonged periods.
- In an emergency (for example, damaged cord insulation or liquid inside the unit), switch the unit off immediately and unplug it.
- Do not pull the plug out of the socket by the cord.
- Use the unit in the upright position only.
- The openings in the housing provide ventilation and prevent overheating — never cover them. Do not insert objects into the slots or openings, as this may cause electric shock, a short circuit or damage to the unit.

WARNING! Unplug the unit immediately if:

- it has been dropped or the housing is damaged;
- the power cord or plug is damaged or worn;
- the LED indicators do not light up although the socket is live;
- liquid has been spilled on or inside the housing.

4. SPECIFICATIONS

Room coverage	Up to 218 sq. ft (20.25 m ²)
Glass filter (photocatalytic)	Lifetime
UV wavelength	365 nm (ozone-free)
Pre-filter	Replacement recommended every 6 months
Power consumption	Standby: 220 V, 22 mA, 5 W Night mode: 220 V, 28 mA, 7 W Day mode: 220 V, 96 mA, 22 W Boost mode: 220 V, 119 mA, 27 W Standby + RGB ring: 220 V, 32 mA, 7 W
Mains voltage	110–240 V, 50–60 Hz
Noise level at 1 m (room background: 26 dB(A))	Night mode: 29 dB(A) Day mode: 31 dB(A) Boost mode: 36 dB(A)
Noise level at 0.1 m (room background: 26 dB(A))	Night mode: 33 dB(A) Day mode: 39 dB(A) Boost mode: 45 dB(A)
Bluetooth	BLE 4.0
Wi-Fi (firmware updates only)	2.4 GHz
Sensors (optional)	Temperature, pressure, humidity, air quality
Dimensions (Ø × H)	6.57" (17.7 cm) × 10.12" (25.75 cm)
Cord length	Approx. 70" (177.8 cm)
Weight	3.9 lb (1.8 kg)
Warranty	1-year limited warranty
Assembly	Made in EU
App support	iOS & Android
Mode and fault indication	Light and sound
Power supplies 110/220 V	Meanwell IRM-30-12, IRM-10-5 with overheat and short-circuit protection
Self-diagnostics	Fan failure UV module failure Heat-sink overheat monitoring
Clock battery (CR2032) life	7 years




5. GETTING STARTED

PLEASE NOTE: While the unit is stored switched off, substances absorbed from the air build up on the surface of the photocatalytic glass filter. When the unit is switched on (including when new), these substances are broken down (oxidised), which may cause a faint, distinctive smell during the first few hours of operation. This is normal and does not indicate a fault.

1. Open the packaging and check the contents for any visible transport damage.
2. Take the Grandwork Air Purifier out of the box and remove the protective plastic film.
3. Before switching on, the unit must be at room temperature. After transport or storage at sub-zero temperatures, leave it indoors at a positive temperature for at least 2 hours.
4. Before plugging it in for the first time, make sure the unit has warmed up to room temperature and there is no condensation on it.
5. Connect the unit to a 110–240 V / 50–60 Hz mains socket using the power cord.

Parts overview

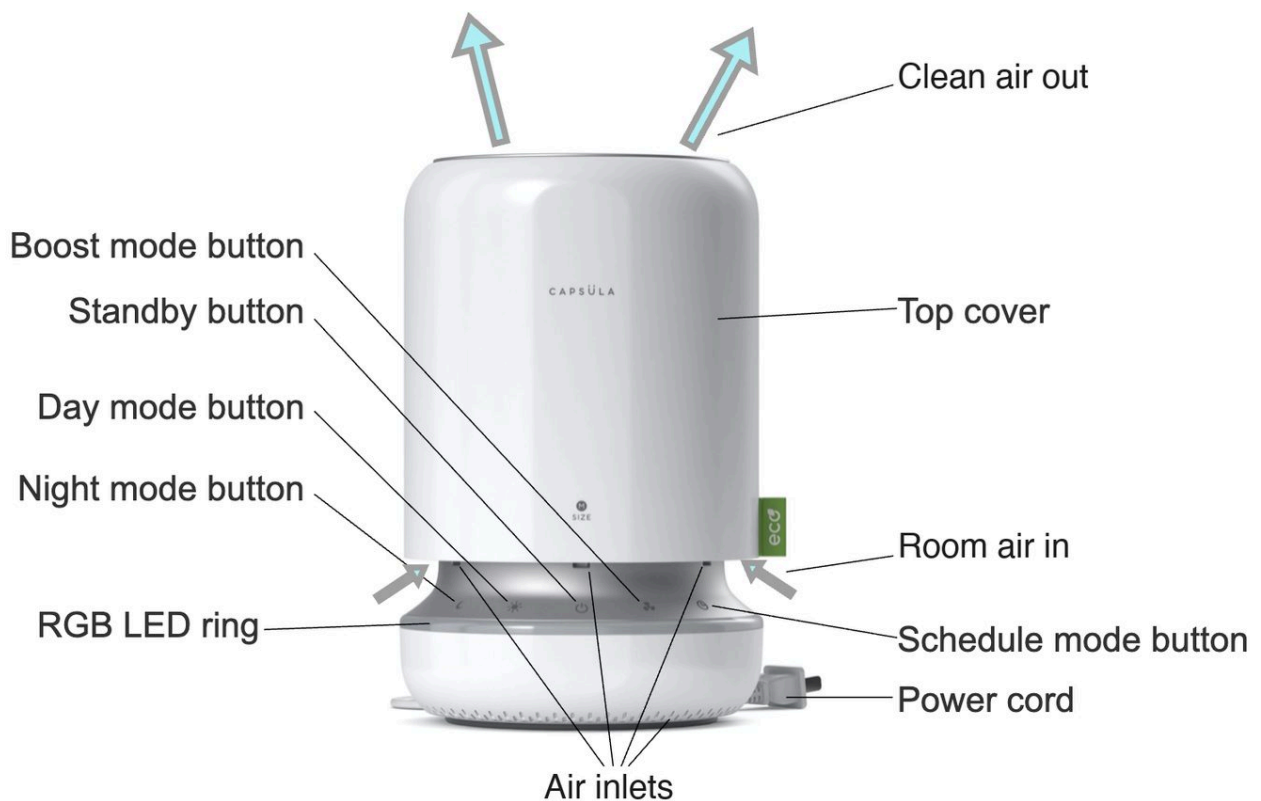

- **Top cover** — the upper housing; purified air exits through the diffuser on top.
- **Air inlets** — ventilation openings around the base where room air is drawn in.
- **Control panel** — touch buttons on the base: Night mode, Day mode, Standby, Boost mode and Schedule mode.
- **RGB LED ring** — decorative light ring around the base.
- **Power cord** — exits at the rear of the base.

6. CONTROL PANEL

Operating modes are controlled with the touch buttons on the base of the Grandwork Air Purifier.



-  **Night mode** — switches on night mode.
-  **Day mode** — switches on day mode.
-  **Standby** — stops purification.
-  **Boost mode** — switches on boost mode.
-  **Schedule mode** — runs the unit on a schedule or switches on the auto turn-off timer.*

* Depends on whether a schedule has been set.

7. OPERATING MODES

Night mode

A quiet mode for use at night. Fan speed and UV LED power are reduced, and the LED indicators dim automatically after 10 seconds.

Day mode

The standard mode for everyday use, balancing effective purification with a comfortable noise level.

Boost mode

Maximum performance. The fan and UV LEDs run at full power.

Schedule mode

Depending on whether a schedule has been set, the unit either follows the schedule or uses the auto turn-off timer. Touch  to switch the mode on, and touch it again to switch it off. While the mode is active, a white indicator is lit under the  button.

Schedule: if a schedule has been saved to the unit, it switches purification on and off accordingly. See “Set schedule” in section 10 for how to create one.

Auto turn-off: if no schedule has been saved, the mode starts a preset 180-minute timer. When the time is up, the unit goes into Standby and the indicator goes out.

8. REPLACING THE PRE-FILTER


Unplug the Grandwork Air Purifier from the mains before replacing the filter.

When the pre-filter needs replacing, the LED under the Standby button flashes blue at regular intervals.



STEP 1

Place the unit on a flat surface.

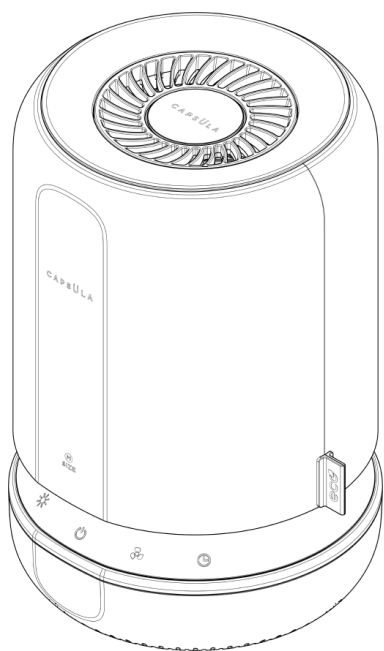


STEP 2

Twist the top cover to the right to unlock it.




STEP 3

Lift off the top cover.

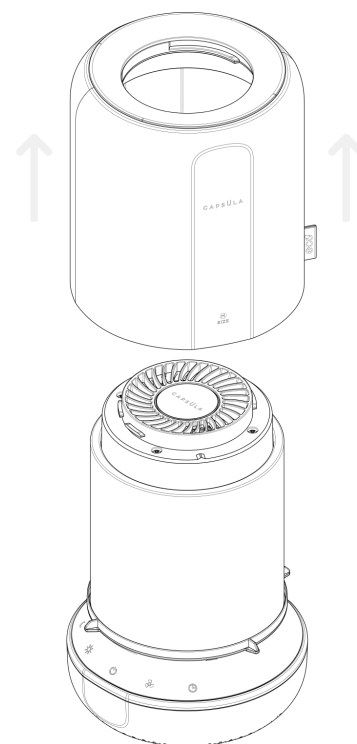


STEP 4


Unlock the pre-filter.

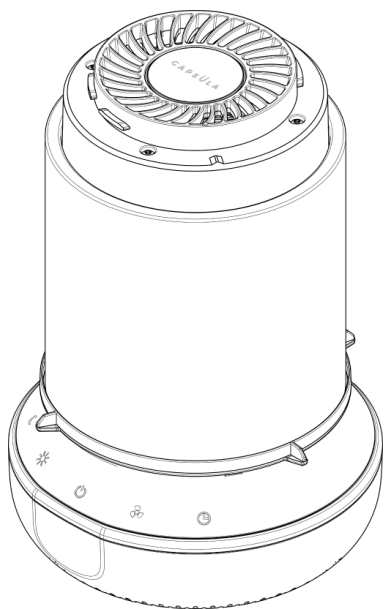**STEP 5**


Lift out the old pre-filter.

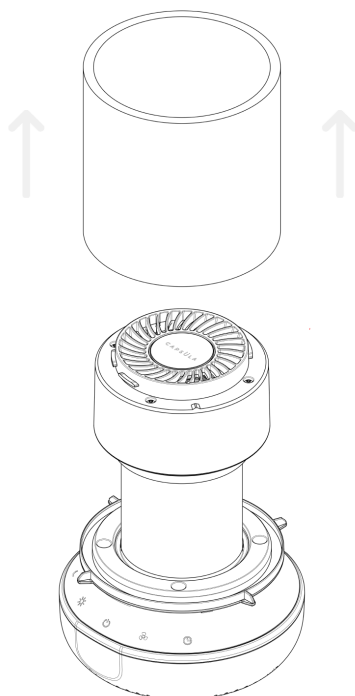**STEP 6**


Fit a new pre-filter.

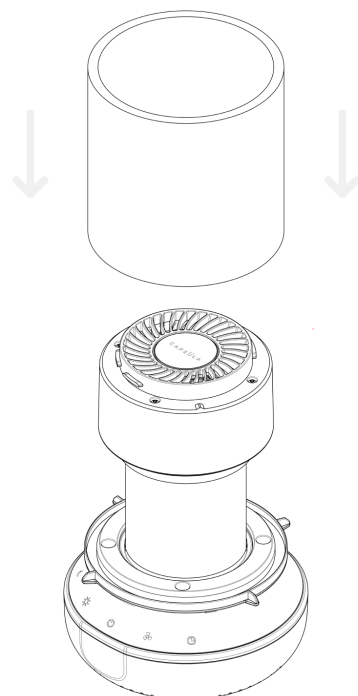**STEP 7**


Lock the pre-filter in place.

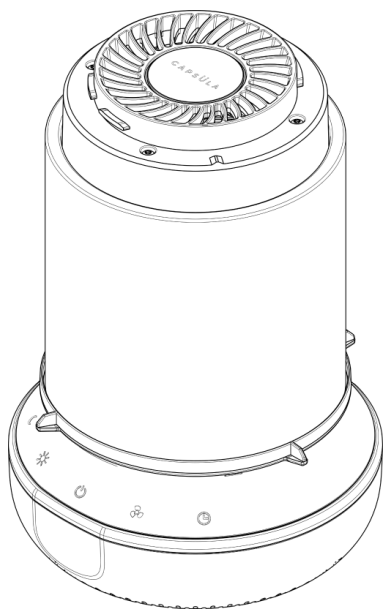**STEP 8**

Put the top cover back on.

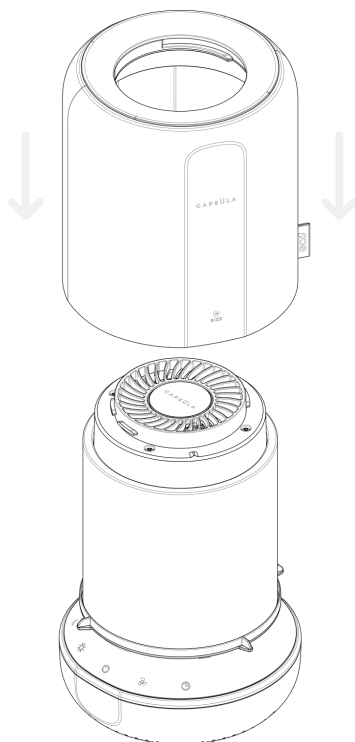**STEP 9**

Twist the top cover to lock it.

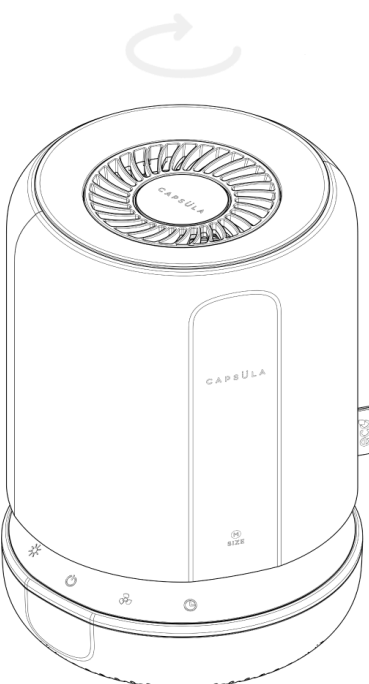

After replacing the filter, reset the pre-filter timer (see section 9).

9. RESETTING THE PRE-FILTER TIMER

Once the filter has been replaced, the filter-installation timestamp must be reset.

Reset via the app

If you replaced the filter following the step-by-step guide in the app, reassemble the unit, plug it in and open the app. Select the unit in your list of connected devices — the filter timestamp is reset automatically.

Reset without the app

If you replaced the filter following this manual, reassemble the unit and plug it in. Then, while holding the Standby button  , press the Schedule mode button  . A light and sound signal confirms the reset.

10. USING THE MOBILE APP


The companion app gives you full control of the unit, step-by-step setup and support, and lets you keep track of when the pre-filter needs replacing. Download it from the App Store or Google Play, open it and follow the on-screen instructions to connect.



Device search


When you open the app, allow it to use your smartphone's Bluetooth — without this permission the app cannot control the unit.

If no devices have been connected yet, the Device search screen opens automatically. Plug the unit in and keep your phone within Bluetooth range (typically 3–10 m). After scanning, a list of available devices appears. Select one and tap **ADD DEVICE**, then enter the PIN printed on the label on the underside of the unit and tap **CONNECT DEVICE**.

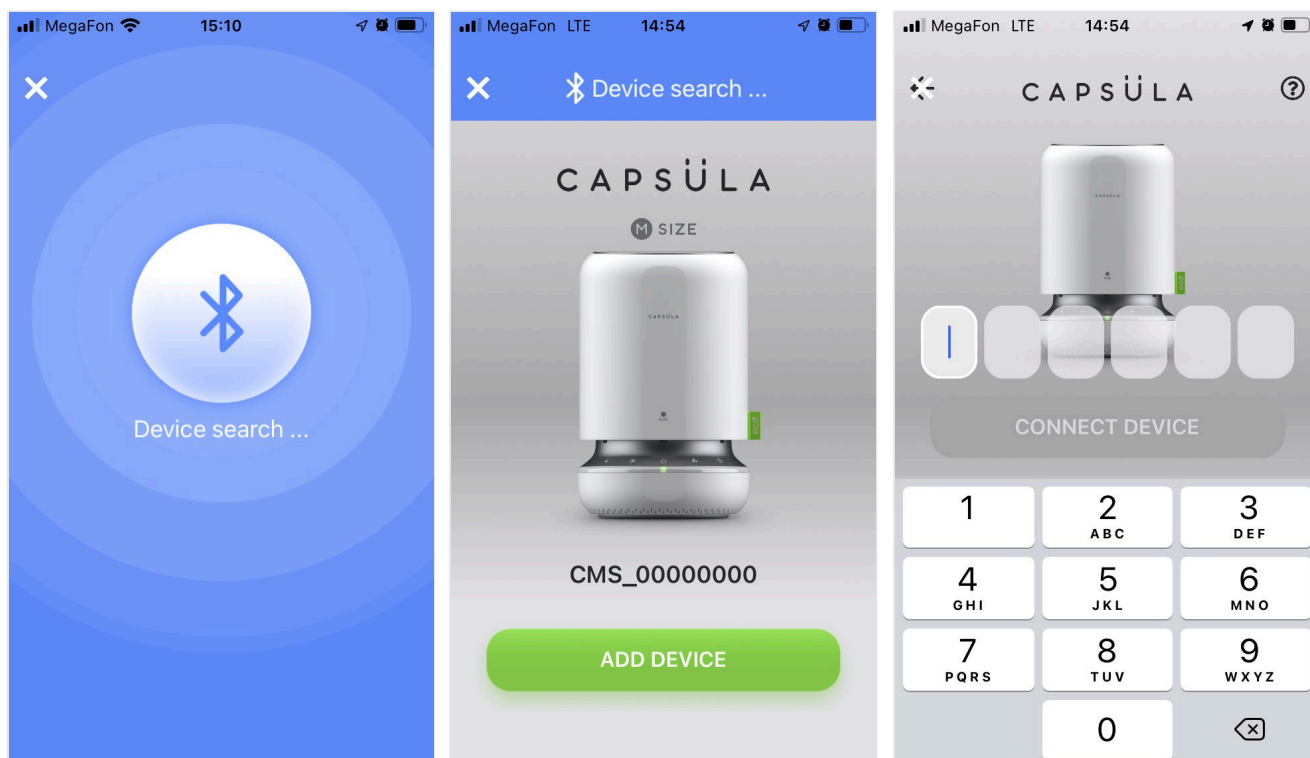


Device list

Connected units are shown on the device list screen. A black Bluetooth icon  next to a unit means it is switched on and within range; a grey icon  means it is switched off or out of range. Tap the  icon to open more options: Information, Rename and Delete device.

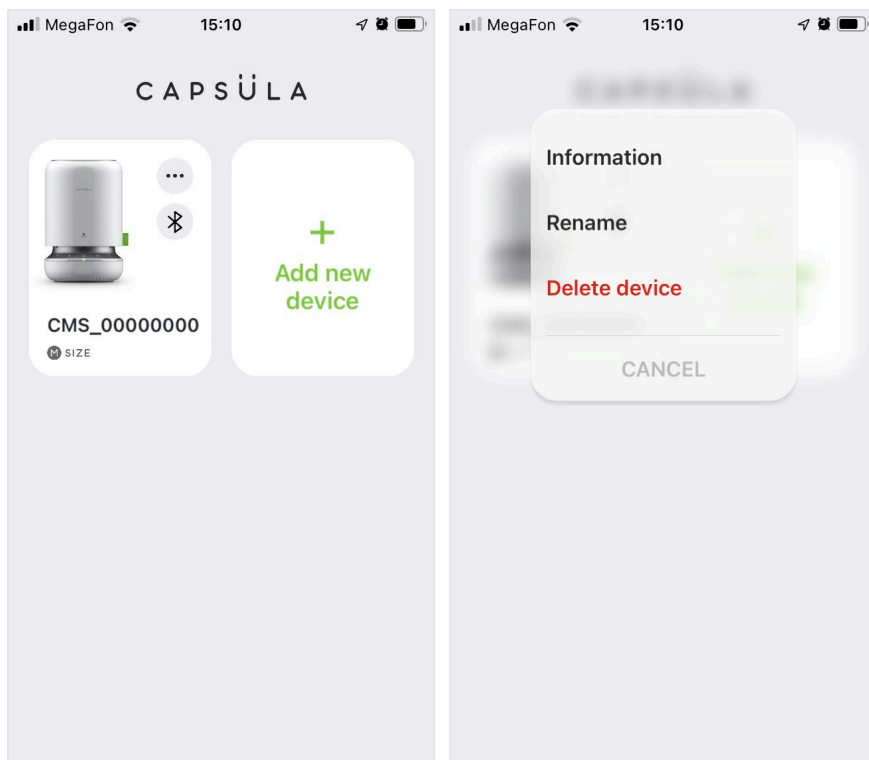


Main screen and mode control

Tap a unit in the device list to open its control screen. From here you can see the device name and model, the air parameters (temperature, humidity and pressure — available with the optional external sensor), select the RGB ring colour and brightness, see the next scheduled mode and its time, and switch between Night, Day, Standby, Boost and Schedule modes.

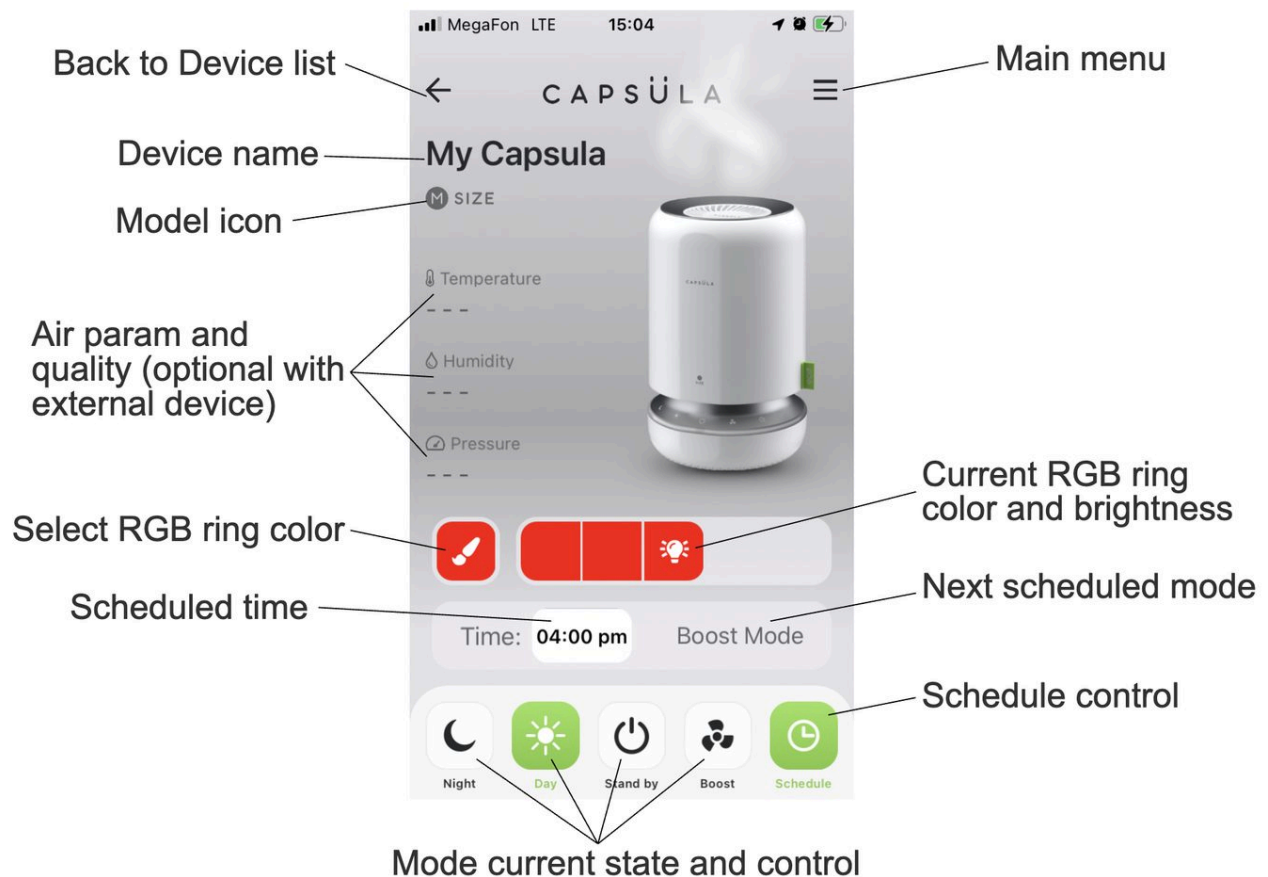


INFO: This screen is only available while the unit is switched on and within Bluetooth range. If the connection is lost, the screen closes automatically.

If the time on the unit differs from your smartphone's time by more than 5 minutes, the app offers to correct the unit's date and time — confirm if needed.

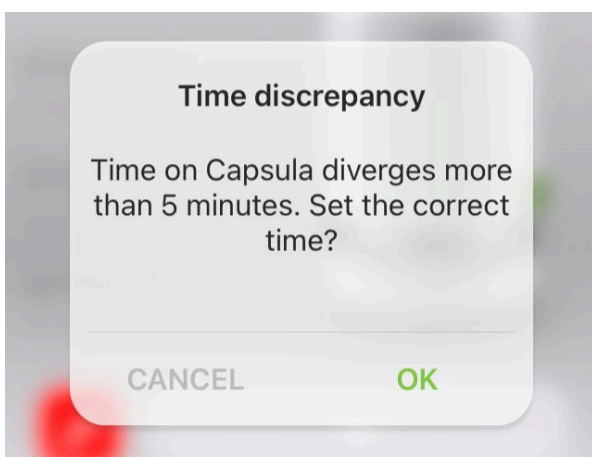


INFO: How the automatic schedule is displayed

- If the schedule is on and a mode is set for today, the time and type of the next mode are shown.
- If the schedule is on and modes are set, but none remain for today, the message “Today's schedule is empty” is shown.
- If the schedule is on but no modes are set, the time remaining until auto turn-off is shown.

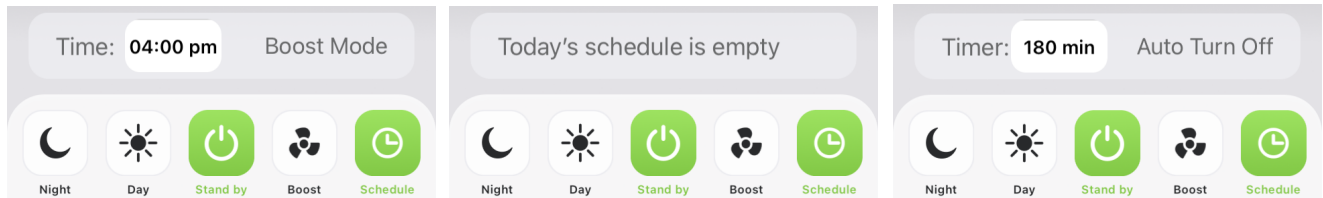


RGB LED ring

Open the RGB ring colour panel and choose a colour — 9 colours are available.

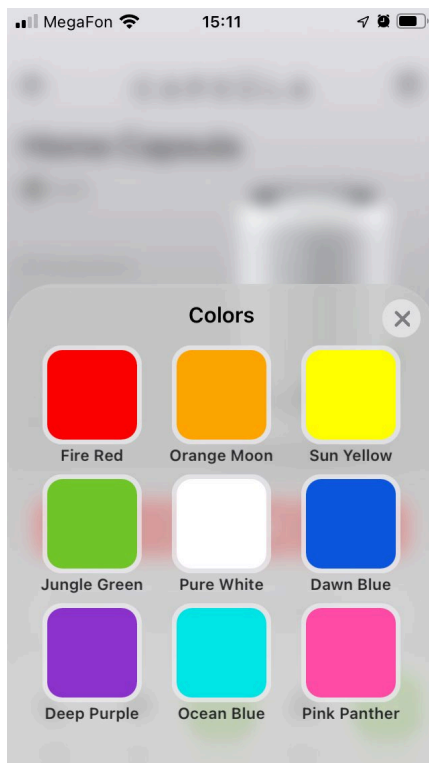


Use the brightness slider on the main screen to choose one of 5 brightness levels.

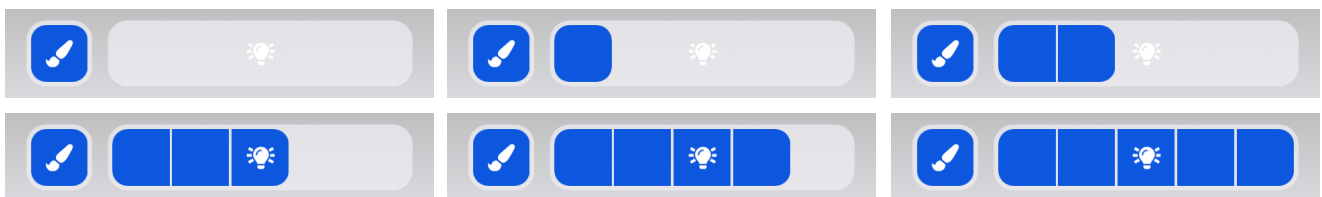

INFO: The RGB ring's colour and brightness are not restored after the unit loses power. You can use this to turn the ring off when your phone isn't at hand.

Main menu

All main device settings, information and service parameters are in the main menu (Settings, Service, Language, Temperature, Information). Here you can choose the date, time and temperature formats, select the app language, view documents and set up an automatic schedule.





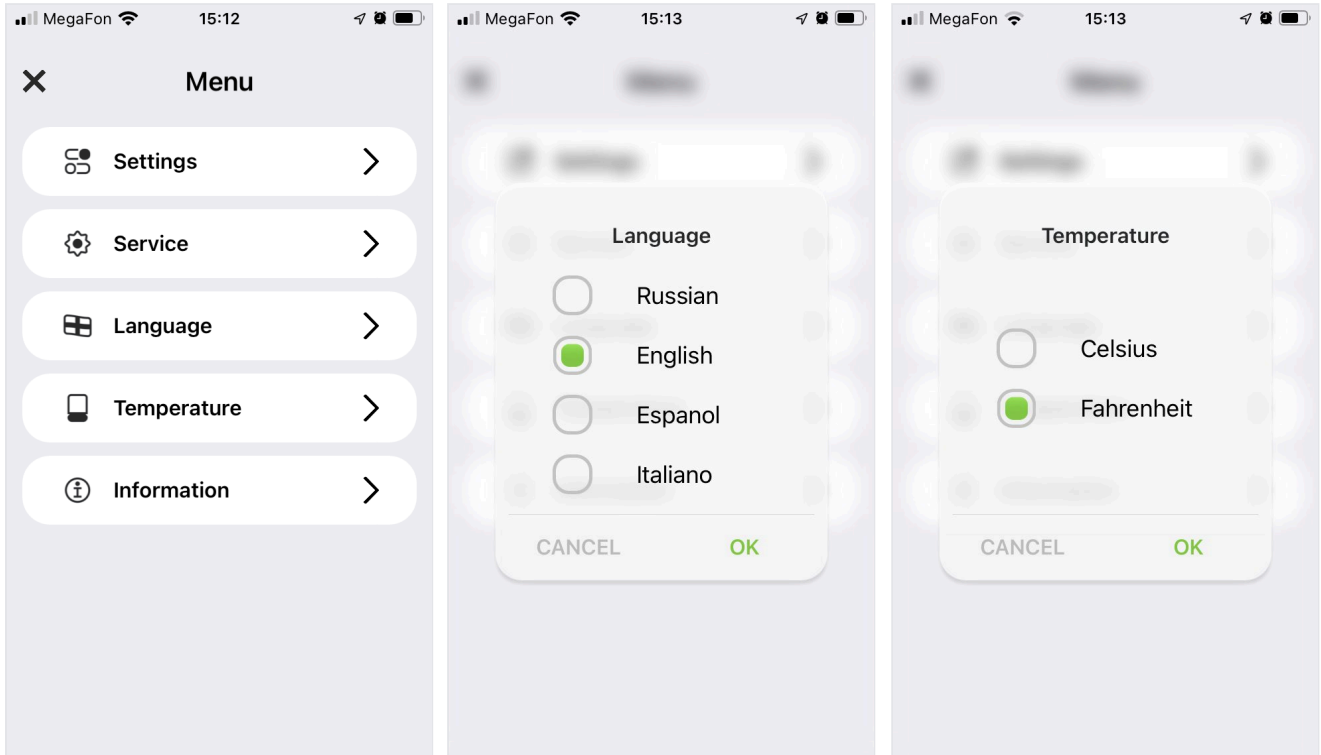


Settings

To rename the unit, go to **Device Name**, tap **CHANGE NAME** and enter a new name. The name appears in the device list and on the main control screen.

Set the unit's clock in **Date and Time**. Note that the unit does not switch to and from daylight saving time automatically.






To set up an automatic schedule, see “Set schedule” below.

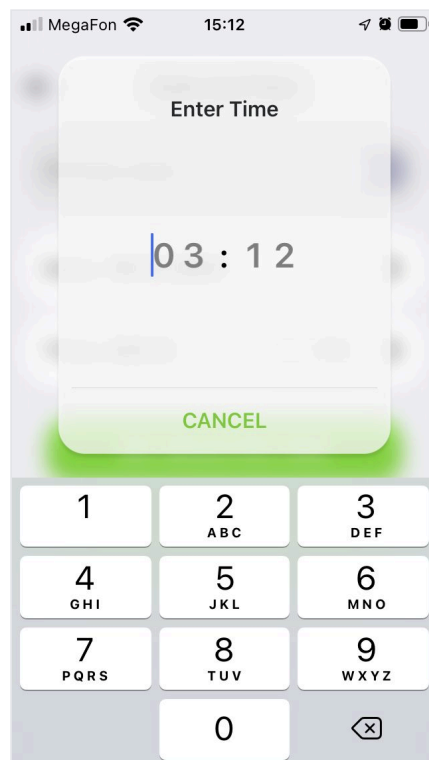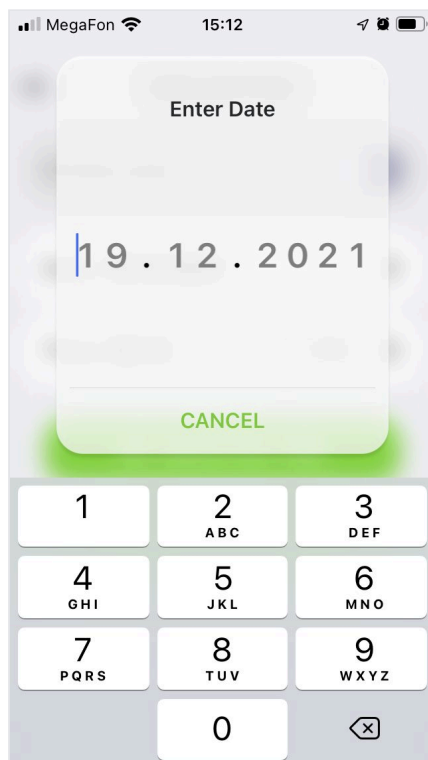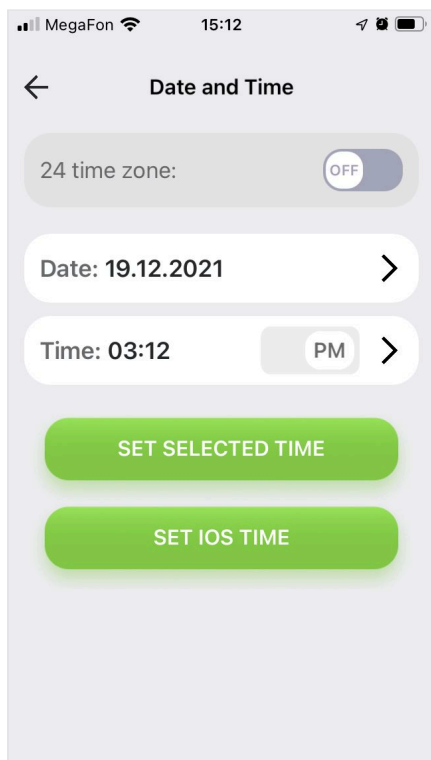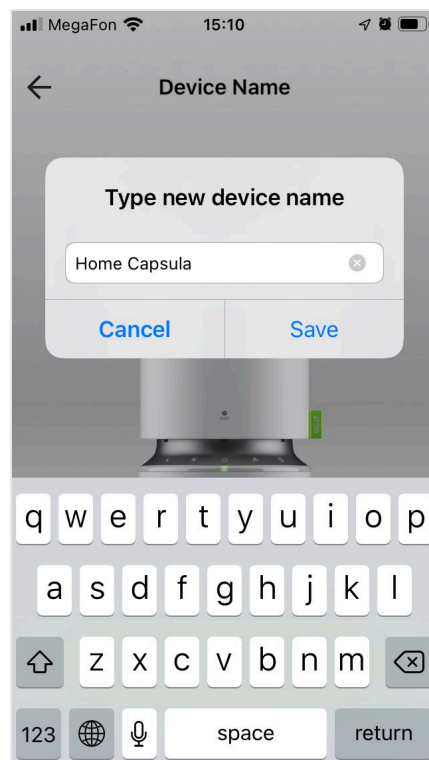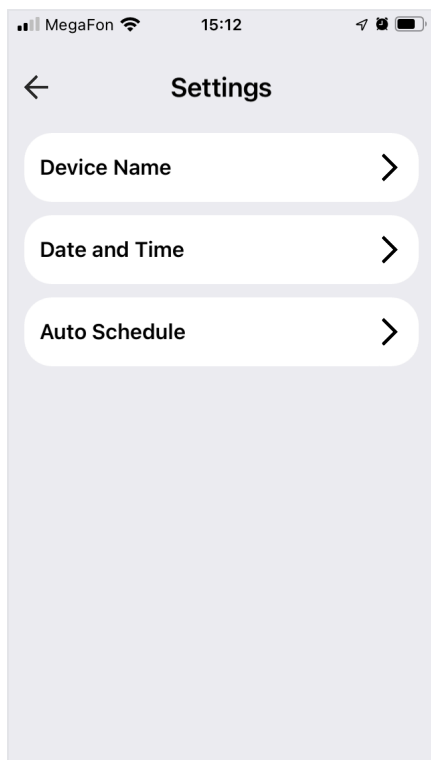

Set schedule

Create an automatic schedule by adding as many modes as you need. To add a mode:



1. Select a day of the week in the bottom panel. The app shows the current schedule for that day.
2. Tap **ADD NEW MODE**.
3. Choose a mode (Day, Night, Boost or Standby), set its start time and tap **SET MODE**.
4. Add further modes for this or other days as needed.

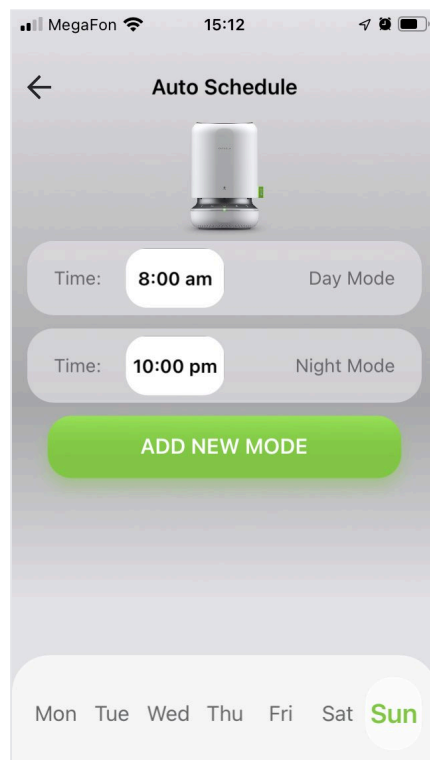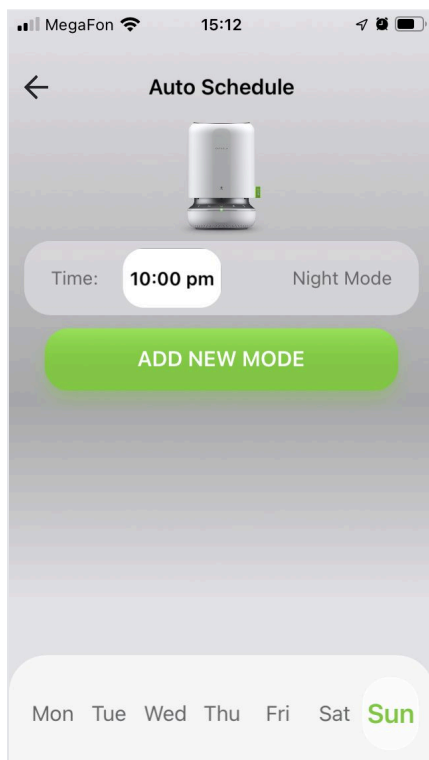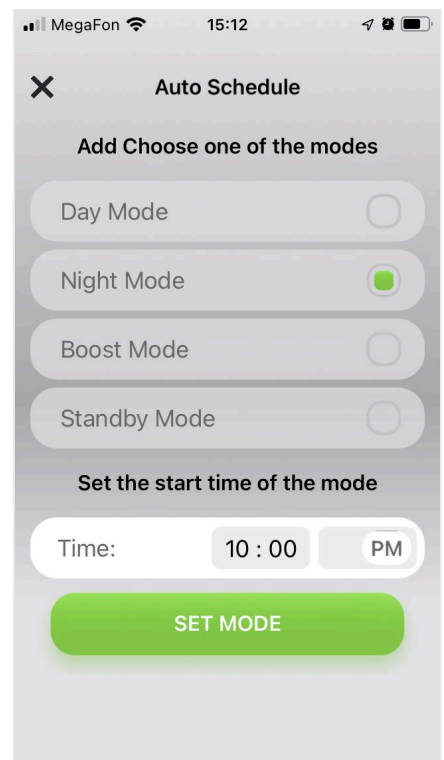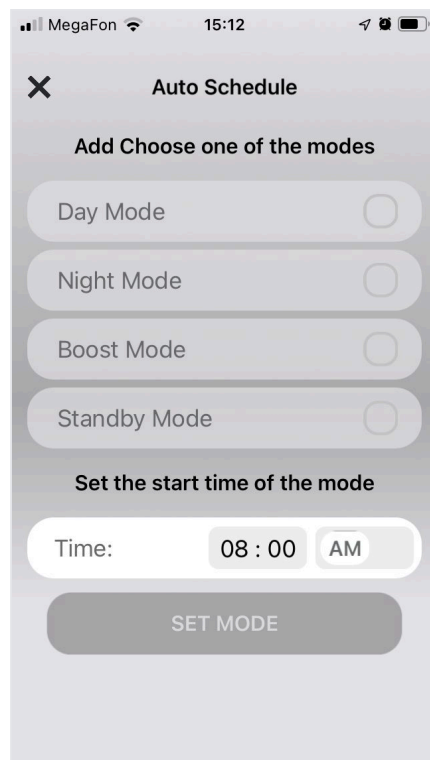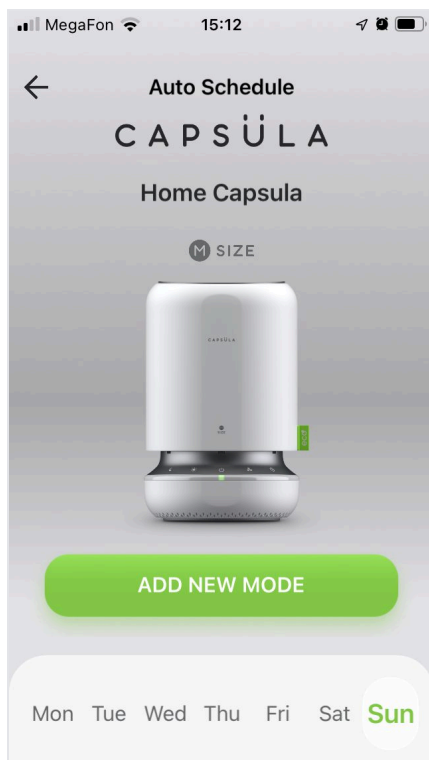

Service

The Service menu shows the total purification time and the remaining pre-filter life. When the filter needs replacing, the app notifies you and the **CHANGE FILTER** button in **Filter Resource** becomes active. Follow the on-screen instructions or section 8 of this manual to replace the filter.

Replacement filters can be ordered in advance through the **Buy Filter Cartridge** menu.

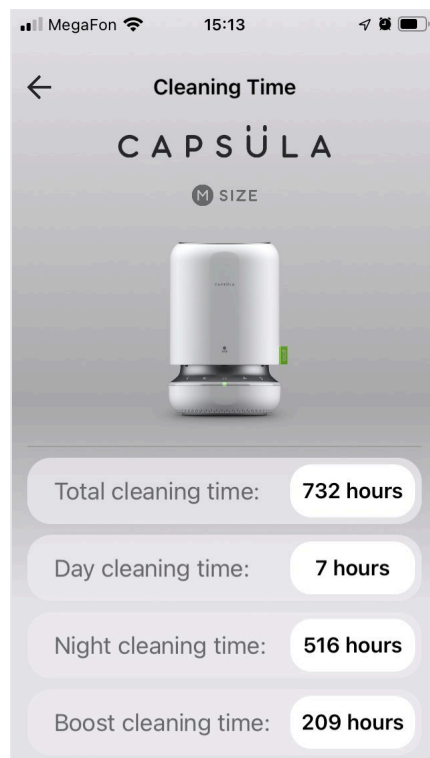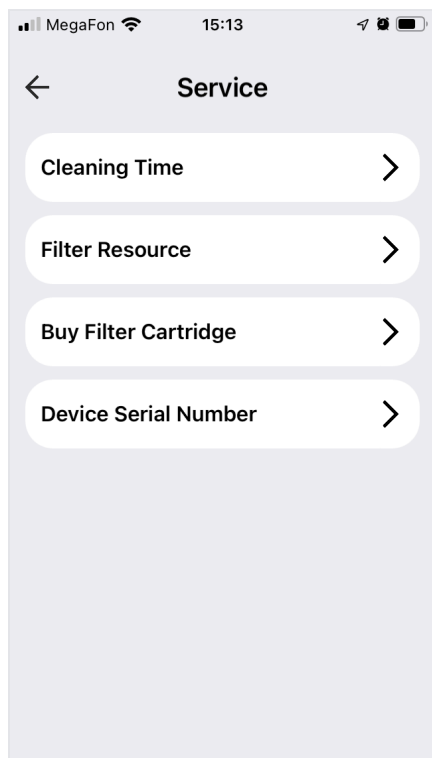

11. CARE AND CLEANING

For the best performance, clean your Grandwork Air Purifier regularly and check it for blockages.

- Always unplug the unit before cleaning.
- If the unit is dusty, wipe it with a damp, lint-free cloth.
- Check the air inlets around the base and the top diffuser (where purified air exits) for blockages.
- Use a soft brush to remove dust and debris.
- Do not use detergents or polishes to clean the unit.

12. TROUBLESHOOTING

If the LEDs on your Grandwork Air Purifier are flashing, try switching it off and on again. If they keep flashing, contact customer support.

Symptom	Likely cause	Solution
Standby LED flashes red once per second	Fan failure	Stop using the unit and contact customer support.
Standby LED flashes violet once per second	UV module failure	Stop using the unit and contact customer support.
Standby LED flashes blue once per second	Pre-filter needs replacing	See section 8, “Replacing the pre-filter”.
Buzzer sounds once per second	Heat sink overheating	The unit is in cooling mode and purification is paused. It returns to its previous mode once the temperature is back to normal. If this keeps happening, make sure the unit is operated within the required ambient temperature range.