




PadBot P2 User Manual

P2


1.Parts Identifications	1
2.How to Install	2
3.How to Charge	4
4.Software Usage Process	5
5.PadBot AI Brain App	6
5.1 Voice Communication	7
5.2 custom Q&A	8
5.3 Robot main interface	9
5.4 Face recognition	11
5.5 Video call	13
5.6 Control	15
5.7 Screen lock	16
5.8 Voice interactive prompt	17
6.PadBot Admin App	18
6.1 Register	19
6.2 User Rights	20
7.Technical Support	21

P2 Parts Identifications

1. P2 Part Identifications

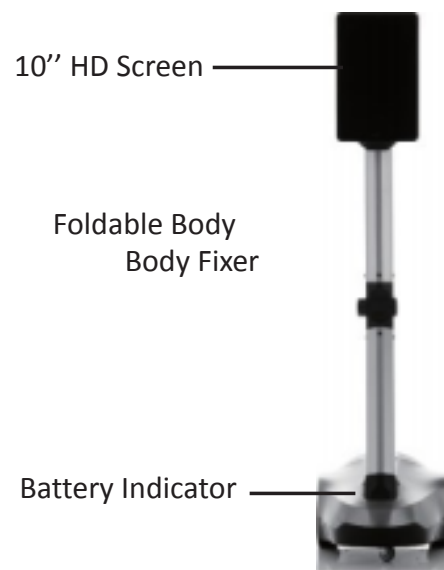

PadBot P2

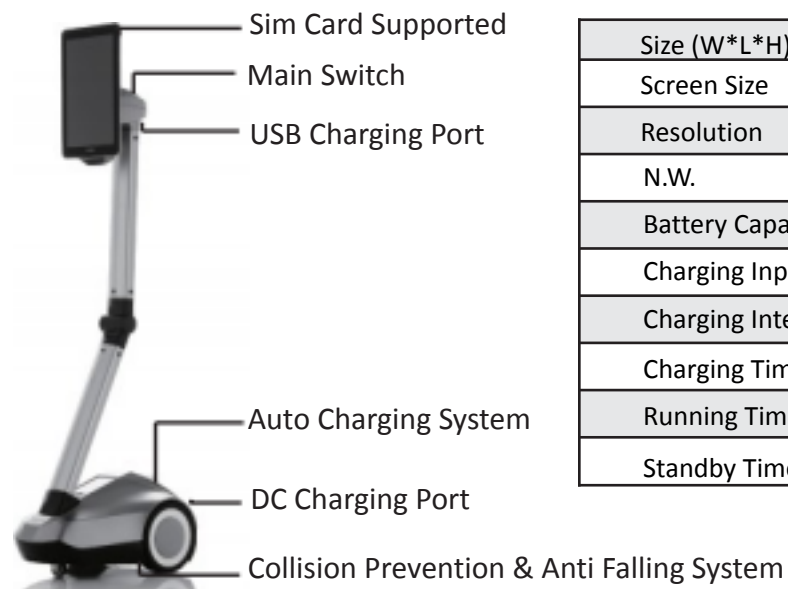

PadBot P2

Size (W*L*H)	27*37.2*110cm
Screen Size	10 inches
Resolution	HD1280*800
N.W.	6.5Kg
Battery Capacity	5000 mAh
Charging Input	12.6V/1.5A
Charging Interface	5.5*2.1
Charging Time	6 Hours
Running Time	10 Hours
Standby Time	40 Hours

NOTE: Long press Main Switch to start robot.

2. Accessories



Charger X1




Charging Base X1


P2

How to Install

1. PadBot P2 Installation, Body Installation:

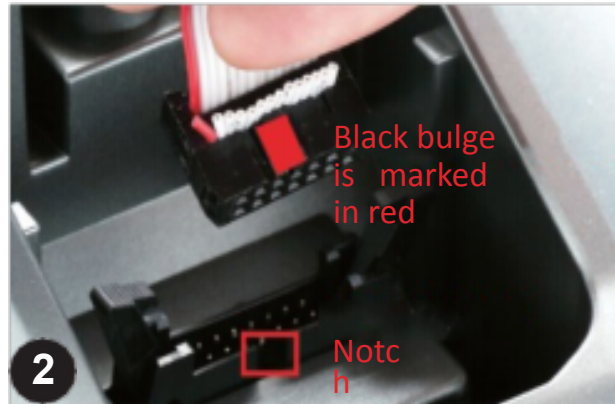

1) Follow correct direction to connect robot Body line with Base port.

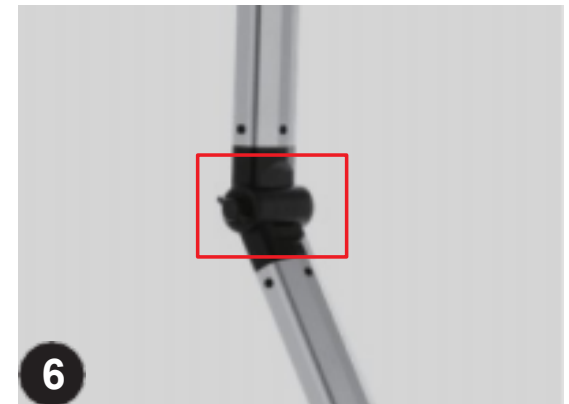

2) Use screw key to fix M6 screw, and cover it with offered black plastic part. Screw Body Fixer up to fix robot body.

2. PadBot P2 Tablet Installation, Connect Tablet with Body properly.




3. How to Start: Long press Main Switch until screen start.

4. Should connect with Internet, supporting WiFi & 4G

- WiFi: recommending bandwidth 8Mbps.
- 4G: Tablet supports Sim Card, Micro Sim Card Supported.


PadBot P2 Charging:

1. Robot equips with lithium battery, please charge robot fully in the first time to guarantee normal operation.
2. During charging, the charger's light is red, when charge fully, the light turns green. And charger still shows green if connects no robot.
3. Two ways to charge robot:
 - 3.1 Way one: Charging by DC charging port.
 - 3.2 Way two: Charging by Charging Base. After turn on " Robot Self Charging" function in App, robot will find charging base automatically if short of battery to charge itself.

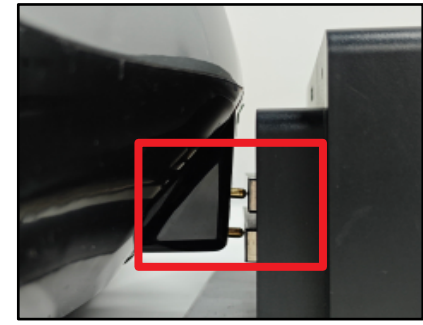


After switch robot on, please open "PadBot AI Brain" application, and download "PadBot Admin" application in your phone as the User Side.

Robot Side (PadBot AI Brain APP)

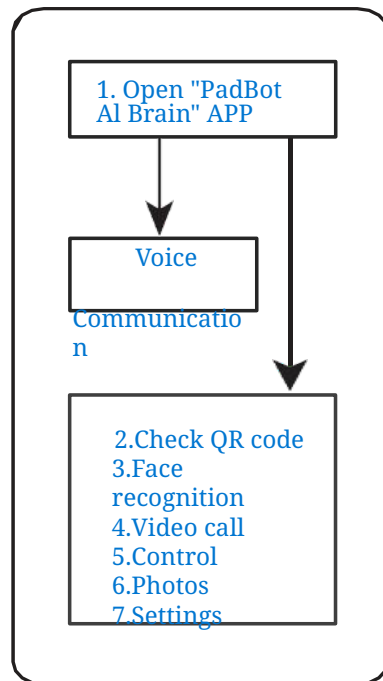

Robot Side


User Side (PadBot Admin APP)

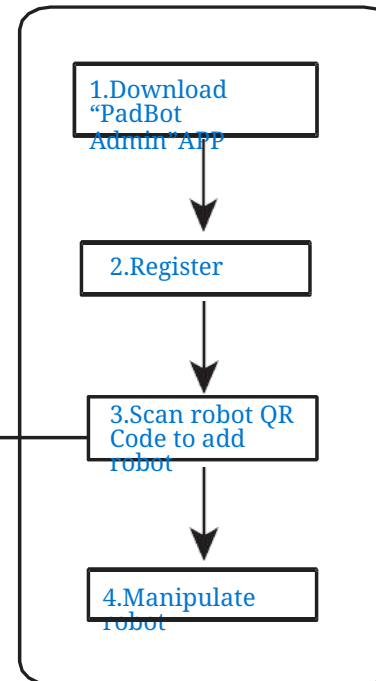


User Side

Scan QR Code


1. After the robot is powered on, you will see three functional areas, namely the PadBot AI Brain, Application Center and System Settings. Click to open PadBot AI Brain to enter the robot voice interface.
2. Slide the screen from right to left to enter the robot main page. In the main page, you can see the one and only QR Code of the robot. You can also set up the Face recognition, Video call and other general settings.

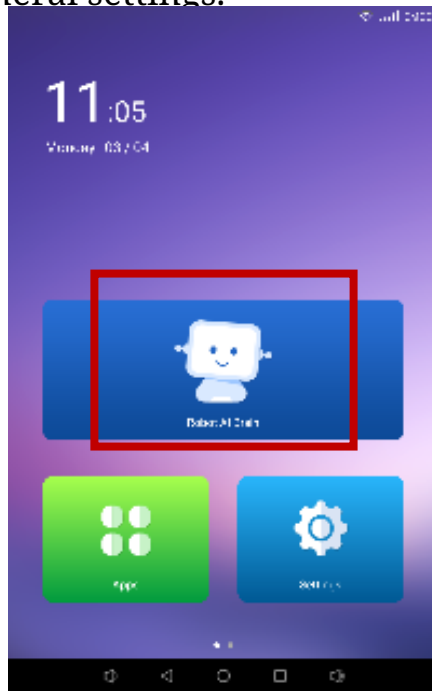

PadBot AI Brain

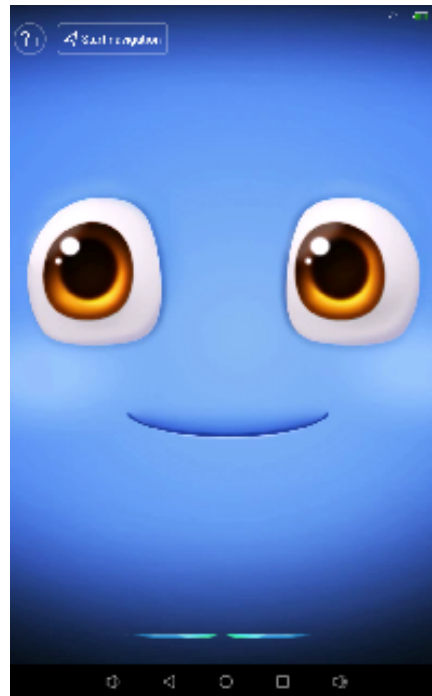

Robot Voice Interface

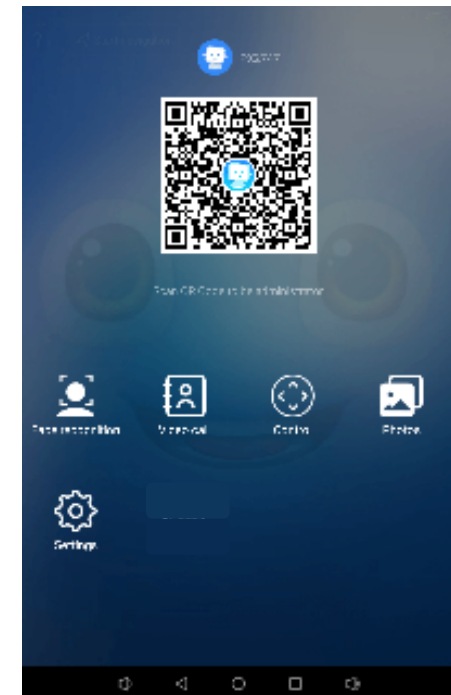

Robot Main Page

P2 Voice

1. Open Communication and awaken robot

Open “PadBot AI Brain” App, here is the voice communication page to communicate with robot. And robot will fall asleep automatically if communication stops 60s. During sleeping status, you can use “Hello Robot” to wake robot up. And you can also touch the robot head to awaken robot.

2. Basic voice communication


In robot voice communication interface, you can ask it to answer basic questions, and please speak slowly. Communication Examples:

2.1 Movement Instructions: “Dance”, “Go forward”, “Go back”, “Turn left”, "Turn right", "Look up", "Look down", etc.


2.2 Play the story: "tell a story"

2.3 Check the weather: "How is the weather today?"

2.4 Play music: Use “Play a song” robot will play a song randomly

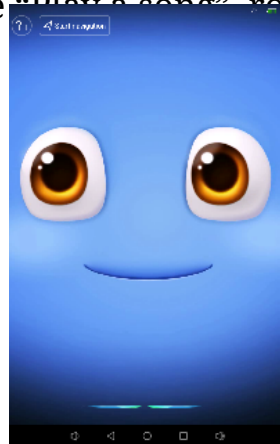

Voice Communication Page

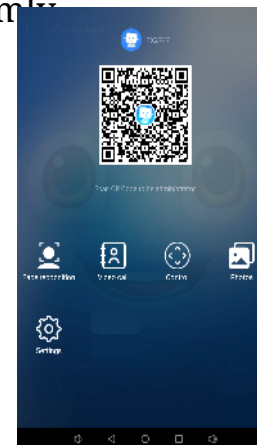

Robot Main Page


P2 Custom Q&A

In addition to basic dialogues in robot voice interaction, users can also set voice interaction questions and answers according to their own needs. Users need to enter the question and answer content themselves and maintain a custom question and answer library.


There are two ways to enter custom questions and answers:

2.1 Edit custom questions and answers through the PadBot Admin APP.


2.2 Enter custom questions and answers through the web version of Padbot Cloud Platform, URL: <https://cloud.padbot.com>, and you need to log in with the account of PadBot Admin APP.

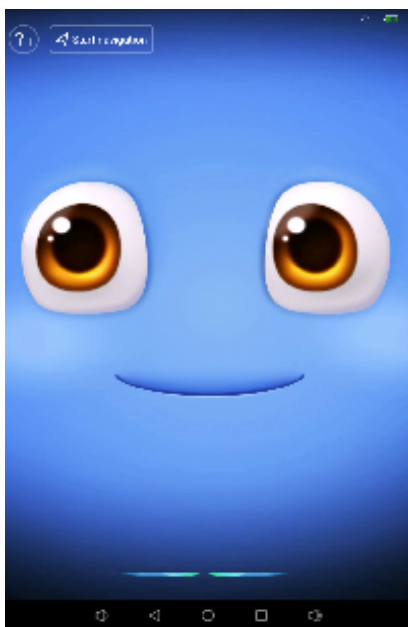

Voice Communication Page

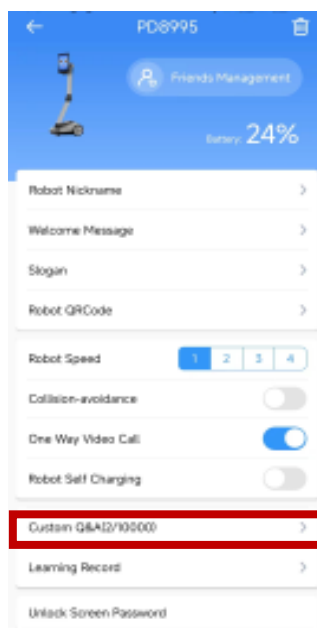


PadBot Admin APP

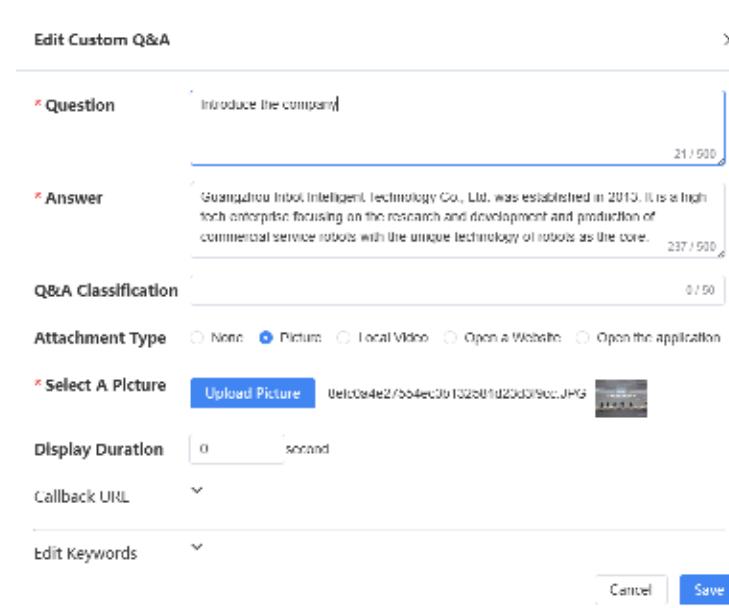

Padbot Cloud Platform


In the robot voice interface, slide your finger to the left on the screen to switch to the robot's main interface. The main interface displays the unique QR code belonging to the robot. Use the PadBot Admin APP to scan the QR code to become a robot user. The first user to scan the QR code is the super administrator, and the other users who scan the robot QR code are ordinary users.

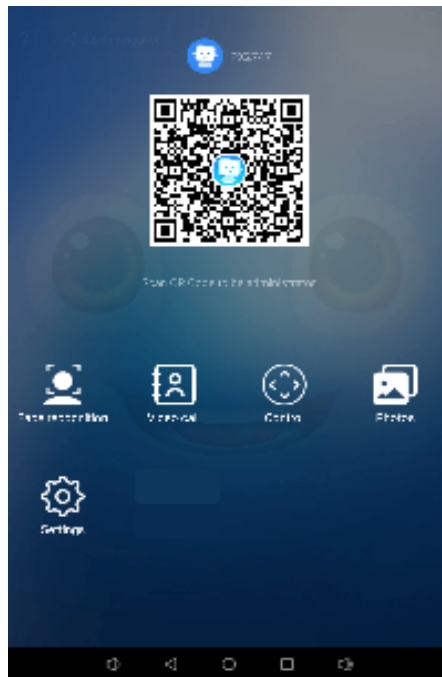

Robot Main Page

1. **Face recognition:** mainly face entry and management.
2. **Video call:** Make remote video calls with mobile phone users through the Internet.
3. **Control:** Locally control the robot to move forward, backward, raise its head, and lower its head.
4. **Photos:** View photos taken through robot voice or photos obtained through video chat and local gallery.

5. Settings

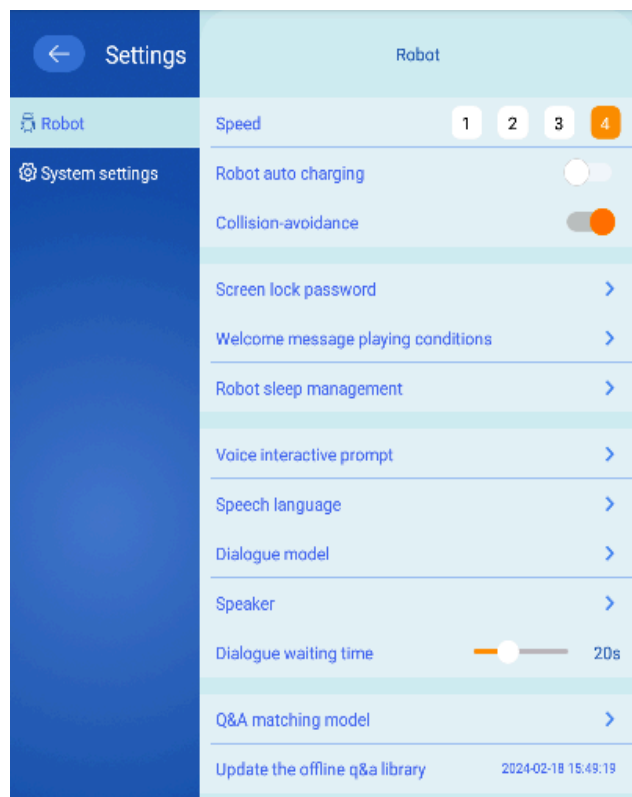

A. Robot speed setting: The robot speed can be adjusted to gears 1, 2, 3, and 4. The higher the gear, the faster the speed.

B. Robot auto charging setting: Turn on the robot automatic charging function. When the robot's power is lower than about 20%, the robot will automatically find a nearby charging base to charge. It is recommended to turn off this function when there is no charging base nearby.

C. Collision avoidance setting: Turn on the automatic obstacle avoidance function of the robot, which can identify obstacles and avoid them.

D. Screen lock password setting: After setting the lock screen password, the robot interface will be page protected and will always be locked in the robot voice interface.

E. Welcome message playing conditions setting: You can set the content of the welcome message and play the welcome message when the screen is off or sleeping.

F. Robot sleep management settings: You can set the robot to play videos when sleeping, or play advertising slogans when sleeping, and edit slogans.

G. Voice interactive prompt setting: You can open the interactive prompts of the voice interface and edit the prompt content and prompt method.

H. Dialogue model : You can switch to chatgpt dialogue model.

I. Dialogue waiting time setting: The robot is in a voice interaction state. If the robot does not perform voice interaction within the set time, the robot will enter a sleep state.




PadBot 10 /

J. Q&A matching model setting: You can check to set the question and answer library that needs to be matched, and set the default reply content.

P2

Face recognition

Turn on the face recognition function, and the robot voice interface will automatically recognize faces. To use face recognition, first enter a face. Click the face recognition icon on the robot's main interface. Click New faces to add a face. You can choose video registration or image registration for face registration.

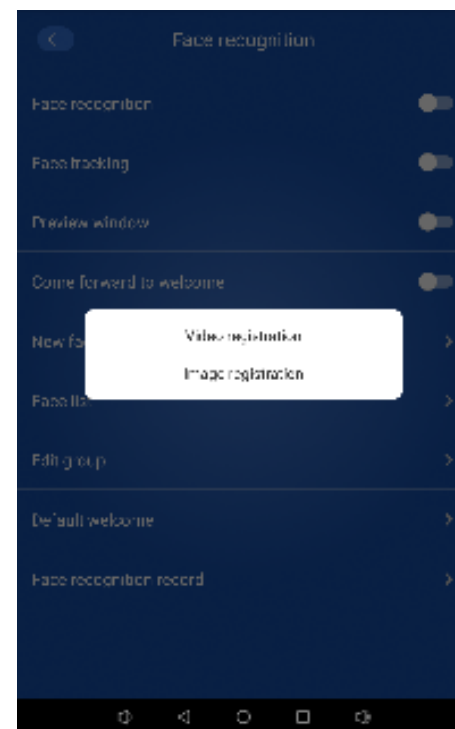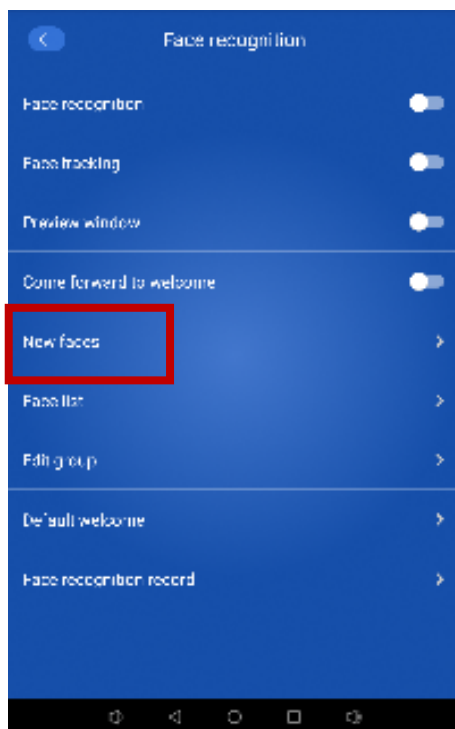
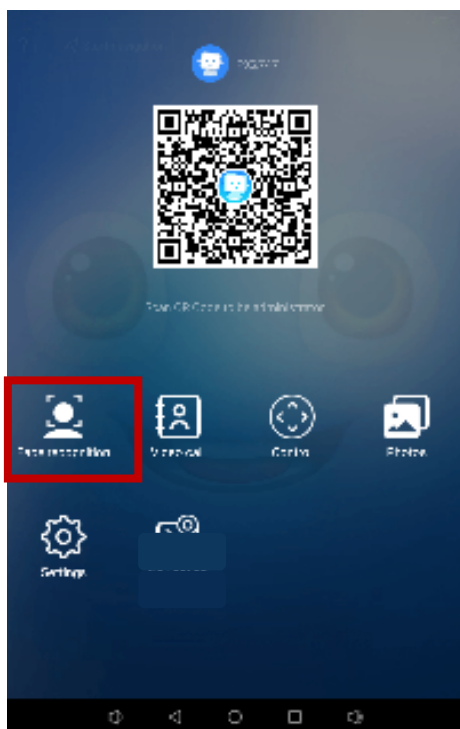


P2

Face recognition

The robot can broadcast different greetings based on the different groups of faces it recognizes.

1. User need to create a group. On the face recognition interface, click Edit Group. After entering, click the "+" sign in the upper right corner to add a group name and group welcome message.
2. After editing the group, user can enter the face list, long press to select a face, and edit and group the selected faces.

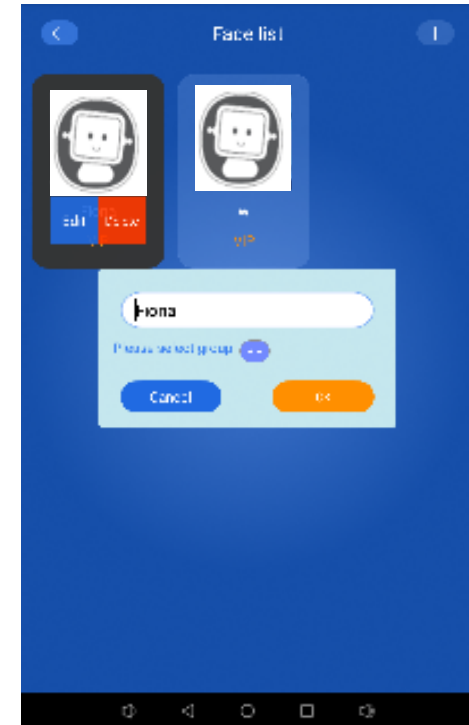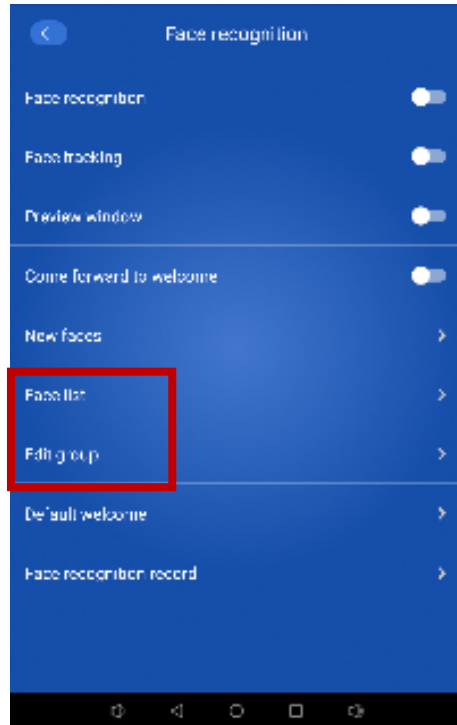


P2 Video call

1. Two-way video call


By making a video call, you can have a two-way video call with the administrator or a friend user, and you can remotely control the movement of the robot.

1.1 The first user to scan the QR code is the super administrator and has management rights for account authorization and transfer. The other users who subsequently scan the robot QR code are ordinary users.

1.2 Click on the user's avatar to make a two-way video call and remotely control the robot's movements. Users can also dial the robot through the PadBot Admin APP on their mobile phones to achieve video calls.

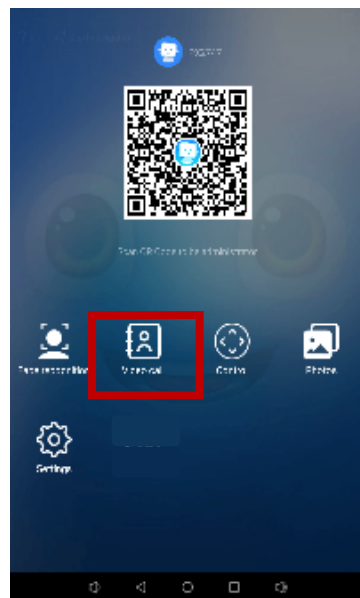

Robot Main Page

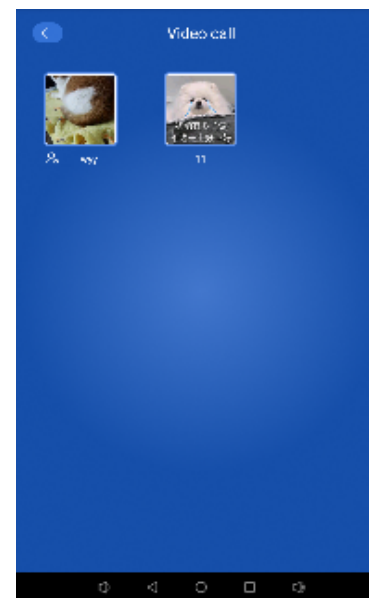




Video call interface

P2 Video call

2. One-way video call

2.1 Open the PadBot Admin APP and click on the corresponding robot to enter the robot setting interface. When the one way video call function is not turned on, making a video call is a two-way video call (both parties to the video can see the live video screen). When it is turned on, making a video call is a one-way video call.

2.2 Turn on the one-way video call function. The mobile phone or the cloud send video calls to the robot. The robot still uses a voice interface and does not display the live images of the mobile phone and the cloud. The administrator can see the actual scene

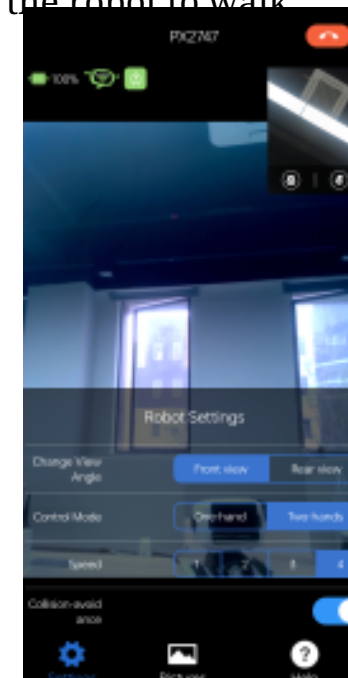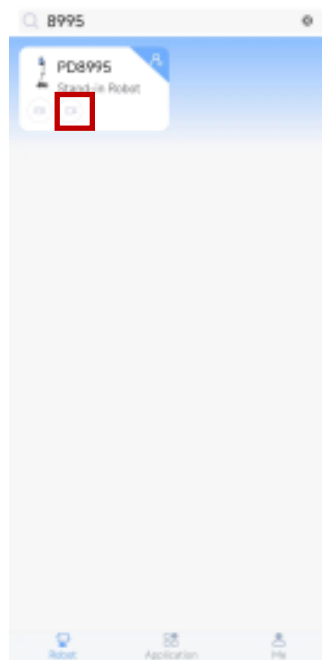
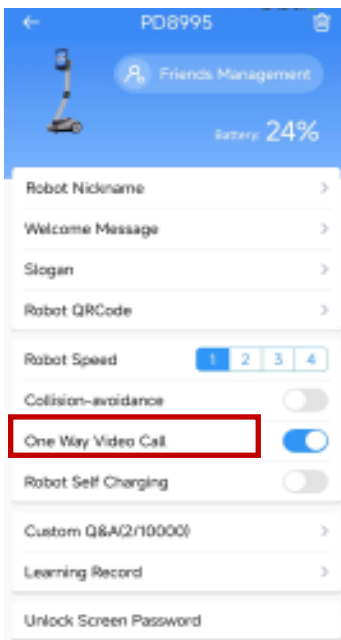


P2 Control

According to the interface display, control the movement of the robot's body and head. The upper left corner displays the battery power, and the upper right corner displays whether the robot encounters obstacles. If a red dot appears, it indicates that there are obstacles attached to the robot and it cannot walk.

There are 2 ways to control the movement of the robot:

1. You can control the movement of the robot through voice control on the robot voice interface, such as: "Go forward", "Go back", "Turn left", "Turn right", "Look up", "Look down", etc.
2. You can also use PadBot Admin APP to realize remote control of the robot movement. Send a call video, and after the call is connected, you can remotely control the robot's movement.


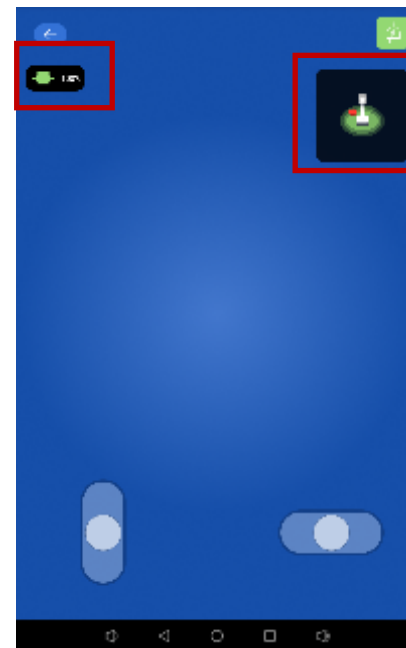
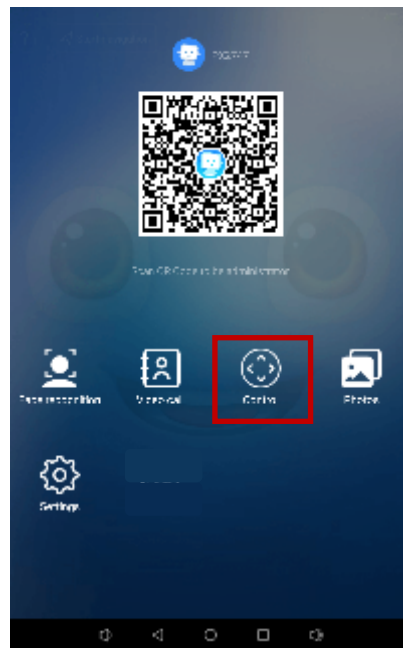


P2

Screen lock

Lock screen settings - locked in robot voice interface

1. On the main interface of the robot, click the settings icon to enter the robot settings page, and click to set the screen lock password.
2. After drawing the lock screen password, the robot interface will be page protected and will always be locked in the robot voice interface. Users cannot swipe left to switch to the robot main interface.
3. Click the lock image in the upper left corner of the robot voice interface to set unlocking and locking. Users can unlock the lock screen password through the PadBot Admin APP on the mobile phone.

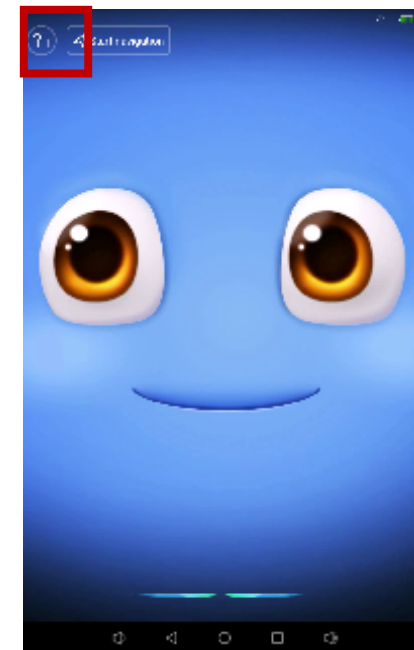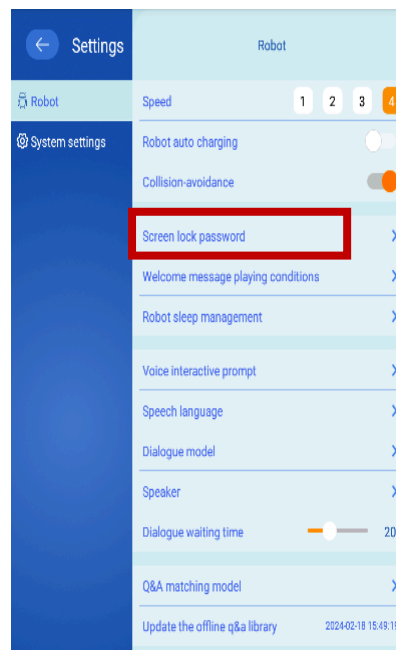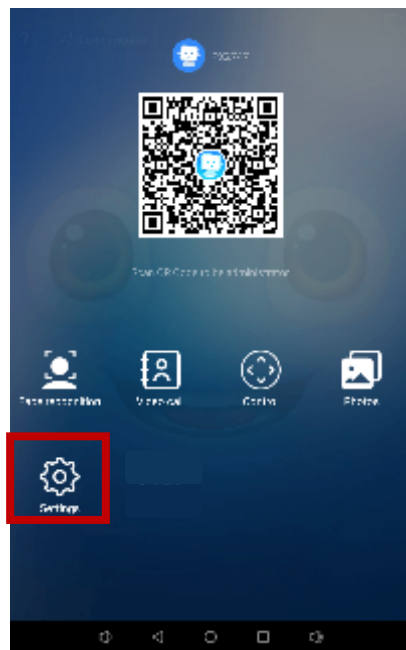




P2

Voice interactive prompt

The robot voice interactive prompt setting mainly allows you to set the interactive prompt content and presentation mode of the robot on the voice interface, so as to guide customers to better communicate and interact with the robot.

1. In the main interface of the robot, click the settings icon to enter the robot settings page. Click the voice interactive prompt to edit the prompt content.

2. Set the presentation mode of interactive prompt content in the voice interface. If the barrage mode is not turned on, the default scrolling presentation mode will be displayed in the robot voice interface.

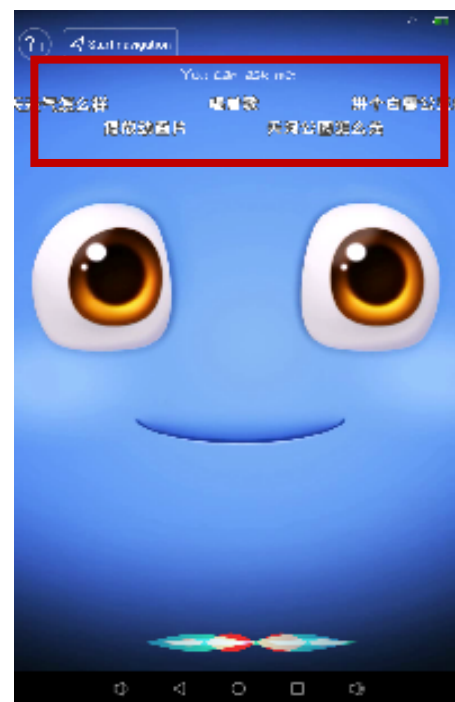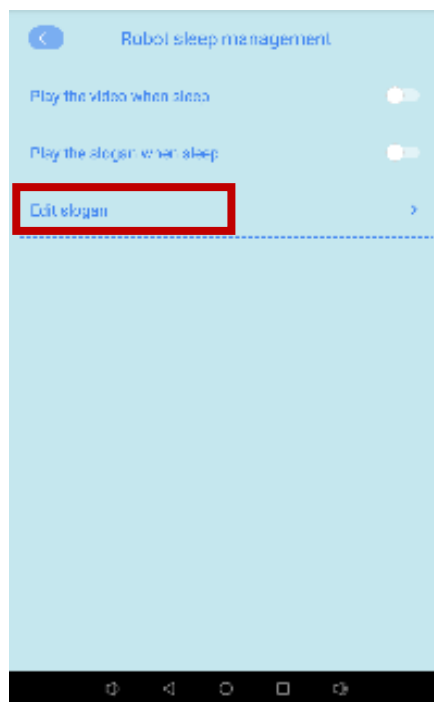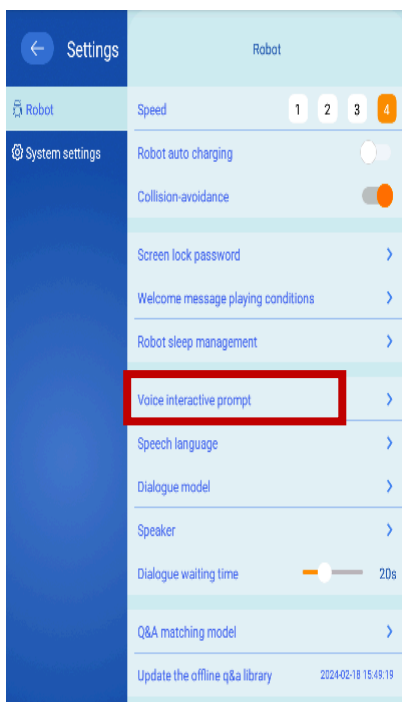

1.Download

1.1 Please bind the administrator when firstly use the robot.

1.2 Log in “PadBot Admin” APP, and scan QR Code in “PadBot AI Brain” APP. (Please download “PadBot Admin” APP in your phone first)

Ways to download“PadBot Admin” APP in iOS phone:

1. Search “PadBot Admin” in App Store to download.
2. Enter the following URL in the browser to download.

<http://s.padbot.cn:9080/cloud/updatemgr/appDownloadLink.action?app=d>

3. Scan below QR Code to download:



iOS

Ways to download“PadBot Admin” APP in Android phone:

1. Search “PadBot Admin” in the App market to download.
2. Enter the following URL in the browser to download. <http://s.padbot.cn:9080/cloud/updatemgr/appDownloadLink.action?app=d>
3. Scan below QR Code




Android


2.Register and Log in

2.1 Open the PadBot Admin APP, click me, select login, click register at the bottom left of the page (if user have already registered, log in directly), enter user mobile phone number, set the account nickname and password, and enter the verification code to register.

2.2 After logging in, click top right corner to scan QR Code in robot to add robot.

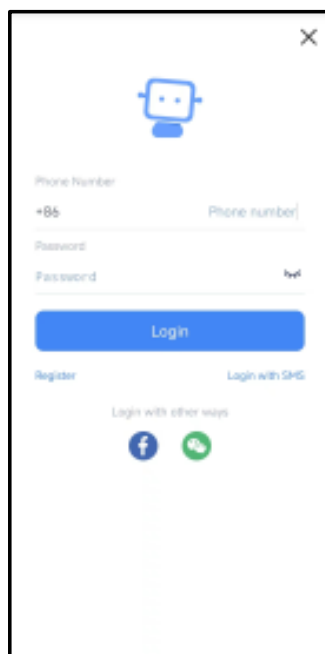

Log in

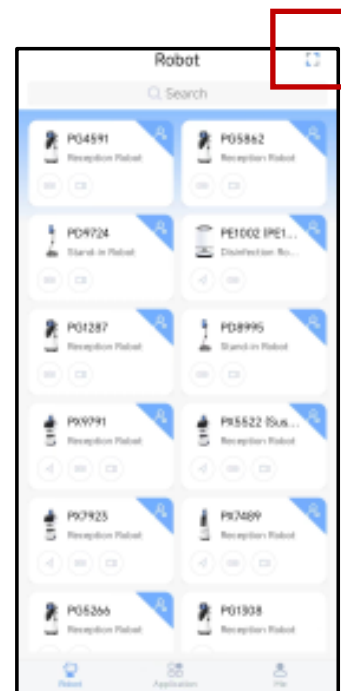

Robot menu


Normal Users: For normal users (the one who doesn't scan robot firstly), this robot is a friend robot. A specific robot can have many normal users.

User Rights for Normal Users

1. Send video call to robot and can control robot to move if call answered.
2. Check part information of friend robot like icon, nickname, battery, moving speed, collision prevention and auto charge.
3. Delete this friend robot.

User Rights for Administrator

1. Administrator: For administrator (the one scan robot firstly), this robot is “my robot”, there is only one administrator for one robot, and this administrator should unbind robot firstly to change administrator. An administrator can administrate several robots, and can set up automatically answer whose call, delete some normal users from friends management interface.
2. Set up robot information like nickname, welcome message, slogan, speed, collision avoidance and auto charge. Check information of robot like QR Code and battery.
3. Open one-way video call. If open this function, when user side send video call to robot, the robot side will still be voice communication interface without delivering video and voice of user side to robot side. Meanwhile, robot side will return video and voice to user side, and robot will speak out texts that user side writes. Robot movement can be controlled remotely during video calls.
4. Administrators can set up custom Q&A.
5. Unbind screen lock password.

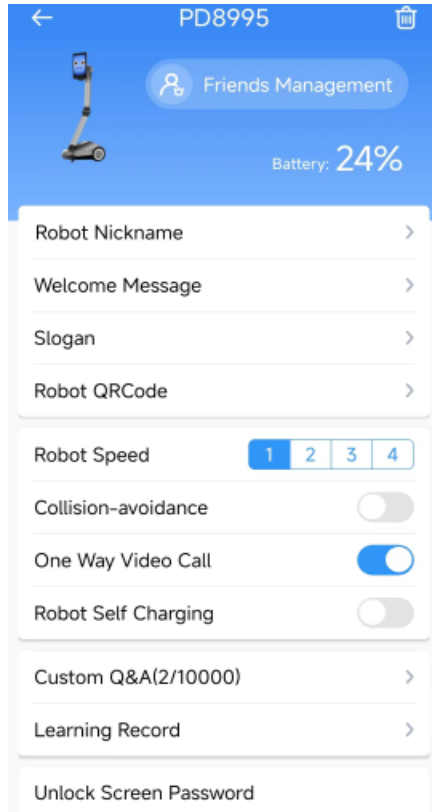

Q1: Cannot do Auto Charging?

A: 1.Check if the“PadBot AI Brain”open auto charging function. Click“setting”(by sliding the robot screen from right to left), and check if “Robot Self Charging”opened.

2.Using charger to charge robot,if the charger light is red means the robot can charge successfully.

3.Plug charger into charging base, and pull robot to charge through the charging base. If the charger light is red, it means the robot can charge successfully.

Q2: Does it support 4G LTE card?

A: Yes, it supports 4G LTE card, and also supports WiFi.

Questions about Voice Communication**Q1: Face Tracking**

A: In voice communication interface, use “come” or “come here” instruction, robot will track the nearest face to come over.

Q2: Cannot do Voice Communication

A: 1.Please check if open microphone authorization.

2.In voice communication interface,the words you say will be showed if robot detects them.

Support

Questions about Video Call

A: When handhold device sends video call to robot, the default setting is auto answer.

For Android devices,“PadBot Admin”supports auto answer video call in locking screen status and running in the background status.

For iOS devices,“PadBot Admin”cannot auto answer in locking screen and running in the background status. It only support when running in the foreground.

Q2: Cannot answer Video Call.

A: 1.Check the camera of robot to see if it works successfully.

2.Check if giving authorization to camera and microphone, if not,please open these authorizations in Setting of handhold device. For example, to open camera authorization in iOS phone is “Setting → Privacy → Camera → PadBot Admin”.

3.Check if the Internet works fluently.

4.If still cannot do video call, please uninstall the APP and install again.

Q3: Does it support Group Video Chat?

A: For now, it can only support one to one video call.

Q4: How can my family and friends add my Robot to do Video Chat?

A: Please ask your families and friends to download“PadBot Admin”app, after registered and login in,they can scan your robot's QR Code to add your robot and do video call.

Q5: There is noise in Video Call.

A: When the communicating parties are in the same place, the mutual voices will interfere with each other and make noise. It won't happen in distant call.

About Us

Matters need Attention

1. Please do not cover anything on collision prevention sensor in robot bottom, to avoid any interference.
2. Please do not toss or throw robot or shake it mightily.
3. Please put the charger or charging base in a proper place for convenient use.
4. Please note that wrong type of battery may evoke explosion, please do follow instructions to dispose used battery.

Contact Us

Guangzhou Inbot Technology Ltd.

Website: www.padbot.cn

Email: contact@padbot.com

Telephone: 0086 020 38456676

Headquarter: Building B8, No. 2 Tengfei 2nd Street, Sino-Singapore

Guangzhou Knowledge City, Huangpu District, Guangzhou

Official Website

