

B2 - BACnet / Modbus (Advanced)

BACnet - Workshop II

BACnet - Workshop II - Network




First define the network addresses within your group

Group 1: BACnet Addresses 10..19, Instance IDs 110..119

Group 2: BACnet Addresses 20..29, Instance IDs 120..129

Group 3: BACnet Addresses 30..39, Instance IDs 130..139

Group 4: BACnet Addresses 40..49, Instance IDs 140..149


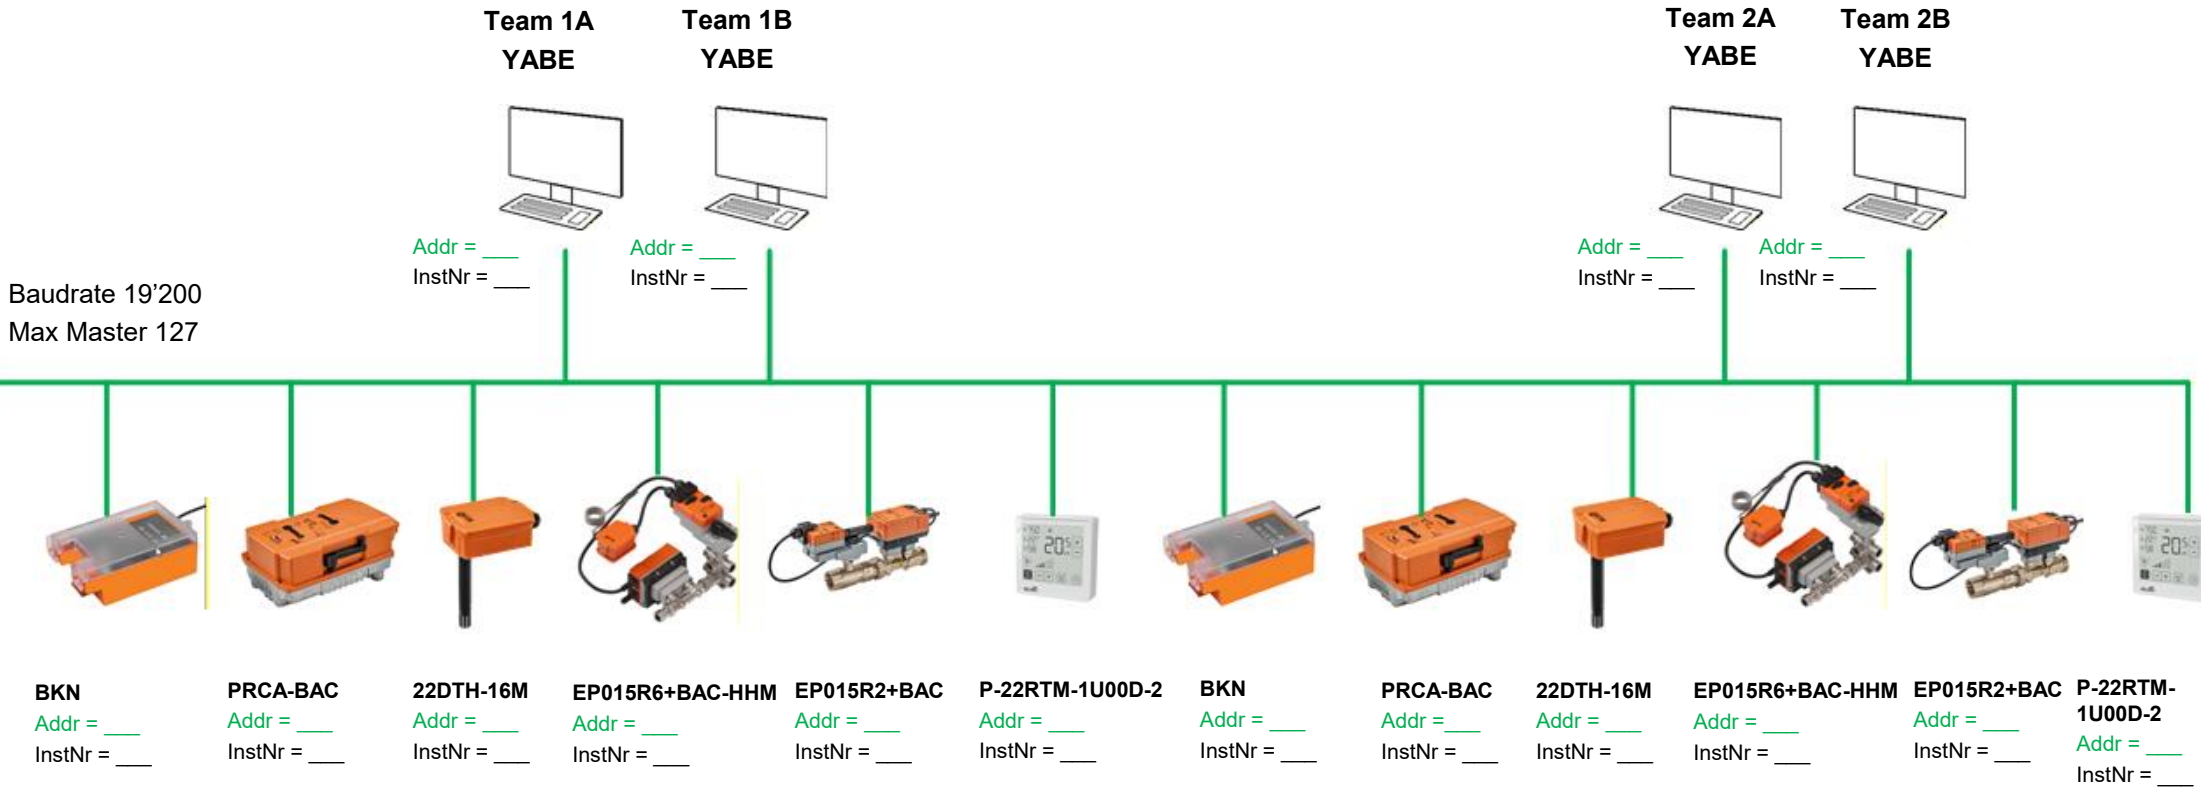


Baudrate 19'200
Max Master 127

— Serial network (RS485)

B2 - BACnet - Workshop II

1. **Configure all the devices according the network overview.**
💡 Find your appropriate configuration tool in the documents (LINK.10, Belimo Assistant 2, etc.)
2. **Start YABE. Set your instance number according the network overview.**

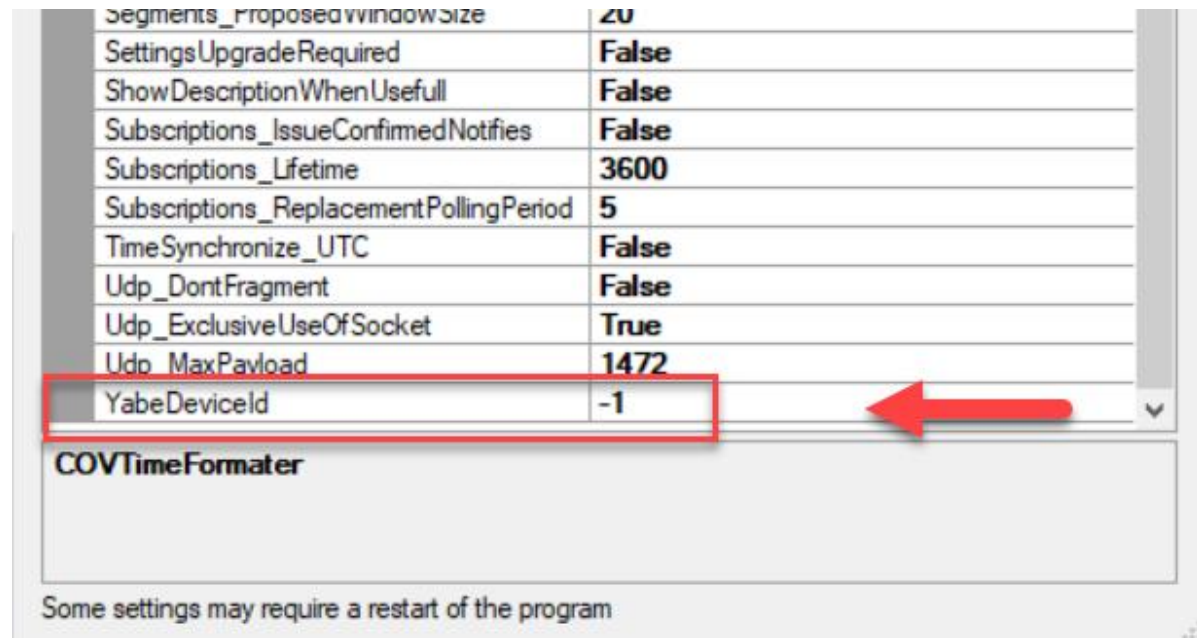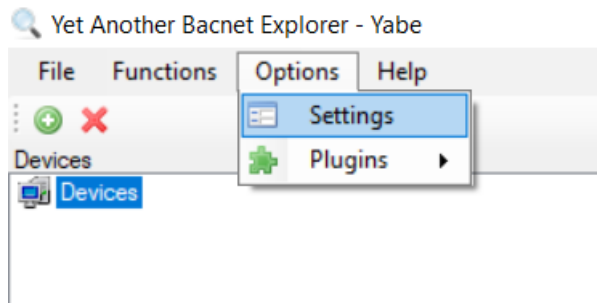


B2 - BACnet - Workshop II

3. Start YABE. Click on **Add device** and **Add yourself with BACnet/MSTP**.

✓ Check on which COM port your RS485-USB adapter is

✓ Pay attention to the BACnet settings on your actuator you just made

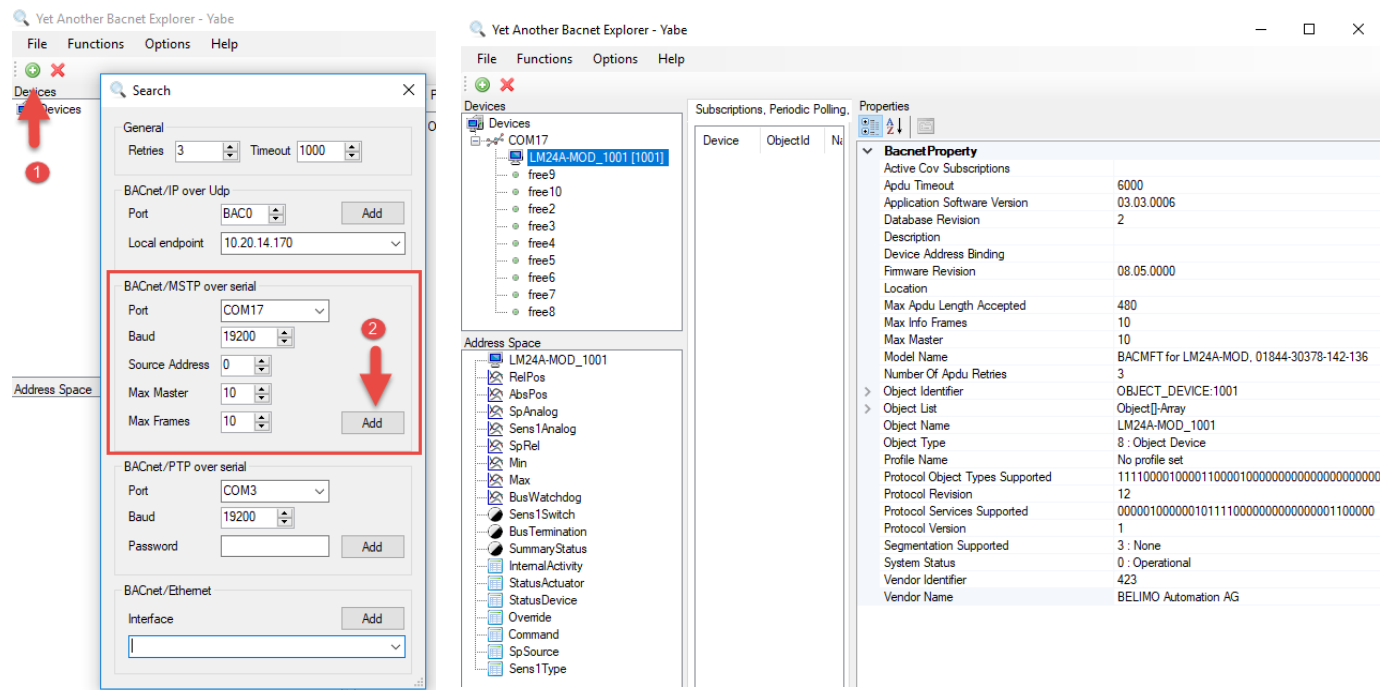

B2 - BACnet - Workshop II

4. Set a *DefaultWritePriority* and communicate it to the other teams

The screenshot shows the 'Settings' dialog box of 'Yet Another Bacnet Explorer - Yabe'. The 'Options' menu is open, and the 'Settings' option is selected. The 'Settings' dialog has a 'Sonstiges' (Miscellaneous) tab. A red rectangle highlights the 'DefaultWritePriority' setting, which is currently set to 'LOWEST_AND_DEFAULT'. A red arrow points from this setting to a list of priority values on the right side of the dialog. The list includes: NO_PRIORITY, MANUAL_LIFE_SAFETY, AUTOMATIC_LIFE_SAFETY, UNSPECIFIED_LEVEL_3, UNSPECIFIED_LEVEL_4, CRITICAL_EQUIPMENT_CONTROL, MINIMUM_ON_OFF, UNSPECIFIED_LEVEL_7, MANUAL_OPERATOR, UNSPECIFIED_LEVEL_9, UNSPECIFIED_LEVEL_10, UNSPECIFIED_LEVEL_11, UNSPECIFIED_LEVEL_12, UNSPECIFIED_LEVEL_13, UNSPECIFIED_LEVEL_14, UNSPECIFIED_LEVEL_15, and LOWEST_AND_DEFAULT. The 'LOWEST_AND_DEFAULT' option is highlighted in blue.

Setting	Value
COVTimeFormatter	HH:mm:ss
DefaultBaudrate	38400
DefaultBBMD	
DefaultDownloadSpeed	0
DefaultMaxInfoFrames	10
DefaultMaxMaster	127
DefaultRetries	3
DefaultSourceAddress	0
DefaultTimeout	1000
DefaultUdpIp	10.20.10.232
DefaultUdpPort	47809
DefaultWritePriority	LOWEST_AND_DEFAULT
DisplayIdWithName	True
GetStructuredView	True
GraphDotStyle	Circle
GraphLineStep	False
GUI_FormSize	1936; 1056
GUI_FormState	Maximized
GUI_LastFilename	
GUI_SplitterBottom	610

COVTimeFormatter

Some settings may require a restart of the program

B2 - BACnet - Workshop II

5. Coordinate with the other teams and write to the same device from multiple BACnet clients. How do the devices react?

1.

6. To reset your *PresentValue* delete the value in the properties.