

B2 - BACnet / Modbus (Advanced)

BACnet - Workshop III

BACnet - Workshop III- Network



EnergyValve
192.168.0.X
InstNr = ____



IoT Actuator
192.168.0.X
InstNr = ____



YABE
192.168.0.X
InstNr = ____



YABE
192.168.0.X
InstNr = ____



Router
192.168.0.____
Addr = ____
InstNr = ____



First define the network addresses within your group
Group 1: BACnet Addresses 10..19, Instance IDs 110..119, IPs 192.168.0.10..19
Group 2: BACnet Addresses 20..29, Instance IDs 120..129, IPs 192.168.0.20..29
Group 3: BACnet Addresses 30..39, Instance IDs 130..139, IPs 192.168.0.30..39
Group 4: BACnet Addresses 40..49, Instance IDs 140..149, IPs 192.168.0.40..49

Baudrate 19'200
Max Master 127



BKN
Addr = ____
InstNr = ____



PRCA-BAC
Addr = ____
InstNr = ____



22DTH-16M
Addr = ____
InstNr = ____



EP015R6+BAC-HHM
Addr = ____
InstNr = ____



EP015R2+BAC
Addr = ____
InstNr = ____





P-22RTM-1U00D-2
Addr = ____
InstNr = ____

— **Serial network (RS485)**
— **IP Subnet 192.168.0.1 – 192.168.0.254**

B2 - BACnet - Workshop II

1. **Configure all the devices according the network overview.**
💡 Find your appropriate configuration tool in the documents (LINK.10, Belimo Assistant 2, etc.)
2. **Start YABE. Set your instance number according the network overview.**

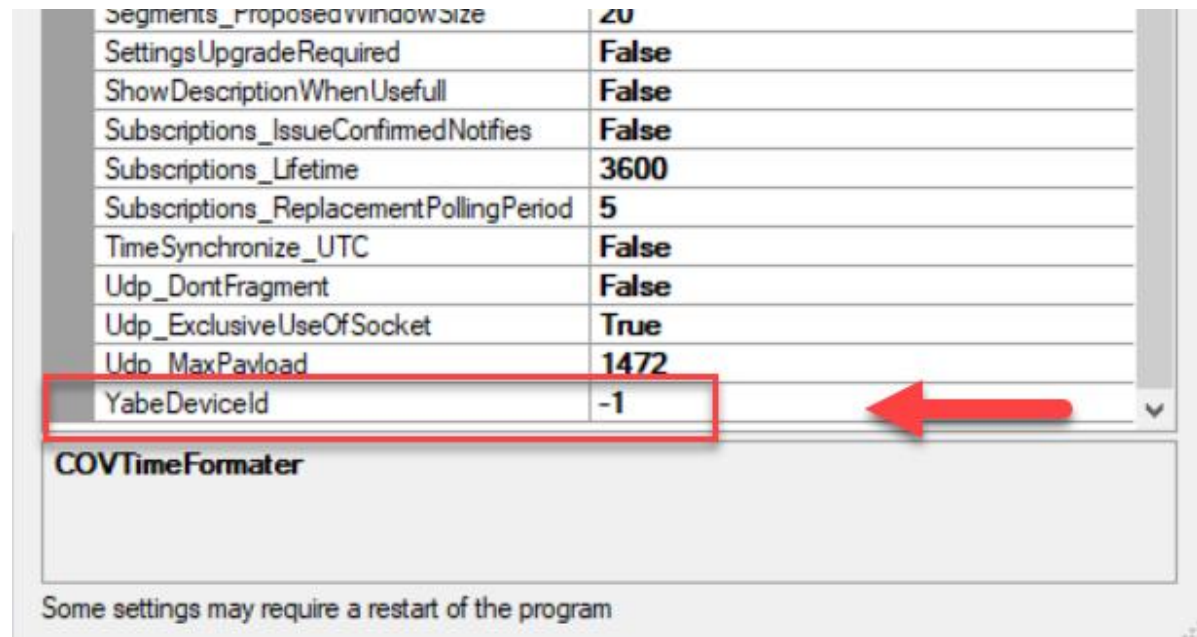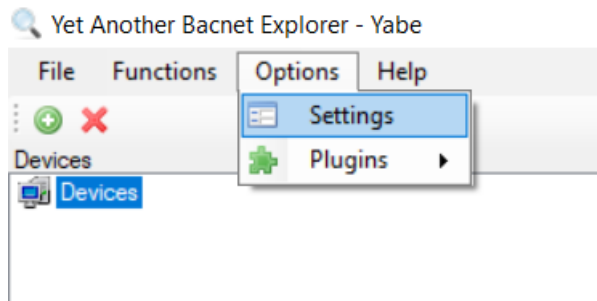


B2 - BACnet - Workshop II

3. Start YABE. Click on **Add device** and **Add yourself with BACnet/MSTP**.

✓ Check on which COM port your RS485-USB adapter is

✓ Pay attention to the BACnet settings on your actuator you just made

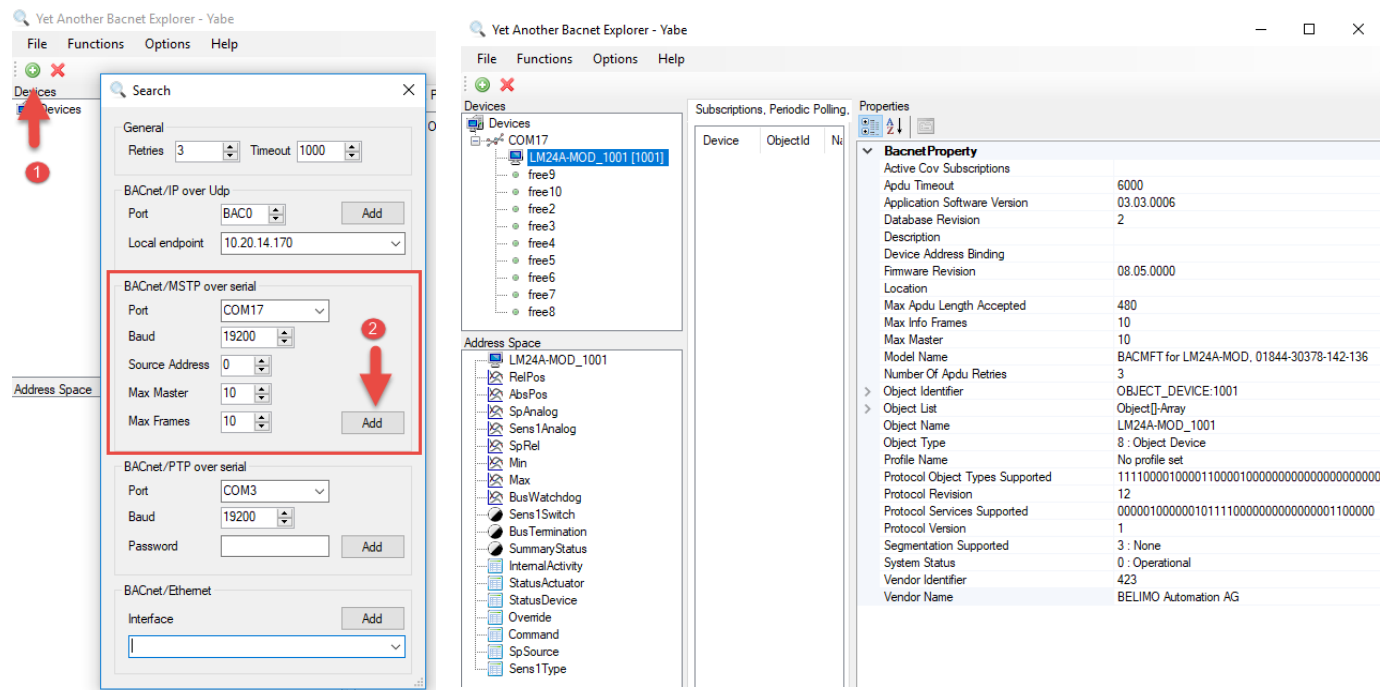

B2 - BACnet - Workshop II



- 4. Write and read out a device on TCP and MS/TP**
- 5. To reset your *PresentValue* delete the value in the properties.**