


B2 – BACnet / Modbus (Advanced)

Modbus - Workshop II

B2 - Modbus – Workshop II - Network


Modbus Poll

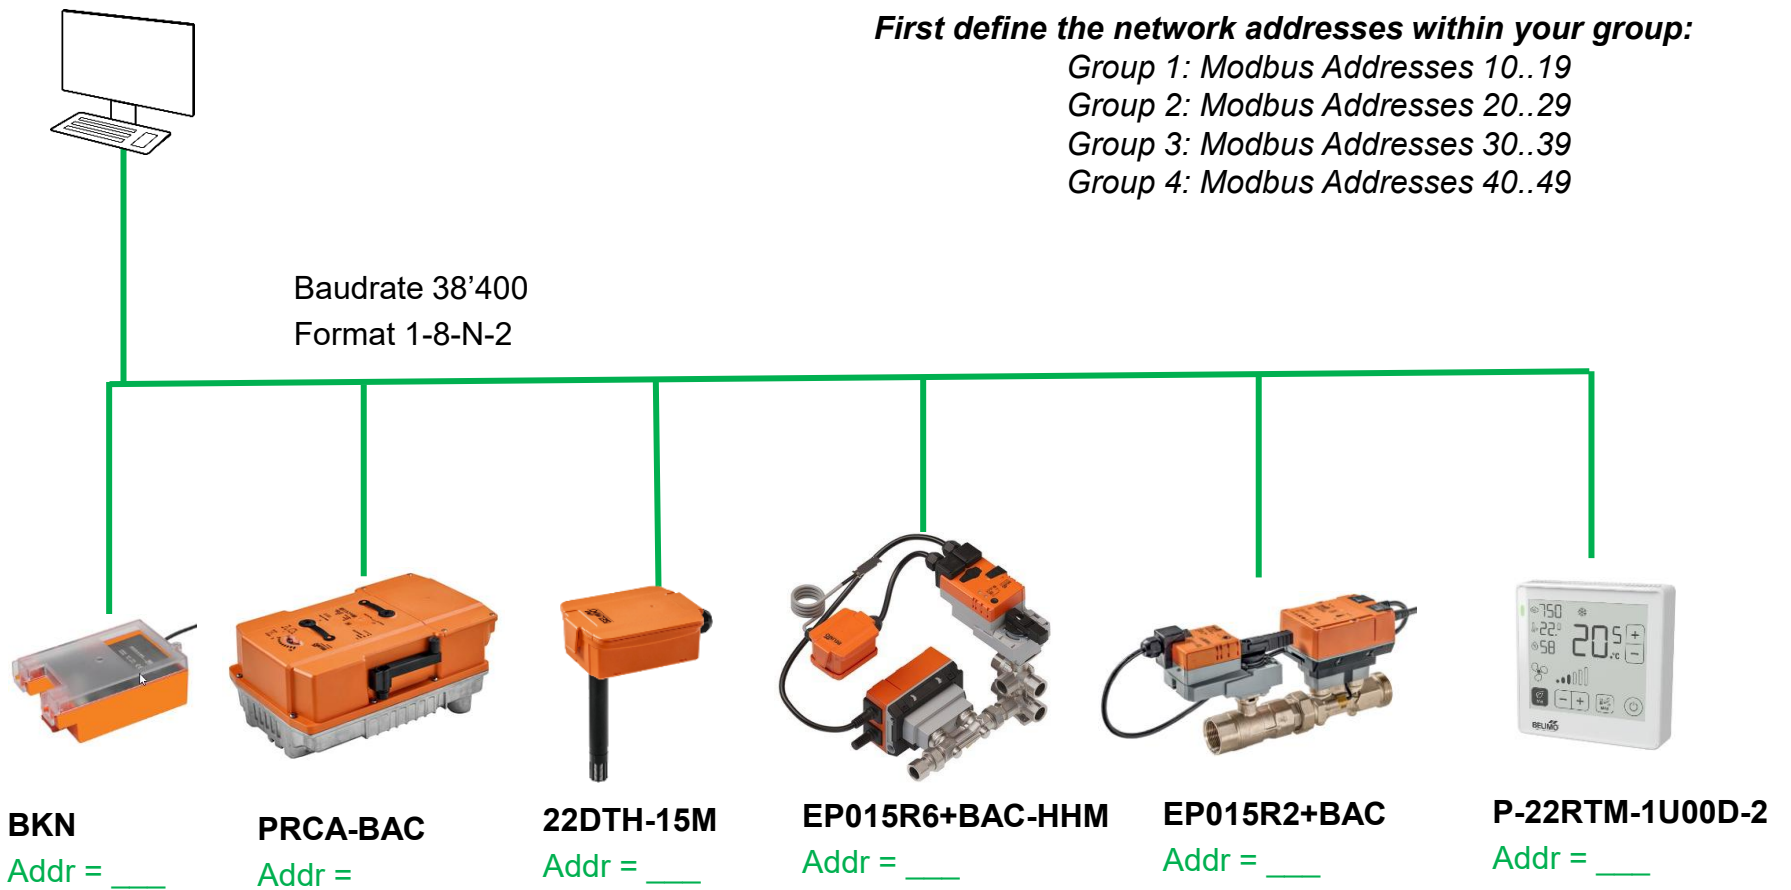

— Serial network (RS485)

B2 - Modbus – Workshop II

1. Start Modbus Poll.
2. Open two windows for each of the four devices and read out all the datapoints.
3. Change Polling time of the 1-2 device to 10s.

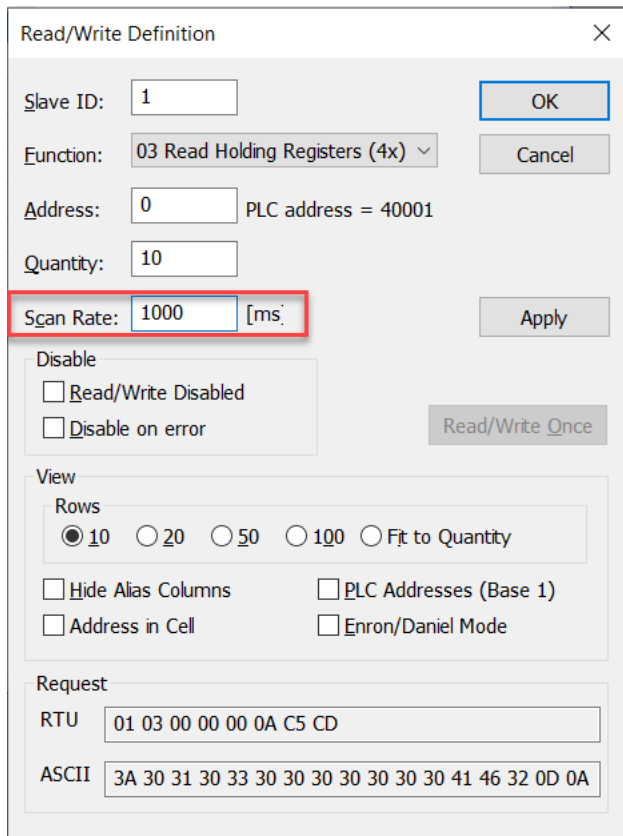


The image shows a 'Read/Write Definition' dialog box with the following fields and options:

- Slave ID:** 1
- Function:** 03 Read Holding Registers (4x)
- Address:** 0 (PLC address = 40001)
- Quantity:** 10
- Scan Rate:** 1000 [ms] (highlighted with a red box)
- Buttons:** OK, Cancel, Apply
- Disable:**
 - ☐ Read/Write Disabled
 - ☐ Disable on error
- View:**
 - Rows:** ☒ 10, ☐ 20, ☐ 50, ☐ 100, ☐ Fit to Quantity
 - ☐ Hide Alias Columns
 - ☐ PLC Addresses (Base 1)
 - ☐ Address in Cell
 - ☐ Enron/Daniel Mode
- Request:**
 - RTU:** 01 03 00 00 00 0A C5 CD
 - ASCII:** 3A 30 31 30 33 30 30 30 30 30 30 41 46 32 0D 0A

B2 - Modbus – Workshop II

4. Open a new Modbus Poll window and change function code to 06.

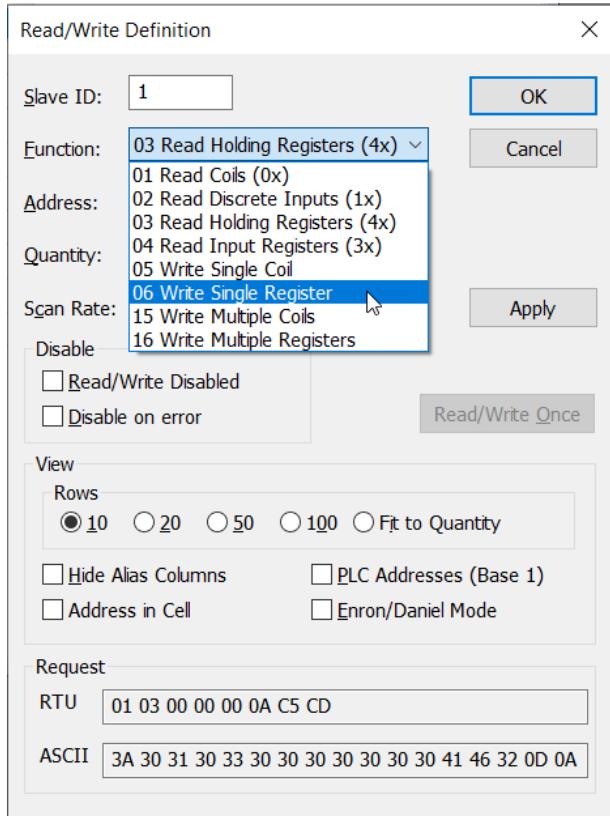

Read/Write Definition

Slave ID: 1

Function: 03 Read Holding Registers (4x) ▾

Address: 01 Read Coils (0x)

Quantity: 02 Read Discrete Inputs (1x)

Scan Rate: 03 Read Holding Registers (4x)

06 Write Single Register

15 Write Multiple Coils

16 Write Multiple Registers

Disable

☐ Read/Write Disabled

☐ Disable on error

OK

Cancel

Apply

Read/Write Once

View

Rows

☒ 10 ☐ 20 ☐ 50 ☐ 100 ☐ Fit to Quantity

☐ Hide Alias Columns ☐ PLC Addresses (Base 1)

☐ Address in Cell ☐ Enron/Daniel Mode

Request

RTU 01 03 00 00 00 0A C5 CD

ASCII 3A 30 31 30 33 30 30 30 30 30 30 41 46 32 0D 0A

B2 - Modbus – Workshop II

- 5. Change the position of this device with the “write” window and observe the position on the bus in the “read/polling” window.**