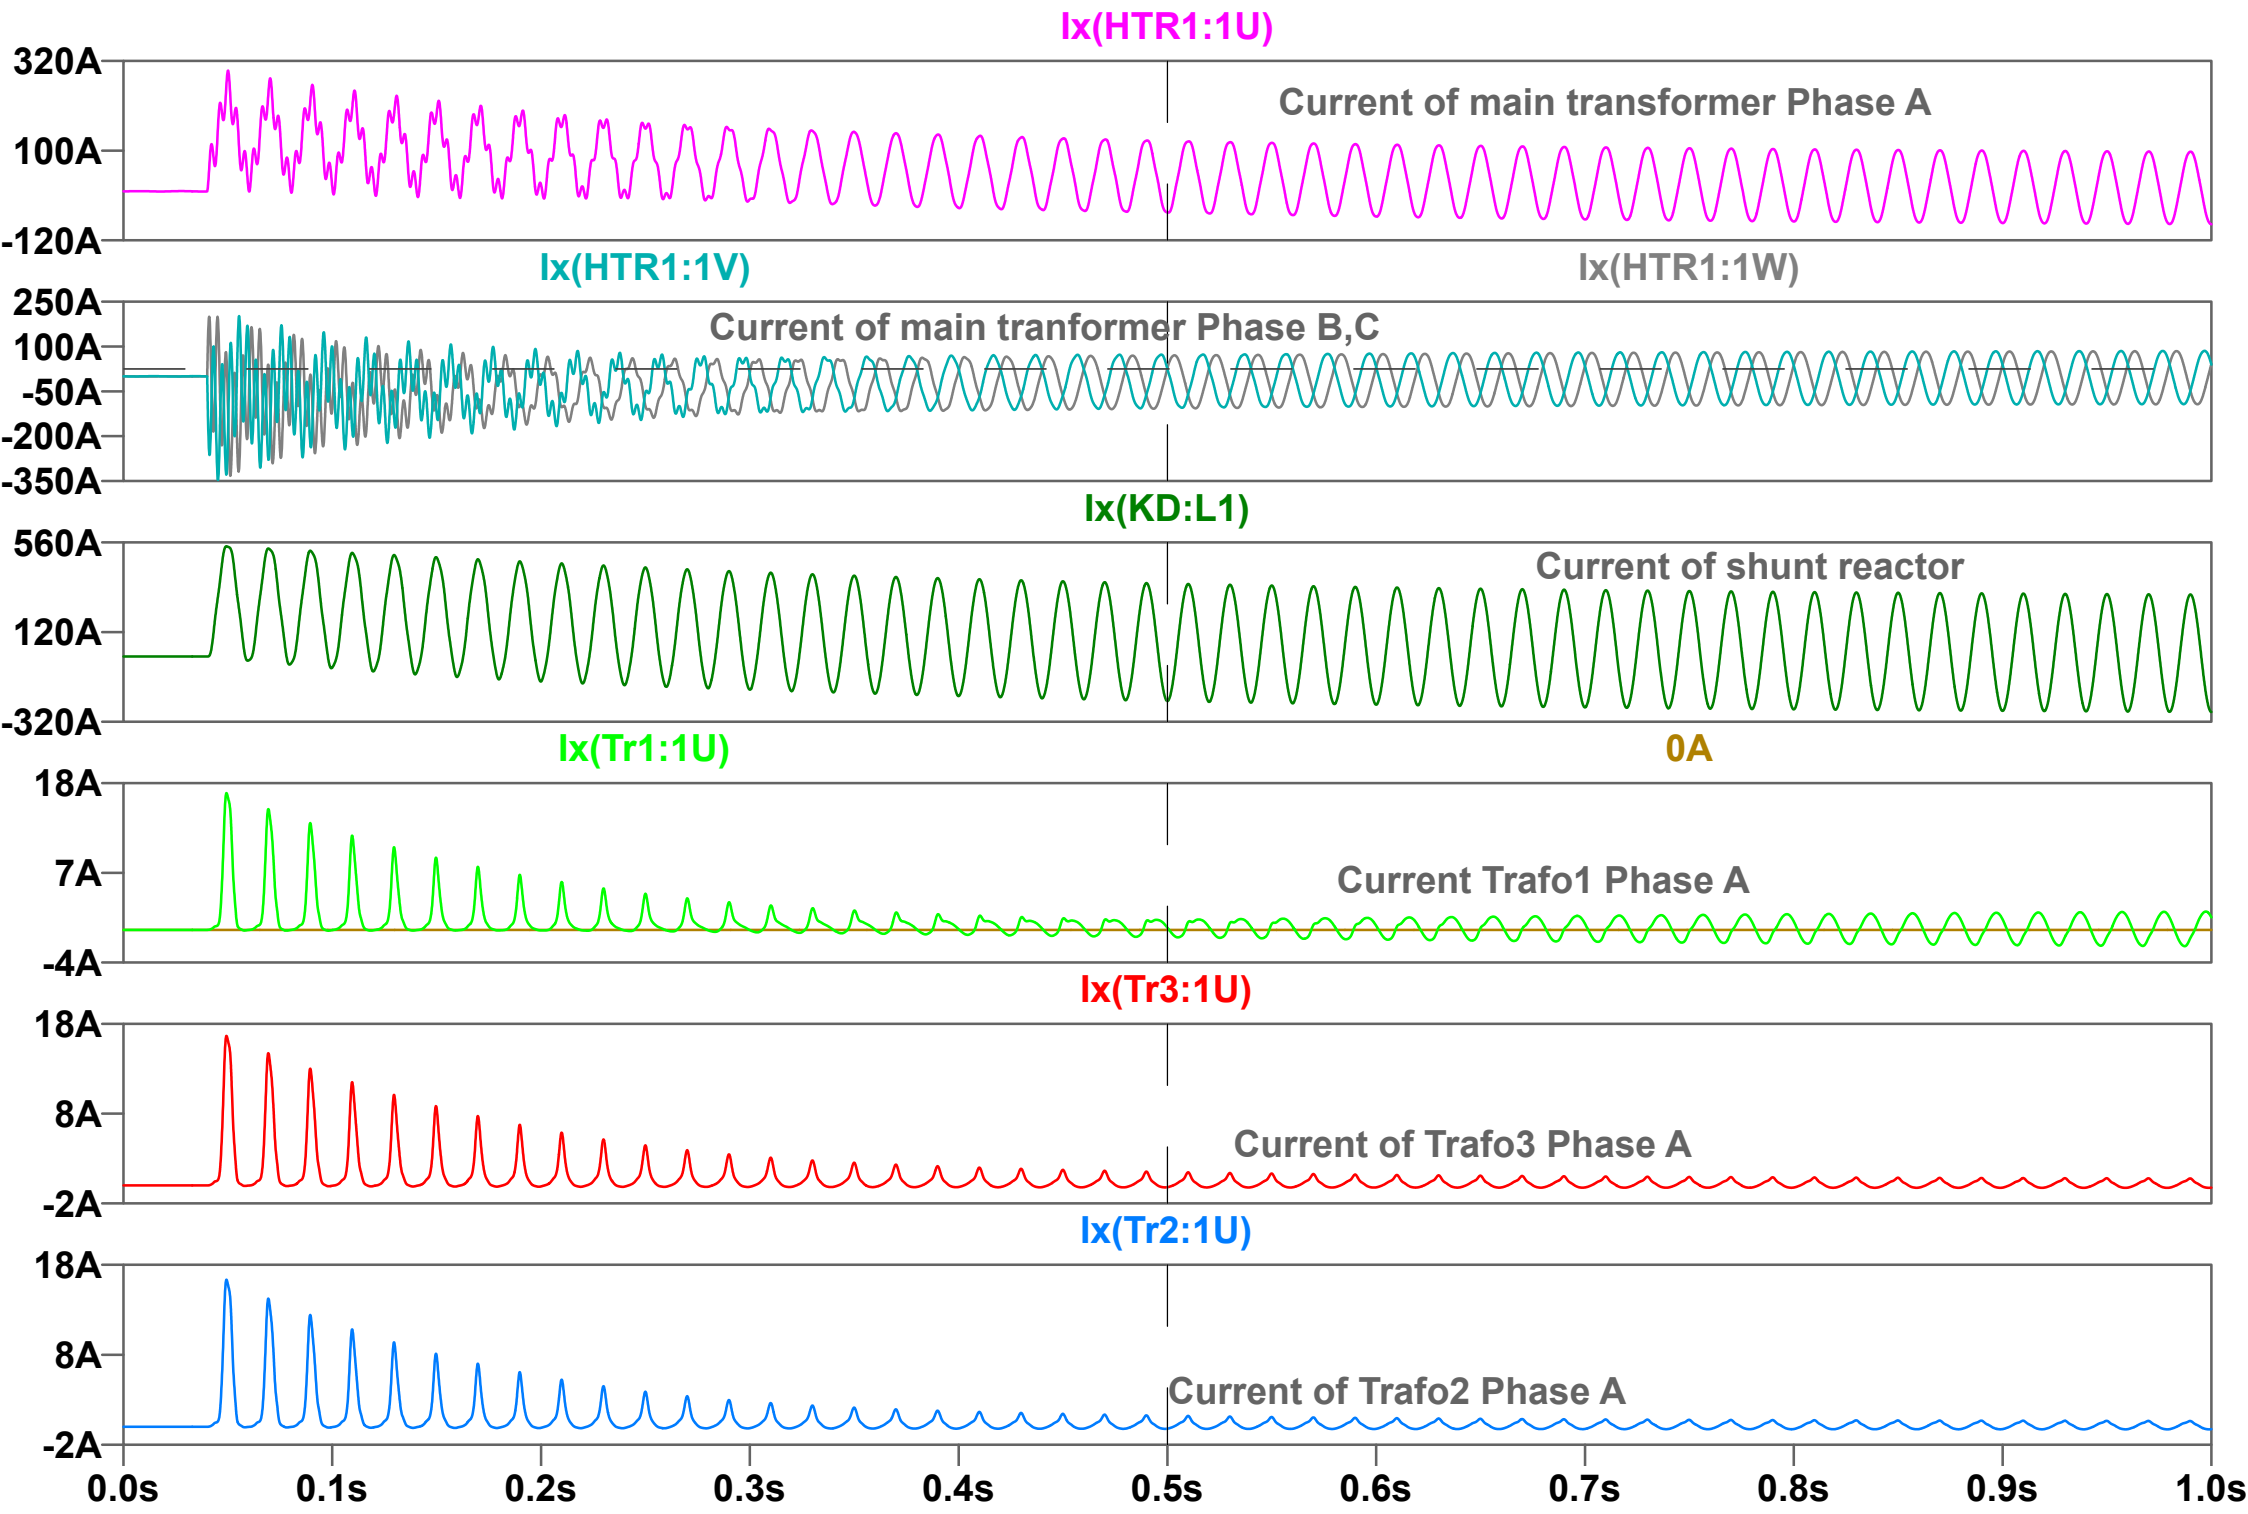

Ix(HTR1:1U)
320A
100A
-120A
Current of main transformer Phase A
Ix(HTR1:1V)
Ix(HTR1:1W)
250A
100A
-50A
-200A
-350A
Current of main tranformer Phase B,C
Ix(KD:L1)
560A
120A
-320A
Current of shunt reactor
Ix(Tr1:1U)
0A
18A
7A
-4A
Current Trafo1 Phase A
Ix(Tr3:1U)
18A
8A
-2A
Current of Trafo3 Phase A
Ix(Tr2:1U)
18A
8A
-2A
Current of Trafo2 Phase A
0.0s
0.1s
0.2s
0.3s
0.4s
0.5s
0.6s
0.7s
0.8s
0.9s
1.0s