

Service Bulletin


Replacing battery



In the Framo System on board your ship - either this is a cargo pumping system or an anti-heeling system - there is a programmable Logic Controller (PLC) included in the control system. In some of these systems - and particularly on board ships delivered in the period of 8/1989 until 3/2004 - there is a battery inside the PLC unit.

On a few occasions we have got feedback from our customers that the battery has started to leak and dripped battery acid on the electronic card. This has happened in a few cases when the battery is getting very old.

Before replacing the battery, switch off the supply voltage.

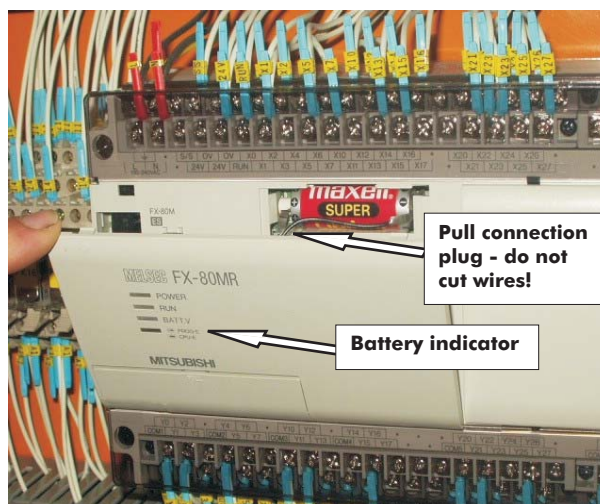

In view of this, we recommend that the battery is changed at least every 5th year, to prevent a more serious failure.

Please put this information into your maintenance management system, if the installation is equipped with this battery, to ensure follow-up on this activity.

**FX-model details.
Battery located behind front cover.
Battery type is Mitsubishi F2-40BL
Framo id. No. A30662.**

Service Bulletin

Replacing battery - Appendix 1, Important notice.



**With reference to
Framo Service Bulletin no. 27 - 2005,
please note the following:**

1. Genuine spare battery must be used. This is a 3.6V lithium battery prepared with connector.

The connector allows a quick change of battery and can only be inserted correct way in order to prevent wrong polarity.

Battery for PLC's type FX & FX2N: Framo id. No. A30662
(Battery for PLC's type A1S: Framo id. No. A30677)

2. The new battery must be installed within 20 seconds after removal of the old battery.

This is essential in order to avoid loss of memory.

Please contact any Framo Service Station if problems occur or any questions should arise.