Insight Connect

Installation and Licensing

Publication Number
ICSETUP 18

Proprietary and Restricted Rights Notices

Copyright

©2005 UGS Corp. All Rights Reserved

Permission is granted to make and distribute complete and unmodified copies of this document, provided the copyright notice is preserved on each copy.

This software and related documentation are proprietary to UGS Corp. LIMITATIONS TO U.S. GOVERNMENT RIGHTS. UNPUBLISHED - RIGHTS RESERVED UNDER THE COPYRIGHT LAWS OF THE UNITED STATES. This computer software and related computer software documentation have been developed exclusively at private expense and are provided subject to the following rights: If this computer software and computer software documentation qualify as "commercial items" (as that term is defined in FAR 2.101), their use, duplication or disclosure by the U.S. Government is subject to the protections and restrictions as set forth in the UGS Corp. commercial license for the software and/or documentation, as prescribed in FAR 12.212 and FAR 27.405(b)(2)(i) (for civilian agencies) and in DFARS 227.7202-1(a) and DFARS 227.7202-3(a) (for the Department of Defense), or any successor or similar regulation, as applicable or as amended from time to time. If this computer software and computer documentation do not qualify as "commercial items," then they are "restricted computer software" and are provided with "restrictive rights," and their use, duplication or disclosure by the U.S. Government is subject to the protections and restrictions as set forth in FAR 27.404(b) and FAR 52-227-14 (for civilian agencies), and DFARS 227.7203-5(c) and DFARS 252.227-7014 (for the Department of Defense), or any successor or similar regulation, as applicable or as amended from time to time. UGS Corp., 5400 Legacy Drive, Plano, Texas 75024.

———————————————————————-

All trademarks and registered trademarks mentioned herein are the property of their respective owners.

©2005 UGS Corp.
All Rights Reserved.
Produced in the United States of America.

Contents

System Requirements 1-1

Minimum System Configuration 1- 1
Recommended System Configuration 1- 1
Recommended Graphics Cards 1- 1

Installing and Uninstalling Insight Connect 2-1

Uninstalling 2- 1

Licensing Options 3-1

Dongles 3- 1
Node-Locked (Standalone) Configuration 3- 1
Floating Configuration 3- 2
License File 3- 2

Configuring Node-Locked Licensing 4-1

Loading Insight Connect Node-Locked License 4- 1

Configuring Floating Licensing 5-1

Identifying a License Server 5- 1
Installing the Sentinel Driver 5- 1
Loading Insight Connect for Floating Licenses 5- 3

Contact UGS 6-1

Chapter

1 System Requirements

Minimum System Configuration

- Intel Pentium, Intel Xeon, AMD Athlon, or AMD Opteron processor-based PC
- Windows 2000 or Windows XP Professional
- 512 MB RAM
- 1.1 GB of disk space for installation
- Minimum Resolution: 1,024x768, 65K colors
- CD-ROM (local or network) for installation

Recommended System Configuration

- Intel Xeon or AMD Opteron processor-based PC
- Windows XP Professional
- 1 GB or more RAM
- True Color (32 bit) or 16 million colors (24 bit)
- Screen resolution of 1280x1024

Recommended Graphics Cards

You can find a list of graphics cards recommended for use with Solid Edge at http://www.solidedge.com/graphics/default.htm.

Chapter

2 *Installing and Uninstalling Insight Connect*

To install Insight Connect, use any of the following methods:

- Insert the Insight Connect CD-ROM in the CD drive. If autorun is enabled, Insight Connect setup begins.
- In Windows Explorer, double-click the file (CD drive):\setup.exe.
- Use the Run command on the Start menu to run (CD drive):\setup.exe.

Keep these things in mind when installing Insight Connect:

- For information on addressing error messages you may encounter while installing Solid Edge, contact the Global Technical Access Center (GTAC)for product support at 800-955-0000,option 2 for Technical Software Support,option 2 for Solid Edge,option 3 for Solid Edge Installation & Licensing Issues.
- You must install FLEXlm and the Sentinel driver separately for floating licensing to work properly. If your node-locked installation requires a dongle, the Sentinel driver is automatically installed. If for some reason the Sentinel driver does not install properly, the Sentinel driver can be installed from the Solid Edge CD. The Sentinel driver is located in the Sentinel folder on the Solid Edge CD. Double-click sentinel.exe and follow the installation instructions to complete the installation of the driver.
- You must load and remove Insight Connect from an account that has Administrator privileges. Insight Connect will run under User, Administrator, or Guest privileges.
- Insight Connect always installs system files on the drive that contains the Windows operating system, regardless of the drive you specify for the installation.

Uninstalling

Use the Add/Remove Programs utility (located in the operating system Control Panel) to remove Insight Connect. Select Insight Connect from the list of installed products, and click Remove.

For more information on installation and uninstallation of Insight Connect and product enhancements, see the readme.txt file in the product folder.


Chapter

3 *Licensing Options*

When you purchase Insight Connect, you can choose between two licensing options. With node-locked licensing, a license is locked to a specific hardware key, or dongle. With floating licensing, the FLEXlm software manages licenses for use on a network, and a system administrator typically configures the dongle-equipped license server.

Dongles

A hardware key, or dongle, is a small device that plugs into your computer and works with the software to provide licensing. The dongle plugs into the USB or parallel port on the back of your computer. If you have a parallel dongle, you can continue to utilize the port by plugging another parallel device (a printer, for example) into the rear of the dongle.

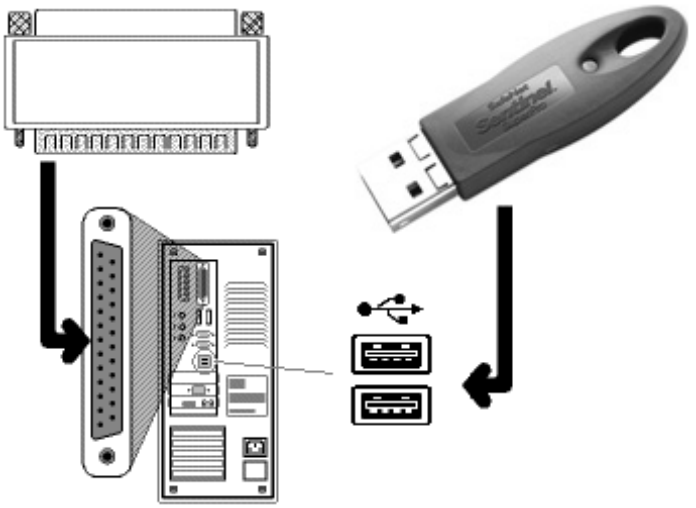

With node-locked licensing, if your license requires a dongle, it must be installed on your computer. With floating licensing, the license server must have a server dongle installed.

You must install the Sentinel driver separately for floating licensing to work properly. If your node-locked installation requires a dongle, the Sentinel driver is automatically installed. If for some reason the Sentinel driver does not install properly, the Sentinel driver can be installed from the Solid Edge CD. The Sentinel driver is located in the Sentinel folder on the Solid Edge CD. Double-click sentinel.exe and follow the installation instructions to complete the installation of the driver.

Node-Locked (Standalone) Configuration

If your license requires a dongle, install it in the USB or parallel port of your computer. The Insight Connect License Wizard validates the dongle that is included in your Insight Connect kit.

Floating Configuration

Floating represents the ability to have multiple clients accessing the software through a license server. This means that you can install Insight Connect on as many computers as needed on your network, and then have users check out licenses from a pool, not to exceed the total number of purchased seats.

The license server can be any computer on your network that is running a 32-bit Windows operating system. The only limitation is that the machine selected as the server must be available for the users to access whenever needed. The license file used in a floating configuration establishes the location of the license server and the number of available licenses. The license server must have a server dongle installed. The FLEXlm utilities that are necessary to simplify the process and to make full use of your Insight Connect license are delivered on your Insight Connect product CD.

Floating licenses should not be shared across country borders. It is strongly recommended that the floating licenses only be shared across a single LAN to minimize any additional points of network interruption.

License File

Both the node-locked and floating options require a license file that is customized to your installation. You will not be able to run your Solid Edge product without completing the licensing phase of the product installation. An electronic copy of your Solid Edge license file (SELicense.dat) has been emailed to the point of contact on record for your company. If you cannot locate this file, you can download it from the UGS Support web page at http://www.ugs.com/Support/LicenseManagement, log in using your WebKey account, and enter the Sold-To / Install ID number you want to download a license for.

Chapter

4 Configuring Node-Locked Licensing

To use a node-locked license, you must install Insight Connect and complete the licensing phase after installation.

The Sentinel driver is automatically installed for your node-locked license that requires the use of a dongle. If for some reason the Sentinel driver does not install properly, the Sentinel driver can be installed from the Solid Edge CD. The Sentinel driver is located in the Sentinel folder on the Solid Edge CD. Double-click sentinel.exe and follow the installation instructions to complete the installation of the driver.


Loading Insight Connect Node-Locked License

Install Insight Connect from the product CD-ROM.

After installation, if you start Insight Connect with the delivered license file, licensing help is displayed. However, if you have altered or replaced the delivered license file, license validation occurs automatically.

To use License Wizard to generate a valid SELicense.dat:

Step 1: Select Permanent Node-Locked, enter the license key for the purchased product, and click Next. Click Finish to dismiss the License Wizard.

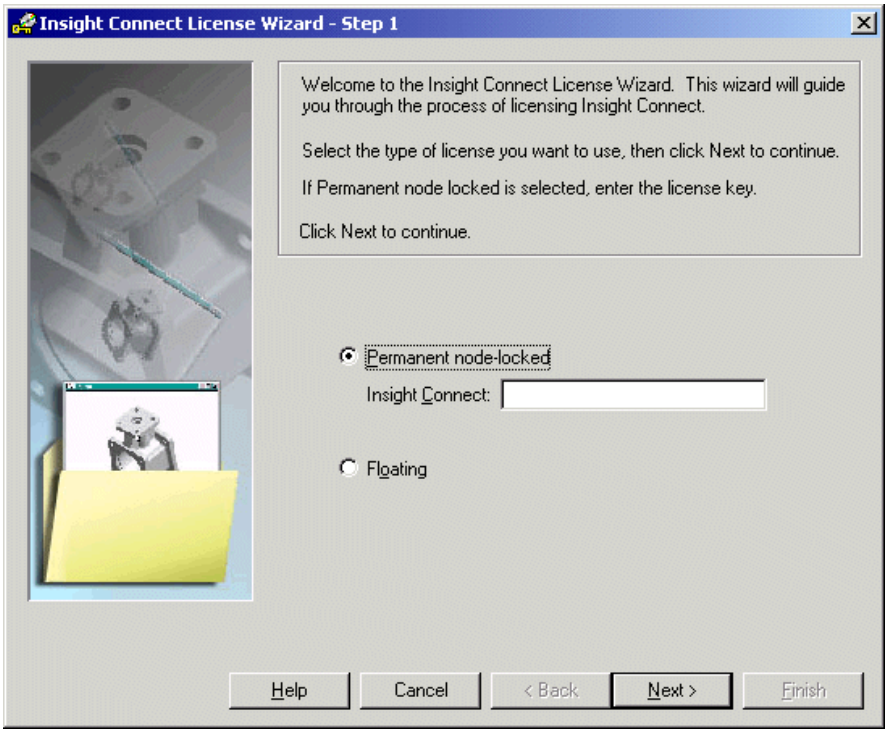

Chapter

5 *Configuring Floating Licensing*

Configuring floating licenses involves identifying a license server, installing and configuring FLEXlm, and installing Insight Connect.

Identifying a License Server

The license server is the computer on your network on which the FLEXlm software will reside. The license server can be any computer on your network that is running a 32-bit Windows operating system. The server and the client machines must be running the TCP/IP protocol and must be able to communicate with the server over the network. The license server must have the provided server dongle installed for floating licensing to work.

Installing the Sentinel Driver

The Insight Connect FLEXlm floating license configuration requires the use of a dongle (hardware key). The dongle plugs into either the parallel or USB port on your license server and requires the installation of Rainbow's Sentinel driver. The Sentinel driver is located in the Sentinel folder on the Solid Edge CD. Double-click sentinel.exe and follow the installation instructions to complete the installation of the driver.


The FLEXlm software is included on your Insight Connect product CD. You need to install the FLEXlm software on your licensing server. To install and configure FLEXlm, log in with administrative privileges and follow these steps:

Step 1: Run <CD-ROM>:\ResKit\License Manager\setup.exe, where <CD-ROM> is the drive letter of the CD-ROM drive. Follow the installation prompts. If Insight Connect is not installed on the licensing server, install the drivers from the ResKit folder.

Step 2: Copy your license file (SElicense.dat) to the <DRIVE>:\SEFlex/program folder, where <DRIVE> is the drive letter of the hard drive where you installed FLEXlm.


Step 3: Double-click lmtools.exe in the <DRIVE>:\SEFlex/program folder to display the LMTOOLS dialog box.

Step 4: On the Service/License File tab, specify Configuration Using Services. Ensure that FLEXlm License Manager is highlighted in the list.

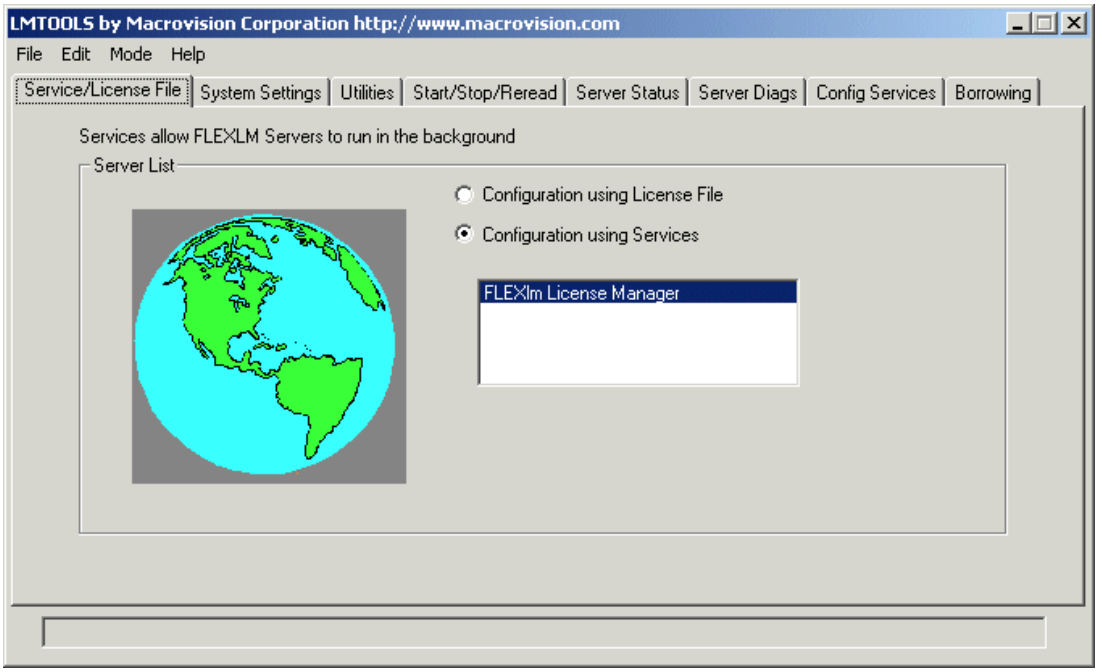


Step 5: On the Configure Services tab, specify the location of the License Manager daemon, lmgrd.exe, and the Insight Connect License File, SElicense.dat. Also specify a location for the debug log file.

Step 6: Select the Use Services and Start Server at Power Up options.

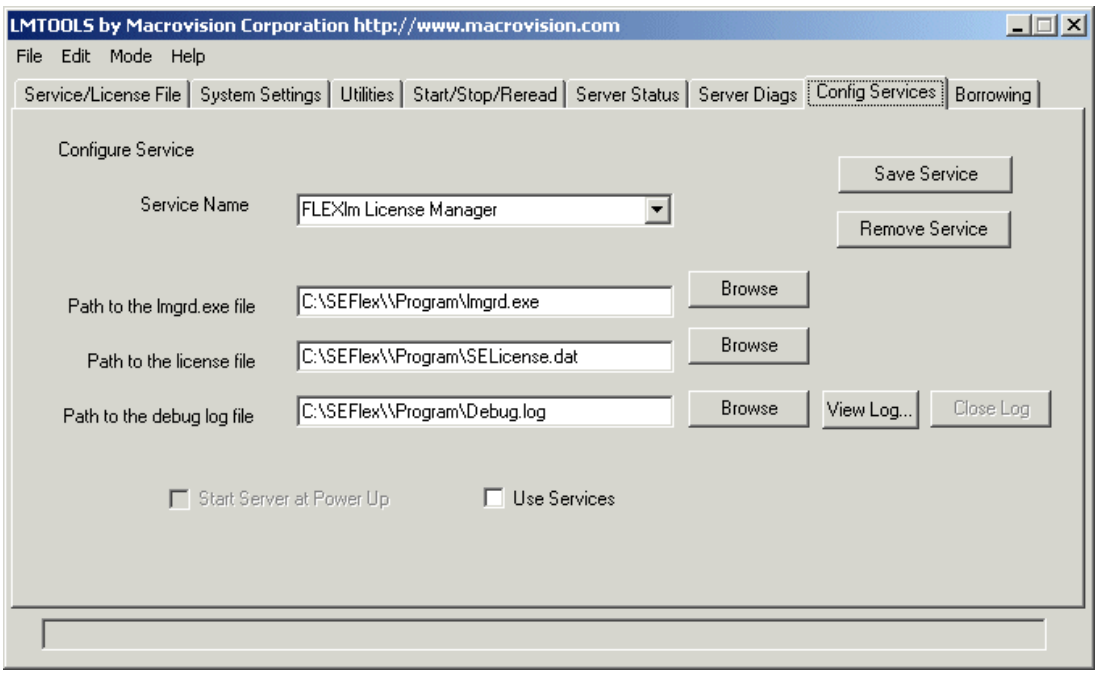

Step 7: Click Save Service. If prompted to save the FLEXlm settings, click Yes.

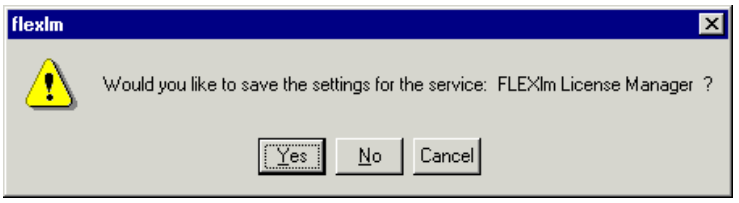

Step 8: On the Start/Stop/Reread tab, click Start Server to start licensing.

Loading Insight Connect for Floating Licenses

Install Insight Connect on each client that will be running Insight Connect. Copy the SElicense.dat file from the server to each client. Place it in the ~\Insight Connect V18/Program folder.

Chapter

6 Contact UGS

In the United States or Canada, call the Global Technical Access Center:

Step 1: Dial 1–800–955–0000.

Step 2: Press 2 for technical software support.

Step 3: Enter your Sold-to/Server ID, followed by the # sign.

Step 4: Press 2 for Solid Edge.

Step 5: Press 1 for Solid Edge application issues.

Outside the United States or Canada, contact your local Solid Edge reseller.