
香帥重機
香帥重機　成就非凡人生

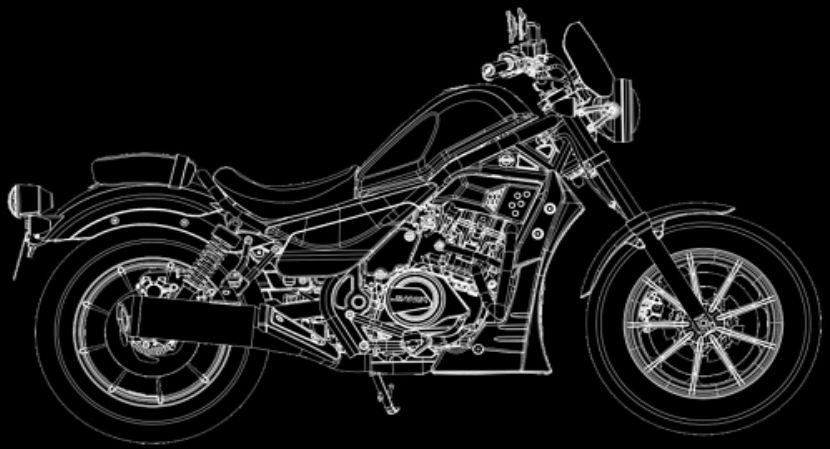

香帅重机使用说明书

USER'S MANUAL

> GJY250

Thank you for choosing Xiangshuai Heavy Machinery Motorcycle, we sincerely welcome you to join the ranks of motorcycle driving with the most careful design test and precision manufacturing.

This manual contains important information and instructions for the basic operation, inspection and maintenance of locomotives, please read carefully and fully before operating the vehicle. Correct use and maintenance can maintain the best condition of the vehicle and extend the service life of the whole vehicle. If you have any questions about operation and maintenance, you can consult the sales customer service of Xiangshuai Heavy Machinery Motorcycle.

The design and manufacture of this vehicle strictly follows the national standards, and ensures the performance of the whole vehicle through careful design testing and precision manufacturing. Please strictly choose the original pure parts. When you are fully familiar with the requirements and recommendations in this manual, you will find that driving a motorcycle is an exciting sport and you can truly appreciate the joy of driving a motorcycle.

I wish you the comfort and pleasure of riding a motorcycle in the future.

（香帅重机官方客服微信）
(Xiangshuai Heavy Machinery official customer service WeChat)

广东建雅摩托车科技有限公司
Guangdong Jianya Motorcycle Technology Co., Ltd

⚠ Security warning sign: Indicates that you need to be aware that your security may be compromised.

⚠ WARNING Warning signs: Failure to follow warning signs can result in serious injury or injury.

CAUTION Pay attention to the marking: Measures must be taken to avoid damage to the vehicle.

NOTE: Pay attention to identification: Provide some key information.

NOTE:

●This instruction manual should be considered a permanent part of the vehicle and should be included with the vehicle when the vehicle is transferred to another person.

●The company continues to pursue continuous improvement in product design and quality. Therefore, this manual contains the latest product data, description, specifications and pictures when printing, but it may be slightly different from your locomotive, if you have any questions about this manual, please consult the local dealer of Xiangshuai Heavy Machinery. Xiangshuai Heavy Machinery Motorcycle reserves the right to change the parameters and other items at any time without notice.

●The copyright of this manual belongs to Xiangshuai Heavy Machinery Motorcycle, and shall not be reproduced without the written consent of the company.

This manual is applicable to GJY250 models, and introduces the basic operation and maintenance methods of the vehicle in detail, please read it carefully before driving. Correct use, maintenance and maintenance can effectively ensure driving safety, reduce breakdowns and maintain the best performance of the vehicle. Thank you for purchasing and using Xiangshuai Heavy Machinery motorcycle series products!

⚠ WARNING

●Please read this manual carefully and operate your motorcycle until you are in a safe place and have the appropriate driving skills. Check your maintenance regularly and have good driving skills to ensure you handle your vehicle safely.

Directory

Preface..... 1
Manual Important Notes..... 2-3
Directory..... 4
Safety Information Preface..... 5-6
Safety Information..... 7-8
Vehicle Important Tags..... 7-8
Parts Overview..... 9-11
Manipulators/gauges..... 9
Vehicle right side..... 10
Vehicle left side..... 11
Meter Information..... 12-14
Power Lock/Steering Lock..... 15
Parts Function Description..... 16-21
Clutch Handle/Shift Foot Lever..... 16
Left/Right Switches..... 17
Rear brake pedal lever..... 18
Front brake lever..... 18
Fuel Cap..... 18
Fuel Tank..... 18
Catalytic converter..... 19
Oxygen Sensor..... 20
Charcoal Pot..... 20
Rear shock absorption assembly..... 20
Single Brace Bracket..... 20
Oil Pump..... 21
Pre-driving checks..... 22
Operation Driving Essentials..... 23-25
Engine Start..... 23
Shift Pedal Bars..... 24
Selection of lubricants..... 24
Tire Pressure and Load..... 24
Tire storage..... 25
Tire Condition and Specifications..... 25
Engine Run-in..... 25
EFI System Diagnostics..... 26-30
Maintenance and adjustment..... 31-41
Regular maintenance..... 31
Change Engine Oil..... 32
Coolant..... 33
Cooling System Inspection..... 33
Spark plugs..... 34
Oil and Oil Grid..... 34
Check engine oil levels..... 34
Clutch adjustment..... 35
Brake System Check..... 35
Replace the air filter..... 36
Throttle cable adjustment..... 36
Adjustment of the rear brake..... 37
Check the front and rear friction plates..... 37
Check the amount of brake fluid..... 37
Adjustment and replacement of the drive chain..... 38
Drive Chain Replacement..... 38
Inspection and lubrication of the lever cables..... 39
Inspection of the drive chain..... 39
Inspection and lubrication of single braces..... 40
Check the front and rear wheel bearings..... 40
Battery Inspection..... 40
Troubleshooting Sheet..... 41
Battery Charging..... 42
Fuse replacement..... 42
Engine overheating..... 43
Maintenance Cycle Table..... 44-45
Care and Storage..... 46-47
Care..... 46
Storage..... 47
Vehicle Parameters..... 48

Motorcycles are motor vehicles, driving such vehicles requires certain driving skills and related locomotive knowledge, and the dealer should inform the driver of the following.

Drivers should know:

●Proficient in the handling of various parts of the motorcycle.

● Pay attention to the relevant information about the warnings and maintenance parts in the manual.

●Motorcycle drivers must pass the examination of the traffic management department and obtain a driving license before they can drive a motorcycle, and driving without a license is strictly prohibited.

●Through the vehicle instruction manual, you can understand some simple basic problems of motorcycles and precautions for using the car.

Ride safely
●Before driving the vehicle, carefully read the "Pre-driving Inspection" to check the vehicle first, so that accidents can be prevented.
●This motorcycle can only carry the driver and one passenger, a total of two people.
●Due to the small size of motorcycles, accidents between motorcycles and cars often occur due to line of sight. Many of these accidents are caused by the driver of the car not spotting the motorcycle. Therefore, the driver can make the motorcycle more visible, which can reduce the probability of such accidents.

Therefore
● Wear distinctive clothing, drivers must wear motorcycle-specific clothing and protective equipment, and passengers must be dressed neatly and compactly.
● When you ride through intersections, please pay extra attention to other vehicles in these accident-prone places to ensure that other drivers can see you.
● When riding, make sure you are in the field of view of other drivers and avoid blind spots in other drivers' blind spots.
● Keep a safe distance from other motor vehicles, correctly use turn signals, horns and other signal devices, strictly prohibit scrambling for traffic, and strictly abide by traffic rules.



Dress correctly




Improper dressing




Improper dressing


Important tag locations for vehicles

Before operating the locomotive, please read the label information in the figure below

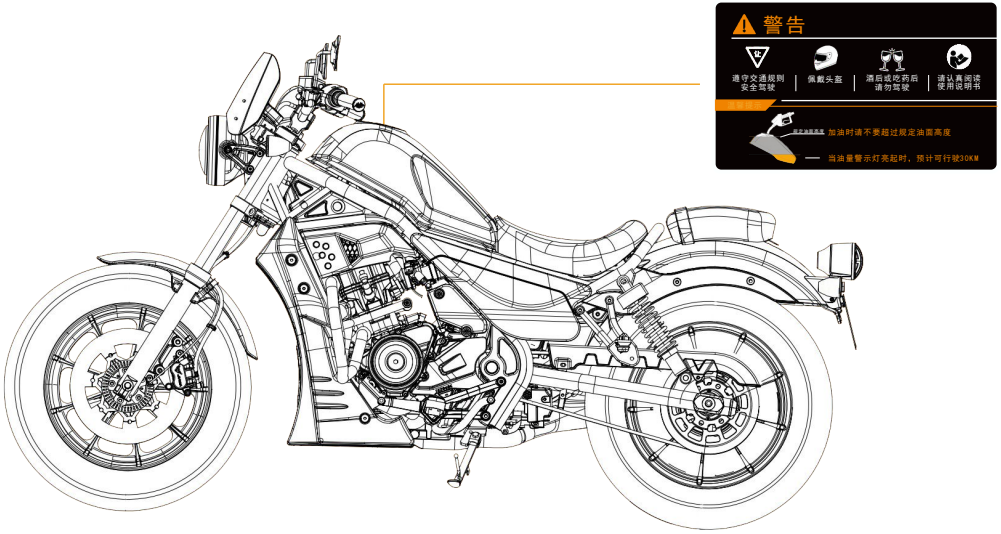


Important tag locations for vehicles

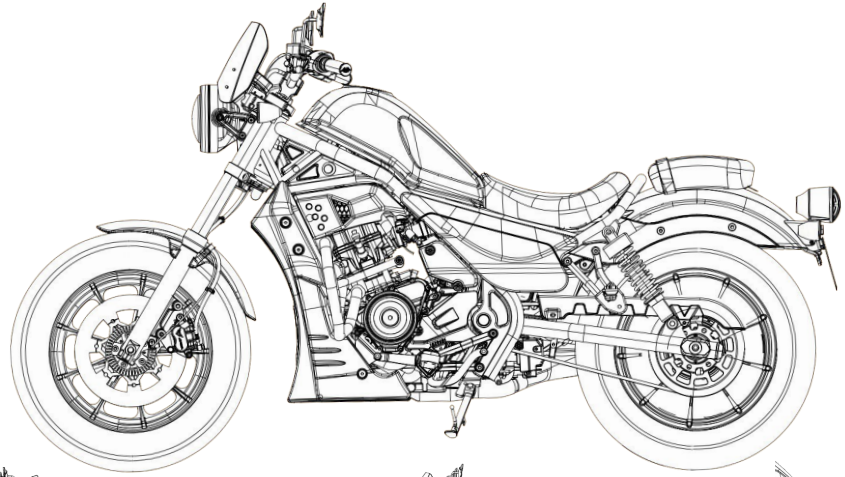


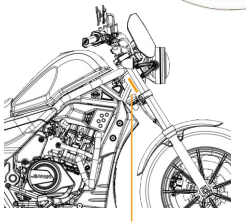

The Vehicle Identification Number (VIN) is engraved on the right side of the front of the vehicle

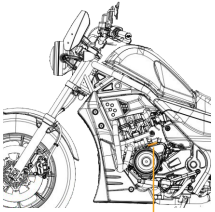


The engine identification code is engraved on the upper part of the crankcase on the left side

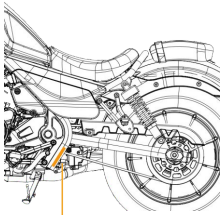


The vehicle information plate is engraved on the left side of the frame under it

Controls and gauges

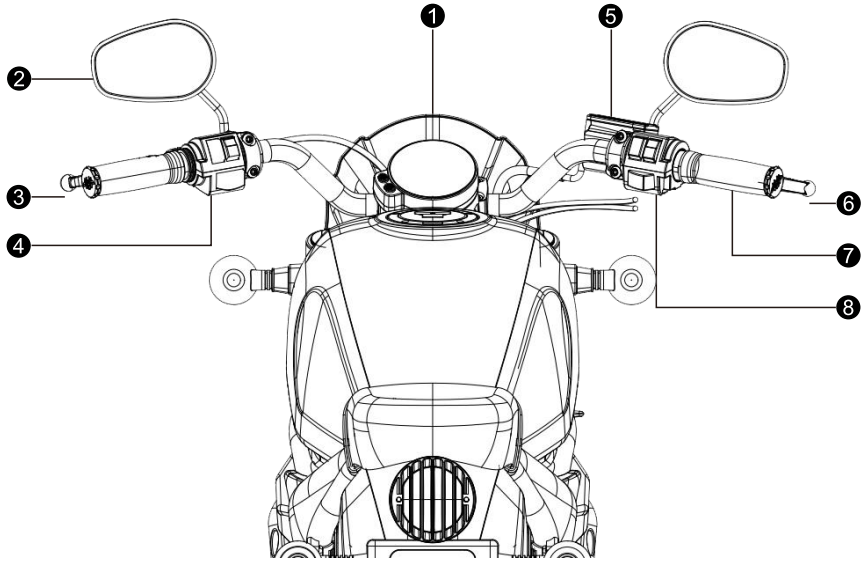


1. LCD display instrument
2. Rearview mirrorst
3. Clutch handle
4. Left hand handle switch
5. Front brake oil cup
6. Front brake lever
7. Throttle control handle
8. Right handed handlebar

Right side of the vehicle

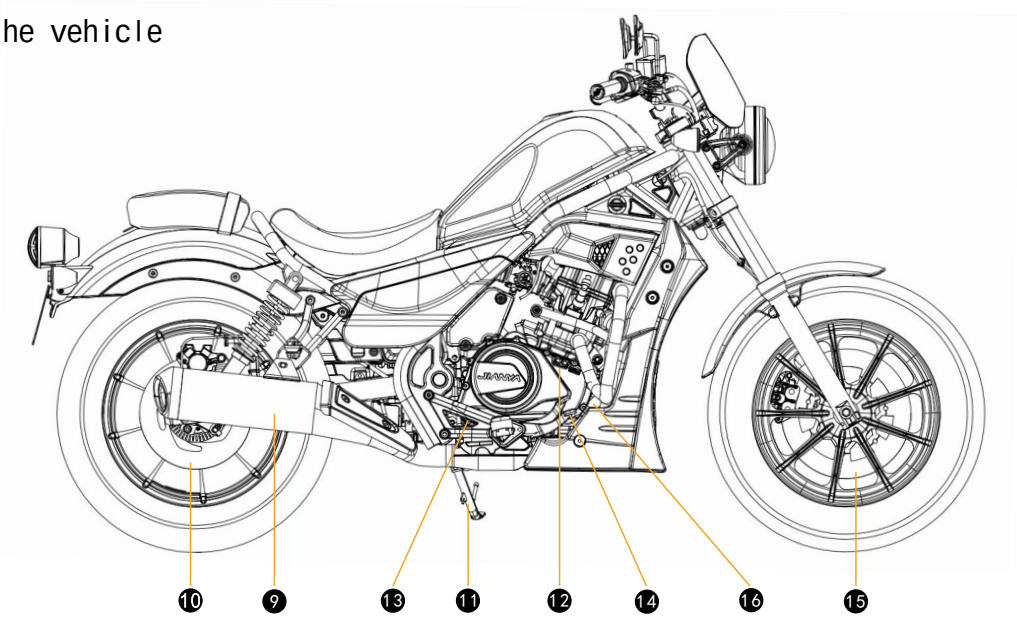


9 Exhaust pipe
10 Rear brake discs
11 Side stop bracket
12 Oil filler
13 Oil quantity sight glasses
14 Rear brake pedal
15 Front brake discs
16 Oil filtration

Left side of the vehicle

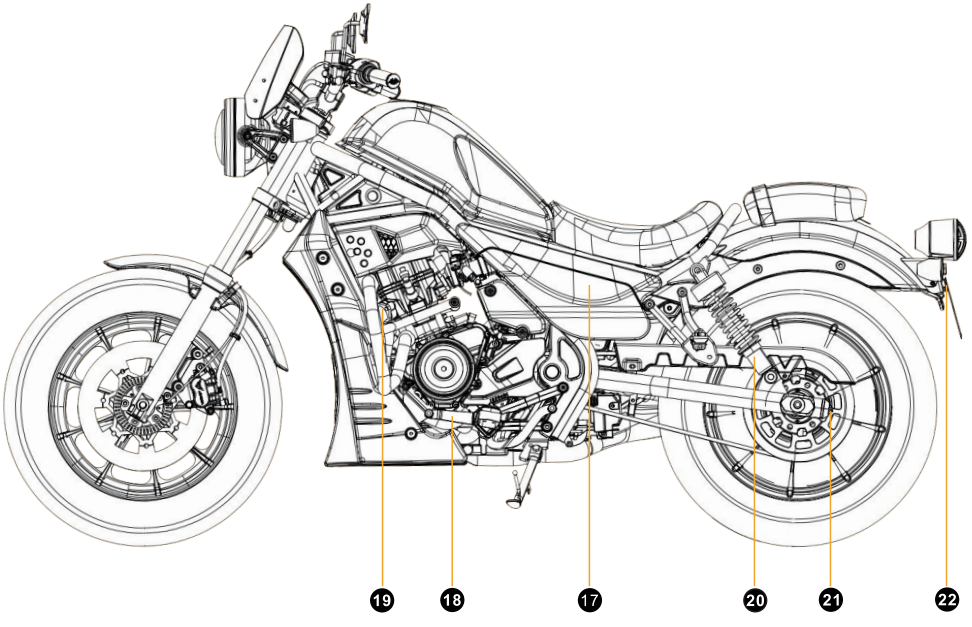

17 Air filter
18 Shift foot lever
19 Oxygen sensor
20 Rear shock absorber
21 Chain regulator
22 License plate mount

Gauge

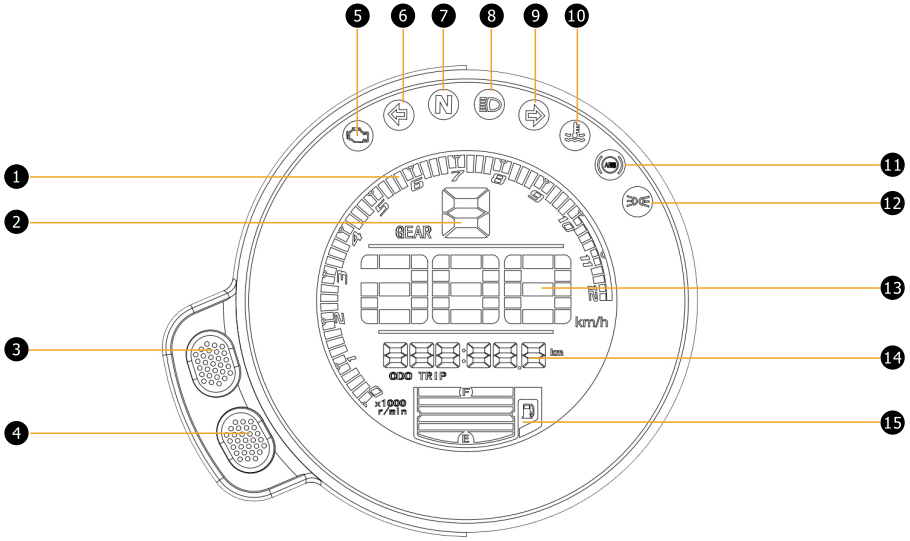

1 Tachometer	2 Gear display	3 On the key	4 Button down	5 EFI fault lamp
6 Left turn signal	7 Neutral display	8 High beam indicator	9 Right turn signal	10 Water temperature display
11 ABS fault light	12 The headlamp is on	13 Speed display	14 Mileage display	15 Fuel light display

⚠ WARNING

●Do not use a high-pressure water gun to flush the meter directly. Do not wipe the instrument with a rag stained with organic solvents such as gasoline, kerosene, alcohol, brake fluid, etc., otherwise the instrument will be locally cracked or discolored due to contact with organic solvents.

1. Tachometer (vehicle speed display)
2. Gear display (shows the current gear of the vehicle)
3. Up button (short press the up button to switch the total and subtotal clock)
4. Down button (long press the up button to clear the subtotal in the subtotal state, press and hold the up button to set the clock in the clock state, at this time, the up button shifts, and the down button accumulates).
5. EFI fault lamp (the fault light is always on when the vehicle is energized, and the fault light is off after the vehicle is started.) If the fault light is still on after thvehicle is started, it means that the EFI system is faulty, please do not start riding, please contact Xiangshuai Heavy Machinery Motorcycle After-sales).
6. The left turn signal is on.
7. Neutral display.
8. High beam indicator.
9. The right turn signal is on.
10. Water temperature display.

CAUTION

●The coolant thermometer will show the temperature of the coolant, the temperature of the coolant will change with the weather and the load on the engine, when the water temperature warning light flashes, stop the motor vehicle to cool the engine.

11 ABS fault light (ABS light lights up after the vehicle is powered on, automatically turns off when the speed reaches 10KM, does not extinguish indicates a fault, do not continue riding. Please contact Xiangshuai Heavy Machinery Motorcycle after-sales.)

⚠ WARNING

If the ABS warning light:

- It does not light up when the motor vehicle is powered on.
- Flashing during riding.

ABS may be faulty, please go to Xiangshuai Heavy Machinery motorcycle dealer or service outlet.

12 The headlamp is on.

13 Speedometer (shows current speed).

14 Mileage display (ODO total mileage display, TRIP short distance mileage display 999KM automatically cleared. Long press the SET key to clear the current short distance mileage record).

15 Fuel quantity display (shows the fuel balance stored in the current tank.) When the oil quantity lamp flashes, refuel as soon as possible) .


CAUTION

- Enough fuel needs to be ensured in the tank, and when the fuel in the tank runs out, the fuel pump will idle, which may damage the fuel pump.

Power lock/steering lock



Turn the key clockwise to lock the lock.

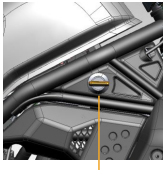

Turn the key clockwise to lock the lock.

The mains power is on

All electrical wiring, instrument lighting, tail lights, auxiliary lights, position lights, etc. are in working condition, at which time the engine can be started, and the key cannot be pulled out.

NOTE:

●When the main power is turned on, the headlight running lights turn on automatically, even when the engine is idling, unless the main power switch is rotated to an angled state.

The main power is off

All circuit systems will be shut down.

Steering lock

Lock the steering mechanism, the steering mechanism is in a locked state, and the key can be pulled out.

Steering lock gesture



Turn the key clockwise to lock the lock.




Rotate the key in a counterclockwise position, and the steering lock is released.

⚠ WARNING


●Do not rotate the main power supply to the main power off position while the vehicle is moving, otherwise the circuit system will be shut down, which may cause the vehicle to lose control and accident.

Clutch handle

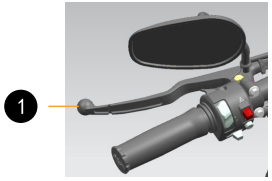


When starting the engine or shifting gears, hold this handle tightly to disengage the clutch friction plates to cut off power delivery.

Shift foot lever

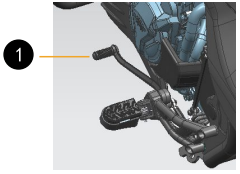

●The car is equipped with a six-speed gear transmission, and when you press down or pick up the gear lever to change gears, the gear lever will return to its original position on its own. Before shifting to a low gear, reduce the speed or increase the engine speed; Before changing gears, increase the speed or reduce the engine speed. This prevents unnecessary wear of the drivetrain elements and rear tyres.

Left switch

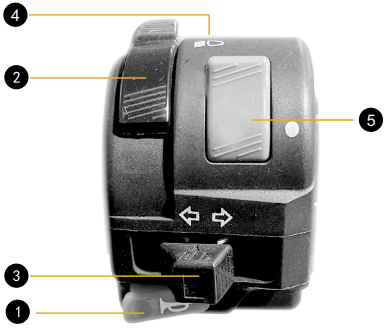


1. Horn button
2. Near and far light switches
3. Turn signal switch
4. Overtaking light switch
5. Dual flash switch

Right switch




1. Flame-out switch
2. Headlamp switch
3. Start switch

Rear brake pedal

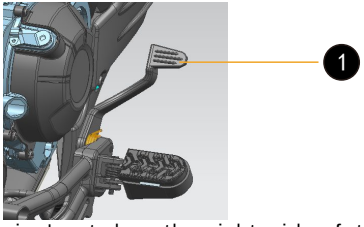


The rear brake lever is located on the right side of the body, next to the engine. When you need to brake back, press this brake lever. The rear brake lever is equipped with position adjustment bolts to adjust the free travel of the rear brake pedal, adjust the adjustment bolts, and maintain the proper stroke.

Front brake lever

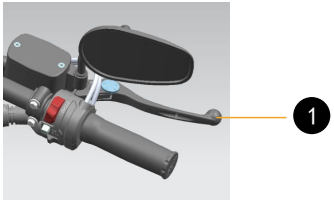


The front brake lever is located on the right side of the handle. When you need to brake forward, grasp this brake lever.

Fuel tank cap

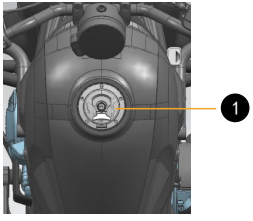

Open the tank cap, press the cap down, then rotate counterclockwise to the card position, and the tank cap will pop out automatically. Close the tank cap, put the fuel tank cap into the tank port, then press the fuel tank cap, rotate clockwise to the initial position, and the tank cap can be snapped to the snap position.

Fuel tank

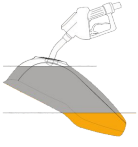

Please do not exceed the specified oil level when refueling.

When the fuel warning light is on, it is expected to continue driving for another 20 km.

⚠ WARNING

- When filling the tank, do not exceed the neck of the tank, otherwise it may overflow when the fuel expands when heated.
- Avoid spilling fuel when the engine is hot.

CAUTION

●If there is a gasoline spill, immediately wipe off the spilled gasoline with a clean, dry soft cloth, as gasoline may corrode paint surfaces and plastic parts.

NOTE:

Fuel tank capacity: 14.0L

Recommended fuel: unleaded gasoline above 92#

The vehicle is designed to run on unleaded gasoline above 92#.

Long-term use of gasoline below 92# will shorten the service life of the engine.

Catalytic converters

The car is already equipped with an exhaust muffler with a catalytic converter.

⚠ WARNING


●When the engine is running, the exhaust system temperature is high, and when maintaining the exhaust muffler, it is necessary to ensure that the muffler has cooled, otherwise it will be burned.

CAUTION

The following precautions must be observed to prevent fire or other damage:

● Only unleaded gasoline can be used, and the use of leaded gasoline can cause irreparable damage to the catalytic converter.
● Do not park the vehicle next to any place with fire hazard, and do not let the engine run for a long time while idling.


Oxygen sensor

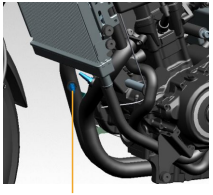

Oxygen sensor


The vehicle has been equipped with an oxygen sensor to reduce exhaust pollutants generated by exhaust gases.

Charcoal pot

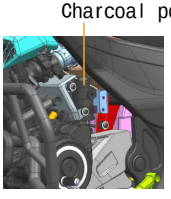

The car is equipped with an activated carbon canister to avoid the emission of oil and gas into the atmosphere. Please check at the specified mileage or time. Check the connection condition of each pipeline, check each pipeline and activated carbon tank for cracks and damage, and replace it if damaged. Make sure the hose is not clogged and clean it as needed.


Rear shock absorbing assembly

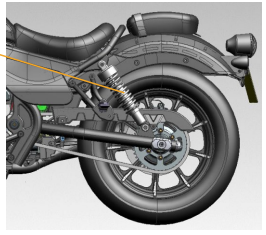

The adjustment of the rear shock absorption can be adjusted according to different road surfaces and driving conditions. Adjustment method: first loosen the compression nut on the shock absorption, and then adjust the nut clockwise to reduce and harden after clockwise, reduce and soften after counterclockwise rotation, and adjust the nut up and down to adapt to different driving requirements. After adjustment, press the nut tightly.

Single brace bracket

The single brace is located on the left side of the vehicle, keep the locomotive upright when using it, and use your feet to lower or push the single brace down.

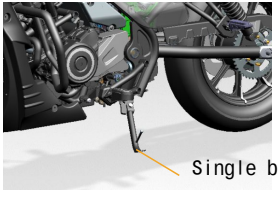

⚠ WARNING

●Please do not ride the machine when the single brace is down or cannot be pushed up, otherwise the single brace will come into contact with the ground, causing the driver to lose control due to distraction.

Oil pump

The car uses the oil pump to supply oil, open the electric door lock and flameout switch, and the oil pump stops working after running for 2-3 seconds. After the engine starts, the oil pump keeps working. When the fuel runs out, the oil pump will idle, causing damage. Pay attention to the indicated position of the fuel level gauge and fill it before it runs out.

CAUTION

●Please use unleaded gasoline No. 92 and above, using bad gasoline will damage the EFI system.

CAUTION

● When the oil pump is running for the first time, please make sure that there is enough fuel in the tank and do not run it in an oil-free state. The oil pump assembly is only for gasoline fuel.

Always check the following carefully before driving:

If the motorcycle is not properly inspected before driving and not properly maintained, it will increase the chance of accidents and the chance of damage to the motorcycle. Before each use of the motorcycle, the motorcycle must be inspected to ensure that it can be operated safely, refer to the section of this instruction manual for inspection and maintenance. If the motorcycle uses inappropriate tires, or operates the motorcycle incorrectly, or the tire pressure is incorrect, you can lose control of the motorcycle. Be sure to use tires of the size and specifications specified in this instruction manual. Proper tire pressure must be maintained as required in the Inspection and Maintenance section.

1. Check the oil level of engine lubricating oil: add lubricating oil as needed.
2. Check whether there is fuel leakage.
3. Check the front and rear brakes: check the action of the front and rear brakes, the free stroke is too large or too small should be adjusted, and check whether there is lock or brake failure.
4. Check the tire: check the air pressure and wear loss of the front and rear tires, and inflate or repair them if necessary.
5. Check the throttle operation: check the action of the throttle handle, the connection of the operation line and the free stroke of the handle, and adjust or replace it if necessary.
6. Check the lighting and signal: check whether the performance of the headlamps, taillights, turn signals and horns is good, and adjust them if necessary.
7. Check the drive chain: Check the tension and lubrication of the chain. Should be replaced if severely worn or damaged.
8. Check the steering control mechanism: check the flexibility and stability of the maneuvering, and adjust it if necessary.
9. Check the engine: Check whether the engine is abnormal.
10. Check the instrument: whether the indicator lights are normal, if necessary, correct.
11. Check vehicle fasteners: confirm whether all fasteners are tightened and tightened if necessary.
12. Check the single-support flameout switch: check whether the ignition cut-off system is normal, if it is not normal, please go to Xiangshuai heavy machine motorcycle dealers or service outlets.

NOTE:

The importance of these checks must not be overlooked. All inspections and necessary repairs need to be completed before driving.

⚠ WARNING

● When the inspection is done, the engine is in dangerous operating condition. If your hands or clothes get caught up in the moving parts of your motorcycle, it will cause serious physical harm to you. In addition to checking the engine kill switch and throttle to run the engine, turn off the engine when performing other checks.

⚠ WARNING

● If you are driving this model for the first time, we recommend that you practice on non-public roads until you are familiar with the control and maneuvering methods of this car.
● Driving with one hand is very dangerous, so you should drive with both hands firmly grasped and feet on the pedals. Do not take your hands off the handlebars under any circumstances.
● Reduce speed to a safe speed before steering.
● The road surface is wet and smooth, the tire friction is small, and the braking ability and cornering ability are naturally reduced. Therefore, it is necessary to slow down in advance.
●Crosswinds are usually most likely to occur at tunnel exits, valleys, or when large vehicles are overtaking from behind, so you must slow down carefully.
● Follow traffic rules and speed limits.

Starting of the engine

When the whole vehicle is energized, check whether the engine kill switch is in position "0", and when your motorcycle is in the neutral position, the neutral indicator on the dashboard will light up.

⚠ WARNING


● Develop a habit of hanging the gear in neutral when starting, returning the throttle to the end, and holding the clutch handle before starting. Avoid making a mistake and rush forward when starting. When starting, the clutch handle must be gripped. Or leave the engine in neutral, otherwise it will not start, and at the same time do not forget to put away the single brake. Do not start the motorcycle when fuel oil is missing.

⚠ WARNING

● The higher the speed, the braking distance will be correspondingly longer, when driving, pay attention to maintain a certain safe braking distance from the car in front, the use of front brake or rear brake alone is very dangerous, this braking method is easy to cause the vehicle to slip and lose control.

Shift pedal bar

Shift sequence

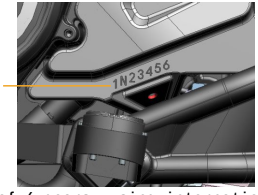

The engine has a total of 6 gears, using international gear, and stepping on the first gear to pick the second gear.
The relationship between the gears is shown in the figure above: press or pick the gear lever to change the appropriate gear.

CAUTION

● When the gear is in neutral and the neutral indicator is also lit, to confirm whether it is really in the neutral position, slowly release the clutch.

Selection of lubricating oil

Lubricating oil is an important factor affecting engine performance and life, must be selected according to regulations, can not use inferior engine oil, gear oil, vegetable oil, etc. instead.

Engine lubricating oil should be selected above SG grade products classified by API, and its grade is 10W/40 (common Warm) or 0W/30 (winter). If you want to switch to other lubricating oils, the quality grade must reach SG grade or above, and the viscosity should be selected according to different regions and temperature changes. When replacing the lubricating oil, please drain the old lubricating oil in the crankcase, and then fill the new lubricating oil according to the regulations.

NOTE:

●Do not throw away the discarded lubricating oil directly, and should be treated uniformly after recycling. Avoid polluting the environment.

Tire pressure and load

● Correct tire pressure and correct tire load are important factors. Overloading can cause tire failure and throw the motorcycle out of control. Check the tire pressure before each use of the motorcycle to determine the tire pressure. Tire pressure should be checked and adjusted before driving, and the tire will heat up and the tire pressure will increase after driving.

●Excessive tire pressure will cause difficulty in cornering, resulting in accelerated tire wear. The tire pressure is too high, the contact area between the tire and the ground is reduced, it is easy to slip and lose control. Recommended tire pressure at room temperature: 250kPa.

⚠ WARNING

Failure to pay attention to the following may cause accidents due to tire failure. Tires are very important to connect the motorcycle to the ground.

Follow these rules:
● Check the condition of the tires and the pressure of the tires, adjust the tire pressure before each use of the motorcycle, and avoid overloading the motorcycle.
● Replace tires when they wear to the limit or when there are cracks and wounds on the surface of the tires. Always use tires of the specifications and dimensions specified in this instruction manual.
● Read this section of this instruction manual carefully. If the tire is not well run-in, it will cause the tire to slip and lose control
System. When the vehicle uses new tires, driving must be extremely careful.

⚠ WARNING

● Check the tire pressure regularly, and the tire pressure is kept within the recommended range. When you feel that the tire pressure drops, check whether there are nails, small holes, damage to the rim side, and whether the valve core is leaking.

Storage of tires

When the motorcycle is not in use for a period of time, the tire pressure needs to be adjusted to the specified air pressure. Tires are semi-hot melt formula rubber products, not suitable in cold outdoor weather, otherwise it will cause the product to freeze crack, please store in a temperature balanced place or indoors.

Tire condition and specifications

Incorrect tyre condition and incorrect tyre specifications can affect the performance of a motorcycle. A broken scratch on the tire can cause the tire to malfunction and cause the vehicle to lose control . Excessive wear of tires can cause tire punctures and cause the vehicle to lose control. Tire wear also affects the shape of the tire and changes the operating performance of the tire. Check the condition and air pressure of the tyre before each use. If there are many visible injuries on the tire, such as breakage, scratches, or if the tyre wears out to the limit, the tire must be replaced.

NOTE:

When changing tires, determine that the size and model of the replacement tire should conform to the contents of the list below. If you change the tires of different sizes or different models, it will affect the handling performance of the motorcycle and may cause the motorcycle to lose control.

Problems may occur with tires other than the standard, and we sincerely recommend that you choose standard tires..

Front wheel	Rear wheels
130/90- 16	150/80- 16

Run-in of the engine

Although the engine parts are selected from the best materials and manufactured according to advanced standards, it is necessary for the new car to run in all moving parts before the engine runs at full load, and the performance and reliability of the engine in the future depends on the strict and meticulous running-in and maintenance at the beginning of use. Generally, after the engine is started, it runs at a low speed and fully warms up, and then starts. Drive at a low speed for 1~2 km before turning into normal driving. The general rules are as follows:

Mileage (km)	Throttle opening (%)	Rotate speed (r/min)
Grind in 1000km	≤30%	≤4500r/min
More than 1000km		≤9000r/min

NOTE:

● For new cars, please go to the service outlet of Xiangshuai Heavy Machinery within the designated kilometers for maintenance and replace the oil and oil filter element.

First maintenance	Second maintenance	Third maintenance	Repeat maintenance
300km	800km	1500km	4000km

NOTE:

● After running-in, a maintenance should be carried out, all fasteners should be tightened, and the parts should be readjusted to ensure that the motorcycle is in the best condition.
● If any problem occurs during engine running-in, please contact Xiangshuai heavy machinery motorcycle distributor or service outlet immediately.

⚠ WARNING

● When the vehicle is just turned off, since the engine and exhaust pipes will be very hot, please park the vehicle in a place that is not accessible to pedestrians and children to avoid burns.
● Please do not park the car on the slope or soft ground, otherwise the locomotive will roll over, increasing the risk of fuel leakage and fire.
● Do not park locomotives near hay or other flammable materials.

EFI precautions：

●Before installing the battery in the new car, it is necessary to check that the wiring harness plug-in of EFI parts is firm and reliable, including the installation of aerobic sensors, and the gasoline has been filled.
●When installing the battery, use tools to firmly install the positive and negative poles of the cable on the positive and negative poles of the battery, and do not use your hands to twist them at will.
● Please keep the fuel in the tank not less than 3 liters, otherwise it will affect the normal operation of the EFI system, please replenish the fuel as soon as possible when the amount of fuel is 1 compartment or less than 1 compartment.
●When the battery is reinstalled, the whole vehicle has power failure phenomenon, battery hibernation restart, idle abnormality, re-insertion insurance and other similar situations during reinstallation of the battery, please pay attention to the individual hardware reset of EFI, the steps are: open the electric door lock switch and the engine flameout switch, pinch the clutch in neutral gear to start the engine, turn off the engine flameout switch after 10 seconds, turn on the engine flameout switch after 10 seconds: repeat 2 more times.

●If the vehicle is standing still for a long time, it may be difficult to start the first time, so you can turn the throttle to 1/8 degree to start.
●If the machine cannot be sounded after multiple starts, the cylinder may have been flooded, and the cylinder removal procedure is performed: the throttle is fully open, and the start button is pressed for 3 seconds. If the instrument battery voltage flashes, it means that the battery voltage is too low, please charge the battery in time: too low voltage may cause EFI parts to fail to work normally, unable to start or difficult to start, insufficient power, etc.

⚠ WARNING

● New cars or vehicles that run out of fuel, please do not turn on the flameout switch, be sure to open the flameout switch after replenishing fuel, otherwise the fuel pump without oil idling will seriously affect the life of the oil pump. During engine operation , if the yellow fault indicator of the instrument is on, it indicates that the EFI parts are faulty and need to be eliminated.

Example: P0108 tacho signal
The fault lamp flashes 10 times in a row, then 1 time, then 10 times, and then 8 times (10 is 0)

order number	Components / systems	fault code	Fault code information	Monitoring strategy	Auxiliary parameters used for monitoring
1	1 The cylinder oxygen sensor.	P0131	1 The cylinder oxygen sensor signal is shorted to a low voltage.	Monitor the oxygen signal voltage of cylinder 1. When the oxygen voltage is below the limit value and the duration is exceeded, it is judged as a fault.	1. Cylinder oxygen sensor voltage, cylinder head / coolant temperature, and engine running time.
2		P0132	1 cylinder oxygen sensor short circuit to high voltage.	Monitor the oxygen signal voltage of cylinder 1, the oxygen voltage is above the limit and the duration is determined as a fault.	1. Cylinder oxygen sensor voltage, cylinder head / coolant temperature, and engine running time.
3		P0031	1 Cylinder oxygen sensor heating circuit short circuit to low voltage.	1 The potential on the heating output circuit is different from the ECM command.	Engine running time.
4		P0032	1 Cylinder oxygen sensor heating circuit short circuit to high voltage.	1 The potential on the heating output circuit is different from the ECM command.	Engine running time.
5	The 2-cylinder oxygen sensor.	P0137	2 cylinder oxygen sensor short circuit to low voltage.	Monitor the oxygen signal voltage of the 2 cylinders. When the rear oxygen voltage is below the limit and the duration exceeds the limit, the fault is determined as fault.	2. Cylinder oxygen sensor voltage, cylinder head / coolant temperature, and engine running time.
6		P0138	2 cylinder oxygen sensor short circuit to high voltage.	Monitor the oxygen signal voltage of cylinder 2, and when the rear oxygen voltage is above the limit and the duration exceeds the limit, it is judged as a fault.	2. Cylinder oxygen sensor voltage, cylinder head / coolant temperature, and engine running time.
7		P0037	2 cylinder oxygen sensor heating circuit short circuit to low voltage.	The potential on the heating output circuit of the 2-cylinder oxygen sensor is different from the expected potential of the ECM.	Engine running time.
8		P0038	2 cylinder oxygen sensor heating circuit short circuit to high voltage.	The potential on the heating output circuit of the 2-cylinder oxygen sensor is different from the expected potential of the ECM.	Engine running time.
9	Intake-air pressure sensor.	P0107	Intake pressure sensor line low voltage open circuit.	If the original reading and limit of intake pressure is lower, the fault is determined.	Raw reading of the air inlet pressure sensor.
10		P0108	Intake pressure sensor line high voltage.	Compare the original reading of intake pressure to the limit and determine a fault.	Raw reading of the air inlet pressure sensor.

order number	Components / systems	fault code	Fault code information	Monitoring strategy	Auxiliary parameters used for monitoring
11	Into the temperature pass sense organ.	P0112	Inlet air temperature sensor line low voltage.	Compare the original reading and limit of the incoming temperature. If it is below the limit, it is a fault.	Raw reading of the air inlet temperature sensor.
12		P0113	Intake air temperature sensor line high voltage or open circuit.	Compare the original reading and limit of the incoming temperature. If it is above the limit, it is a fault.	Raw reading of the air inlet temperature sensor.
13	Cylinder head temperature / coolant temperature, degree sensor.	P0117	Coolant temperature sensor line low voltage.	Compare the original reading to the coolant temperature sensor, and determine a fault below the limit.	Original reading of the coolant temperature sensor.
14		P0118	Coolant temperature sensor line with high voltage or open circuit.	Compare the original reading to the coolant temperature sensor, if above the limit.	Original reading of the coolant temperature sensor.
15	Fuel injector.	P0261	1-cylinder injector low voltage fault.	If the state of the cylinder injector output circuit is different from the expected state of the ECM.	
16		P0262	1-cylinder injector high voltage fault.	If the state of the cylinder injector output circuit is different from the expected state of the ECM.	
17		P0264	2-cylinder injector low voltage fault.	If the state of the 2-cylinder injector output circuit is different from the expected state of the ECM.	
18		P0265	2-cylinder injector high voltage fault.	If the state of the 2-cylinder injector output circuit is different from the expected state of the ECM.	
19	Occupy the line of fire Circle output.	P2300	1 The cylinder ignition coil is of low voltage.	If the potential on the cylinder ignition coil output circuit is different from the expected potential of the ECM, or the primary coil current is higher than the calibration setting limit, the coil is a fault.	
20		P2301	1 The cylinder ignition coil is high voltage	If the potential on the output circuit of the cylinder ignition coil is different from the expected potential of the ECM, it is determined that the coil fails	
21		P2303	2-cylinder ignition coil with low voltage.	If the potential on the output circuit of the 2-cylinder ignition coil is different from the desired potential of the ECM, or the primary coil current is above the calibration set limit, the coil fails.	
22		P2304	2-cylinder ignition coil high voltage.	If the potential on the output circuit of the 2-cylinder ignition coil is different from the expected potential of the ECM, it is determined that the coil fails.	

order number	Components / systems	fault code	Fault code information	Monitoring strategy	Auxiliary parameters used for monitoring
23	Crankshaft position sensor.	P0335	The crankshaft position sensor line has no signal.	No engine speed signal.	
24		P0336	Crankshaft position sensor line signal interference.	If the number of teeth and the 23X is read too much, it is judged as a fault.	
25	Throttle position, set the sensor.	P0122	Throttle position sensor is low voltage.	Compare the original reading and limit of throttle position sensor. If it is below the limit, it is a fault.	Original reading of the throttle position sensor.
26		P0123	Throttle position sensor high voltage.	Compare original reading and limit of throttle position sensor. If higher, fault is fault.	Original reading of the throttle position sensor.
27	Vehicle speed sensor.	P0500	Speed sensor failure.	The ECM receives a speed sensor input with an invalid speed signal.	The speed sensor input an invalid speed signal identification bit.
28	Idle speed control system.	P0505	Idle speed is abnormal.	At idle speed, the actual engine speed is above or below the set speed, and the duration exceeds the limit, then it is judged as a fault.	Engine speed, engine running time.
29	System voltage.	P0562	Low system voltage.	Comparing the system voltage with the limit value, if it is below the limit value, it is considered as a fault.	Occupation voltage.
30		P0563	High system voltage.	Comparing the system voltage to the limit, if above the limit, determine a fault.	Firing voltage
31	Oil pump after electrical equipment.	P0231	Oil pump relay open circuit / low voltage fault.	If the state of the oil pump relay output circuit during open circuit or engine operation is different from the expected state of the ECM.	
37		P0232	Oil pump relay high voltage fault.	If the condition of the oil pump relay output circuit is different from the ECM.	

order number	Components / systems	fault code	Fault code information	Monitoring strategy	Auxiliary parameters used for monitoring
38	Carbon tank electricity magnetic clamp.	P0458	Low voltage fault of carbon tank cleaning control solenoid valve.	If the state of the digging circuit of the carbon tank cleaning control solenoid valve is different from the expected state of the ECM, it is determined as a fault.	Carbon tank cleaning control solenoid valve cycle.
39		P0459	High voltage failure of carbon tank cleaning control solenoid valve.	If the state of the control circuit of the carbon tank cleaning control solenoid is different from the expected state of the ECM, it is judged as a fault.	Carbon tank cleaning control solenoid valve cycle.
40	ECM hitch.	P0601	ECM check code error.	ECM, self diagnosis.	
41	MIL.	P0650	ECM, self diagnosis	The MIL circuit status is different from the ECM output state.	The ECM output level signal.
42	Empty gear clutch, switch input.	P0850	Notral / clutch input fault.	The engine in the running state ECM monitors whether there is a shift switching action, which exceeds the limit times, it is judged as a fault.	Neutral / clutch switch signal.
43	Engine turn Fast output.	P1693	Engine speed output is low voltage.	If the state of the rotational speed output circuit is different from the desired state of the ECM, a fault is determined.	Engine speed signal.
44		P1694	Engine speed output is high voltage	If the state of the rotational speed output circuit is different from the desired state of the ECM, a fault is determined.	Engine speed signal.
45	BLM adaptability.	P0171	The system is too thin.	The system BLM learning value is greater than the limit, and the duration exceeds the limit is judged as a fault.	ELM learning values.
46		P0172	The system is too strong.	The system BLM learning value is less than the limit, and the duration exceeds the limit is judged as a fault.	BLM learning values.
47	PE pattern.	P0174	The PE mode system is too sparse.	If the FE mode is less than the limit and the duration exceeds the limit.	Oxygen signal voltage.

⚠ WARNING

●During engine operation, the fault light is not on, and the fault light flashes after turning off, which is a historical fault and has no impact on the whole vehicle, and will disappear by itself in the future.

Regular maintenance

Regular inspection, adjustment and lubrication can keep your locomotive in the safest and most efficient operating condition. The intervals of the periodic maintenance table should only be used as a general reference and may be shortened depending on the climate, geographical location, topography and purpose of use.

⚠ WARNING

●If the vehicle is not properly maintained, or the vehicle is maintained in an incorrect way, the risk of injury or injury may be increased during maintenance or use. If you do not know how to maintain and maintain, please entrust Xiangshuai heavy machine motorcycle dealers or service outlets.

⚠ WARNING

●Unless otherwise specified, please turn off the engine during locomotive maintenance. Engines that are not stalled may come into contact with the body or clothing and cause injury, and sections of the circuit may cause electric shock or fire. Performing service or maintenance work while the engine is running can cause eye injury, cause fire, or cause carbon monoxide poisoning.


⚠ WARNING

●After the motorcycle is ridden, the engine, exhaust pipe, disc brake disc, disc brake calipers, and brake pads may become hot, and in order to avoid scalding, each part can be touched after cooling.


Change the engine oil (or together with the oil filter)

1. Screw the screws into the screw fixing holes of the rear flat fork landing gear, and then use the landing gear to lift the car so that the rear wheels leave the ground and ensure that the car is stable.
2. Start the engine, warm up for 2-3 minutes and turn off.

3. Place a container under the engine to collect used oil.
4. Remove the oil cap, oil drain bolt and washer of the engine to drain the oil.

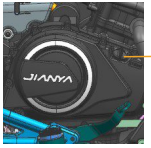


Oil filler

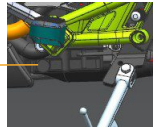

Engine drain bolt tightening torque 25N.m

5. Use a special tool to disassemble the oil filter element

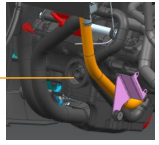

Oil filter element

NOTE:

● If the oil filter does not need to be replaced, skip steps 5-7.

6. Please use JY253MM engine oil filter element.





7. Install a new oil filter and fasten it in place.

8. Screw the oil drain bolt, fill the recommended new oil, add to the upper engraving plate (upper limit mark), install the oil hole screw cover, check whether there is oil leakage, and be sure to wipe off the oil splashed on the parts.

Oil filling amount:

2.2L after reloading the engine, 2.0L after changing the oil, and 2.1L after changing the oil and filter element.
Must use oil grade: oil grade 10W-40 SG or above gasoline engine oil.


9. Start the vehicle, idle for a few minutes, and check for oil leakage. If so, turn off the vehicle immediately to check the cause.


NOTE:

● The engine runs when the oil is low, which will cause damage to the components. Too much oil can affect the speed of the vehicle and even damage engine parts.

Coolant

1. Water tank
2. Water tank cover
3. Cooling fan

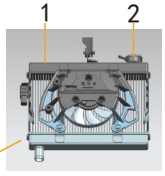

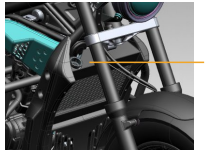

The coolant is composed of coolant and distilled water, which has antifreeze function. The temperature of the engine is reduced by circulating heat dissipation through coolant. When the new car leaves the factory, the coolant has been added, and pay attention to the height of the coolant during maintenance.

If it is below the lower limit, it should be added at the right time: open the lid of the kettle, fill the kettle with coolant, and add it to the upper limit or so. When the coolant in the radiator becomes cloudy or reaches the maintenance interval, replace the coolant in time.

If the coolant, water tank or kettle has been replaced, add it as follows: place the motorcycle on flat ground, hold up the single brace, unscrew the water tank cover, add coolant to the orifice, and add until the water is full. Attach the tank cap and screw tightly. Start the cold car idle, run for 2-3 minutes, open the lid of the kettle again, and continue to add coolant until it is fully filled. Add coolant three times in the above order. Then attach the tank cap and tighten it. Open the lid of the kettle and fill the kettle with about 400ml of coolant.

CAUTION

- If there is no coolant replenishment, only distilled water [water without any other impurity elements) can be used for a short time, and tap water, well water, including mineral water, rainwater, river water, mountain spring water, salty water or any other water containing impurity elements can be replenished, so as not to cause damage to the internal parts of the cooling system. If you urgently use distilled water instead, please also go to the service point or dealer of Xiangshuai Heavy Machinery immediately to replace the coolant with a new one.
- When the engine temperature reaches about 110 degrees, the sensor is turned on and the induction light in the instrument is on, which indicates that the engine needs to stop and rest, otherwise the engine will overheat and damage.

CAUTION

- Please use 3500 anti-rust and antifreeze for coolant. The coolant is toxic and corrosive, so it should never be used or contaminated on the surface of the skin or parts. The discarded liquid should be recycled and disposed of by the recycling center to avoid polluting the environment. The engine is not allowed to open the water tank cover at high temperatures to avoid injuring people from hot water spraying. If you need to disassemble the cylinder block for engine maintenance, drain the coolant first to prevent the coolant from entering the crankcase.

Cooling system check

The cooling system is checked for water leakage every 400km: whether there is leakage at the connection of the water pump and the circulating pipe, whether the circulating pipe is damaged and aging, and hold the hose with your hand to see if there are cracks in order to replace it in time. If there is any leakage, please contact the maintenance personnel and do not disassemble it privately. Check the height of the liquid level of the kettle, and require the liquid level to be between the upper and lower limits, and replenish the coolant in time.


Spark plug

Spark plug is one of the important parts of the engine, need to be checked regularly, because the carbon deposits of the spark plug will erode the spark plug, so it needs to be removed regularly for inspection and maintenance, the condition of the spark plug can also show the combustion status of the engine combustion chamber. Inspection steps: remove the spark plug cap, remove the spark plug, check whether the color of the ceramic insulator around the central electrode of the spark plug is light tan (the most ideal color for normal operation of the engine), and the color of the spark plug electrode installed in the engine should be the same. Pay attention to observe that the color of the spark plug is obviously different, it may be that the engine is in poor condition, in such cases, please go to the Guangjian Ya motorcycle dealer service point for inspection. If the spark plug is not damaged, whether the electrodes are ablated, if there is damage, the spark plug should be replaced.

NOTE:

● Before installing the spark plug, apply the feeler gauge to measure the spark plug gap. If necessary, adjust the clearance to the specified value:
●Spark plug model: CPR8EA-9 (NGK)
●Spark plug gap: 0.8-0. 9mm clean spark plug gasket surface and contact surface. And clean the spark plug thread from dirt.
●Spark plug thread torque: 25 Nm When installing the spark plug, in order to prevent the thread from buckling and damaging the spark plug installation thread of the cylinder head, you must first screw the spark plug into place by hand, and then tighten it with a spark plug wrench. When removing the spark plug, do not allow impurities to enter the engine through the spark plug hole.

Oil and oil grid

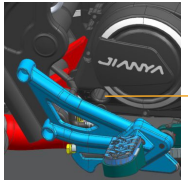

Oil sight glasses

1. The upper limit mark of the oil level.
2. Engine oil level observation window.
3. Lower limit mark of oil level

● Before each ride, the engine oil should be checked. The rear of the right crankcase cover is equipped with an oil level observation hole to observe the oil level. In addition, the oil and oil filter should be replaced regularly according to the maintenance schedule.


Check the engine oil level

1. Place the motorcycle on the ground: the vehicle is perpendicular to the ground; Vehicle tilting can misjudge the amount of oil.
2. Start the engine, warm up for 2-3 minutes and turn off the engine.

NOTE:

●Check the amount of oil after the engine oil is cooled to avoid misjudgment caused by too high oil temperature.
●Let the engine sit for 5 minutes to allow the oil to settle. Then check the oil level through the oil level observation hole on the right cover of the engine.
●The oil level should be between the upper and lower markers of the peephole.
●If the oil level is below the lower limit scale, add the recommended oil and add it to the upper limit mark.


Adjustment of the clutch

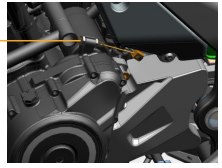

Hold the clutch operating handle tightly, operate the clutch handle, and the free stroke at the end is 10~20mm before obvious resistance.

Brake system inspection

1. Front brake lever

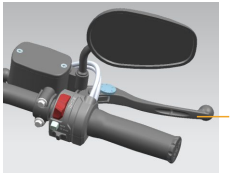

● Check the level of brake fluid, the liquid level should be between two scales, too much, too little will affect the braking force, it is appropriate to be suitable.

Brake system inspection

●The brake system will wear out after a certain period of time, and when the wear reaches a certain extent, please hand it over to the service point of Xiangshuai Heavy Machinery for replacement. The limit thickness of the brake disc is 3mm. The items that the brake system inspects before driving every day are as follows:
●Check the liquid level in the brake fluid cup; Check the brake system for leakage.
●Check the brake fluid hose and brake fluid cup for leakage or cracks.
●Check the wear of brake discs and brake friction pads.
●The front brake handle stroke is 10-20mm, and the free stroke of the rear brake pedal is 20-30mm.


⚠ WARNING

●Hydraulic disc brakes work under high pressure, in order to ensure safety and reliability, the replacement time of brake fluid hose, brake fluid cup and brake fluid should not exceed the time specified in this guidebook.

Replace the air filter

The air filter should be regularly maintained according to the regular maintenance and lubrication cycle table, and if driving in particularly wet and dusty areas, it should be checked and replaced.

1. Side cover
2. Air filter cover locking screw
3. Air filter element cover
4. Filter element

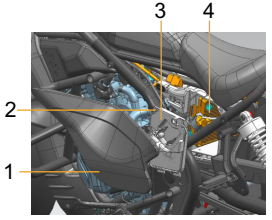


1. Open the side covers.
2. Loosen the screws of the air filter cover.
3. Open the air filter cover and take out the air filter element.

NOTE:

● Do not run the engine before installing the filter element, inhale air containing dust, so as to avoid excessive wear of the piston and cylinder.

Throttle cable adjustment

1. Throttle line
2. Lock nut A
3. Adjust nut B
4. Protective case

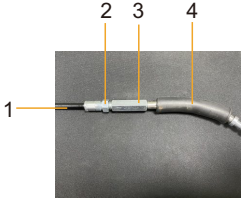

1. Check whether the throttle handle sleeve rotates flexibly from the full open position to the full off position:
2. Check whether the throttle cable between the throttle handle and the throttle body is good. If the cable is twisted, stuck or improperly routed, the cable should be replaced.
3. Check whether the free range of the throttle handle sleeve idling is in the gap of 2~6mm.

When adjustments are required:


Pull the protective sleeve aside, loosen the lock nut A, and then turn the upper adjustment nut, if you still need to adjust the loosening nut A and B; Adjust the adjusting screw. After adjusting to 2~6mm free stroke, lock the adjustment nuts A and B. Then put the protective case in place.

WARNING

●When operating the brake lever, if there is a soft or spongy feeling, it means that there is air in the hydraulic brake system , please leave it to Xiangshuai Heavy Machinery motorcycle service point or dealer or service outlet for elimination before riding, if there is air in the brake system, it will reduce the braking effect, resulting in an accident of the locomotive losing control.

Adjustment of the rear brakes

1. Rear brake pedal lever
2. Rear brake pedal position adjustment bolt

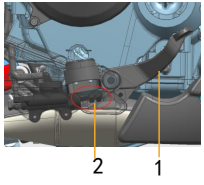


●Hold the motorcycle and ensure that the rear brake pedal travels freely from the free state to the first time the brake starts working. If adjustments, loosen the lock nut, adjust the exposed length of the adjustment bolt, increase or decrease the stroke of the treadmill. Pedal the brake lever a few times, then release the brakes and rotate the rear wheels to check if they can turn freely. When suitable, tighten the nut.

Check the front and rear friction plates

Check whether the friction plates are worn to the limit position


Please follow the provisions of the regular maintenance and lubrication table, regularly check the front and rear friction pads, the wear limit thickness of each brake disc can not be less than 3MM, if it has exceeded the limit and almost touches the disc disc, please go to Xiangshuai heavy machinery motorcycle dealer or service point to replace the friction plate.

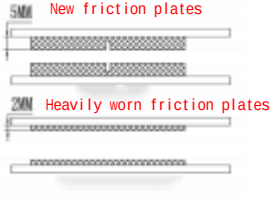

Check the amount of brake fluid


Front brake

1. Minimum limit mark.
2. Front brake oil cup cap.

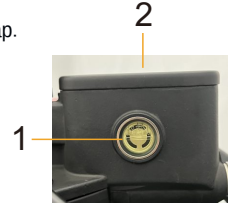

Rear braking

1. Rear brake cup cap.
2. Maximum limit mark.
3. Minimum limit mark.

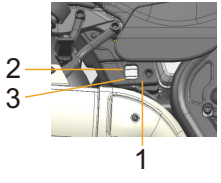


WARNING

●The brake fluid in the hydraulic disc brake should not be mixed with moisture and other impurities, otherwise it will seriously damage the brake system and cause brake failure. Brake fluid is highly corrosive, do not allow it to splash on paint surfaces or plastic parts. Only DOT4 brake fluid can be used.

Adjustment and replacement of the drive chain


Lift the vehicle with the landing gear so that the rear wheels are off the ground to ensure a stable ride.

1. Adjusting bolt (M5 hex wrench)
2. Lock nut
3. Scale block

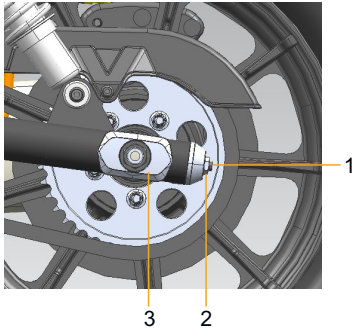

1. Shift the gear to neutral and the engine stops working (turn off the ignition).
2. Loosen the rear axle nut, loosen the regulator lock nut, and adjust the adjusting nut by the same amount.
3. The chain is adjusted to a suitable tightness, and the adjusters on the left and right sides should be in the same position.
4. Tighten the rear axle nut and tighten the lock nut.

Replacement of the drive chain

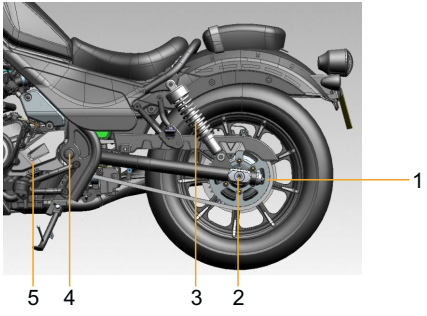

1. Loosen the nut of the chain regulator and remove the left and right chain regulators.
2. Remove the rear wheel axle and remove the rear wheel.
3. Left and right shock absorbers after removal.
4. Remove the flat fork shaft and remove the rear flat fork.
5. Remove the chain cover.

NOTE:

● After installation, it is necessary to ensure that the regulator is balanced left and right, and the fixing nut is locked.

Inspection and lubrication of each control cable

Before each ride, check the condition of the throttle grip, throttle cable, clutch cable, if necessary, lubricate these cables and both ends of the cable, if the cable is damaged or cannot pull smoothly, please go to Xiangshuai Heavy Machinery motorcycle dealers or service outlets to check or replace.


NOTE:

●If the jacket of the cable is damaged, the cable will rust, causing the cable to not pull smoothly, please replace the damaged cable in time to avoid unnecessary situations.

Lubricate the front brake handle, clutch handle


Front brake handle

Lubricating position




Clutch handle

Lubricating position



Inspection of the drive chain

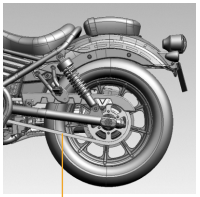

Drive chain

Please check the length of the drive chain, as well as the contact surfaces of the big and small gears, before each ride. Please check the condition of the chain and gear regularly in accordance with the provisions of the maintenance manual.

NOTE:


●If the large and small gears of the drive chain have reached the wear limit, please contact Xiangshuai Heavy Machinery motorcycle dealers or service outlets for inspection and replacement.

● Shift the gear to neutral and the engine stops working (turn off the ignition).

● Use your finger to move up and down in the middle between the front and rear chains to see if the tightness of the chain is normal. Check the wear of the drive chain, if the chain teeth are defective, worn too much, and the chain is too long, it should be replaced. Check the wear of large and small sprockets. If the sprocket teeth are seriously worn, there are missing teeth, and broken teeth should be replaced.

Inspection and lubrication of single braces

Lubrication of side brackets

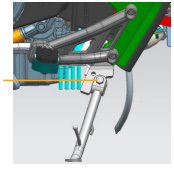

WARNING

●If the single brace cannot rise and fall smoothly, please go to the Xiangshuai Heavy Machinery dealer or service outlet for maintenance, otherwise the single brace may touch the ground while driving, causing the driver to lose control due to distraction.

Shock absorption before inspection

●Check the condition of the fork regularly in accordance with the provisions of the maintenance manual.
●Please check whether there are scratches, wear and oil leakage on the surface of the shock absorbing cylinder core.

1. Park your car on flat ground and keep your vehicle upright.
2. Grasp the front brake and press down firmly on the handlebar several times. Check that the front shock absorbers have smooth compression and rebound.

NOTE:

●If any damage is found or the front shock absorption cannot be operated smoothly, please contact the dealer or service point of Xiangshuai Heavy Machinery for inspection or replacement.

Direction column check

Please check the steering column regularly according to the maintenance regulations in this manual, as worn or loose directional column bearings may cause dangerous conditions.


1. Insert the screw into the rear flat fork shaft hole, and then use the landing gear to lift the car so that the rear wheels leave the ground to ensure that the car is stable.
2. Grasp the lower part of the front shock absorber and try to shake it forward and back. If you can feel a gap, please contact the Guangjian Ya motorcycle dealer or service point for inspection and maintenance.

Check the front and rear wheel bearings

Regularly check the vehicle bearings for wear in accordance with the maintenance manual. If there is cross-clearance between the left and right sides of the wheel or the wheel cannot rotate smoothly, please contact Xiangshuai Heavy Machinery motorcycle dealer or service outlet for inspection and maintenance.


Check the battery

1. Negative power cord "black"
2. Positive power cord "red"

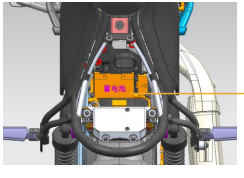

The battery is installed under the driver's seat. The machine car is equipped with a lead-acid battery, there is no need to check the electrolyte or replenish the distilled water. However, it is necessary to check the wire connection of the battery, and if necessary, check whether the battery screw is locked.

Troubleshooting table
Starting problems or engine performance

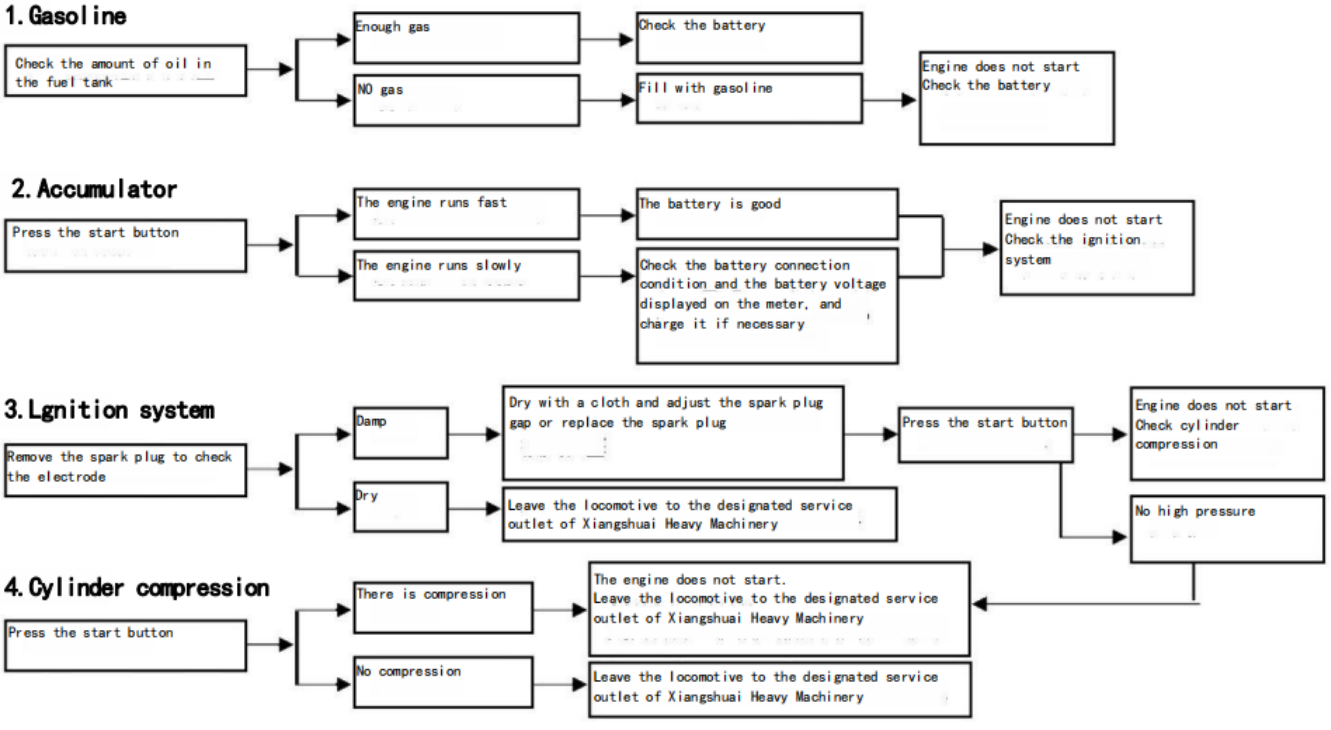

⚠ WARNING

●Battery electrolyte contains sulfuric acid, which is toxic and dangerous, causing severe burns, so avoid contact with skin, eyes, or clothing. When working near batteries, bring goggles. If you accidentally come into contact, please take the following first aid measures:
●Accidental drinking: Drink a lot of water or milk in the body and send it to the hospital immediately.
●Accidental entry into eyes: Rinse immediately with water for 15 minutes and immediately send to the hospital.
●The battery will produce explosive gases, please keep away from sparks, flames, cigarettes and other fire sources, and maintain sufficient ventilation when charging in a closed space. The battery will produce explosive gases, please keep away from sparks, flames, cigarettes and other ignition sources, and maintain sufficient ventilation when charging in an enclosed space.
●Keep the battery out of the reach of children.

Check the charging of the battery

If you feel that the battery is insufficient, check the voltage across the battery, such as 12.3V or less, please charge it immediately, if the vehicle has other optional electrical accessories, so that the battery discharge faster.

Storage of batteries

1. If the locomotive is not used for more than 1 month, please remove the battery and store it in a cool and dry place.

NOTE:

● When removing the battery, remember to turn off the power of the vehicle first, and the order of removing the power cord is: first remove the negative wire, and then remove the positive wire.

NOTE:

2. If the battery is to be stored for more than two months, check it at least once a month, and fully charge the battery if necessary.

●When installing the battery, connect the negative wire first, and then connect the positive wire.

3. After installation, confirm that the battery wires are connected correctly.

NOTE:

●When installing and removing the battery, connect the negative wire first, and then connect the positive wire.

Replacement of fuses

The cable fuse box, which contains fuses for other circuits, is located under the seat cushion of the vehicle, and if the fuse burns, replace the fuse as follows.

1. Turn off the power of the vehicle and open the seat cushion.
2. Remove the burnt fuse and install a new fuse with the specified amperage value.


⚠ WARNING

●Do not replace the fuse larger than the specified number value to avoid damage to the electrical system and cause fire.

The engine overheats

⚠ WARNING

● When the engine water tank is hot, do not remove the cover of the water tank. Hot coolant and steam can spray out under pressure, causing serious scalding accidents. Be sure to wait until the engine has cooled down before proceeding.
●Cover the lid of the tank with a thick cloth such as a towel, slowly screw the cover to the edge of the card slot in a counterclockwise direction to release the remaining pressure in the tank, press the lid down when it is finished, and then rotate it counterclockwise to remove.

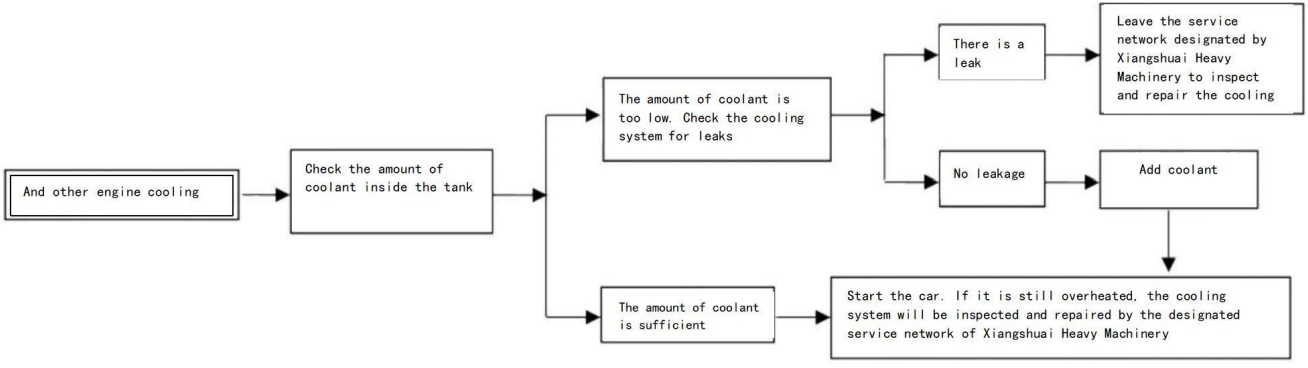

Maintenance cycle table

Order number	Maintenance project	Kilometer number of the maintenance cycle							Remarks
		1000KM	7000KM	14000KM	21000KM	28000KM	35000KM	42000KM	
1	Fuel system	check up	check up	check up	check up	check up	check up	check up	Adjust if necessary
2	Manipulating the Lasso	check up	Check / adjust	Impediment / adjustment	Check / adjust	Check / adjust	Impediment / adjustment	Check / adjust	
* 3	Electric spray system	Check / adjust	Impediment / adjustment	Check / adjust	Impediment / adjustment	Impediment / adjustment	Check / adjust	Impediment / adjustment	Adjujusted by professionals
4	Fuel oil filter	The examination of oneself	The examination of oneself	The examination of oneself	check up	check up	The examination of oneself	check up	Replace the original spare parts if necessary
5	Air filter filter element	adjust	adjust	adjust	adjust	adjust	adjust	adjust	Replace the original spare parts if necessary
6	Spark plug gap	Check / adjust	Check / adjust	Check / adjust	Check / adjust	Check / adjust	Check / adjust	Check / adjust	Adjujusted by professionals
* 7	Valve clearance	The examination of oneself	check up	The examination of oneself	check up	The examination of oneself	check up	Check from	Adjujusted by professionals
8	Engine lubricating oil	renewal	renewal	renewal	renewal	renewal	renewal	renewal	
* 9	Lubricating oil purifier	wash		wash	Clean wash	wash	wash	wash	Replace the original filter if necessary
* 10	Timing chain	The examination of oneself	The examination of oneself	check up	The examination of oneself	The examination of oneself	The examination of oneself	The examination of oneself	Adjust if necessary
* 11	Idling	The examination of oneself	The examination of oneself	check up	The examination of oneself	The examination of oneself	check up	The examination of oneself	Adjust if necessary
12	Chain			Check for every 2000KM					

Note: When driving in areas with abnormally wet or dusty areas, the maintenance interval should be appropriately shortened. Items marked with * can only be adjusted by professionals.

Maintenance cycle table

Order number	Maintenance project	Kilometer number of the maintenance cycle							Remarks
		1000KM	7000KM	14000KM	21000KM	28000KM	35000KM	42000KM	
13	Storage battery	check up	The examination of oneself	check up	check up	check up	check up	check up	Do not use for a long time, should be charged once a month
14	Brake lining	The examination of oneself	The examination of oneself	check up	check up	check up	check up	check up	The thickness of the friction area shall not be less than 2MM
* 15	Brake assembly	Check the interface	check up	check up	check up	check up	The examination of oneself	check up	Fill the brake fluid if necessary
16	The brake light is beautiful	The examination of oneself	Check whether	check up	check up	check up	check up	check up	
17	Lighting system	The examination of oneself	check up	check up	Check yao	The examination of oneself	The examination of oneself	check up	
* 18	Clutch	The examination of oneself	The examination of oneself	The examination of oneself	check up	The examination of oneself	The examination of oneself	The examination of oneself	
* 19	Shock absorber	check up	check up	The examination of oneself	check up	check up	check up	check up	
20	Bolt / nut	adjust	adjust	adjust	adjust	adjust	adjust	adjust	Critical bolt adjustment torque
21	Front and rear tires	check up	check up	check up	check up	check up	check up	check up	
22	Direction-pressure bearing	Impediment / adjustment	Check / adjust	Impediment / adjustment	Check / adjust	Check / adjust	Impediment / adjustment	Impediment / adjustment	Adjust by professionals when necessary
23	Coolant liquid	Impediment / adjustment	Impediment / adjustment	Impediment / adjustment	Check / adjust	Check / adjust	Impediment / adjustment	Check / adjust	

Note: When driving in areas with abnormally wet or dusty areas, the maintenance interval should be appropriately shortened. Items marked with * can only be adjusted by professionals.

Headlamps

This machine is equipped with LED headlights, if the headlights do not light up, please go to Xiangshuai heavy machinery motorcycle dealers or service outlets to check the electrical wiring.

NOTE:

●Do not attach any colored film to the headlamp lens.

Front position light

This machine is equipped with LED front position light, if the front position light is not on, please go to Xiangshuai heavy machine motorcycle dealer or service outlet to check the electrical wiring.

Taillight/brake light replacement

This machine car is equipped with LED integrated brake light tail light, if the brake light tail light is not on, please go to Xiangshuai heavy machinery motorcycle dealer or service outlet to check the electrical wiring.

Replacement of front turn signals

This machine is equipped with LED front turn signals, if the turn signals do not turn on, please go to Xiangshuai heavy machinery motorcycle dealers or service outlets to check the electrical wiring.

Care

Even with the highest quality parts, it is easy to rust and corrode. Regular and correct care not only meets the requirements of maintenance, but also makes your locomotive look beautiful, extend its service life and give full play to its performance.

1. After the engine cools, put a plastic bag on the tail of the exhaust muffler.
2. Make sure all covers, plugs, and all electrical connectors and terminals (including spark plug caps) are properly installed.
3. Remove dirt.

NOTE:

● Do not use strong acidic detergent, if you use such cleaning products, do not let the detergent remain for too long. Also, immediately dry with a soft towel after rinsing with clean water and spray with anti-rust spray.
● Improper cleaning can damage shrouds, panels, windshields, headlamp shades, odometer covers, and other plastic parts. Only use a soft cloth and sponge dampened with water. If there is dirt on the plastic that cannot be removed with water, the neutral detergent can be diluted with water. Please rinse the remaining detergent with clean water to avoid damaging the plastic parts.
● Do not use high-pressure car washers or steam jet cleaners for cleaning, as they can cause water leakage and deterioration of the following parts: sealing parts (wheel bearings, forks, brake and fork bearings), electrical components (meters, connector terminals, switches, lamps), ventilation hoses, ventilation ducts, and cables.

Deposit

Store for a short time

Please store the locomotive in a dry and cool place; Cover with a dust cover if necessary to keep out dust, and make sure the engine and exhaust muffler have cooled before removing the cover.

It needs to be stored for a long time for several months

1. Fill the gasoline tank with gasoline and add gasoline stabilizer (if any) to avoid rust and gasoline deterioration in the tank.
2. In order to avoid rust of cylinders, piston rings, etc., please follow the following requirements. (Remove the spark plug, such as 15ml of engine oil into the spark plug hole inside the point.)
3. Check the tire pressure and adjust it if necessary. Rotate the wheels slightly every month to prevent the tire from deteriorating easily due to fixing a little.
4. Wrap the muffler mouth with a plastic bag to avoid moisture entering.
5. Remove the battery and store it in a cool and dry place, and charge it once a month.

Vehicle parameters

Vehicle dimensions
Full length: 2213mm
Full width: 841mm
Full height: 1200mm
Wheelbase: 1505mm
Minimum ground clearance: 186mm
weight
Curb weight: 193KG
motor
Form: Four-stroke, DOHC
Cooling method: water cooling
Number of cylinders: parallel twin cylinders
Displacement: 248ml
Bore*Stroke:
Bore 53.5mm
Stroke 55.2mm
Compression ratio: 11.5:1
Start mode: electric start
Environmental standards: Standard Country IV
Engine oil
Grade: 10W-40
Grade: API/SG or higher
Coolant capacity
Water tank capacity: 1400ml
Air filter
Air filter element: paper element filter element
gasoline
Recommended gasoline: unleaded gasoline above 92#
Fuel tank capacity: 14L

Spark plug
manufacturer/Model: CPR8EA-9 (NGK)
Spark plug gap: 0.8-0.9mm
Clutch type
Wet, multi-piece, manual transmission
Primary drive ratio: 2.929
Final drive: chain
Gear type: 6 gears / international gear
Frame
Frame form: steel tube braided frame
Front angle: 29°
Front tires
Tire type: high-speed tubeless
Tire model/specification: 130/90-16
Rear tires
Tire type: high-speed tubeless
Tire model/specification: 150/80-16
Maximum load capacity
Load limit: 323KG
*(Total quantity limit for riders, passengers, cargo and accessories)
Tire pressure
Front wheels: 250Kpa
Rear: 250Kpa
Front hub
Hub form: aluminum alloy casting
Wheel specifications: 3.0*16

Rear hub
Hub form: aluminum alloy casting
Wheel specifications: 3.5*16
Front brake
Type: Single caliper hydraulic disc type
Operation mode: right handle
Specified brake fluid: DOT4
Rear braking
Type: Single caliper hydraulic disc type
Mode of operation: right foot brake pedal
Specified brake fluid: DOT4
Front suspension
Type: Front minus upright
Shock absorber type: hydraulic shock absorber
Rear suspension
Type: Upright
Shock absorber type: spring/ oil pressure
Electrical installations
Ignition system: Ignition ignition system
Charging system: AC engine accumulator
Model: 10HR6MF27S
Voltage and capacity: 12V8Ah
Lamp voltage, watts and quantity:
Headlamps: LED, DC12V
High beam 30W Low beam 16W

Tail light/brake light: LED, DC12V
1.65W/2.5W
Front turn signals: LED, DC12V1W
Rear turn signals: LED, DC12V 1W
Position light: LED, DC12V 0.5W license plate light: LED, DC12V 1W
Dashboard light: LED
High beam indicator: LED, DC12V Engine failure warning light: LCD
ABS warning light: LCD
Fuse:
Total fuse: 25A
Lighting fuse: 7.5A
EFI fuse: 25A
ABS fuse: 15A

香帥重機

香帥重機　成就非凡人生

广东建雅摩托车科技有限公司
GUANGDONG JIANYA MOTORCYCLE TECHNOLOGY CO., LTD
地址：广东省江门市蓬江区杜阮镇井绵一路1号
邮编：529000　咨询服务电话：0750-3668616

Maintenance Schedule

XS250 | Maintenance and Adjustment

No.	Maintenance Item	1000 km	4000 km	7000 km	10000 km	13000 km	16000 km	19000 km	Remarks
1	Fuel system	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Adjust when necessary
2	Control cables	Inspect	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	
*3	Fuel injection system	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Adjusted by professional personnel
4	Fuel filter	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Replace with original parts when necessary
5	Air filter element	Adjust	Adjust	Adjust	Adjust	Adjust	Adjust	Adjust	Replace with original parts when necessary
6	Spark plug gap	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Adjusted by professional personnel
*7	Valve clearance	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Adjusted by professional personnel
8	Engine oil	Replace	Replace	Replace	Replace	Replace	Replace	Replace	
*9	Oil filter	Replace	Replace	Replace	Replace	Replace	Replace	Replace	
*10	Timing chain	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Adjust when necessary
*11	Idle speed	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Adjust when necessary
12	Drive belt	Inspect every 2000 km							
13	Battery	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	If not used for a long time, charge once a month
14	Brake pads	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Friction area thickness must not be less than 2 mm
*15	Brake system	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Top up brake fluid when necessary
16	Brake light switch	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	
17	Lighting system	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	
*18	Clutch	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	
*19	Shock absorbers	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	
20	Bolts / Nuts	Adjust	Adjust	Adjust	Adjust	Adjust	Adjust	Adjust	Key bolts: check tightening torque
21	Front and rear tires	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	
22	Steering bearings	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Adjusted by professional personnel when necessary
23	Coolant	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	

Note: When riding in areas with abnormal humidity or high dust levels, the maintenance intervals should be appropriately shortened.
*Items marked with * can only be adjusted by professional personnel.*

Legend: Inspect = Check condition | Inspect/Adjust = Check and adjust as needed | Replace = Replace with new part | Adjust = Adjust to specification

XS250 Series OBD Fault Code List

Diagnostic Trouble Codes (DTC)

No.	Fault Code	Description of DTC
1	P0118	Engine Coolant Temperature Sensor Circuit High / Open Circuit
2	P0117	Engine Coolant Temperature Sensor Circuit Low
3	P0116	Engine Coolant Temperature Sensor signal performance
4	P1116	Engine Coolant Temperature Sensor signal out of range
5	P0335	Crankshaft Position Sensor "A" Circuit
6	P2300	Ignition Coil "A" Primary Control Circuit Low / Open Circuit
7	P2303	Ignition Coil "B" Primary Control Circuit Low / Open Circuit
8	P0123	Throttle Position Sensor/Switch "A" Circuit High
9	P0122	Throttle Position Sensor/Switch "A" Circuit Low / Open Circuit
10	P0232	Fuel Pump circuit short High
11	P0231	Fuel Pump circuit short Low / Open Circuit
12	P0601	Internal Control Module Memory Checksum Error
13	P0262	Cylinder 1 Fuel Injector "A" Circuit High
14	P0261	Cylinder 1 Fuel Injector "A" Circuit Low / Open Circuit
15	P0265	Cylinder 2 Fuel Injector "B" Circuit High
16	P0264	Cylinder 2 Fuel Injector "B" Circuit Low/Open Circuit
17	P0108	Manifold Absolute Pressure Sensor Circuit High
18	P0107	Manifold Absolute Pressure Sensor Circuit Low/Open Circuit
19	P3106	Manifold Absolute Pressure Sensor rationality at low TPS
20	P0105	Manifold Absolute Pressure Sensor signal stuck
21	P0113	Intake Air Temperature Sensor Circuit High / Open Circuit
22	P0112	Intake Air Temperature Sensor Circuit Low

XS250 Series OBD Fault Code List

Diagnostic Trouble Codes (DTC)

No.	Fault Code	Description of DTC
23	P0111	Intake Air Temperature Sensor signal stuck
24	P0114	Intake Air Temperature Sensor Circuit Intermittent
25	P0132	O2 Sensor Circuit High Voltage Bank 1 Sensor 1
26	P0131	O2 Sensor Circuit Low Voltage Bank 1 Sensor 1 / Open Circuit
27	P0138	O2 Sensor Circuit High Voltage Bank 2 Sensor 1
28	P0137	O2 Sensor Circuit Low Voltage Bank 2 Sensor 1 / Open Circuit
29	P2195	O2 Sensor Signal Lean at PE Bank 1 Sensor 1
30	P2197	O2 Sensor Signal Lean at PE Bank 2 Sensor 1
31	P014D	O2 Sensor Slow Response - Lean to Rich Bank 1 Sensor 1
32	P014C	O2 Sensor Slow Response - Rich to Lean Bank 1 Sensor 1
33	P014F	O2 Sensor Slow Response - Lean to Rich Bank 2 Sensor 1
34	P014E	O2 Sensor Slow Response - Rich to Lean Bank 2 Sensor 1
35	P0031	O2 Sensor Heater Control Circuit Low Bank 1 Sensor 1 / Open Circuit
36	P0032	O2 Sensor Heater Control Circuit High Bank 1 Sensor 1
37	P0037	O2 Sensor Heater Control Circuit Low Bank 2 Sensor 1 / Open Circuit
38	P0038	O2 Sensor Heater Control Circuit High Bank 2 Sensor 1
39	P00D1	O2 Sensor Heater current low Bank 1 Sensor 1
40	P00D3	O2 Sensor Heater current low Bank 2 Sensor 1
41	P0300	Random/Multiple Cylinder Misfire Detected
42	P0301	Cylinder 1 Misfire Detected
43	P0302	Cylinder 2 Misfire Detected
44	P0505	Idle air control system error

XS250 Series OBD Fault Code List

Diagnostic Trouble Codes (DTC)

No.	Fault Code	Description of DTC
45	P0562	System Voltage Low
46	P0563	System Voltage High
47	P2A01	O2 Sensor Circuit Range/Performance Bank 1 Sensor 2
48	P013B	O2 Sensor Slow Response - Lean to Rich Bank 1 Sensor 2
49	P00D2	HO2S Heater Control Circuit Range/Performance Bank 1 Sensor 2
50	P1037	O2 Sensor Circuit Low Voltage Bank 1 Sensor 2
51	P1038	O2 Sensor Circuit High Voltage Bank 1 Sensor 2
52	P1137	O2S Heater Control Circuit High Bank 1 Sensor 2
53	P1138	O2S Heater Control Circuit Low Bank 1 Sensor 2
54	P0420	Catalyst System Efficiency Below Threshold Bank 1

Notes:

1. Model: XS250 Series

2. Priority column is taken from the source table (1 / 2 / 3).

3. All descriptions are kept as in the original English source.

4. Suitable for service documentation and diagnostic reference.