XIANGSHUAI HEAVY
MOTORCYCLE



USER'S MANUAL

XS800-5D

Thank you for purchasing our product.

This manual provides operation information and maintenance methods of XS800-5D. To make sure driving properly and safely. Please read it carefully before driving. Regular maintenance should be done regularly to avoid problems and efficiency.

Jianya company has the right to change and update the data and design at any time, there is no more notice for any future technical changes.

WECHAT OFFICIAL ACCOUNT

WECHAT OFFICIAL CUSTOMER SERVICE

GUANGDONG JIANYA MOTORCYCLE TECHNOLOGY CO., LTD.

⚠ YOUR SAFETY MAY BE THREATENED.

⚠ WARNING IT MAY CAUSE SERIOUS INJURY OR DEATH NOT FOLLOWING WARNING.

CAUTAON MEASURES MUSH BE TAKEN TO AVOID DAMAGING THE VEHICLE.

NOTE: IMPORTANT INFORMATION.

NOTE:

●Please keep this user manual carefully. It should be transferred to the new owner when the bike is resold.

●The data in this manual maybe different slightly from your bike, if you have any questions about this manual, please contact the local dealer.

●Jianya company reserves the right to make changes at any time. The copyright of this manual belongs to our company and can not be transferred without our approval.

⚠ WARNING

Please read this manual carefully and operate your motorcycle only when you have acquired safe and appropriate driving skills.
Please regularly inspect and maintain your vehicle.

CONTENTS

PREFACE 1
IMPORTANT NOTICE 2-3
CONTENTS 4
SECURITY INTO 5-6
LABEL 7-8
COMPONENTS & PARTS.....9-11
HANDLE & INSTRUMENT 9
RIGHT SIDE 10
LEFT SIDE 11
INSTRUMENT 12-14
LOCK 15
COMPONENT FUNC DESCRIPTION 16-21
L & R SWITCH 16
REAR BRAKE PEDAL 17
FUEL TANK COVER 17
FRONT BRAKE LEVER..... 17
FUEL TANK..... 17
CLUTCH LEVER..... 18
SHIFT PEDAL 18
CATALYTIC CONVERTER..... 18
OXYGEN SENSOR..... 20
CARBON CANISTER..... 20
KICKSTAND 20
REAR SHOCK ABSORBER.....20
OIL PUMP 21
PRE DRIVING INSPECTION..... 22
DRIVING TIPS..... 23-24
SHIFT PEDAL 23
LUBE OIL SELECTION..... 23
TIRE PRESSURE & LOAD..... 23
TIRE STORAGE 24
TIRE SPECIFICATION.....24
ENGINE RUNNING IN 24
EFI SYSTEM INSPECTION.....25
CHANGE ENGINE OIL 26
REGULAR MAINTENANCE 26
OIL & OIL GRID..... 27
SPARKPLUG..... 27
ENGINE OIL LEVEL CHECK 27
COOLANT..... 27
COOLING SYS INSPECTION 28
AIR FILTER REPLACEMENT.....29
THROTTLE CABLE ADJUSTMENT. 29
CLUTCH ADJUSTMENT 30
REAR BRAKE ADJUSTMENT.....31
CHECK FRICTION PLATE..... 31
CHECK BRAKE FLUID..... 31
BELT REPLACEMENT..... 32
REGULAR MAINTENANCE..... 33
CHECK THE CONTROL CABLE.....34
BELT INSPECTION.... 34
SIDE BRACKET INSPECTION..... .35
FRONT ABSORBER INSPECTION.....35
BATTERY INSPECTION 35
BATTERY CHARGING ..... .36
FUSE REPLACEMENT 36
TROUBLE SHOOTING 37
ENGINE OVERHEAT.....38
MAINTENANCE SCHEDULE 39-40
STORAGE 41-42
PARAMETERS..... 43-44

The driver should be under fully trained and have qualified driving skills, the distributor should inform as below:

DRIVER'S NOTICE:

- Proficient in operating motorcycles.
- Pay attention to the warning and maintenance information in the manual.
- Motorcycle drivers must pass the examination of the traffic management department and obtain a driving license before they can drive motorcycles. Driving without a license is strictly prohibited.
- By using the vehicle manual, some basic operational problems can be solved.

Safe driving

- Please fully inspect before driving.
- The motorcycle can carry 1 passenger only.
- Due to smaller size, it's easy to have accident with cars. Please high light your bike, which can reduce the probability of such accidents.

Tips

- Wear brightly color specific clothes and protective gear, and passengers must dress neatly.
- Please pay attention to other vehicles and ensure that other drivers can see you when driving through crossing or accident prone areas.
- Please ensure you're in the sight range of others and avoid blind spots.
- Maintain a safe distance from other motor vehicles, correctly use signal devices such as turn signals and horns, strictly follow the traffic rules.



PROPER ATTIRE




INCORRECT ATTIRE




INCORRECT ATTIRE


IMPORTANT LABEL

PLEASE READ THE FOLLOWING INFORMATION CAREFULLY BEFORE DRIVING.

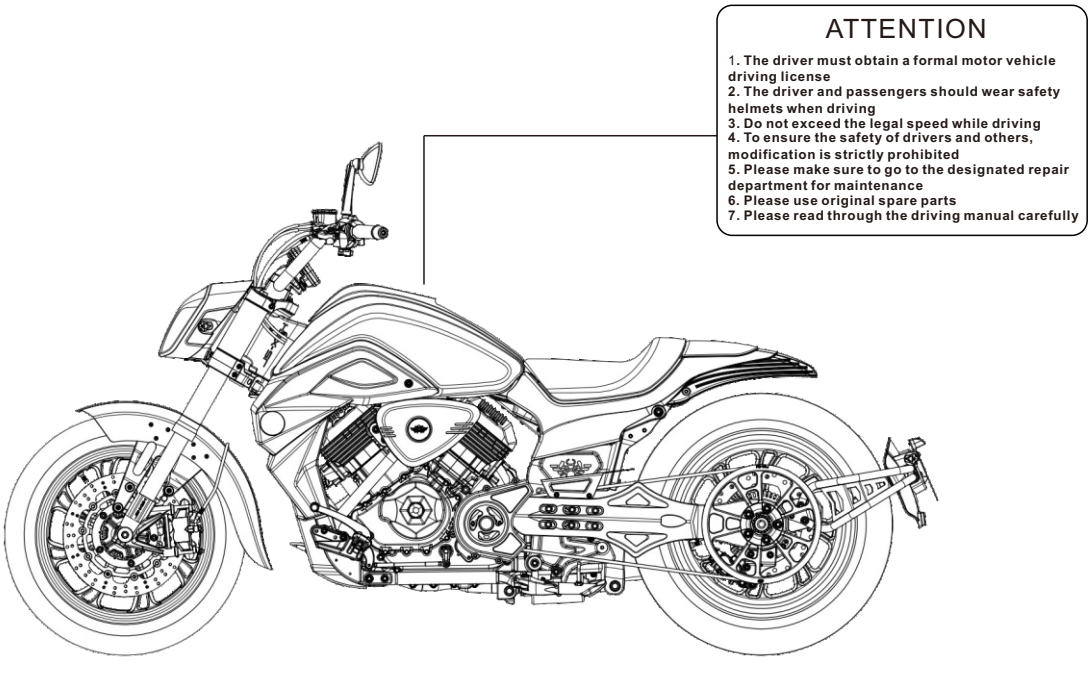


IMPORTANT LABEL

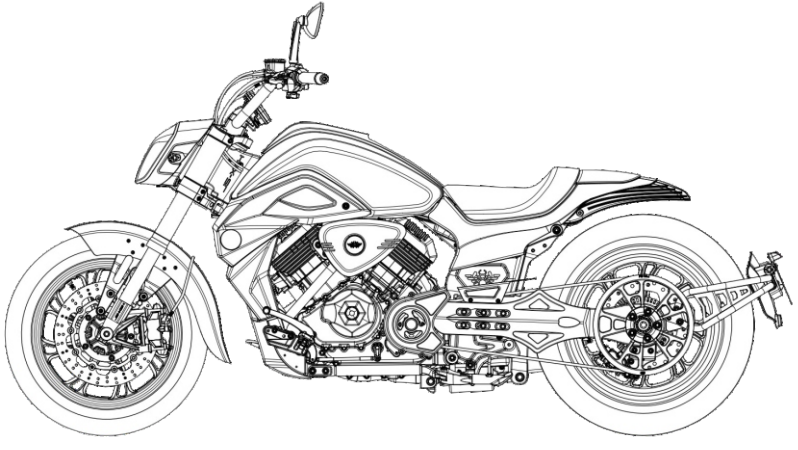


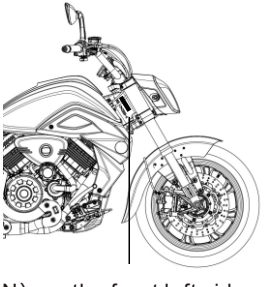

(VIN) on the front left side

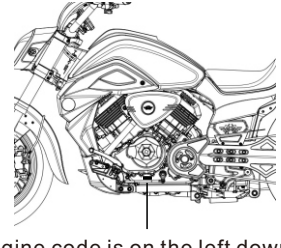


Engine code is on the left down side of crankcase

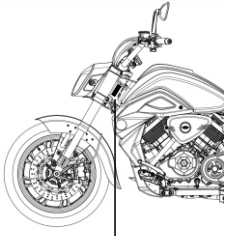


Nameplate is on the front right side

CONTROL SYSTEM

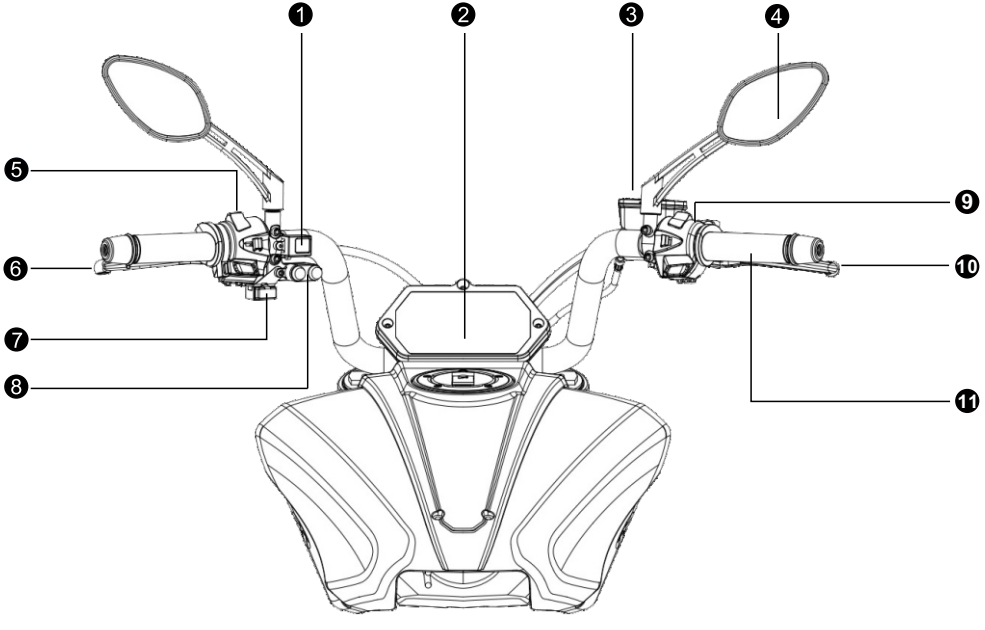


1. air suspension display
2. instrument
3. front brake oil cup
4. rear mirror
5. left switch
6. clutch lever
7. USB charging port
8. air suspension control button
9. right switch
10. front brake lever
11. twist grip throttle

RIGHT SIDE OF VEHICLE

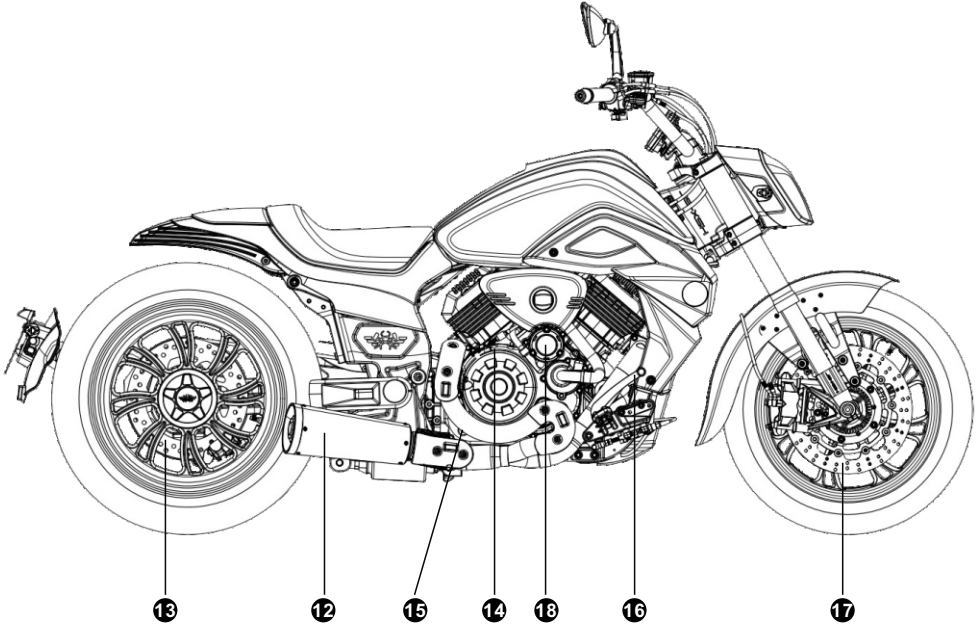

⓬ muffler
⓭ rear disc brake
⓮ oil filler cap
⓯ oil level gauge
⓰ rear brake pedal
⓱ front disc brake
⓲ oil filter

LEFT SIDE OF VEHICLE

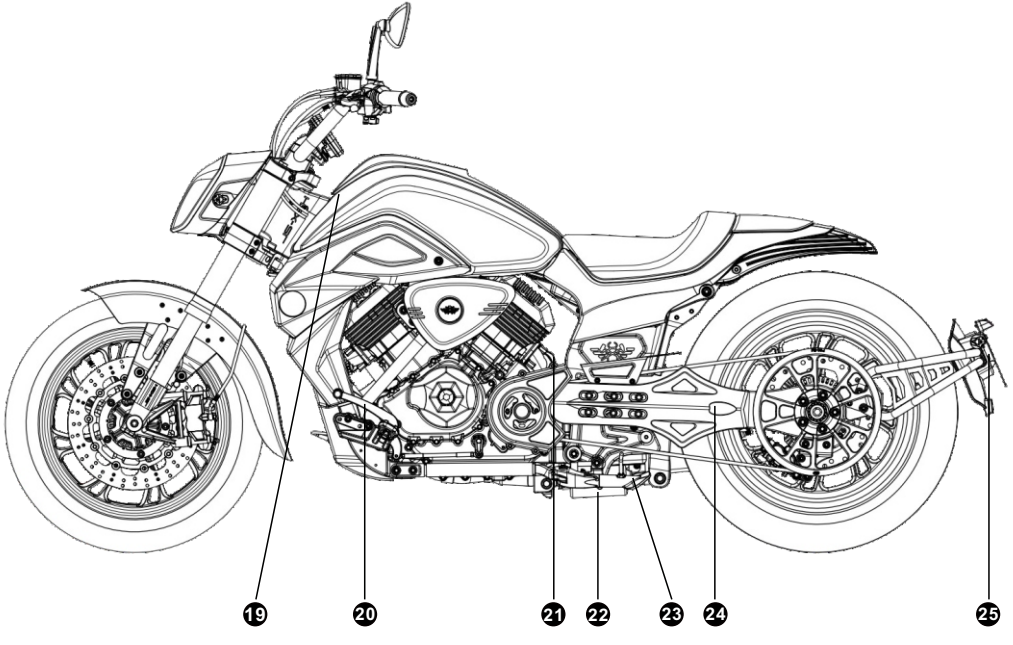

19 air filter
20 foot shift
21 oxygen sensor
22 air suspension
23 kickstand
24 belt adjuster
25 license plate frame

INSTRUMENT



1.Speedometer
2.Bluetooth
3.Engine oil alarm
4.Fuel quantity
5.Coming call display
6.EFI Malfunction indicator
7.Gear display
8. ABS Malfunction indicator
9. High beam on
10. Left turning signal
11. Right turning
12. Clock
13. Voltage display
14. Water temp
15. Mileage display
16. Speed display

⚠ WARNING

Do not use high-pressure water guns to flush the instrument directly. Do not wipe it with a cloth soaked in organic solvents such as gasoline, kerosene, alcohol, brake fluid, etc. It may cause cracks and discoloration.

1. Tachometer（speed display）
2. Bluetooth（blue light is on when it connects）
3. Oil pressure low

- Light is on when oil pressure is too low. When key's on, the light keeps flashing and doesn't off, please contact the local distributor.

NOTE:

Even if the oil level is sufficient, the warning light may flash on a slope or during sudden acceleration or deceleration, which is not a fault.

⚠ WARNING

When the engine oil alarm is on, please change the engine oil. If it is not properly maintained, the engine parts and transmission system will wear down. Please regularly check the engine oil level to ensure its normal operation.

4. Fuel display （When the gas light blinks, please refuel as soon as possible）

CAUTAON

Ensure sufficient fuel supply， it will cause idling and damaged oil pump when fuel is out.

5. CALL REMINDER(Bluetooth is connected, light is on when incoming call)
6. EFI failure indicator(Power on, light is on; the vehicle starts, light is out. If light is on after started, please contact the local distributor)
7. Gear display(Current gear showed)
8. ABS failure indicator(ABS light is on after started)light is out when speed is 10KM,If light is on after started, please contact the local distributor)

⚠ WARNING

ABS WARNING LIGHT:

- Light is out when power on
- Light is flashing when driving

It may have fault on the ABS, please go to a service center for maintenance.


9. High beam on
10. Left turning signal on
11. Right turning signal on
12. Clock display(The clock is displayed in 12/24 hour format)
13. Voltage display(The light flashes when the battery voltage is too low)
14. Water temperature display

CAUTAON

When the water temperature is too high, the warning light will on, please stop the bike and wait till it's cool down.

15. Milage display(ODO total milage display)TRIP Short distance mileage display, 999KM auto clear, long press the SET button to clear the current short distance mileage record.
16. Speedometer(current speed)

POWER LOCK

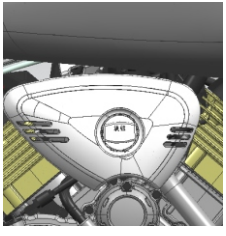

The power lock controls the ignition and lighting system, as below:

POWER ON

All electrical circuits, instrument lighting, taillights, auxiliary lights, position lights, etc. are working fine, please start the engine.

NOTE:

After main power is on, the circuit is connected.


Main power off

All circuit systems will be shut down.

Steering lock

Lock the bike, then pull out the key.

Steering lock indicator

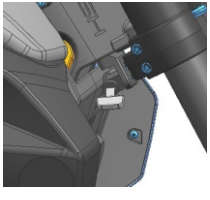


1、Turn the key clockwise to lock.
2、Turn the key counterclockwise to unlock


⚠ WARNING

Never turn off the main power when you're driving, all the electrical system will be shut down, it will cause the vehicle to lose control and accidents.
Please ensure the vehicle complete stops, flame out, turn off the power.

LEFT SWITCH

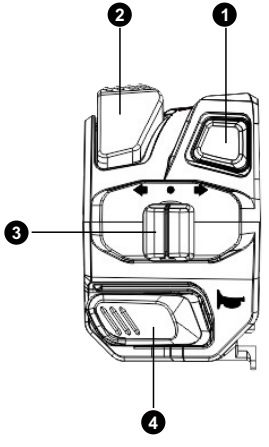


1. hazard lights
2. high & low beam switch
3. turning light
4. horn
5. USB charging port

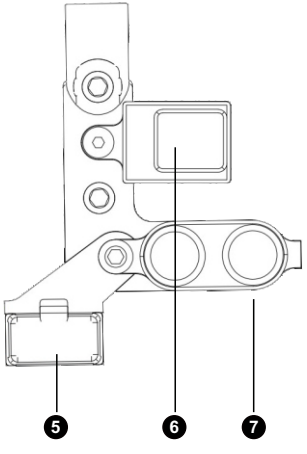

6. air suspension display
7. air suspension control

RIGHT SWITCH

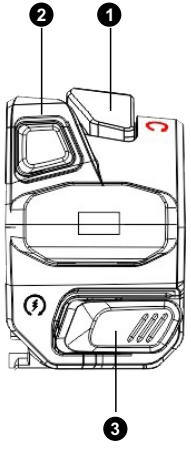

1. flameout switch
2. TCS switch
3. start switch

CAUTAON

If fuel spills, immediately wipe off with a clean, dry soft cloth, otherwise it may corrode the surfaces and plastic parts.

NOTE:

Fuel recommendation: Gasoline with octane number 92 or above

Fuel tank capacity: 18.0L

Using unleaded gasoline can extend the life of the engine and reduce maintenance costs

Catalytic converter

This vehicle is with a catalytic converter exhaust muffler.


WARNING

The exhaust system temperature is high when the engine is running. Make sure it has cooled down when maintaining, otherwise it may burns.

CAUTAON


Please follow the precautions below to prevent fires or other damages.
Use unleaded gasoline only, leaded gasoline can cause irreparable damage to the catalytic converter.
Please do not park the vehicle near any location with fire hazards and do not let the engine idle for too long.

REAR BRAKE PEDAL

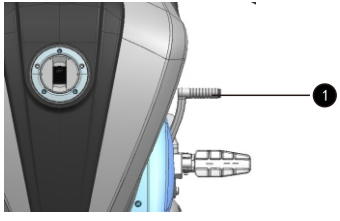


Rear brake pedal is on the rear right side, next to the engine, rear brake could be adjustment.

FRONT BRAKE LEVER

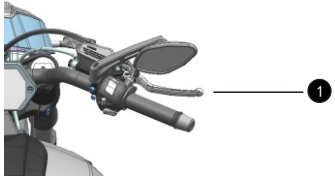


The front brake lever is set up on the right side of handle. 。

FUEL TANK

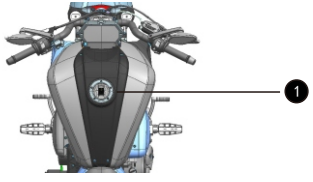

OPEN: Press the fuel tank cap, turn it counterclockwise to slot position, and it will automatically pop out.
CLOSE: Press down the fuel tank cap, turn it clockwise to the initial position.

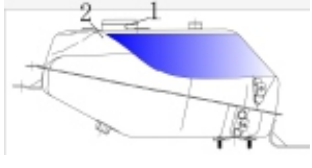


WARNING

1、Fuel filer　　2、Fuel tank

●Do not exceed the neck of the tank when you refuel, otherwise it may overflow when it is heated


●Avoid fuel overflow when the engine is hot.

OXYGEN SENSOR

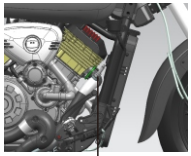


This vehicle has been set up with an oxygen sensor, which can reduce the exhaust pollutants.

CARBON CANISTER

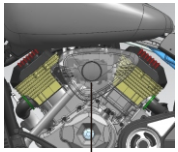

The carbon canister, which can prevent the emission of oil and gas into the atmosphere. Please check it regularly. Please replace it if there are any cracks and damages. Please clean it regularly.

ADJUSTMENT OF REAR AIR SUSPENSION

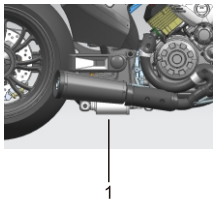

Adjust the air suspension to more comfortable according to different driving situation.


KICKSTAND

The stand is set up on the left side of vehicle, please keep it upright when using, use your feet to push it down.

WARNING


Please stop driving when the stand does not work, it will cause distraction.

CLUTCH HANDLE

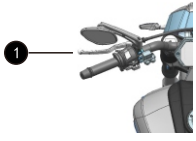

When starting the engine or shifting gears, grip this lever tightly to disengage the clutch friction plate and cut off power transmission.

SHIFT PADEL

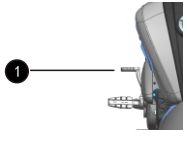

There is 6 gear transmission, step down or pick up to shift, it will automatically return to the its original position.
To avoid unnecessary wear down of transmission system components and rear tires.
Please speed up before you gear up, and slow down before you change into a lower gear.

OIL PUMP

We use ECU system, oil pump keeps running when start, it will run idle and damage if fuel is empty, please refuel in time.

CAUTAON

Please use unleaded gasoline with a octane rating of 92 or higher. Otherwise it may damage the electronic fuel injection system.

CAUTAON

When the fuel pump is running for the first time, please ensure that there is enough fuel in the tank and do not operate it without fuel.

CHECK THE FOLLOWING ITEMS BEFORE DRIVING.

It will increase the probability of accidents and damage to motorcycles without fully pre-checked and regular maintenance. Please refer to the inspection and maintenance section in this user manual. If you use inappropriate tires, or tire pressure is wrong, you will lose control of the motorcycle. Be sure to use the correct tires of the size and specifications mentioned in the user manual. Regular maintenance is necessary.

1.Check the oil level.
2.Check for oil leakage.
3.Check the front and rear brakes if they works fine.
4.Check tire pressures.
5.Check the throttle control.
6.Check the lights.
7.Check drive chain.
8.Check steering control mechanism.
9.Check engine.
10.Check instrument.
11.Check the fasteners。
12.Check the single engine shutdown switch, whether the ignition cut-off system is normal.

NOTE：

Complete all inspections and necessary repairs before driving.

WARNING

It's dangerous when the engine is running during the inspection. If your hands or clothes are involved in the moving parts, it will cause serious mechanical injury. The engine should be fully shut down except when you are running the engine and checking the throttle.

WARNING

Regularly check the tire pressure and keep it within the recommended range. When the pressure is lower, check whether there are nails, small holes, damaged wheel rim sides, and whether the air nozzle core is leaking.

SAVES TYRES

When the motorcycle is not in use for a period of time, it is necessary to adjust the tire pressure to the specified pressure. Tires are not suitable for outdoor storage or store at low temperatures, otherwise it may cause the cracks.
Please store them in a place with constant temperature or indoors.

TYRES SPECIFICATION

Non standard tire affect the performance of motorcycles. Damaged and scratched, over worn tires can cause drive failure and lose control. Check the condition and air pressure of the tires before each use. If there are many obvious damages on the tire, such as breakage, scratches, or tire wear to the extreme position, the tire must be replaced.

NOTE:

The tire size and model should comply with the following list. If different sizes or models are replaced, it will affect the handling performance of the motorcycle and may cause the motorcycle to lose control.

We recommend the qualified tires specification as below:

FRONT TIRE	REAR TIRE
140/70ZR17	360/30R18

ENGINE RUNNING IN

SPEED CONTROL DURING THE BREAK-IN PERIOD OF A MOTORCYCLE

1. The maximum speed within 200km is 40km/h
2. 200km-800km, maximum speed of 60km, run on the highway after 800km occasionally.
3. Normal drive when it comes to 1000km.
4. Don't drive at a constant speed for a long time (neither high nor low speed is allowed)during the break-in period, please change the speed frequently.
5. Don't speed up suddenly.

NOTE:

● When it comes to 300 kilometers, please go to the designated service center to change the engine oil and clean the oil filter, then keep regular maintenance.

NOTE:

● After running in, a maintenance should be carried out by tightening all fasteners and re-adjusting all components to ensure that the motorcycle is in the best condition and extend the service life of the engine.

● Please don't drive the engine exceed the red area.

● If there is any problems during running in, please contact the local distributor.

WARNING

● The engine is very hot when the vehicle is turned off. Please park it in a safe place where children will not in contact.

● Please don't park the vehicle on slopes or soft ground, otherwise it may overturn, it will cause fire when there is fuel leakage.

● Don't park near dry grass or other flammable materials.

WARNING

●The braking distance will be longer if speed is too high. Please maintain a safe distance from vehicle ahead. Using the front or rear brakes alone is very dangerous, it can easily cause the vehicle lose control.

SHIFT LEVER



●Total 6 gear, change it by step or lift.

CAUTAON

●When the gear is in neutral, the “N” light is up, please confirm it, and slowly release the clutch.

SELECTION OF LUBRICATING OIL

Lubricating oil is important for engine and its life, don’t use poor quality engine oil, gear oil, vegetable oil, etc. It is filled with SAE15W \ 40 APISJ grade gasoline engine oil when we sell to you. Please switch it with same quality oil which is reach SG grade or above and depends on different area and weather. Drain the crankcase when you change.

NOTE:

●Do not directly pour out discarded lubricating oil, it should be recycled and disposed of collectively.

TIRE PRESSURE AND LOAD

●The correct tire pressure and tire load are important. Overloading will cause tire failure and lose control. Pressure will be higher, please check it before driving.

●Low tire pressure will cause difficulty turning and faster tire wear. High tire pressure reduces the contact area with the ground, it will lose control. Recommended tire pressure 250kPa at ordinary temperature.

WARNING

Please pay attention to the following matters.

Follow the rules below:

●Check the tire condition and tire pressure, adjust it before driving, to avoid overloading of the motorcycle.

●Please replace the tire the specification mentioned in the manual when it is worn out or broken.

●Read this section carefully. If the tire is not well run in, it can cause slipping and lose control. When using new tires, please be careful.

EFI NOTES:

●Use tools to connect the positive and negative poles when install battery.

●Ensure the EFI system runs fine, please keep the fuel tank with fuel no less than 3 liters, and refuel when there is one scale mark of oil left.

●If there is power outages, battery hibernation and restart, abnormal idle speed, re plugging and unplugging fuses..etc,when reinstalling the battery, starting or driving, please reset the EFI.Turn on the power lock switch and engine shutdown switch, start the engine by pinching the clutch in neutral. After 10 seconds, turn off the engine shutdown switch. After 10 seconds, turn on the engine shutdown switch. Repeat this process twice.

●The vehicle may be difficult to start after being stationary for a long time. Please turn the throttle to 1/8 to start it.

⚠ WARNING

●Please do not turn on the ignition switch for new bike or vehicles that have run out of fuel. Be sure to turn on the ignition switch after refueling, otherwise the fuel pump will idling and wear out.

If the yellow fault light on when engine is running, there is a fault in the EFI system.

When reinstalling the battery, starting or riding the vehicle, if there is a power outage, please pay attention to EFI for situations such as hibernation restart, abnormal idle speed, and re plugging and unplugging fuses. Individual hardware reset, turn on the power lock switch and engine shutdown switch, shift neutral gear away. Start the engine, turn off the engine shutdown switch after 10 seconds, and turn on the engine shutdown switch after 10 seconds. Repeat twice more

Fault code	Fault code information	Fault code	Fault code information
P0131	1 cylinder oxygen sensor signal shorted to low voltage	P2304	2 cylinder ignition coil high voltage
P0132	1 cylinder oxygen sensor shorted to high voltage	P0335	The crankshaft position sensor line has no signal
P0031	1 cylinder oxygen sensor heating circuit shorted to low voltage	P0336	Crankshaft position sensor line signal interference
P0032	1 cylinder oxygen sensor heating circuit shorted to high voltage	P0122	Throttle position sensor Low voltage
P0137	2 cylinder oxygen sensor shorted to low voltage	P0123	Throttle position sensor High voltage
P0138	2 cylinder oxygen sensor shorted to high voltage	P0500	Speed sensor fault
P0037	2 cylinder oxygen sensor heating circuit shorted to low voltage	P0505	The idle speed is abnormal. Procedure
P0038	2 cylinder oxygen sensor heating circuit shorted to high voltage	P0562	System low voltage
P0107	Intake pressure sensor line low voltage/open circuit	P0563	High system voltage
P0108	Intake pressure sensor line high voltage	P0231	Oil pump relay open/low voltage fault
P0112	Intake temperature sensor line low voltage	P0232	Oil pump relay high voltage fault
P0113	High voltage or open circuit of the intake air temperature sensor	P0458	Carbon tank cleaning control solenoid valve low voltage fault
P0117	Coolant temperature sensor line low voltage	P0459	Carbon tank cleaning control solenoid valve high voltage fault
P0118	Coolant temperature sensor circuit high voltage or open	P0601	The ECM verification code is incorrect
P0261	1 cylinder injector low voltage fault	P0650	The MIL circuit is faulty
P0262	1 cylinder injector high voltage fault	P0850	The neutral/clutch input is faulty
P0264	2 cylinder injector low voltage fault	P1693	Engine speed output low voltage
P0265	2 cylinder injector high voltage fault	P1694	Engine speed output high voltage
P2300	1 cylinder ignition coil low voltage	P0171	The oil and gas mixture is too thin
P2301	1 cylinder ignition coil high voltage	P0172	The oil and gas mixture is too thick
P2303	2 cylinder ignition coil low voltage	P0174	PE mode hybrid is too thin


For example: fault 0131
Fault light 10 consecutive flashes, 1 more flash, 3 more flashes, and 1 more flash.


⚠ WARNING

●During engine is running, if the fault light does not on and flashes after turning off the engine, it is a historical fault, it will be off later.

OIL CHANGE AND OIL FILTER


1. 确保车辆平稳。
2.Start the engine for 2-3 minutes
3.Place a container under the engine to collect used engine oil
4.Remove the fuel cap, drain bolt, and gasket from the engine, and drain the engine oil completely.

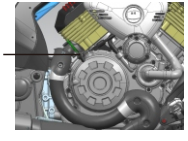

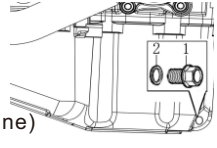

1. Oil drain bolt
(at the bottom of engine)
2. Grommet

5.Use T-shaped sleeve to remove oil grid housing

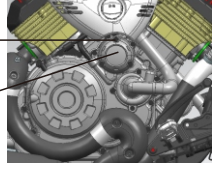


NOTE:

●If the oil filter does not need to be replaced, skip steps 5-7.

6.Apply a thin layer of clean engine oil onto the O-ring of the new oil filter

O-type ring

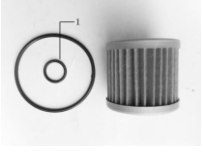

7.Install a new oil filter and tighten it in place
8.Tighten the oil drain bolt, add the recommended new engine oil, add it to the upper plate (upper limit mark), install the oil hole screw cover, check for oil leakage, wipe off the oil splashed on the parts.

ENGINE OIL(LITER):

Restart the engine: 3. 0L, replace the filter: 2. 8L
Oil grade: SAE10W \ 30-API SG gasoline engine oil, don't let foreign objects fall into the engine casing.

9. Start the vehicle, idle for a few minutes, and check for oil leakage. If there is, please immediately turn off the vehicle and find out the reason.

NOTE:

●Running the engine when the oil lever low can cause component damage. Too much engine oil can affect vehicle speed and even damage engine components.

SPARKING PLUGS

Spark plugs need regular inspection. Carbon buildup on spark plugs can corrode them, please removed for inspection and maintenance. The condition of spark plugs show the combustion status of the engine combustion chamber. Remove the spark plug cap, and check if the ceramic insulator around has a normal light brown color. If the color is significantly different, it may be due to poor engine operation. In such cases, please go to the local service point for inspection. Please check if the spark plug is damaged and if there is erosion between the electrodes, the spark plug should be replaced.

NOTE:

●Use a plug gauge to measure the gap between the spark plugs before installing the spark plug. If necessary, adjust the gap to the specified value:


Spark plug model: CPR8EA-9(NGK)

Spark plug gap: 0.8-0.9mm Clean the surface, contact surface of the spark plug gasket and clean the dirt on the spark plug threads.

Screw the spark plug into place by hand and tighten it with a wrench. When removing the spark plug, do not allow impurities to enter the engine through the spark plug hole.

ENGINE OIL AND OIL FILTER

1. Oil level max limit mark
2. Engine oil level observation window
3. Oil level lower limit mark

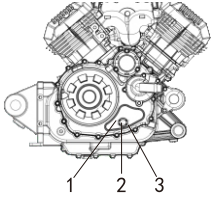

●Check the engine oil level before driving. There is an oil level observation hole at the rear of the right crankcase cover to observe the lubricating oil level. The oil and oil filter should be replaced regularly according to the maintenance schedule.

CHECK THE ENGINE OIL LEVEL

1.Place the motorcycle vertically on the ground
2.Turn on the engine, preheat for 2-3 minutes, and then turn off the engine.

NOTE:

●To avoid misjudgment caused by high oil temperature. Check the oil after engine is cooling down.


3. Let the engine hold still for 5 minutes to allow the oil to settle. Check the oil level through the oil level observation hole on the right engine cover.

NOTE:

●The normal oil level should be between the upper and lower markings on the sight hole.


4. If the oil level is below the lower limit mark, add the recommended engine oil to the upper limit mark.

COOLANT

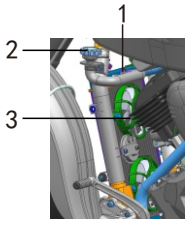

1.Water tank
2.Water tank cover
3.Fan

●Coolant is composed of coolant and distilled water, and has antifreeze function, cool the engine by circulating the coolant. Please check the coolant capacity when you buy a new vehicle. Please fill in the max limit line if it's at the lower limit line. When the coolant becomes turbid or if the warranty period has expired, please replace the coolant in time. Please use dedicated coolant, never use water. Start the motorcycle and keep running 1-2 minutes after adding coolant to emit the hot air, open the lid again, and add the coolant again till it's full.

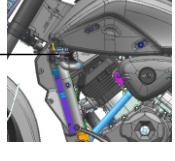

CAUTAON

●If there is no coolant replenishment, distilled water (water without any other impurity elements) can only be used as a temporary substitute. Tap water, well water, including mineral water, rainwater, river water, mountain spring water, saline water, or any other water containing impurity elements cannot be used for replenishment to avoid damage to internal components of the cooling system. And replace at the nearest distributor.

●When the engine temperature reaches around 110 degrees, the sensor is turned on and sensing light is up, indicating that the engine needs to be stopped and rested, otherwise it will overheat and shorten its service life.

CAUTAON


●Please use 3500 anti rust and anti freezing liquid for the coolant. Coolant is toxic and corrosive, it should never be consumed or come into contact with the skin or surface of parts. Waste liquids should be collected and processed by the recycling center. Do not open the water tank cover when the engine temperature is high. When repair the engine, please drain the coolant first to prevent it from entering the crankcase, then disassembling the cylinder block.

COOLING SYSTEM INSPECTION

●Make a regular leak check on the cooling system, pump, pipe every 400km, otherwise, please contact to serviceman. Please check the coolant and fill it in time.

ADJUSTMENT OF CLUTCH

1.Locking nut
2.Adjusting screw

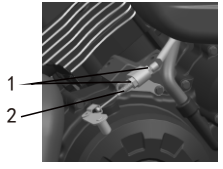

●Grasp the clutch handle to adjust.

BRAKING SYSTEM INSPECTION

●It will cause wear and tear after a certain period of time, please go to the service point for replacement. Thickness of brake disc can not less than 3mm. Please do the regular check as below:

●Brake fluid

●Any leaking or broken of the pipe

●The wear of brake disc and brake friction pads


●Front brake adjustment

⚠ WARNING

●Disc is working under high pressure, for safety reasons, the replacement time of pipe and brake fluid can not exceed the recommended time.

BRAKING SYSTEM INSPECTION

1.Brake lever

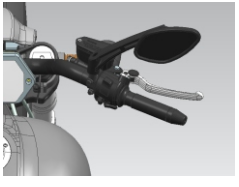

●Check the brake fluid, it must be equal at both ends. Too much or too less is not good for braking system.


CHANGE AIR FILTER

●Air filter should be replaced according to the regular maintenance schedule, it should inspect more when you're driving under the wet and dusty condition.

1.Remove the fuel tank.

2.Remove the lid.



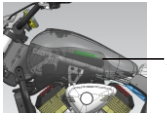


3.Replace the new air filter.

4.Lock the lid and put the fuel back.

NOTE:

●Don't run the engine when you're replacing the air filter, otherwise it will inhale dusty air cause damage of the cylinder.

THROTTLE CABLE

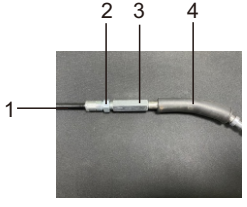

1.Throttle cable
2.Locking nut A
3.Adjusting nut B
4.Case

1 Check the throttle cable is good or not, It should be replaced when it's broken, suck it, Please check if the throttle lever cover move easily when open and close.
2. Please or improper wiring.
3. Adjust the throttle cable


WHEN ADJUSTMENTS ARE NEEDED:

●Remove the case, loose the locking nut A, turn the adjusting nut, adjust the throttle cable

⚠ WARNING

●It feels soft like a sponge when you brake, it means there is air inside the braking system. Please contact the service center to check it. Otherwise it will cause accident with air inside.

ADJUSTMENT OF REAR BRAKE

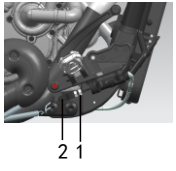


1.Locking nut.
2.Adjust limit.

●Loosen the locking nut, adjust the exposed length of the adjusting bolt, and increase or decrease the stroke of the pedal. Step on the brake pedal several times, then release the brake and rotate the rear wheel to check if it can rotate freely. After fitting, tighten the nut.

CHECK THE FRONT AND REAR FRICTION PLATES

Check if the friction plate is worn to the limit position


●Please run the regular check according to the schedule. Thickness of brake disc can not less than 3mm.
otherwise, please contact the service center to replace it.

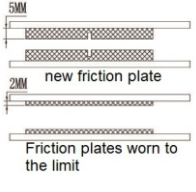

CHECK THE BRAKE FLUID


FRONT BRAKE

1.Max limit
2.Min limit
3.Front brake oil cup cover

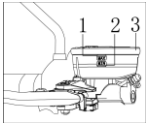

REAR BRAKE

1.Front brake oil cup cover
2.Max limit
3.Min limit

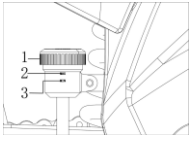

⚠ WARNING


●Brake fluid can not be mixed with water or other impurities, otherwise, it will cause braking damage. Brake fluid has strong corrosiveness, don't let it come into contact with the paint surface or plastic. Otherwise it will corrode the surface. Please use DOT4 brake fluid only.

BELT ADJUSTMENT

●Lift the vehicle up with the landing gear, make sure the rear wheel off the ground and the vehicle is stable.

1.Adjust bolt

2.Lock the bolt

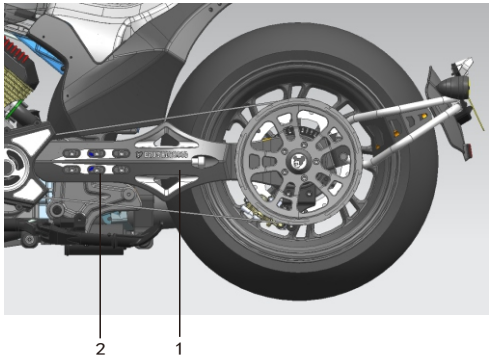


1. Shift the gear to "N", engine stop working, (turn the vehicle off).

2. Loose the lock bolt of rock arm. Loosen the tension screw 1 of the single rocker arm belt.

Note: Too tight or too loose will reduce the service life of the belt. Please set it up with a standard tension as 55-60 Hz.

BELT REPLACEMENT



1.Loose the lock bolt, twist to the most loose position anticlock.

2.Move the arm to the top towards the front of the vehicle. Remove the small belt cover, take out the belt.

NOTE:

●After installation is completed, pre tighten the single rocker arm fixing bolt, adjust the belt to the standard tension of 55-60Hz, which is ± 5% of the standard, and then tighten the fixing bolt.

PERIODICAL MAINTENANCE

Regular check and maintenance is the most effective way to keep the vehicle running safety. Please follow the schedule, according to the different weather, location, different purpose, maintenance frequency could be shorter.

WARNING

It would cause accident if without regular maintenance, otherwise, please contact the service center.

WARNING

Unless otherwise specified, engine should be stopped when maintenance. Get in touch with running engine will get hurt, or cause fire and be poisoned.

WARNING

The engine, exhaust pipe, disc, brake calipers, brake pads is hot, please don't touch them before they cool down.

CABLE INSPECTION

●Check the throttle grip, wire, clutch wire every time before you drive. Lubricate end of them when it necessary. If they can't not move smoothly, please contact the service center to replace it.

NOTE:

●Broken cover of cable will cause rust, please replace it in time.

LUBRICATE THE BRAKE HANDLE AND CLUTCH HANDEL

Front brake handle



1.lubricate position


Clutch handle



1.lubricate position

BELT INSPECTION

1.Belt

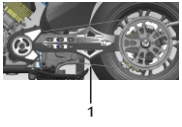


●Please the belt's length and contact surface before driving. Follow the maintenance brochure and do the regular check.

NOTE:

●If the belt is worn out, please contact service center and replace it.

●Shift the gear to “N”, and turn it off, stop the engine

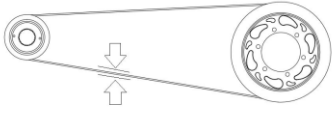

●Use the finger to move it up and down to check if it's loose or tight. Also check if it's worn out or lengthen. Otherwise it should be replaced.

SIDE BRACKET INSPECTION

1.Side bracket lubrication



WARNING

●If bracket can not work normally, please go to the service center.

FRONT SHOCK ABSORBER INSPECTION

●Please check the condition of the front fork regularly according to the maintenance manual


●Check the surface of the shock absorber core for scratches, wear, and oil leakage.

1.Park the car on a flat surface and keep it upright.
2.Grab the front brake and press down on the handle several times with force. Check if the front shock absorber compresses and rebounds smoothly.

NOTE:

●If any damage is found or the front shock absorber cannot be operated smoothly, please contact the service center for inspection or replacement.

STEERING COLUMN INSPECTION

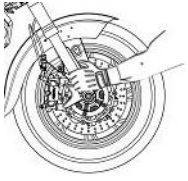

●Please check the steering column regularly according to the maintenance regulations in this manual. Worn or loose steering column bearings may cause dangerous situations.


1. Insert the screw into the rear fork shaft hole, and then use the landing gear to lift the car up so that the rear wheels are off the ground, ensuring that the car is stable.2. Grasp the lower part of the front shock absorber and try shaking it back and forth. If you can feel any gaps, please contact the service center for inspection and maintenance.

Check the front and rear wheel bearings

●According to the maintenance manual, regularly check whether the vehicle bearings are worn. If there is lateral clearance between the wheels or if the wheels cannot rotate smoothly, please contact the service center for inspection and maintenance.

Battery inspection

1. Negative power cord “black”
2. Positive power cord "red"

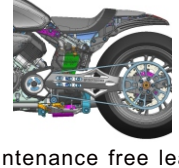

●The battery which is maintenance free lead-acid installs under the driver's seat. However, it is necessary to check the wiring connections of and if the battery screws are securely fastened.

WARNING

●The electrolyte of a battery contains sulfuric acid, which is toxic and dangerous, and can cause serious consequences severe burns, please avoid contact with skin, eyes, or clothing. Please wear goggles when working near the battery. If accidentally touched, please take the following first aid measures: drink a lot of water or milk and immediately take to the hospital.

●Eye contact: Rinse with clean water for 15 minutes and immediately take to the hospital.

●Batteries can produce explosive gases. Please stay away from sparks, flames, cigarettes, and other sources of ignition. Adequate ventilation should be maintained when charging in enclosed spaces.

●Please keep the battery out of reach of children.

BATTERY INSPECTION AND CHARGING

●If the battery is low, check the voltage at both ends. If it is below 12.3V, please charge it immediately. If the vehicle has other optional electrical accessories, the battery will discharge faster.

Storage of batteries

1. If the vehicle is not used for more than one month, please remove the battery and store it in a cool and dry place.

NOTE:

●When removing the battery, remember to turn off the vehicle power first. The order of removing the power cord is: remove the negative wire first, then remove the positive wire.

If the battery needs to be stored for more than two months, check it at least once a month and fully charge it if necessary.

NOTE:

●When installing or removing the battery, first connect the negative wire, and then connect the positive wire.

After installation, confirm that the battery wires are connected correctly.

NOTE:

●When installing or removing the battery, first connect the negative wire, and then connect the positive wire.

Replacement of fuses

There are fuses for other circuits, it's under the vehicle seat cushion. If the fuse burns out, replace it according to the following method.


1. Turn off the vehicle power and open the seat cushion.

2. Remove the burnt fuse and install a new fuse with the specified amperage value.

WARNING

●Do not replace fuses with a value greater than the specified amperage to prevent damage to the electrical system and potential fire hazards

Trouble shooting Table
Startup or engine issues

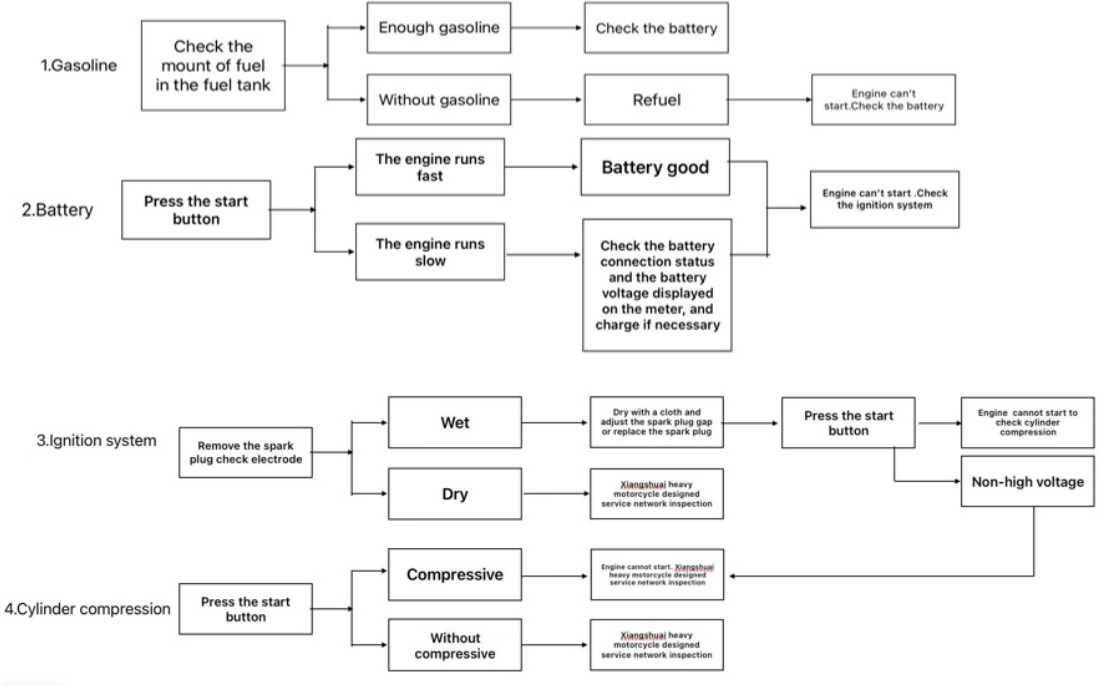


ENGINE OVERHEATING

⚠ WARNING

●Do not remove the cover of the engine water tank when it is very hot. Hot coolant and steam may spray out under pressure, causing serious burns and accidents. Please wait until the engine has cooled down before proceeding with the operation.

●Cover the lid of the water tank with a thick cloth such as a towel, and slowly rotate the lid counterclockwise to the edge of the slot to release the residual pressure inside the water tank. After draining, press the lid down and then rotate counterclockwise to remove it.

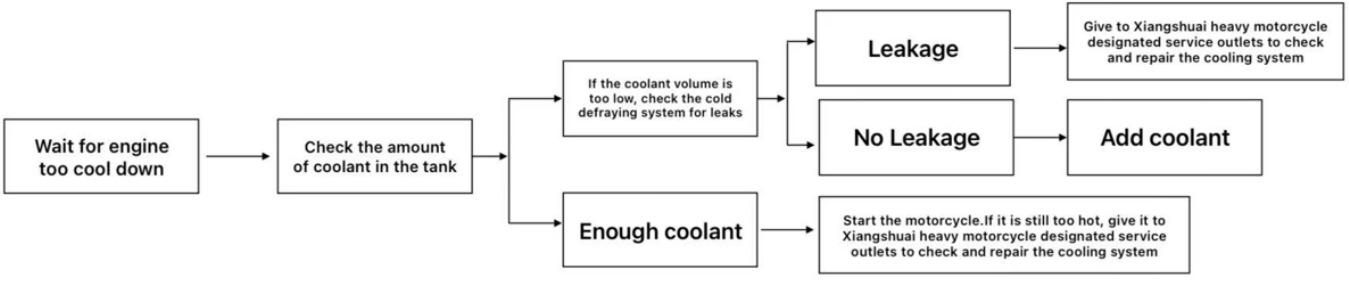

Maintain the periodic table

NO.	Maintenance item	Maintenance cycle kilometers							Note
		1000KM	4000KM	7000KM	10000KM	13000KM	16000KM	19000KM	
1	fuel system	Check	Check	Check	Check	Check	Check	Check	Adjust if necessary
2	Maneuvering stay	Check	Check	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	
*3	EFI System	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Adjustment by professionals
4	Fuel strainer	Check	Check	Check	Check	Check	Check	Check	Replace original parts if necessary
5	Air filter elements	Adjust	Adjust	Adjust	Adjust	Adjust	Adjust	Adjust	Replace original parts if necessary
6	Spark plug gap	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Adjustment by professionals
*7	Valve clearance	Check	Check	Check	Check	Check	Check	Check	Adjustment by professionals
8	Engine lubricating oil	Change	Change	Change	Change	Change	Change	Change	
*9	Lubricating oil filter	Change	Change	Change	Change	Change	Change	Change	
*10	Timing chain	Check	Check	Check	Check	Check	Check	Check	Adjust if necessary
*11	Idle control	Check	Check	Check	Check	Check	Check	Check	Adjust if necessary
12	Drive belt	Check every 2000KM							
13	Storage battery	Check	Check	Check	Check	Check	Check	Check	If it is not used for a long time, it should be charged once a month
14	Brake lining	Check	Check	Check	Check	Check	Check	Check	The thickness of the friction area should not be less than 2MM
15	Brake system	Check	Check	Check	Check	Check	Check	Check	Add brake fluid if necessary

16	Braking light switch	Check	Check	Check	Check	Check	Check	Check	
17	Illuminating system	Check	Check	Check	Check	Check	Check	Check	
*18	Clutch	Check	Check	Check	Check	Check	Check	Check	
*19	Shock absorption	Check	Check	Check	Check	Check	Check	Check	
20	Bolt/nut	Adjust	Adjust	Adjust	Adjust	Adjust	Adjust	Adjust	Key bolt adjustment torque
21	Front/rear tire	Check	Check	Check	Check	Check	Check	Check	
22	Reverse pressure bearing	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Adjustment by professionals if necessary
23	Cooling liquid	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	Check/Adjust	
Note: When driving in abnormally wet or dusty areas, the maintenance cycle should be appropriately shortened. Items marked with * can only be adjusted by professionals.									

HEADLIGHT

If the headlights do not light up, please go to the service center to check the electrical wiring.

NOTE：

Do not apply any colored film to the headlight lens.

FRONT POSITION LIGHT

If the front position light do not light up, please go to the service center to check the electrical wiring.

TAIL LIGHT/BRAKING LIGHT

If the tail light or braking light do not light up, please go to the service center to check the electrical wiring.

FRONT WINKERS

If the front winkers do not light up, please go to the service center to check the electrical wiring.

PRESERVATION

Even with the use of high-quality components, it is still easy to rust and corrode. Regular and proper care extends service life, but also fully utilizes performance.

1. Cover the tail of the exhaust muffler with a plastic bag after the engine has cooled down.
2. Ensure that all covers, plugs, and electrical connectors and terminals (including spark plug caps) have been installed properly.
3. Remove dirt.

NOTE：

●Do not use strong acidic cleaning agents for cleaning. If using such cleaning products, do not let the cleaning agents remain for too long. Additionally, please rinse with clean water and immediately dry with a soft towel, then spray with anti rust spray.

●Incorrect cleaning can damage the air deflector, panels, windshield, headlight cover, odometer cover, and other plastic parts. Use soft cloth and sponge soaked for cleaning. If there is dirt on plastic parts that cannot be removed with water, neutral cleaning agents can be diluted with water. Please rinse off any remaining cleaning agents with clean water to avoid damaging plastic parts.

●Do not use high-pressure car wash machines or steam jet cleaning agents for cleaning, as they can cause water leakage and deterioration of the following components: sealing parts (wheel bearings, front fork, brake and flat fork bearings), electrical components (instruments, joint terminals, switches, lamps), ventilation hoses, ventilation pipes, and cables.

STORE WAY

Short term storage

Please store the locomotive in a dry and cool place; Cover with a dust cover if necessary to block dust, and ensure that the engine and exhaust muffler have cooled down before removing the cover.

Long term storage requires storage for several months

1. Fill the gasoline tank with gasoline and add gasoline stabilizer (if any) to prevent rusting of the tank and deterioration of the gasoline.
2. To avoid rusting of components such as cylinder piston rings, please perform the following
operations. (Remove the spark plug and spray 15ml of engine oil through the spark plug hole into the cylinder.)
3. Check the tire pressure and adjust it if necessary. Rotate the wheels slightly every month to prevent the tires from easily deteriorating due to fixed points.
4. Wrap the muffler mouth with a plastic bag to prevent moisture from entering.
5. Remove the battery and fully charge it. Store in a cool and dry place, charge once a month.

SIZE
LENGTH :2400MM
WIDTH :805MM
HEIGH :1310MM
WHEELBASE :1640MM
GROUND CLEARANCE :108MM

WEIGHT :
CURB WEIGHT :271KG

ENGINE :
TYPE : SPARKIGNITION FOUR STROKES
COOLING TYPE : WATER COOL
VALVE : V TYPE double cylinders
DISPLACEMENT :799ml
BORE x STROKE :69x63mm
COMPRESSION RATIO :10.3:1
START MODE : ELECTRIC

ENGINE OIL
CODE :10W/30- APISG
GRADE: API ／ SG OR HIGHER

COOLANT CAPACITY :
WATER TANK CAPACITY :1600m

AIR FILTER
FILTER ELEMENT OF AIR FILTER PAPER

GAS
RECOMMEND GAS: 92# OR ABOVE UNLEADED GASOLINE
FUEL TANK:18.0L

SPARK PLUG
SUPPLIER/CODE:NGK/ CPR8EA-9
SPARK PLUG GAP:0.8-0.9mm

CLUTCH
TYPE： WET, MULTI PLATE, MANUAL OPERATION

GEAR BOX
PRIMARY TRANSMISSION SPEED RATIO:2.029
DRIVE SYSTEM： BELT
GEAR：6GEAR

FRAME
TYPE： COMPLEX FRAME
FRONT TILT ANGLE OF THE CAR: 27°

FRONT TIRE
TYPE HIGH SPEED VACUUM TIRE
MODEL:140/70-1I7

REAR TIRE
TYPE: HIGH SPEED VACUUM TIRE
MODEL:360/35-18

MAX LOAD
MAX LOAD：75KG
*（DRIVER、 PASSENGER、 ACCESSORIES TOTAL）

TIRE PRESSURE , TEST WHEN IT'S COOLED DOWN
FRONT TIRE: 250 Kpa
REAR TIRE: 250 Kpa

FRONT WHEEL
TYPE: LIGHT ALLOY CASTING
SPEC: 3.50X17

REAR WHEEL
TYPE: LIGHT ALLOY CASTING
SPEC: 12.5X18

FRONT BRAKE
TYPE: DOUBLE CALIPER HYDRAULIC DISC
CONTROL WAY: RIGHT HANDLE
BRAKE FLUID: DOT 4

REAR BRAKE
TYPE: SINGLE CALIPER HYDRAULIC DISC
CONTROL WAY: RIGHT FOOT BRAKE
BRAKE FLUID: DOT 4

FRONT SUSPENSION
TYPE: FRONT INVERTED SHOCK ABSORBER, ADJUSTABLE SPRING/HYDRAULIC SHOCK ABSORBER

REAR SUSPENSION
TYPE: BALANCE SPRING/HYDRAULIC SHOCK ABSORBER

ELECTRICAL INSTALLATION
IGNITION SYSTEM: INDUCTIVE ENERGY STORAGE IGNITION SYSTEM
CHARGE SYSTEM: AC GENERATION

BATTERY:
MODEL: DTX12-BS
VOLTAGE AND CAPACITY: 12 V 12Ah

BULB VOLTAGE
FRONT LIGHT: LED DC12V
HIGH BEAM 10W LOW BEAM 7W

TAIL LIGHT/BRAKE LIGHT
LED: DC12V 1.65W/2.5W

FRONT WINKERS
LED: DC12V 1W

REAR WINKERS
LED: DC12V 1W

POSITION LIGHT: LED DC12V 0.5W

LICENSE LIGHT: LED DC12V 1W

INSTRUMENT LIGHT: LED

HIGH BEAM: LED DC12V

ENGINE ALARM: LCD

ABS ALARM: LCD

FUSE:
FUSE: 15A

FUSE OF LIGHT: 10A

FUSE OF EFI: 10A

ABS FUSE: 3A



香帥重機

香帥重機　成就非凡人生

Maintenance Schedule

XS800Series | Maintenance and Adjustment

No.	Maintenance Item	1000 km	4000 km	7000 km	10000 km	13000 km	16000 km	19000 km	Remarks
1	Fuel system	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Adjust when necessary
2	Control cables	Inspect	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	
*3	Fuel injection system	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Adjusted by professional personnel
4	Fuel filter	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Replace with original parts when necessary
5	Air filter element	Adjust	Adjust	Adjust	Adjust	Adjust	Adjust	Adjust	Replace with original parts when necessary
6	Spark plug gap	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Adjusted by professional personnel
*7	Valve clearance	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Adjusted by professional personnel
8	Engine oil	Replace	Replace	Replace	Replace	Replace	Replace	Replace	
*9	Oil filter	Replace	Replace	Replace	Replace	Replace	Replace	Replace	
*10	Timing chain	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Adjust when necessary
*11	Idle speed	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Adjust when necessary
12	Drive belt	Inspect every 2000 km							
13	Battery	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	If not used for a long time, charge once a month
14	Brake pads	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Friction area thickness must not be less than 2 mm
*15	Brake system	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Top up brake fluid when necessary
16	Brake light switch	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	
17	Lighting system	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	
*18	Clutch	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	
*19	Shock absorbers	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	
20	Bolts / Nuts	Adjust	Adjust	Adjust	Adjust	Adjust	Adjust	Adjust	Key bolts: check tightening torque
21	Front and rear tires	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	Inspect	
22	Steering bearings	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Adjusted by professional personnel when necessary
23	Coolant	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	Inspect/Adjust	

Note: When riding in areas with abnormal humidity or high dust levels, the maintenance intervals should be appropriately shortened.
*Items marked with * can only be adjusted by professional personnel.*

Legend: Inspect = Check condition | Inspect/Adjust = Check and adjust as needed | Replace = Replace with new part | Adjust = Adjust to specification

XS800 Series OBD Fault Code List

Diagnostic Trouble Codes (DTC)

No.	Fault Code	Fault Description
1	P0131	Cylinder 1 oxygen sensor signal shorted to low voltage
2	P0132	Cylinder 1 oxygen sensor signal shorted to high voltage
3	P0031	Cylinder 1 oxygen sensor heater circuit shorted to low voltage
4	P0032	Cylinder 1 oxygen sensor heater circuit shorted to high voltage
5	P0137	Cylinder 2 oxygen sensor signal shorted to low voltage
6	P0138	Cylinder 2 oxygen sensor signal shorted to high voltage
7	P0037	Cylinder 2 oxygen sensor heater circuit shorted to low voltage
8	P0038	Cylinder 2 oxygen sensor heater circuit shorted to high voltage
9	P0107	Intake air pressure sensor circuit low voltage / open
10	P0108	Intake air pressure sensor circuit high voltage
11	P0112	Intake air temperature sensor circuit low voltage
12	P0113	Intake air temperature sensor circuit high voltage or open
13	P0117	Coolant temperature sensor circuit low voltage
14	P0118	Coolant temperature sensor circuit high voltage or open
15	P0261	Cylinder 1 injector circuit low voltage
16	P0262	Cylinder 1 injector circuit high voltage
17	P0264	Cylinder 2 injector circuit low voltage
18	P0265	Cylinder 2 injector circuit high voltage
19	P2300	Cylinder 1 ignition coil circuit low voltage
20	P2301	Cylinder 1 ignition coil circuit high voltage
21	P2303	Cylinder 2 ignition coil circuit low voltage
22	P2304	Cylinder 2 ignition coil circuit high voltage

XS800 Series OBD Fault Code List

Diagnostic Trouble Codes (DTC)

No.	Fault Code	Fault Description
23	P0335	Crankshaft position sensor circuit – no signal
24	P0336	Crankshaft position sensor circuit – signal interference
25	P0122	Throttle position sensor circuit low voltage
26	P0123	Throttle position sensor circuit high voltage
27	P0500	Vehicle speed sensor failure
28	P0505	Idle speed abnormal
29	P0562	System voltage low
30	P0563	System voltage high
31	P0231	Fuel pump relay circuit open / low voltage
32	P0232	Fuel pump relay circuit high voltage
33	P0458	Canister purge control solenoid valve circuit low voltage
34	P0459	Canister purge control solenoid valve circuit high voltage
35	P0601	ECM checksum error
36	P0650	MIL circuit fault
37	P0850	Neutral / clutch input fault
38	P1693	Engine speed output circuit low voltage
39	P1694	Engine speed output circuit high voltage
40	P0171	System too lean
41	P0172	System too rich
42	P0174	PE mode system too lean

Notes:

1. Model: XS800 Series

2. Descriptions translated from Chinese source table into clear technical English.

3. PE = Power Enrichment mode. MIL = Malfunction Indicator Lamp.

4. Suitable for service documentation and diagnostic reference.