

Aklot


Hydraulic piano bench installation

Thank you very much for purchasing the Aklot hydraulic piano bench. Please read the instructions and precautions carefully before using the piano, and please keep the instructions properly. Thank you!


Notes:

1. Install the piano bench on a flat, clean floor.
2. Keep small accessories away from children and carefully count them.
3. Tighten the screws tightly to prevent loosening, squeaking, shaking, or falling during use, which could cause injury.
4. Keep the piano bench away from direct sunlight, wind, rain, or fire to prevent damage.
5. Wipe with a dry cloth. If water is spilled on the surface, wipe it dry immediately, air dry it with cool air, and place it in a cool, dry place.


ACCESSORIES

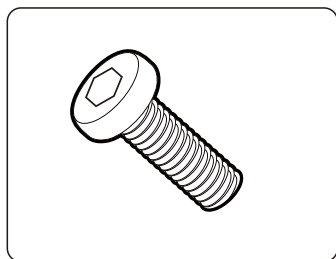


Screws*8

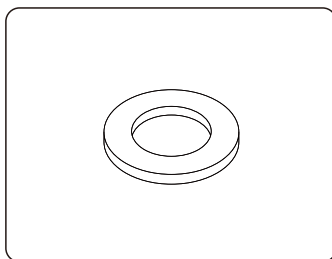


Washer*4

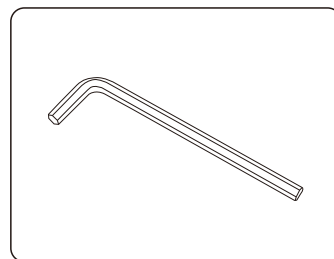


Hexagonal wrench*1

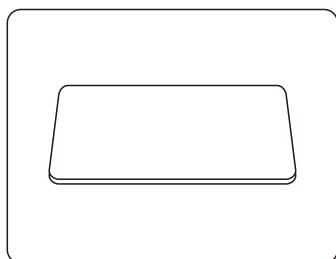

Piano bench seat

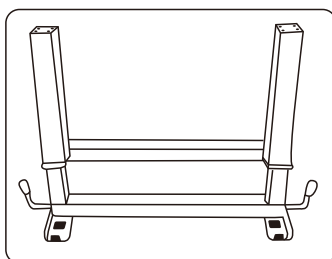

Hydraulic stand


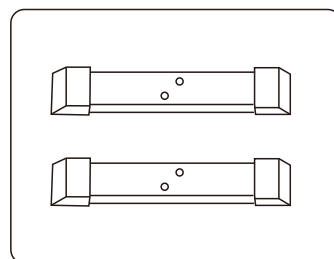


Flat support tripod

Aklot

Hydraulic piano bench installation



STEP 1: SEAT AND STAND INSTALLATION

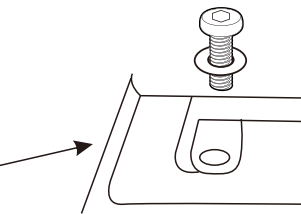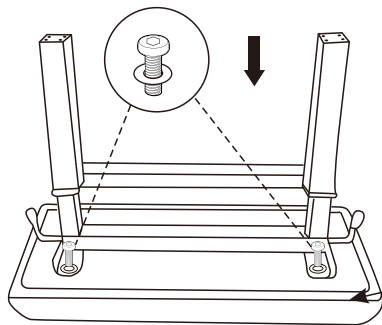

Align the holes and tighten the screws

Place the support rod (with hydraulic handle) upside down on the bench surface, align it with the screw holes one by one, and tighten the screws

STEP 2: TRIPOD INSTALLATION

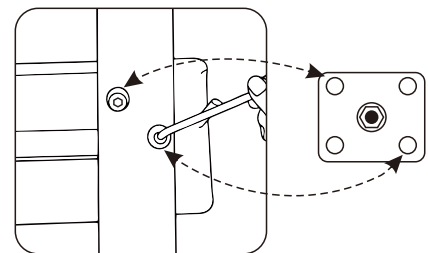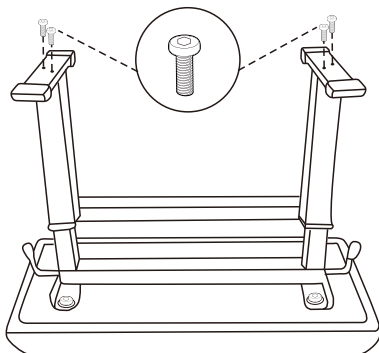


Tighten the screws with a wrench

Place the stool legs parallel to the support rod, align them with the screw holes, and tighten the screws

STEP 3: Adjustable foot spikes


If you encounter small potholes on the ground, you can adjust the height of the foot nails to keep the stool balanced

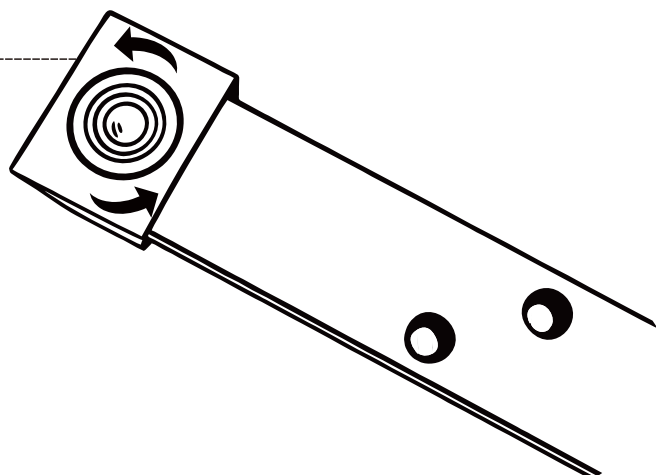

AKLOT

Hydraulic piano bench installation

STEP 4: HEIGHT ADJUSTMENT

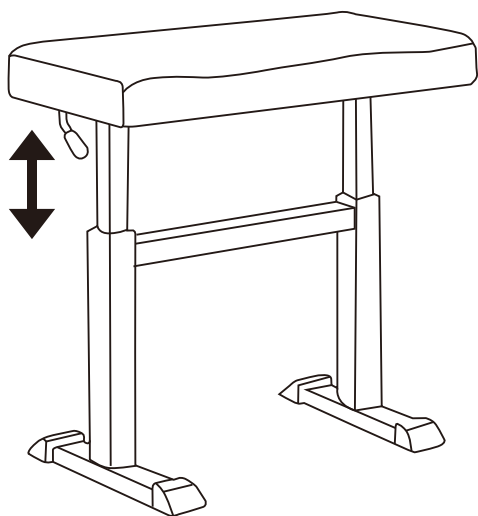

- ✓ Piano bench load capacity 440 lb/200 kg
- ✓ Trigger the lever under the seat to lift the throne.
- ✓ Please note that a minimum of 80 lb/40 kg of force is required to lower the throne.
- ✓ If you encounter any problems while using the overhead lifting feature, please contact us immediately for assistance.
- ✓ Do not attempt to remove the seat yourself, as the lifting mechanism is fragile.
- ✓ Regular inspection and maintenance of the seat is recommended.
- ✓ Please see the detailed diagram for the installation video.
- ✓ If the piano height has not been adjusted for an extended period, hold the lifting handle still for about 20 seconds to allow air to enter and build pressure, allowing the chair to be raised or lowered freely.