An illustration of two piano keys, one white and one black, positioned vertically on the left side of the page. The white key is on the left, and the black key is on the right. They are shown from a side-on perspective, with their keys pointing towards the right.

USER MANUAL

Aklot

DIGITAL PIANO **AUR-G088**

Thank you for choosing Aklot
to be a part of your musical story.

Please Read This Manual Carefully Before Use.

CONTENTS

CONTENTS	01
WARRANTY	02
FUNCTION PANEL	03
FUNCTION	04
CONNECTION INTERFACE.....	06
80 DEMONSTRATION SONGS.....	07
128 TIMBRE	08
128 RHYTHMS	10
PERCAUTIONS.....	12
WIRELESS COMMUNICATION	13

WARRANTY

Any questions about the use of the product, you can contact our brand after-sales staff. We will solve your problem until it is resolved.



- ◆ 1-Year Warranty
- ◆ 24/7 Online Support

For guidance on product use and warranty extension, please contact our brand after-sales staff via email:
[cs@aklot.com]

If any questions related to orders, please contact the seller through the shopping platform.

WARRANTY

FUNCTION PANEL

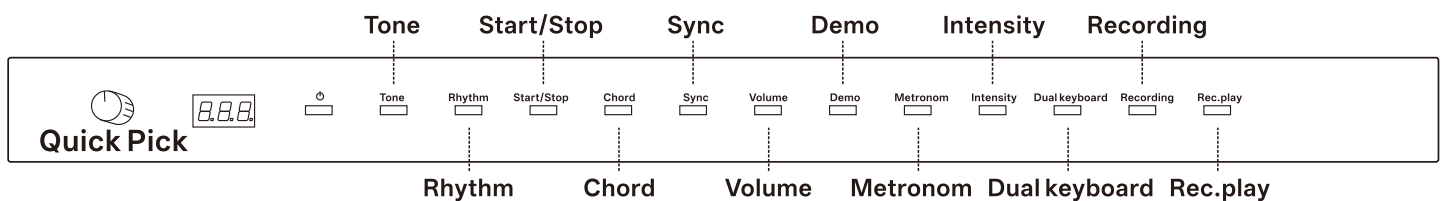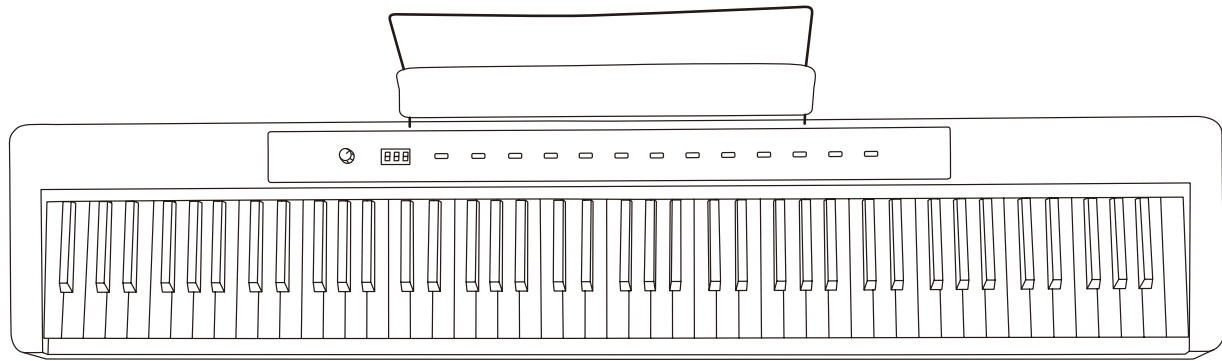

- Keyboard: 88 standard keys (including black keys), covering the full piano range A0–C8.
- Tones: 128 built-in instrument sounds (e.g., grand piano, strings, synth pads).
- Rhythms: 128 preset rhythm patterns (e.g., pop, rock, jazz).
- Demo Songs: 80 preloaded demonstration tracks for learning and playback.
- Recording & Playback: Real-time recording of performances .
- Dual Keyboard Function: Split the keyboard into two independent zones for layered sound.
- Chord Accompaniment Function: Auto-harmonize chords with single-finger or multi-finger input modes. Ideal for solo performances.
- Advanced Features: Metronome Function: Adjustable time signatures (1/4, 2/4, 3/4, 4/4).
- 3-digit LED Display: Show real-time parameters like tempo, octave, and sound/rhythm codes.
- MP3 Playback: Import and play audio files via USB drive (supports MP3 formats).
- MIDI Sequencing & Editing: Compose and edit music via MIDI connection to DAWs (e.g., Logic Pro, Cubase).
- Pedal Support (Sustain/Sostenuto/Soft): Connect triple pedals for authentic piano control.

FUNCTION

Playing Pattern

1. Press the power switch to automatically enter the playing mode
2. Rotate the [data wheel] to select the playing tone.

Rhythm Pattern

1. Press the Start/Stop/Rhythm button. The system enters the rhythm mode and plays the rhythm.
2. Rotate [data wheel] to select rhythm tracks, tracks from 0-127.
3. Press the "Sync" button, you can start the rhythm by pressing the piano key.
4. In this mode, press the "timbre" button, rotate the "data wheel" to switch the timbre and change the rhythm again. Press the "Rhythm" button

Chord Pattern

1. When the system is playing the rhythm, press the "Chord" button to enter the chord mode.
2. Chord function :A0~F3# interval press the keys to play the chords that match the rhythm, and the tone of the chords changes with the pitch of the keys.
3. In Chord mode, press the "Chord" button to close the chord.

Volume Key Function

Press the Volume key and then rotate the data wheel to adjust the volume.

Demo Pattern

1. Press the "Demonstration Song" button to play all the demonstration songs. Press the "Start/Stop" button to stop the demonstration song.
2. Rotate the "Quick Pick" to select the demonstration song, the track from 0-79.
3. In this mode, press the "Tone" button and rotate the data wheel to switch the timbre. To switch the rhythm again, press the "Rhythm" button.

Metronome Features

Metronome is a metronome auxiliary function. You can select metronome by pressing the metronome key. The metronome has four variations: 1/4 beat → 2/4 beat → 3/4beat → 4/4 beat.

FUNCTION

Intensity Control Function

1. Press the [Intensity] key to turn on or off the strength, and the strength is on when the machine is started.


Dual Keyboard Mode

1. Press Dual Keyboard to enable/disable Dual keyboard mode.
2. The range of keys in this mode will be divided into two intervals :A0-C4T and C4#-C8.

Recording Related Function

1. Press the "Recording" button to enter the recording mode, and the digital screen displays "REC".
2. The recording function is to record notes by means of multi-channel real-time recording.
3. After entering the recording mode, the user can play the keys at will, and the system will automatically record the keys played by the user. When the recording block planned by the system is full, the recording automatically closes at most 2000 notes.
4. Press the [Rec.Play] button to play back the recording, but the playback function is valid only when notes are recorded. After the playback is complete, the playback function automatically returns to the original state.
5. After re-recording and system reset, recorded notes will be automatically refreshed.

CONNECTION INTERFACE

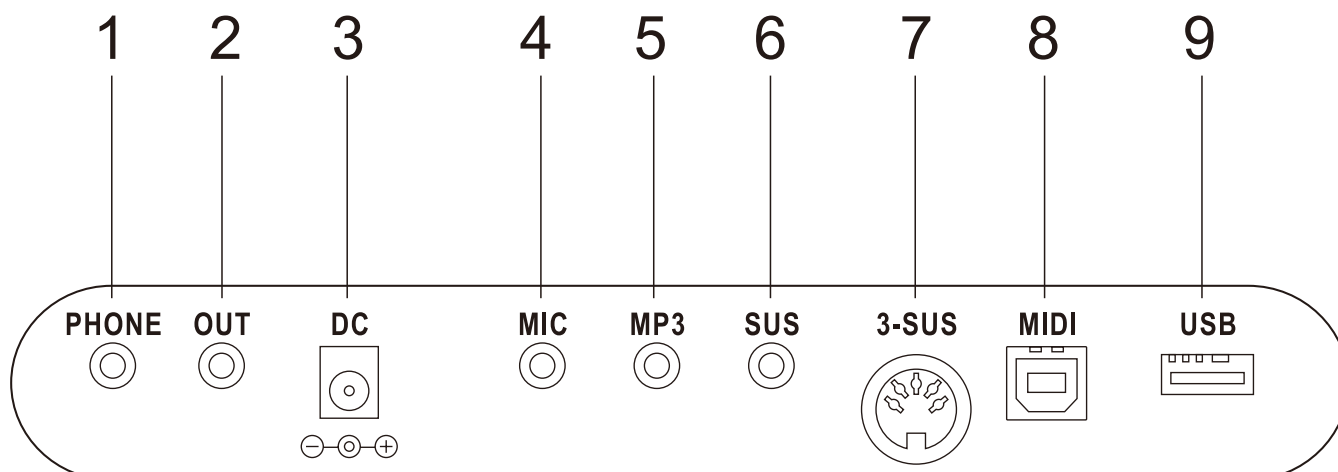

1. Headphone Jack (PHONE): Connecting headphones will automatically disable the built-in speakers, ensuring silent practice without disturbing others.
2. Audio Output (OUT): Connect external audio devices (e.g., amplifiers, speakers) via this line-level output port.
3. Power Input (DC): Operates within a DC voltage range of 9V–12V. Use only compatible power adapters.
4. Microphone Input (MIC): Built-in speakers act as an amplifier when a microphone is connected, ideal for vocal accompaniment.
5. Audio Input (MP3): Insert an audio cable into this port to connect smartphones/MP3 players for external audio playback.
6. Sustain Pedal (SUS): This pedal prolongs note resonance; depress appropriately based on musical expression needs.
7. Triple Pedal System (3-SUS): Full-featured triple pedals replicate grand piano functionality (soft/sostenuto/sustain) for professional performances.
8. MIDI Port: Connect to computers, smartphones, or tablets via USB-MIDI to transmit/receive MIDI signals with compatible software.
9. USB Port: Insert USB drives to play MP3 files directly (supports MP3/WAV/FLAC formats).

NOTE: PHONE, OUT, MIC, MP3, SUS interfaces are all 1/8" (3.5mm) interfaces.

80 DEMONSTRATION SONGS

0	Romance De Amor	27	Parade March	54	Going Hom Hands
1	Concerto D' Amour	28	Gewolt	55	Clap Your
2	Dream of Love	29	ChopinFi	56	The Fountain
3	Minuet From Larlesienne	30	March Militaire	57	A Comme Amour
4	Aledeman	31	Triumphal March	58	Unchained Melody
5	The River of Babylon	32	Carmen aragon	59	Il Barbiere di Siviglia
6	BachSong	33	Carman Overture	60	Santa lucia
7	Ballade	34	Canon	61	Troika
8	Beethoven Piano Sonatas	35	Katyusha	62	Hawthorn tree
9	Cancan	36	Lovely Smurf	63	The Maiden's Prayer
10	Get Tea	37	Clementine sonata	64	Santa Claus is Coming to Town
11	On wings of song	38	Croatian Rhapsody	65	Schubert Serenade
12	Come Back To Sorrento	39	The Blue Danube Waltz	66	Ballade pour Adeline
13	Clarinet Polka	40	The Thunderer March	67	SAY YOU SAY ME
14	Toreador Song	41	Let It Go	68	Counting The Ducks
15	Cuckoo waltz	42	The Butterfly lovers	69	Four Seasons Spring March
16	Russian dance music	43	Mary had a little lamb	70	Silence
17	Merry widow waltz	44	American patro	71	Swan Lake
18	Minuet in G	45	Fantasia	72	Susannah
19	Dove	46	MARRIAGE D' AMOUR	73	Sweet Honey
20	Old Franch	47	Fate Symphony	74	Turkish March
21	Haydn serenade	48	The Magic Flute-overture	75	Rhythm Of Rain
22	Ode to Joy	49	Jasmine	76	Happy Birthday to You
23	Fantasy March	50	Mozart	77	Little Brown Jug
24	Dance of the Flowers	51	Mozart symphony	78	Trout
25	Bridal Chorus	52	Cowboy	79	Moon
26	Innocent	53	Song Of Herding Sheep		

128 TIMBRE

0	Acoustic Grand Piano	26	Electric Guitar (jazz)	52	Choir Aahs
1	Bright Acoustic Piano	27	Electric Guitar (clean)	53	Voice Oohs
2	Electric Grand Piano	28	Electric Guitar (muted)	54	Synth Voice
3	Honky-tonk Piano	29	Overdriven Guitar	55	Orchestra Hit
4	Rhodes Piano	30	Distortion Guitar	56	Trumpet
5	Chorused Piano	31	Guitar Harmonics	57	Trombone
6	Harpsichord	32	Acoustic Bass	58	Tuba
7	Clavichord	33	Electric Bass(finger)	59	Muted Trumpet
8	Celesta	34	Electric Bass (pick)	60	French Horn
9	Glockenspiel	35	Fretless Bass	61	Brass Section
10	Music box	36	Slap Bass 1	62	Synth Brass 1
11	Vibraphone	37	Slap Bass 2	63	Synth Brass 2
12	Marimba	38	Synth Bass 1	64	Soprano Sax
13	Xylophone	39	Synth Bass 2	65	Alto Sax
14	Tubular Bells	40	Violin	66	Tenor Sax
15	Dulcimer	41	Viola	67	Baritone Sax
16	Hammond Organ	42	Cello	68	Oboe
17	Percussive Organ	43	Contrabass	69	English Horn
18	Rock Organ	44	Tremolo Strings	70	Bassoon
19	Church Organ	45	Pizzicato Strings	71	Clarinet
20	Reed Organ	46	Orchestral Harp	72	Piccolo
21	Accordion	47	Timpani	73	Flute
22	Harmonica	48	String Ensemble 1	74	Recorder
23	Tango Accordion	49	String Ensemble 2	75	Pan Flute
24	Acoustic Guitar (nylon)	50	Synth Strings 1	76	Bottle Blow
25	Acoustic Guitar (steel)	51	Synth Strings 2	77	Shakuhachi

128 TIMBRE

78	Whistle	104	Sitar		
79	Ocarina	105	Banjo		
80	Lead 1(square)	106	Shamisen		
81	Lead 2 (sawtooth)	107	Koto		
82	Lead 3 (caliope lead)	108	Kalimba		
83	Lead 4 (chiff lead)	109	Bagpipe		
84	Lead 5 (charang)	110	Fiddle		
85	Lead 6 (voice)	111	Shanai		
86	Lead 7 (fifths)	112	Tinkle Bell		
87	Lead 8 (bass+lead)	113	Agogo		
88	Pad 1 (new age)	114	Steel Drums		
89	Pad 2 (warm)	115	Woodblock		
90	Pad 3 (polysynth)	116	Taiko Drum		
91	Pad 4 (choir)	117	Melodic Tom		
92	Pad 5 (bowed)	118	Synth Drum		
93	Pad 6 (metallic)	119	Reverse Cymbal		
94	Pad 7 (halo)	120	Guitar Fret Noise		
95	Pad 8 (sweep)	121	Breath Noise		
96	FX 1(rain)	122	Seashore		
97	FX 2 (soundtrack)	123	Bird Tweet		
98	FX 3 (crystal)	124	Telephone Ring		
99	FX 4 (atmosphere)	125	Helicopter		
100	FX 5 (brightness)	126	Applause		
101	FX 6 (goblins)	127	Gunshot		
102	FX 7 (echoes)				
103	FX 8 (sci-fi)				

128 RHYTHMS

0	80s Pop	26	Baiao	52	Tango 1
1	16 beat 1	27	Pop dance 3	53	Tango 2
2	8 Ballad	28	Bachata	54	Housel
3	Soul 1	29	Bossa noval 2	55	Jazz waltz
4	70s Rock	30	Polka 1	56	Bolero
5	Afro pop	31	Blues 1	57	New soul
6	Samba pop	32	80s Soul	58	Bossa nova 3
7	60s Soul	33	90s Soul	59	Shuffle 1
8	70s Soul	34	Popular waltz	60	Shuffle 2
9	Funky	35	American march	61	House 2
10	16 Beat slide	36	Tango	62	Merenguel
11	Pop dancel	37	Tarante	63	Salsa
12	Pop dance 2	38	Funk pop	64	Latin swing
13	Hard rock	39	Rock waltz	65	Thailand
14	Fusion jazz	40	Mideast	66	Reggae
15	Funk slide	41	Jazz waltz 1	67	Soul 2
16	Aor	42	Jazz waltz 2	68	Soul 3
17	Love ballad 1	43	16 Beat tune	69	Merengue 2
18	Love ballad 2	44	Polka 2	70	Polka3
19	Funky soul	45	Waltz	71	16Reggae
20	Classic pop	46	African	72	Slow rock 1
21	c&w 1	47	Swingl	73	Slow rock 2
22	c&w 2	48	Vallenato	74	Slow soul 3
23	Bossa noval 1	49	Bequine	75	Jorpo
24	Rock roll	50	Samba 1	76	Lambada
25	Rock cha-cha	51	Samba 2	77	Love ballad3

128 RHYTHMS


78	Plena	104	Rhumba 4		
79	Chinal	105	Funk Samba		
80	Acid	106	Rhumba 5		
81	8 Beat modern	107	Samba 3		
82	Country folk	108	Hard beat		
83	Soul 4	109	Mambo 1		
84	City pop	110	Disco soul		
85	Calypso	111	Mambo 2		
86	Love ballad 4	112	Cobmo		
87	Love ballad 5	113	Swing beat		
88	Soul 5	114	China 3		
89	Bluegrass	115	Band marche 1		
90	16 beat 2	116	Band marche 2		
91	China 2	117	Band marche 3		
92	Soul 6	118	Big band 1		
93	Kinetic 1	119	Big band 2		
94	Kinetic 2	120	Soul 7		
95	Funk disco	121	Soul 8		
96	Cobmo disco	122	Swing 2		
97	Twist	123	Swing 3		
98	Euro beat	124	Swing 4		
99	Rhumbal	125	Habanera		
100	Euro soul	126	Bachatal		
101	Rhumba 2	127	Bachata 2		
102	Rhumba 3				
103	Jazz Samba				

PERCAUTIONS

Special reminder: This product is an electronic product. After electrified, the loudspeaker (two horns or one horn, earphone) has some current sound as a normal phenomenon. It is necessary to keep away from these devices, such as radio, routers, TV receivers, refrigerators, washing machines, etc.

Power Supply

This product can be supplied by standard indoor wall socket, please use only the power cord specified by this product. When you do not use, please be sure to turn off the power supply. If you do not use it for a long time, please pull out the power cord and keep it properly.

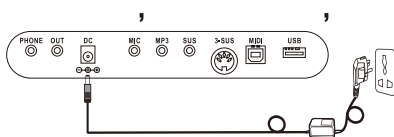

Sign

In order to ensure that you are safe and correct use of this product, to prevent damage to the user and other people, and to the financial damage, the specification and the product marked with a series of safety signs. All kinds of signs and their meaning.

Warning

This sign indicates that, if you ignore the flag and error operation of this product, there is a potential risk of death or serious injury to personnel.

Attention

This sign indicates that, if you ignore the flag and the wrong operation of this product, there is a potential risk of injury or other financial damage caused by personnel.

Logo example



This triangle mark indicates that the user should pay attention to the matters. (left case is be careful electric shock)



The circular sign painting a slash said prohibited matters. The icon in the logo or next to the specific content of the ban. (left case is no disassemble)



Black dots indicate matters must be complied with. Icon in this sign indicates the specific content that must be followed. (left case is the power plug must be pulled out of the socket)

Warning

Smoke, odor, overheating

When the product is smoking, emitting odors or overheating, it continues to be used to cause fire and electric shock. In the event of such a situation, the following operations shall be carried out immediately.

- 1 Turn off the power supply.
- 2 Pull the plug from the power outlet.
- 3 Contact your agency

Power cord

● Improper use of power supply leads to danger of fire and electric shock. Must observe the following precautions.

- Special power lines specified for this product must be used.

- An AC power source with output voltage within the household rated voltage must be used.

- It is not allowed to overload the power socket and the power extension line.

● Improper handling of power lines, resulting in damage or rupture of the fire and the risk of electric shock. Must observe the following precautions.

- Do not place heavy objects on the power line or make them heated.
- Do not attempt to transform the power cord or bend it too much.
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, replace the power cord of the same type.
- Do not use wet hands to touch the power cord and plug, otherwise there is a risk of electric shock.

● Please use the power cord in the place where the water will not be spilled. Water has the risk of fire and electric shock.

● Never put a vase or any other container with water in this product. Water has the risk of fire and electric shock.

● Do not let the minor contact plug and power line or a connecting plate, Minor knowledge of useless electricity safety causes danger of electric shock.

● Improper use of power supply leads to danger of fire and electric shock. The following matters of attention must be observed.

- Do not place the power cord near the furnace or other heat sources.
- Unplug the power cord from the power outlet. Must grasp the plug body.

- Plug the power cord into the power socket.
- Before connecting or cutting off the power cord, make sure that the power is off.

- The power cord should be removed from the electrical outlet of the wall before a thunderstorm occurs or traveling or before other long leave.

- At least once a year, unplug the power cord from the wall outlet and clean the dust around the plug.

Don't burn this product

Do not put this product into the fire, otherwise it will cause the burning of wood products and the explosion of the internal electronic components. There is a danger of fire and personnel injury

Water and foreign matter

Water and other liquids and (metal) into this product has the risk of causing fire and electric shock. The following operation should be performed immediately when the above situation occurs.

- 1 turn off the power supply
- 2 if the power cord is used for power supply, it will be pulled off from the wall of the power outlet
- 3 contact your dealer.

Dismantling and rebuilding

Do not disassemble this product or transform it in any way. Otherwise it will be hazardous to electrical shock, burns or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your dealer.

WIRELESS COMMUNICATION

Automatically turn on Wireless Communication when starting up.

Wireless Audio : AKLOT-GO Password: 8888

Wireless MIDI: Aklot-Go Password: 8888

By connecting this instrument to a smart device (such as a smartphone or tablet), you can input audio from devices equipped with wireless audio transmission, such as smart devices, into this instrument. Then, you can listen through the built-in speaker of this instrument. This instrument is equipped with wireless audio functionality.

Connecting to smart devices such as smartphones or tablets allows you to enjoy the following functions: Listen to audio playback from smart devices through the instrument's speaker, or use compatible smart device applications to make the instrument's performance more relaxing and enjoyable.

About Wireless Communication

- Wireless communication is used for wireless communication between devices in the 2.4 GHz band within a range of about 10 meters (33 feet).
- Handles wireless audio transmission communications
- The 2.4GHz band used by wireless communication equipment is the radio band for many device types. Although the technology used in wireless communication devices can reduce the impact of other components in the same radio band, this impact will reduce the speed and distance of communication, and in some cases may interrupt communication.
- The speed of signal transmission and communication distance vary according to the distance between communication devices, the presence of obstacles, radio wave conditions and the type of equipment.
- AKLOT does not guarantee all wireless connections between this device and devices compatible with wireless audio transmission.

.Aklot

Auralis Range Collection by Aklot

If there is anything you would like to say to us

contact our brand after-sales: cs@aklot.com

www.aklot.com

