




Aetheris Clarinet Collection by Aklot

CARE AND MAINTENANCE MANUAL

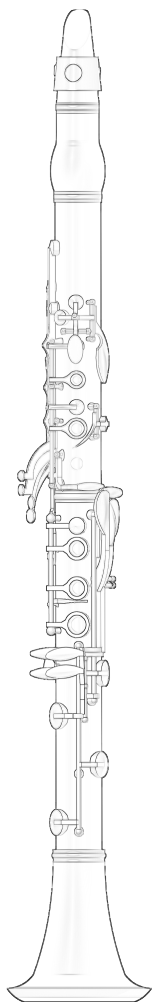

Where Tone Takes Flight

Thank you for choosing AKLOT!

To ensure optimal performance and longevity of your instrument, please read this manual carefully.

Warranty

Any questions about the use of the product, you can contact our brand after-sales staff. We will solve your problem until it is resolved.

◆ 1-Year Warranty

◆ 24/7 Online Support

For guidance on product use and warranty extension, please contact our brand after-sales staff via email: [\[cs@aklot.com\]](mailto:cs@aklot.com)

If any questions related to orders, please contact the seller through the shopping platform.


■ Maintenance of woodwind instruments

Woodwind instruments feature precision-engineered mechanisms. Handle them with extreme care—even minor negligence can cause significant performance damage. Cultivate laboratory-grade maintenance habits to preserve sound quality and longevity.

1. To maintain a high degree of cleanliness inside and outside the instrument is the first condition of the maintenance of musical instruments, each time after the use of a soft cloth without lint to wipe clean, wrapped in a clean cloth, into the box.
2. The instrument's transmission system is very precise science, in order to maintain its performance, must often be a small amount of oil, but remember not to let the oil flow to the soft cushion, while checking the top and adjust the screws are loose, you must keep each part always ensure that the correct position.
3. The newly purchased wooden tube of the instrument in order to prevent tube cracking, it is best to use before the inner chamber on a oil, the method is to use a fine wire bolted to a small cloth ball, dipped in oil back and forth a few times can be pulled, with the oil is best for olive oil or refining into a liquid form of hen oil.
4. Musical instruments used for a period of time, the cushion may be sticky phenomenon, can be used to clean thin cloth or paper strips pressed under the cushion, gently press the finger keys back and forth a few times can be pulled on.
5. Long-term use may deform pads, causing air leaks. First identify leaking keys, then professionally reseal the pad. For temporary relief: Gently tighten the tone hole cover with pad-saver cord and let rest 24+ hours – but permanent pad replacement is recommended for lasting solutions.
6. The sections are not good between the insertion of the cork can be coated with some lubricant.
7. Do not store the instrument in high temperature, humidity, dust and corrosive gases in the environment, so as not to cause deformation of the instrument, cracking, rust, corrosion and other damage.
8. Woodwind instrument reed protection is very important, after each use must be rinsed with water. Dry and put away, play to avoid teeth touch bad, short breaks must be set on the protective cap.

9. Do not resolve issues you're unsure of. Refer to professional maintenance to prevent risks.
10. The silver or nickel coating on your instrument may discolor over time, but this won't affect performance. Such discoloration can be easily removed with proper maintenance. Always use a specialized cleaner compatible with the surface coating.

■ PRODUCT SPECIFICATIONS

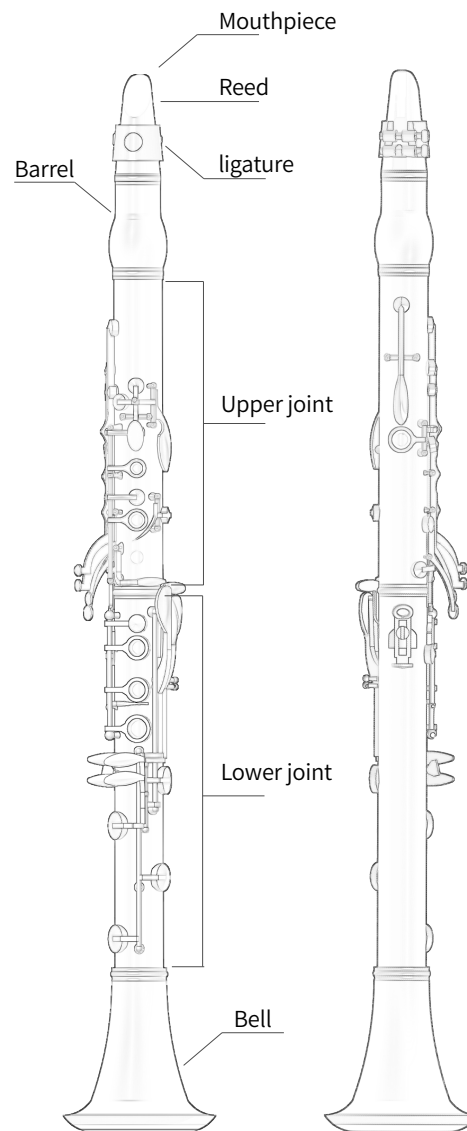


■ INSTALLATION GUIDE

A. Start assembling your clarinet

1. Lubricate the cork at the articulations

- ※ Remove the three sections - upper joint, lower joint, and mouthpiece - from the instrument case, and a small amount of cork paste needs to be applied to the cork tenons of all three sections.
- ※ Open the cork paste box and rub a small amount of cork paste with your index finger. Fig. 2
- ※ Apply the cork evenly with your index finger. Repeat until the cork tenons of all three pieces are evenly coated, then put all three pieces back in the instrument case Fig. 3
- ※ Cover your cork paste case and return it to the instrument case.

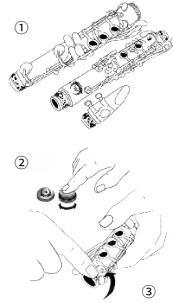

▲ Hold the Clarinet sections gently! Don't squeeze the keys, they may bend!

2. Assembling the bell and lower joint


- ※ Locate the bell and lower joint from the instrument case and remove these 2 parts.
- ※ Align the cork of the lower joint with the bell port.
- ※ Gently rotate the bell in a back-and-forth rocking motion until the lower joint's cork seats fully in the bell socket. Never twist continuously in one direction—maintain alternating rotation as illustrated.



▲ Do not force the sections together! Slowly move them back and forth. Don't squeeze the Lower Joint.


3. Assembling the upper joint

- ※ Locate the upper joint from the instrument case and remove it.
- ※ As shown, there is a conical key above the upper joint
- ※ Please press as shown to raise the key bridge. Fig. 1
- ※ Gently rotate the upper joint back and forth to ensure that the cork is fully inserted into the interface. Please note: During this assembly process, you must keep pressing the conical key to raise the key bridge; otherwise, the clarinet will be damaged.



4. Assembling Tuning Tubes

- ※ Locate the tuning tube from the instrument case and remove it.
- ※ Stand your clarinet upright and do not lay it flat!
- ※ As with the rest of the assembly process, rotate the two sections in both positive and negative directions to allow the cork dowel to be fully screwed in.




▲ Your Clarinet is now almost assembled. It is getting longer. Be careful not to drop or hit your Clarinet on anything.

5. Finally, install the mouthpiece

- ※ Locate the mouthpiece from the instrument case and remove it.


■ INSTALLATION GUIDE

- ※ Now there is a cap and a ligature on top of the mouthpiece, please take off the cap and put it back in the case, then loosen the screws on the ligature and take off the ligature and put it back in the case as well.



- ※ Upright the clarinet and then rotate the mouthpiece back and forth as with the rest of the assembly so that the cork fully occludes the interface as shown in the diagram Fig. 1

- ※ Please align the mouthpiece and overtone key as shown in Fig. 2 so that the centerline of the mouthpiece platform surface is in a straight line with the overtone

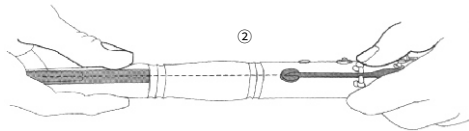


▲ When handling reeds, avoid contact with the delicate tip. Always press the bridge key before separating upper and lower joints. Store each section in its designated case compartment without forcing. If the case lid doesn't close easily, verify all parts are correctly positioned.

6. Assembling your mouthpiece, reed and ligature


- ※ This is one of those moments in your assembly process that requires fine control, so concentrate and proceed with care.

B. Installation of the reed

- ※ Locate the reed clip from the accessory compartment and remove it.

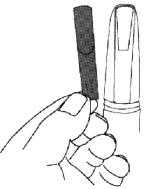


- ※ Carefully remove the reed from the reed holder and hold it in your mouth for a moment; the reed must be moistened before installing it on the mouthpiece.

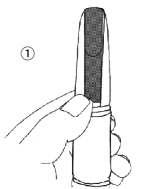


- ※ After moistening the reed so that the plane of the reed is square to the platform of the mouthpiece, place the reed on the mouthpiece and then make the top of the reed flush with the top of the mouthpiece. As shown in Fig. 1

- ※ Locate the ligature, which must now be kept loose while holding the reed steady with your left index finger, and carefully attach the ligature to the reed and mouthpiece.
- Be careful not to touch the thin part of the reed, then move the ligature down until it covers the smooth part of the mouthpiece and reed. Fig. 2

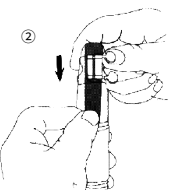

- ※ Now gently tighten the screw on the ligature, but not so tight that it holds the reed in place when you play. As shown in Fig. 3

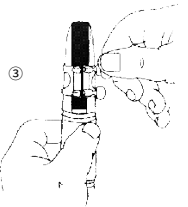

- ※ Now that your clarinet is absolutely fully mounted, all of its logos should be aligned in a straight line.

■ TROUBLESHOOTING

Common causes of failure and prevention methods

Problem	Reason	Preventive Approach
Leaking air, unstable	1. The position of the cushion does not match the location of the sound holes. 2. The leather on the keyboard has cracked. 3. The height of the mat is not sufficient.	1. Do not apply excessive force to the keys, and do not place any objects on the instrument when closing the lid of the case 2. When playing outdoors, the pads tend to get dusty, so remove them carefully after each performance. 3. Don't exert too much force, as this may damage the cork and felt behind the keys or cause them to shift, resulting in inaccurate pitch.
Button displacement	Lifting the instrument case without closing the lid may cause the instrument to be struck when it hits the ground.	Confirm the inspection after closing the lid of the box.
The mouthpiece is difficult to install.	Because the mouthpiece and tuning tube sockets were not wiped clean of moisture in a timely manner after the instrument was played.	After each performance, wipe off the moisture at the mouthpiece and tuning tube in time.
The buttons are not responsive.	1. Because the instrument falls to the ground, after the impact pressure tube body or close the lid of the box when the instrument is placed on the items and pressure tube body, so that the tube body caused by bending. 2. Caused by dislodged needle springs.	1. After playing, always store your instrument in its case. Ensure nothing presses against the keys during storage or installation. Keep it protected when not in use. 2. When doing maintenance work, please be careful not to let the needle spring hook the cleaning cloth so that it will not fall off.
Noise when pressing keys	1. The cork and felt on the keys are thinning from wear and tear. 2. It could also be that the keys were pressed down by the instrument when it fell or hit something, causing the keys to collide with the body of the instrument. 3. Wear and tear on the part of the key where it is pressed. 4. Loose screws can be repaired by tightening the screws.	1. Be careful not to dislodge the cork and felt. 2. After the performance, please put your instrument back in its case. Please take care of your instrument after the performance. 3. To prevent wear, use key lubricant once a month (1 - 2 drops/position). 4. Since woodwind instruments are prone to losing small screws, please check the tightness of the screws frequently.