An illustration of two piano keys, one white and one black, positioned vertically on the left side of the page. The white key is on the left, and the black key is on the right. Both keys have a dark grey or black top surface and a lighter grey or white bottom surface. The keys are connected by a thin vertical line.

USER MANUAL

Aklot

DIGITAL PIANO **LS01Pro**

Thank you for choosing Aklot
to be a part of your musical story.

Please Read This Manual Carefully Before Use.

CONTENTS

Product Specifications	01
Piano Assembly	02
1. Piano Stand Installation	03
2. Music Stand Installation	04
3. Pedal installation	04
Panel Function	05
Panel Instruction	07
Triple Pedal Socket	10
Wireless Communication	11
Maintenance	12
Troubleshooting	13
Safety Precautions	14

Warranty

Any questions about the use of the product, you can contact our brand after-sales staff. We will solve your problem until it is resolved.

- ◆ 1-Year Warranty
- ◆ 24/7 Online Support


For guidance on product use and warranty extension, please contact our brand after-sales staff via email: cs@aklot.com

If any questions related to orders, please contact the seller through the shopping platform.

Product Specifications

Number of Keys	88
Type of Keys	Weighted, Graded Hammer Action
Touch Sensitivity	Soft 1/2, Normal, Hard 1/2
Polyphony	128
Voice	4
Headphones Jack	2 x 1/4"
Audio Inputs/Outputs	2 x 1/4"
MIDI USB	In / Out
Pedal Inputs	Triple Pedal Socket
Built-in Speakers	Yes

Piano Assembly

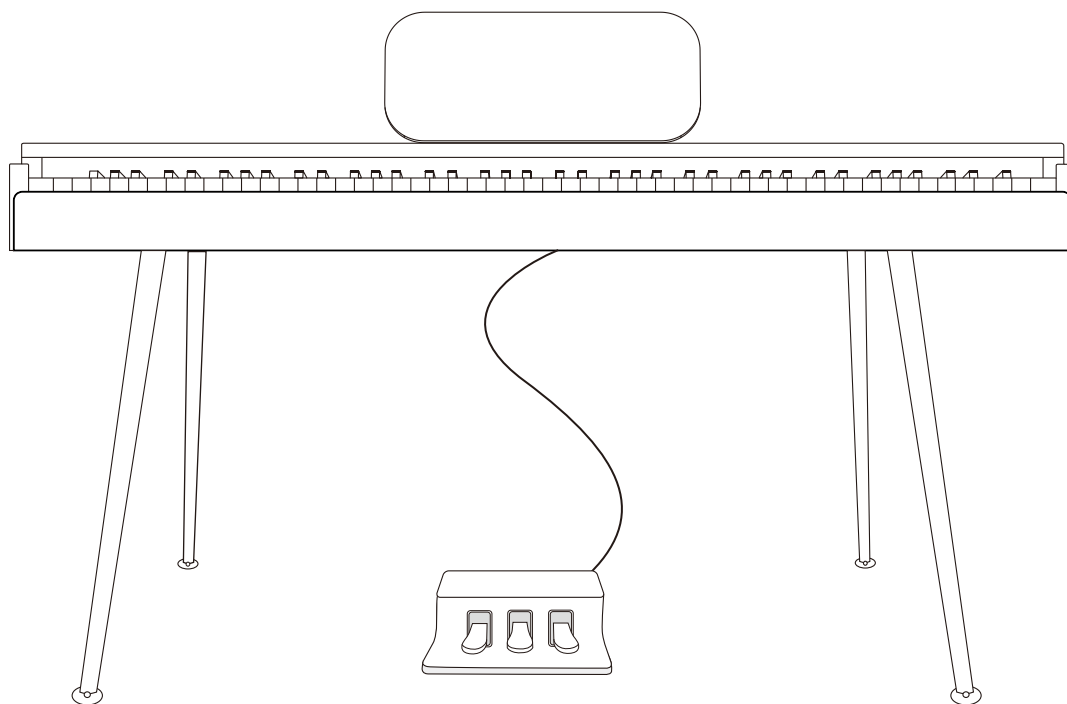


Assembly List

NO.	Name	Quantity
1	Piano Stand	4PC
2	Piano Body	1PC
3	Music Stand	1PC
4	Triple-Pedal	1PC
5	Power Adapter	1PC
6	Piano Stand Screw M6x15	16PCS+2PCS For Replacement
7	Music Stand Thumb Knob	2PCS +1PCS For Replacement
8	Allen wrench	1 PCS

1. Piano Stand Installation


Note that the body is heavy, please put the body in a stable place before installation. It is easy to install the legs in the wrong direction. Therefore, install each leg in an outward direction.

Carefully turn the piano over and align the piano stand with the pre-drilled screw holes on the piano body. Use an Allen wrench to tighten the M6x15 screws, securing the piano stand firmly to the piano body.

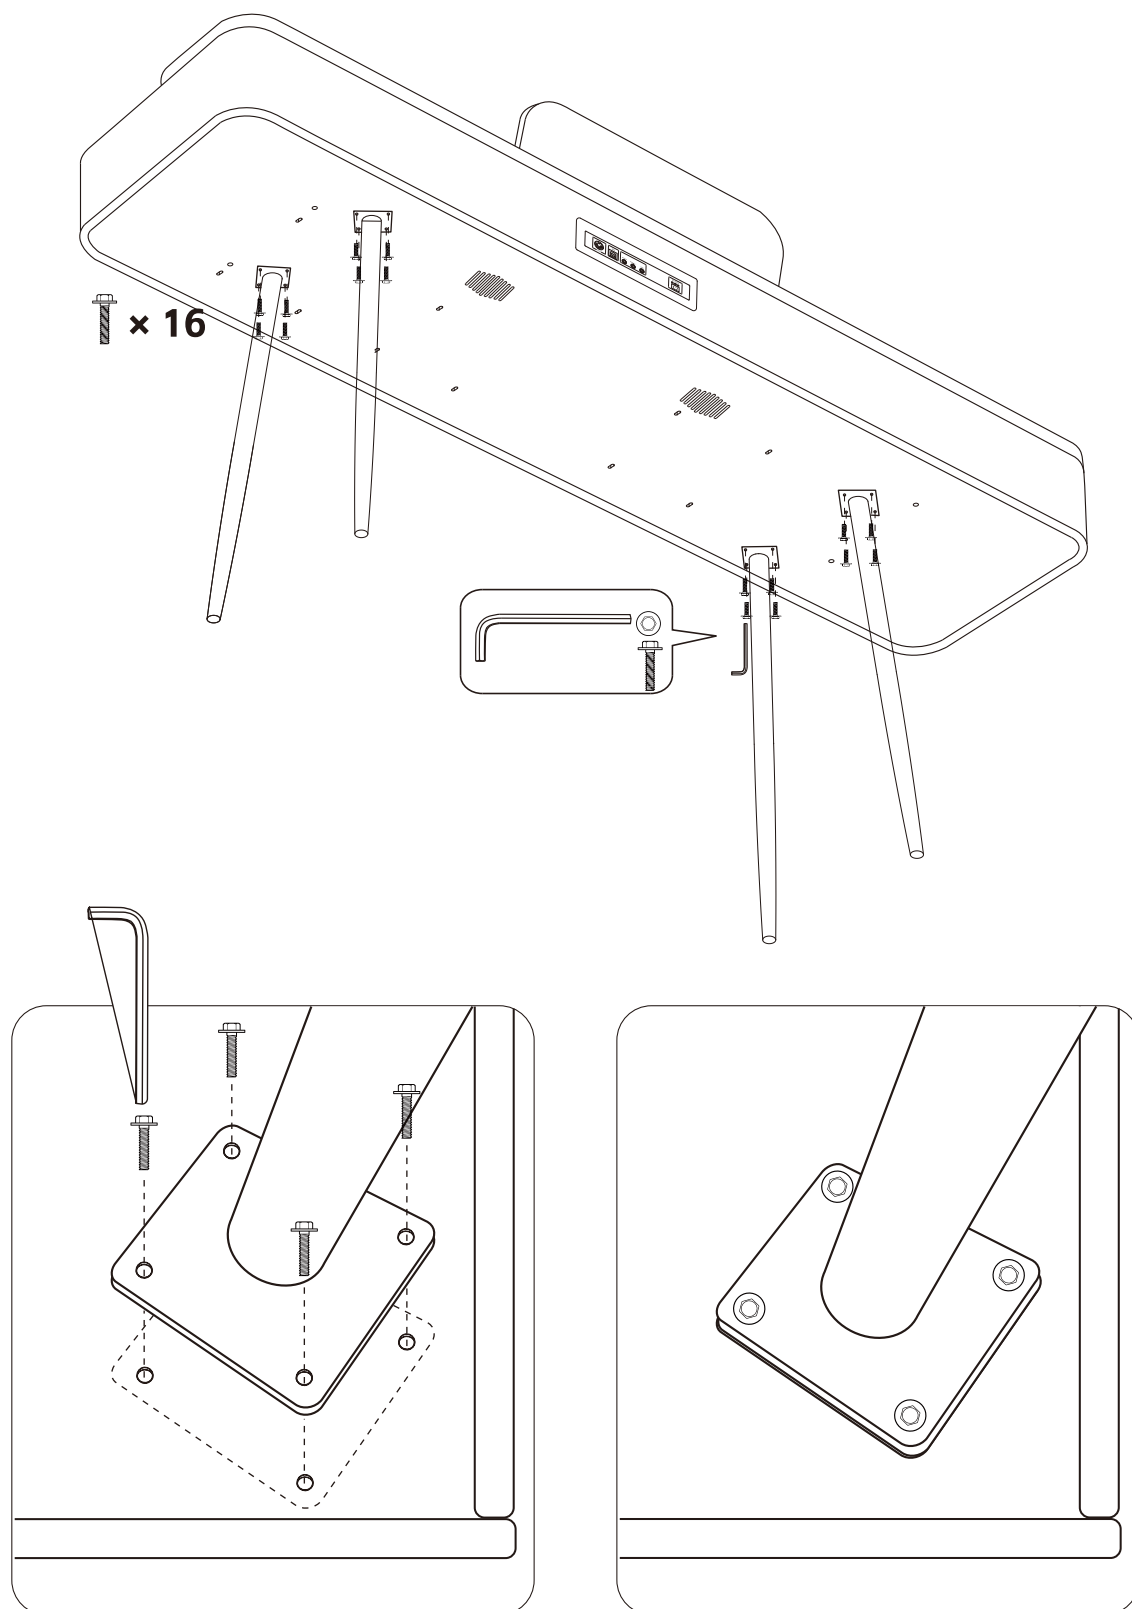


2. Music Stand Installation

Align the music stand with the pre-drilled holes and tighten the music stand thumb knob securely.

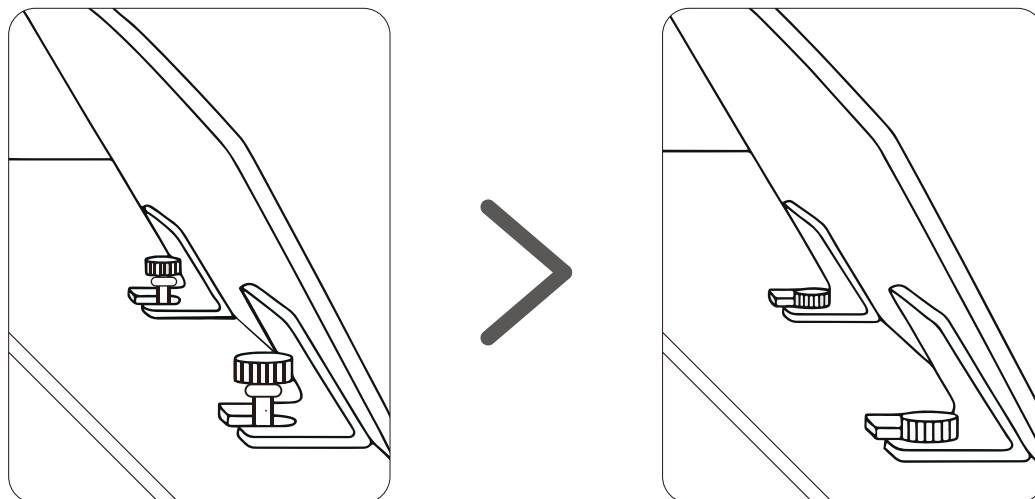


3. Pedal Installation

Connect the triple pedal unit to the pedal socket located on the bottom panel.

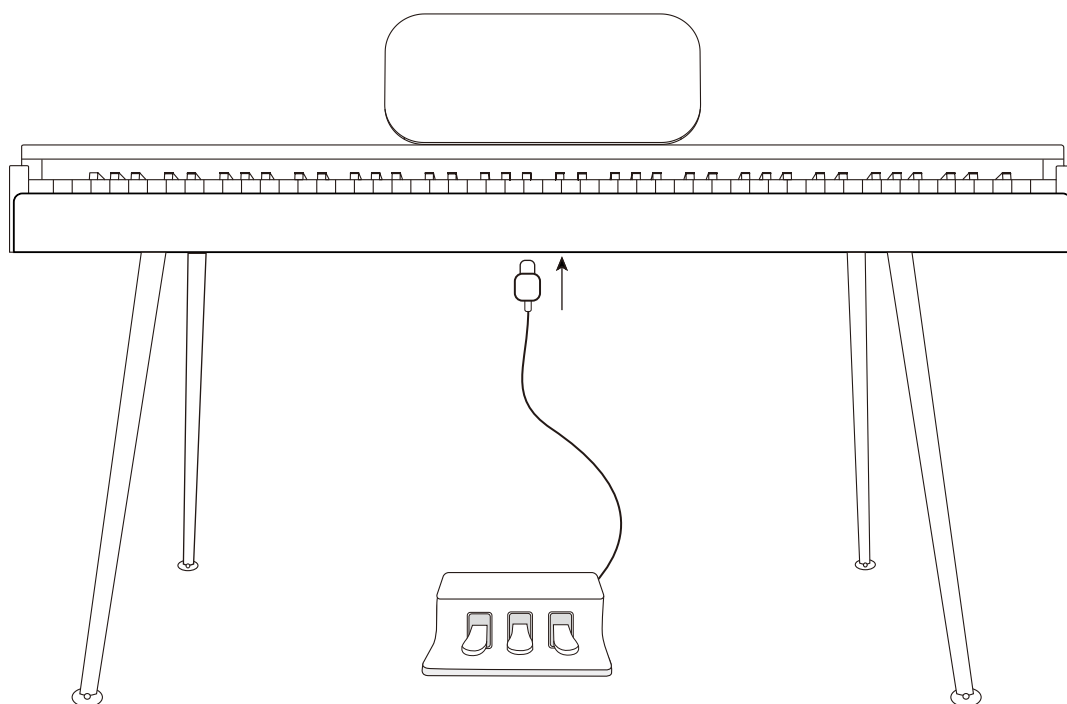

Panel Function

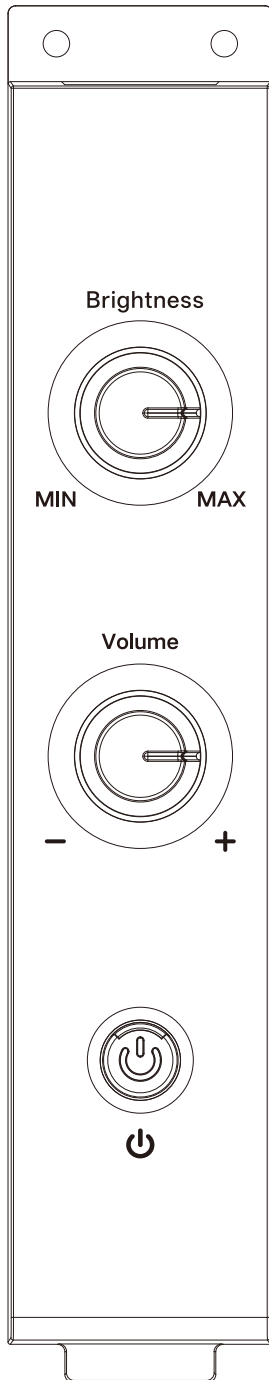

① Brightness

The knob is for the piano tone brightness adjustment, turn to the left to reduce the tone brightness, turn to the right to increase the brightness.

② Master volume


Note that please turn the volume button to the left half before turning on to prevent the volume from being too high and current shock damage.

Turn the knob to the left to reduce the volume, turn the knob to the right to increase the volume. Please do not keep the volume at maximum to prevent damage to the sound.

③ Power switch

When the switch light is connected to the power supply, it will be constant, but at this time, the system is shut down, and the power button can be turned on by pressing the power button. Press cut again to switch to Off state.

Panel Function

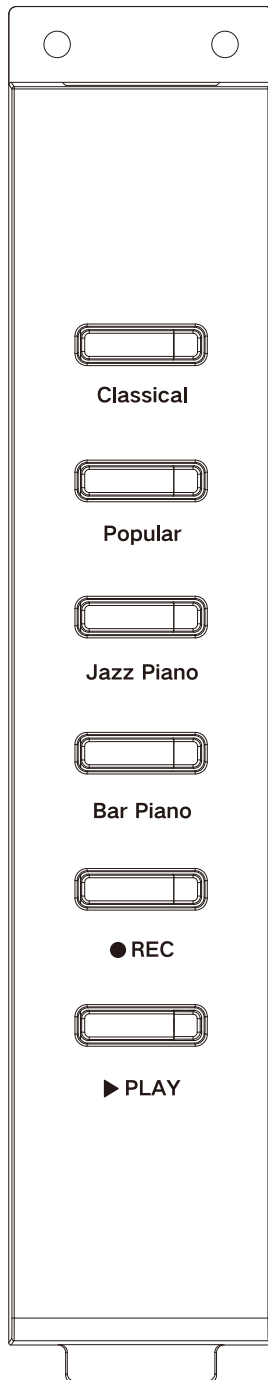

④ Classical piano

Press the button and the tone changes to a classical tone.

⑤ Pop piano

Press the button to change the tone to a popular tone.

⑥ Jazz piano

Press the button and the tone changes to jazz.

⑦ Bar piano

Press the button and the tone changes to a bar tone.

⑧ Recording


Press the button to start recording and press it again to end recording.

⑨ Playback

Press the button to start playing the last recording and press again to end the recording.

Panel Instruction

Bottom Panel

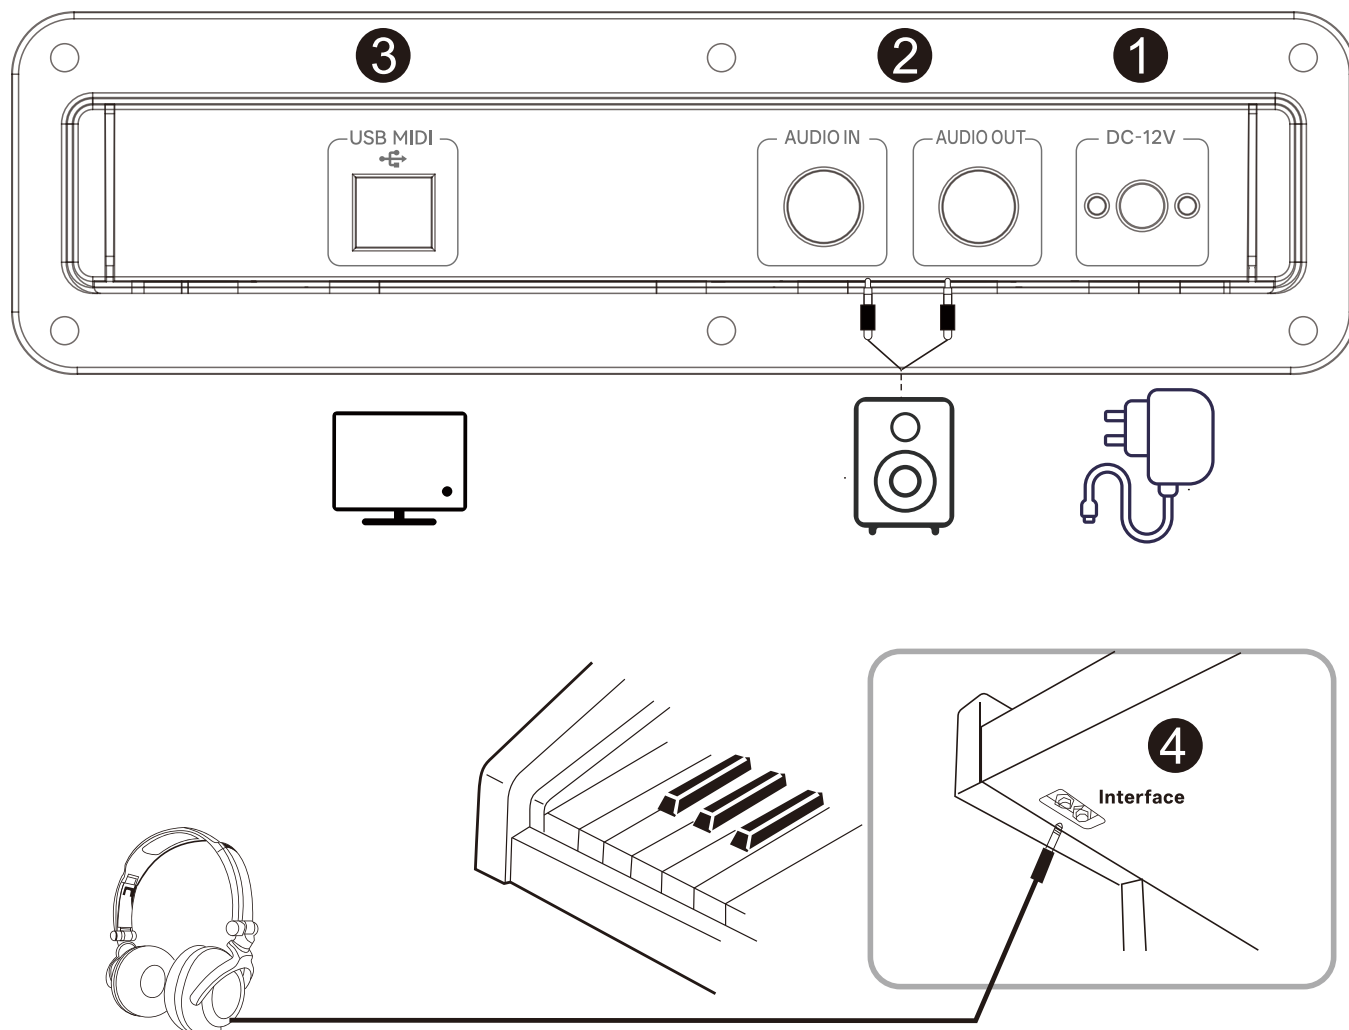


1 Power Input Port

Connect the power cord when using. Insert one end of the cord into the power socket behind the piano and plug the other end of power adapter into the 100V-220V domestic power socket.



Note:


Please unplug the power cord and save it in an appropriate way when it is not used for a long time.

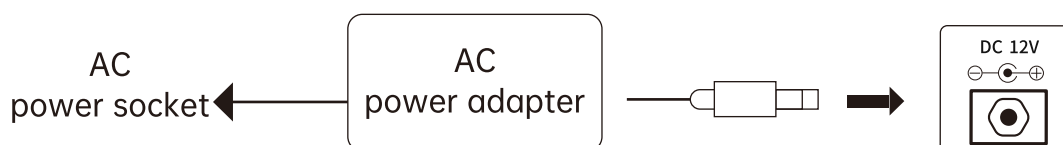

Panel Instruction

② Audio Input/Output Sockets

The input / output socket on the back panel can be used in connecting to stereo audio system, mixer, recorder or other audio devices.

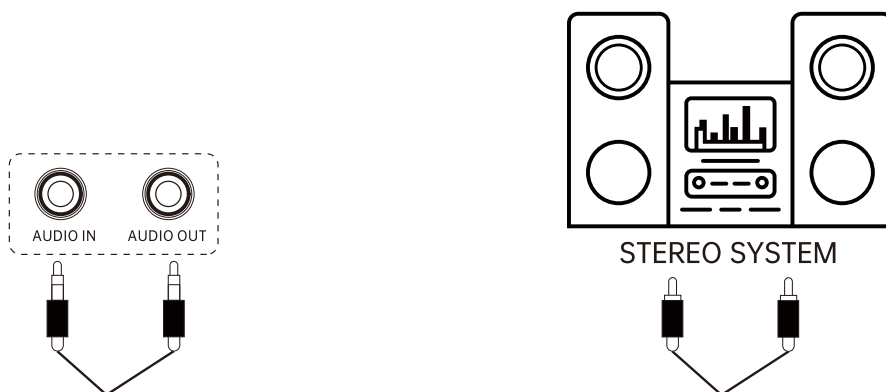


Note:



- Please be sure the power supply of all the equipment have been turned off before connecting or disconnecting other devices.
- Turn down the volume of all devices to a minimum before turning on the power of devices.

③ MIDI USB Port

Connect the digital piano to a computer via MIDI to perform, compose, and store music using software. Play or accompany edited music through the piano.

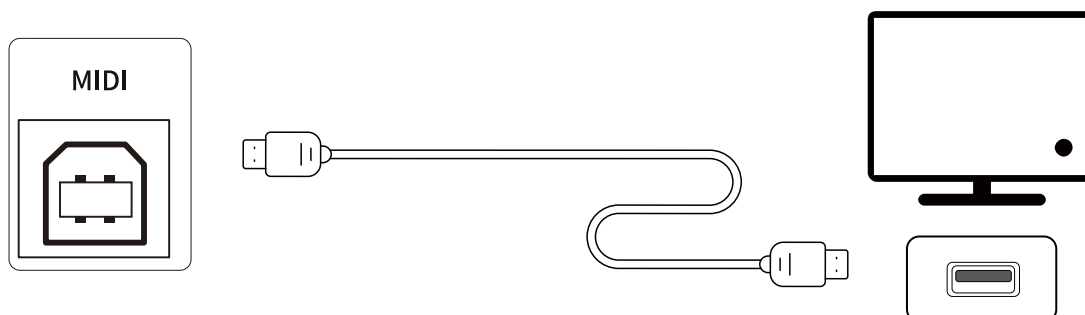

Note:





- Avoid setting the MIDI audio device as both Input & Output to prevent sound overlap.
- Do not use a USB hub when connecting via a MIDI USB Cable.

Panel Instruction

④ Dual 6.35mm Headphone Jack

The output of electronic keyboard built-in speakers will be automatically cut off when headphone is connected so as not disturb others when playing.

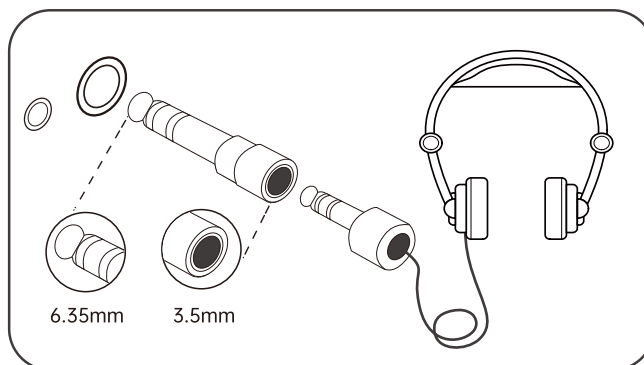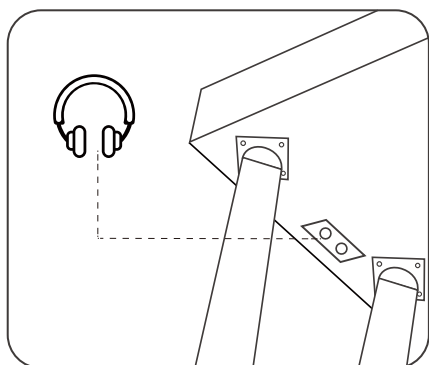

NOTE:



- Please avoid wearing headphones for a longtime in high volume, preventing hearing damage.
- We provide headphones with a 3.5mm plug and a 6.35mm adapter. For frequent use, the 6.35mm jack on the left offers easier access compared to the 3.5mm jack located below.

Triple Pedal Socket

Connect the triple pedal unit to the pedal jack located on the bottom panel.



Damper (Sustain) Pedal (Right):

Sustains notes even after keys are released, creating a richer sound. Often supports half-pedaling for nuanced control (on higher-end models).

Sostenuto Pedal (Middle):

Sustains only the notes played while the pedal is pressed, allowing selective sustain. Less common in entry-level digital pianos.

Soft Pedal (Una Corda, Left):

Lowers volume and slightly alters timbre for quieter, muted tones.

Wireless Communication

Automatically turn on Wireless Communication when starting up.

Device number: AKLOT AUDIO Password:AKLOT MIDI

By connecting this instrument to a smart device (such as a smartphone or tablet), you can input audio from devices equipped with wireless audio transmission, such as smart devices, into this instrument. Then, you can listen through the built-in speaker of this instrument. This instrument is equipped with wireless audio functionality.

Connecting to smart devices such as smartphones or tablets allows you to enjoy the following functions: Listen to audio playback from smart devices through the instrument's speaker, or use compatible smart device applications to make the instrument's performance more relaxing and enjoyable.

About Wireless Communication

- Wireless communication is used for wireless communication between devices in the 2.4 GHz band within a range of about 10 meters (33 feet).
- Handles wireless audio transmission communications
- The 2.4GHz band used by wireless communication equipment is the radio band for many device types. Although the technology used in wireless communication devices can reduce the impact of other components in the same radio band, this impact will reduce the speed and distance of communication, and in some cases may interrupt communication.
- The speed of signal transmission and communication distance vary according to the distance between communication devices, the presence of obstacles, radio wave conditions and the type of equipment.
- AKLOT does not guarantee all wireless connections between this device and devices compatible with wireless audio transmission.

Maintenance

Product Maintenance

Careful and good maintenance and production of this product play a very important role in lengthening the service life of the product and decreasing faults.

Avoid heating, damping, or direct sunlight

You shall not have the musical instrument exposed to sunlight in excess, or placed where is near air conditioner or baking hot

you should not use it near TV set or radios

This musical instrument may lead to video or audio disturbance on TV set and Radio. In that case, you shall move the musical instrument away from TV set or radio

You should not use paint, thinner or similar chemicals to clean

This musical instrument may lead to video or audio disturbance on TV sets and radio. In that case, you shall move the musical instrument away from the TV set or radio

You should avoid quake and collision

The product shall be handled with care when removing with strict prohibition of strenuous quake and collision in order not to make outer shell or innerelectronic components damaged.

Avoid using where is easy to be affected by abnormal high and low temperatures

Too high or low temperature may make pictures on LCD screen turn to be gray and hard to be identified. When you have the product under normal temperature, the case will be corrected automatically.

Safety Warning:

This product is electronic and electrical.

The long-term use of the circuit components may cause failures. It is recommended that the safe use period is 2 years.

After the safe use period, please regularly inspect the product. If you find any problems, please do not continue to use it. Cause a safety accident!

Troubleshooting

Issue	Reason	Solution
There was no sound on the keyboard.	1. Volume Controller Set at Minimum Position. 2. Headphones or Plug Converters insert headphone jack. 3. The power supply is not connected, or the piano is off.	1. Turn the volume to the right maximum volume. 2. Remove the original connector form the headphone jack.
The pedals don't work.	1. Connecting line jack of pedal is not plugged into piano. 2. Pedal plug loose.	1. Plug the pedal cord into the piano jack. 2. Check to confirm whether the plug at tone end of the pedal connection is loose or not, and then tighten it.
When the piano power is turned on or off there is a murmuring sound.	Normal phenomenon	This is a normal phenomenon, indicating that the current enters the machine currently.
The piano is noisy when using a mobile phone.	Radio interference	Using a mobile phone near a piano can generate radiation. To avoid this situation, you can turn off the mobile phone or use it away from the piano.
Abnormal tone or rhythm.	Power shortage	Power shortage. Check power stability.
Under the same timbre, the quality of a note is different from that of a note.	Normal phenomenon	This is a normal phenomenon. This machine adopts AWM sound source mode. This kind of sound source is sampled and recorded in the whole keyboard area, so the quality of the two notes is slightly different.
Connecting Computer, not recognized	USB plug loose	No need to install extra drives. If the piano isn't recognized by computer, please check if the USB cords are connected securely or try to connect another USB socket of the computer.

Safety Precautions

Smoke, Abnormal Smell, Overheating

When this product smokes, gives off an abnormal smell or overheats, continued use poses the risk of fire and electric shock. In the event of the above situations, the following operations should be carried out immediately.

1. Turn off the power supply.
2. Unplug the plug from the power socket.
3. Contact your dealer

Power Cord

- Improper use of the power cord poses the risk of fire and electric shock. The following precautions must be observed.



- The dedicated power cord specified for this product must be used.



- An AC power supply with an output voltage within the domestic rated voltage range must be used.

- The power sockets and power extension cords should not be overloaded.



- Improper handling of the power cord can lead to its damage or fracture, causing fire and electric shock hazards. The following precautions must be observed.

- Never place heavy objects or expose the power cord to heat.



- Never attempt to modify the power cord or bend it excessively.

- Never twist or pull the power cord.

- If the power cord or plug is damaged, please replace it with a power cord of the same specification type.



- Please use the power cord in a place where water splashing is not possible. Water poses the risk of fire and electric shock.



- Never place vases or any other containers holding water on this product. Water poses the risk of fire and electric shock.



- Never unplug or touch the power cord or connection board without adult supervision. Minors have no knowledge of electrical safety and there is a risk of electric shock.



Attention

- Improper use of the power cord poses the risk of fire and electric shock. The following precautions must be observed.

- Never place the power cord beside the stove or near other heat sources.



- When unplugging from the power socket, do not pull the power cord. You must grasp the plug body.

- The power cord plug must be inserted all the way into the power socket.

- Please make sure that the power is off before connecting or disconnecting the power cord.

- When there is a thunderstorm or before going on a trip or leaving for a long time, the power cord should be unplugged from the power socket on the wall.



- The power cord should be unplugged from the wall socket at least once a year and the accumulated dust around the plug should be cleaned up.

.Aklot

Auralis Range Collection by Aklot

If there is anything you would like to say to us
contact our brand after-sales : cs@aklot.com
www.aklot.com

