


Aklot

USER MANUAL

Electronic Drum Set

B-CORE546 Lab

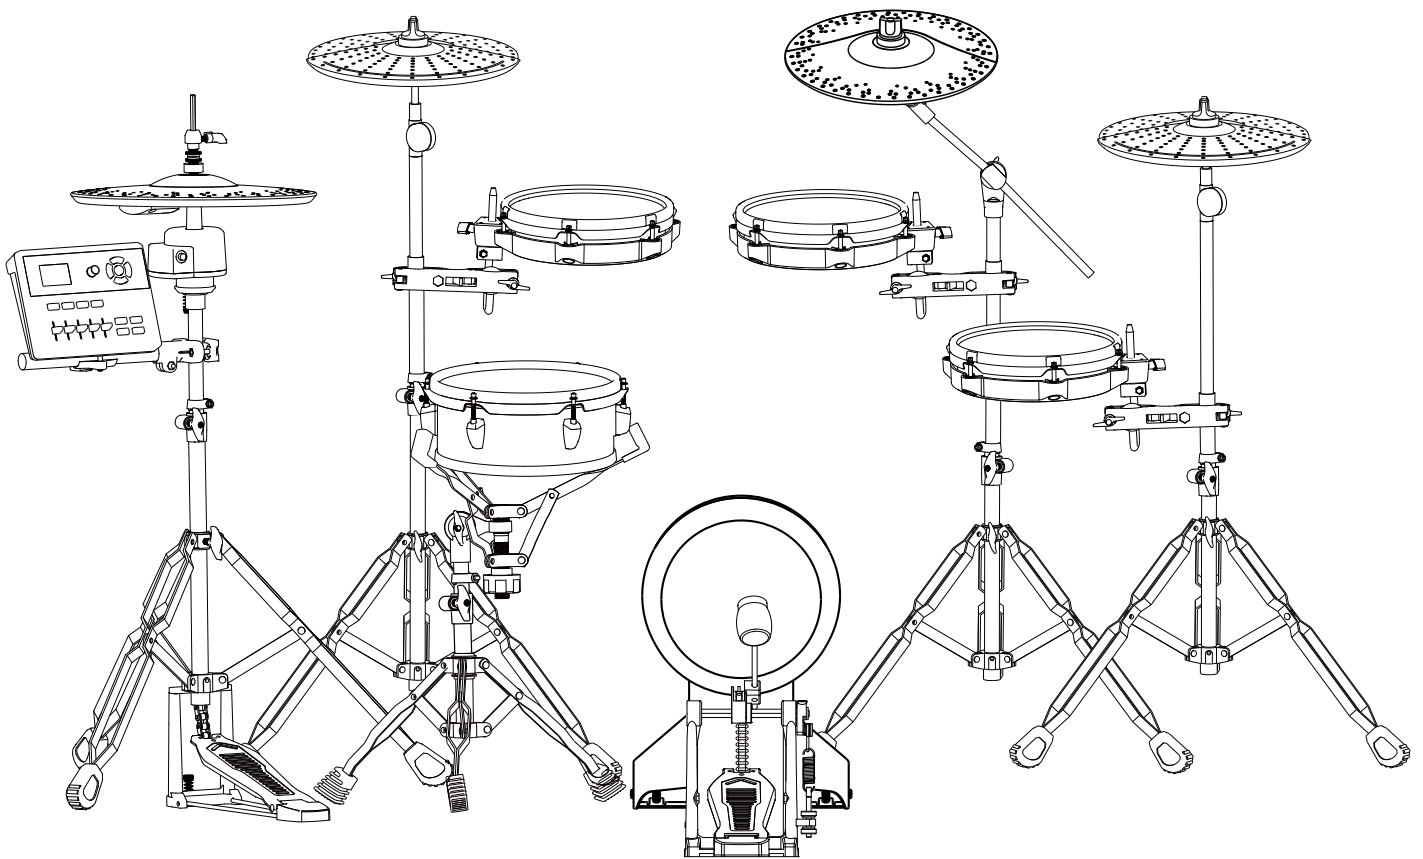

Unleash Your Rhythm with Precision and Power



FUNCTION INTRODUCTION

Thank you for purchasing this electronic drum set from our company. The electronic drum set is elegant and sophisticated, and is a perfect combination of the latest electronic technology.

◆ Please read this manual carefully before using this instrument.



Step on the hammer-shaped bass drum pedal.

Mechanical simulation bass drum pedal, giving you a realistic feel when you step on it.

- Supports 5 drums and 4 cymbals.
- 25+25 drum kits, including 25 built-in and 25 user-defined kits.
- 50 songs.
- Supports recording and playback.
- Adjustable parameters for each drum pad, including sensitivity, velocity, volume, crosstalk, and repeat trigger.
- Other functions include teaching, parameter storage, reset, and metronome.
- Connectors: Phone, AUX IN, CRASH 2, OUTPUT (L/MONO), USB MIDI, and DC 9V.

Note!

This product is an electronic musical instrument. A slight humming sound from the speaker or headphones when powered on is normal. During use, keep the product away from all radio frequency interference sources, including radios, televisions, antenna receivers, routers, refrigerators, and motorized appliances.



CONTENTS

FUNCTION INTRODUCTION	1
CONTENTS	2
INSTALLATION GUIDE	3
ILLUSTRATION OF SOUND MODULE PORT	12
SOUND MODULE OPERATION GUIDE	13
APPENDIX	22
PRODUCT MAINTENANCE	26
SAFETY PRECAUTIONS	27
TROUBLESHOOTING	30

Warranty

Any questions about the use of the product, you can contact our brand after-sales staff.
We will solve your problem until it is resolved.

◆ 1-Year Warranty

◆ 24/7 Online Support

For guidance on product use and warranty extension, please contact our brand after-sales staff via email:【cs@aklot.com】

If any questions related to orders, please contact the seller through the shopping platform.















INSTALLATION GUIDE

01

Check the enclosed items


After unpacking, please check immediately to ensure that all items are included. If anything is missing, please contact your dealer.

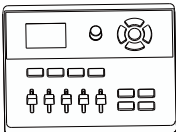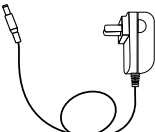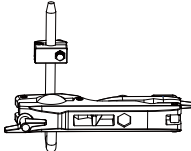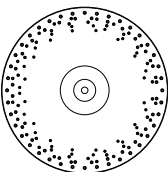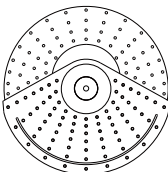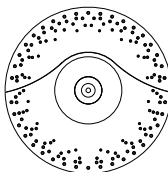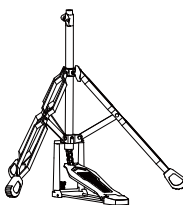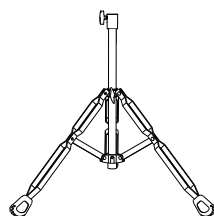01 Sound Module	02 Module Bracket	03 Power Adapter	04 Connection Cables	05 Velcro
				
06 Drum Stick	07 Drum Plate Hardware bracket *3			
				
08 Hi-hat	09 Crash *2	10 Ride	11 Drum pad *3	12 Snare
				
13 Hi-Hat Stand Pedal	14 Hi-Hat Support Rod	15 Hi-Hat Stand Connecting Tubes	16 Hi-Hat Controller	17 Module Mounting Tubes
				
18 Crash Cymbal Tripod Stand *2	19 Crash Vertical Boom Stand			
				



INSTALLATION GUIDE

20 Ride Cymbal Tripod Stand

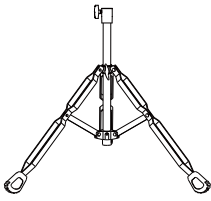


21 Ride Cymbal Connecting Tubes




22 Ride Cymbal Support Rod



23 Kick

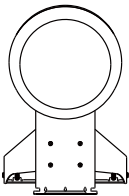


24 Kick Drum Pedal

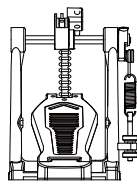

25 Drum Beater



26 Snare Stand



27 Snare Drum Tripod Stand





INSTALLATION GUIDE

02

Installation of Hi-Hat Stand and Sound Module

Assemble in the specified direction.

01 02 08 13 14 15 16 17

1. Assemble the Tripod (Fig 13)

Expand the Legs: Extend the three metal legs outward to a stable angle (usually 120° symmetrically spaced).

Secure the Legs: Tighten the screws connecting the legs to the center column to secure the stand. (Fig 13)

2. Install the Pedals

Align the support rod at the bottom of the pedal with the hole on the side of the stand. Squeeze the rod firmly to complete the installation. (Fig 13)

3. Install the Hi-Hat Stand Connecting Pipe (Fig 15)



Insert the support rod into the vertical tube at the top of the stand and secure it at the desired height with the memory clip. (Fig 15)

4. Install the Hi-Hat Support Rod (Fig 14)

Insert the hi-hat support rod into the threaded hole at the top of the stand and tighten. Install the accessories in the order shown in the Fig to the right.

5. Install the Sound Module (Fig 01)

Assemble the Sound Source Box Support Pipe (Fig 17) as shown to the right. Install the Sound Source Box Stand into the Sound Source Box and insert the pipe.

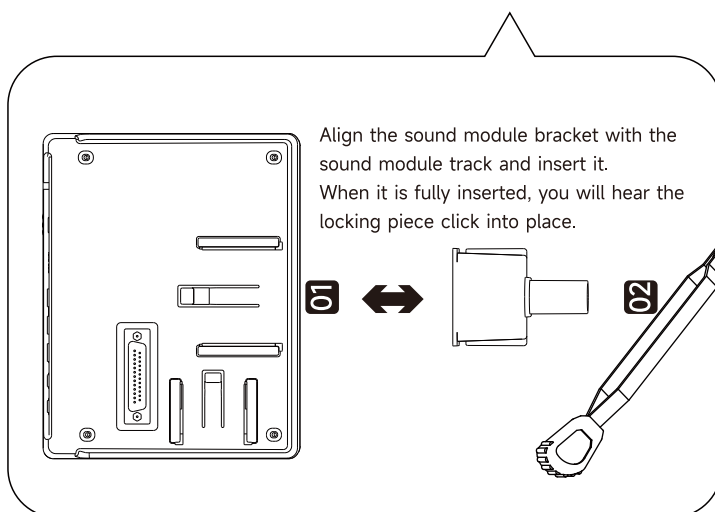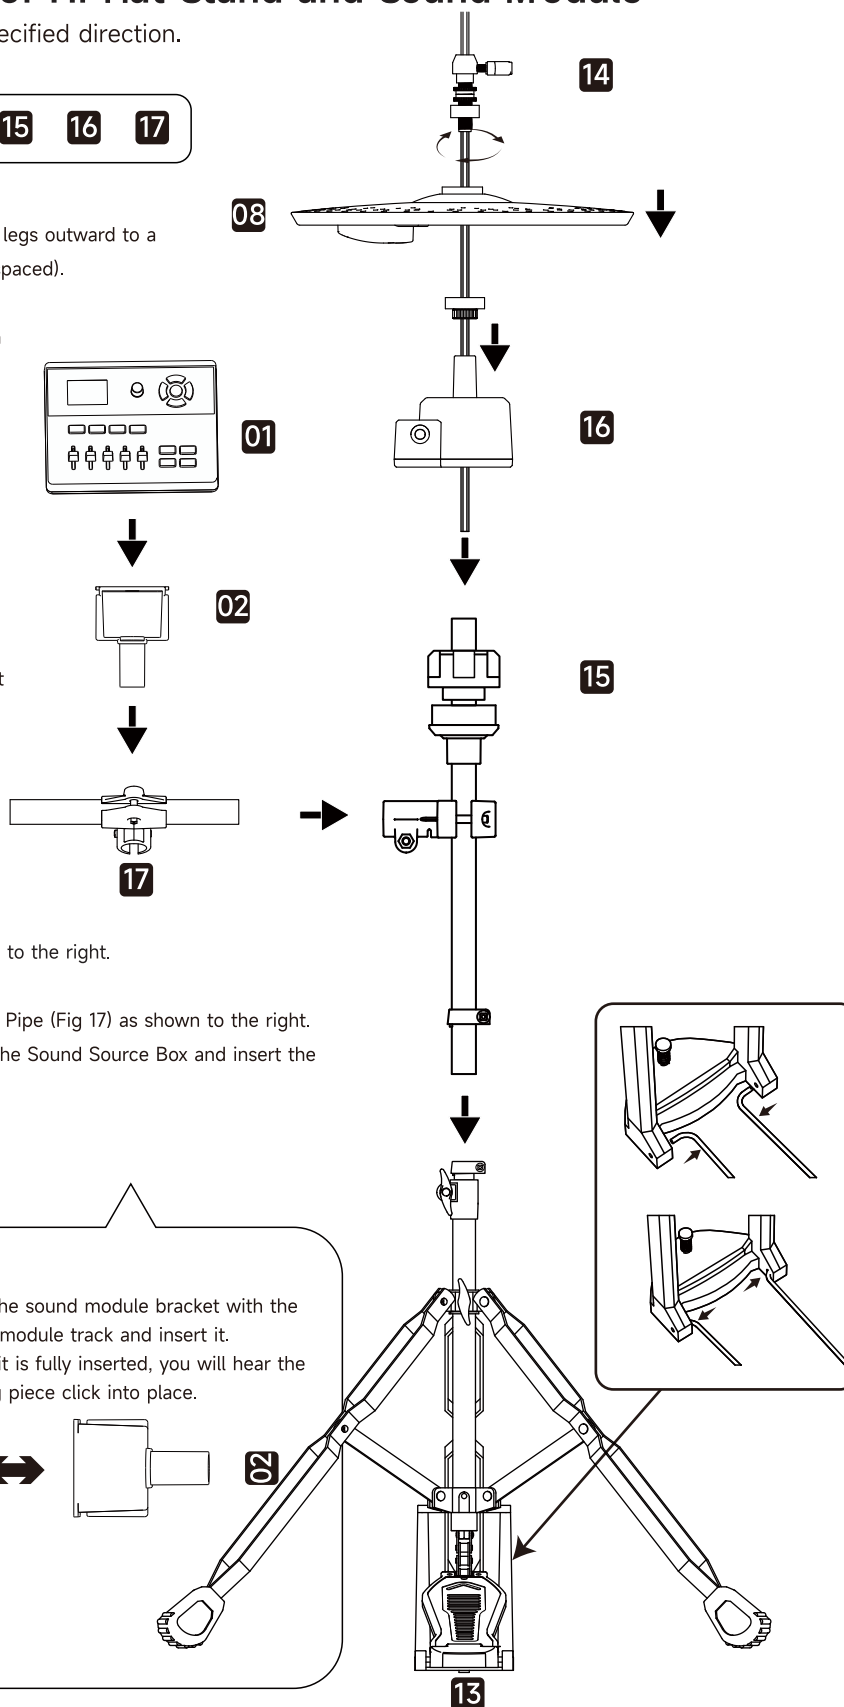



INSTALLATION GUIDE

03

Install the Ride Cymbal and Tom2

Assemble according to the directions specified.

07

10

11

20

21

22

1. Extend the legs (Fig 20)

Extend the three legs symmetrically to a 120° angle to ensure a stable triangular support surface.

Adjust the leg extension length to accommodate the slope of the floor (if the floor is uneven, adjust the leg height separately).

2. Install the ride cymbal vertical post (Fig 21)

Insert the vertical post into the center base of the stand and secure it.

3. Install the drum tray hardware bracket (Fig 07)

Align the drum tray bracket clamp with the cymbal rod.

Once inserted, tighten the locking screw on the side of the clamp clockwise until the bracket and cymbal rod are secure. (It is recommended to use a moderate pre-tightening force to avoid damaging the rod.)

4. Secure the cymbal support rod (Fig 22)

Slide the cymbal support rod into the ride cymbal vertical post, adjust it to the desired angle, and lock it in place.

5. Ride Cymbal Installation (Fig 10)


Step 1: Place the ride cymbal, then the cymbal protector, in that order, and secure with the locking cymbal cap.

Step 2: Tighten the cymbal cap until the cymbal wiggles slightly (avoid overtightening to prevent vibration). Ensure the cymbal rotates freely to release overtones.

6. Drum Platter Installation (Fig 11)

Align the bottom mounting holes of the drum platter with the mounting holes on the bracket. Install the drum platter vertically downward.

Once the platter is inserted, tighten the locking screw on the side of the bracket clockwise.

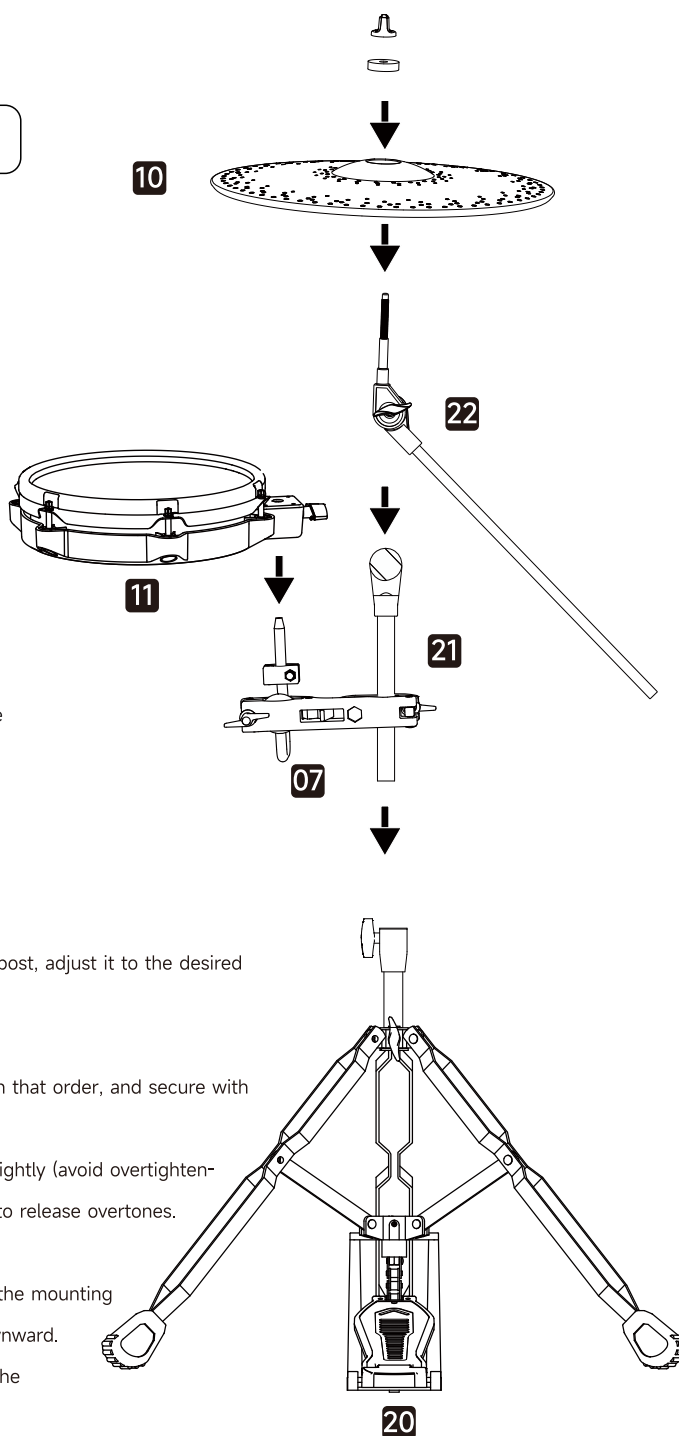



INSTALLATION GUIDE

04

Install Crash 1 and Tom 1

Assemble according to the directions specified.

07

09

11

18

19

1. Extend the legs (Fig 18)

Extend the three legs symmetrically to a 120° angle to ensure a stable triangular support surface.

Adjust each leg as needed for the floor. For uneven floors, set each leg height individually.

2. Install the vertical cymbal post (Fig 19)

Insert the vertical post into the center base of the stand and secure it.

3. Install the drum pan hardware bracket (Fig 07)

Align the drum pad bracket clamp with the cymbal rod

Once inserted, tighten the locking screw on the side of the clamp clockwise until the bracket and cymbal rod are secure. (Tighten moderately to avoid damaging the rod.)

4. Cymbal Installation (Fig 9)


Step 1: Place the cymbal, then the protector, and secure them with the locking cap.

Step 2: Tighten the cap until the cymbal has slight movement (do not overtighten). Make sure it can rotate freely for natural sound.

5. Drum Installation (Fig 11)

Align the drum pad's bottom holes with the bracket's mounting holes.

Lower the pad straight down, then tighten the side locking screw clockwise.

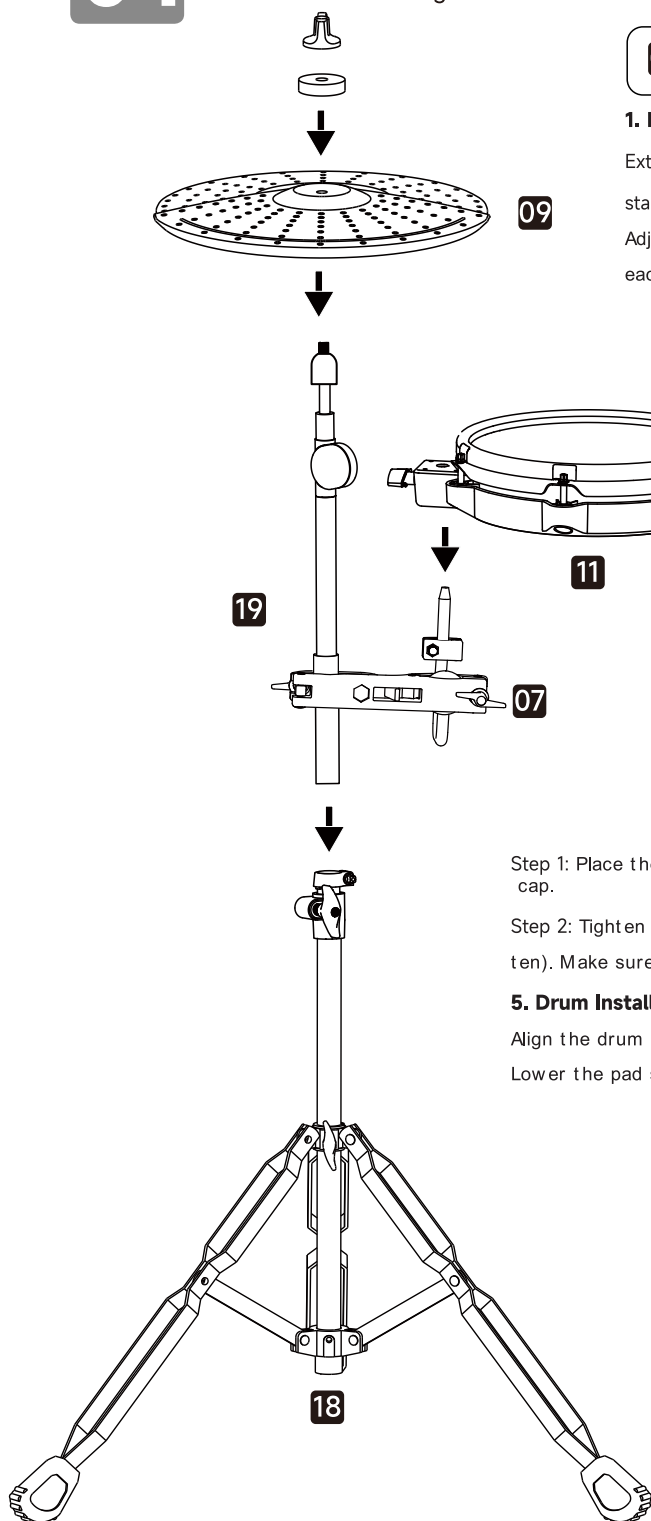



INSTALLATION GUIDE

05

Install Crash 2 and Tom 3

Assemble according to the directions specified.

07 09 11 18 19

1. Extend the legs (Fig 18)

Spread the three legs evenly to about 120° apart to form a stable base.

Adjust each leg as needed for the floor. For uneven floors, set each leg height individually.

2. Install the vertical cymbal post (Fig 19)

Insert the vertical post into the center base of the stand and secure it.

3. Install the drum pan hardware bracket (Fig 07)

Align the drum pad bracket clamp with the cymbal rod. Once inserted, tighten the locking screw on the side of the clamp clockwise until the bracket and cymbal rod are secure. (Tighten moderately to avoid damaging the rod.)


4. Cymbal Installation (Fig 9)

Step 1: Place the cymbal, then the cymbal protector, in that order, and finally secure it with the locking cymbal cap.

Step 2: Tighten the cap until the cymbal has slight movement (do not overtighten). Make sure it can rotate freely for natural sound.

5. Drum Installation (Fig 11)

Align the drum pad's bottom holes with the bracket's mounting holes. Lower the pad straight down, then tighten the side locking screw clockwise.

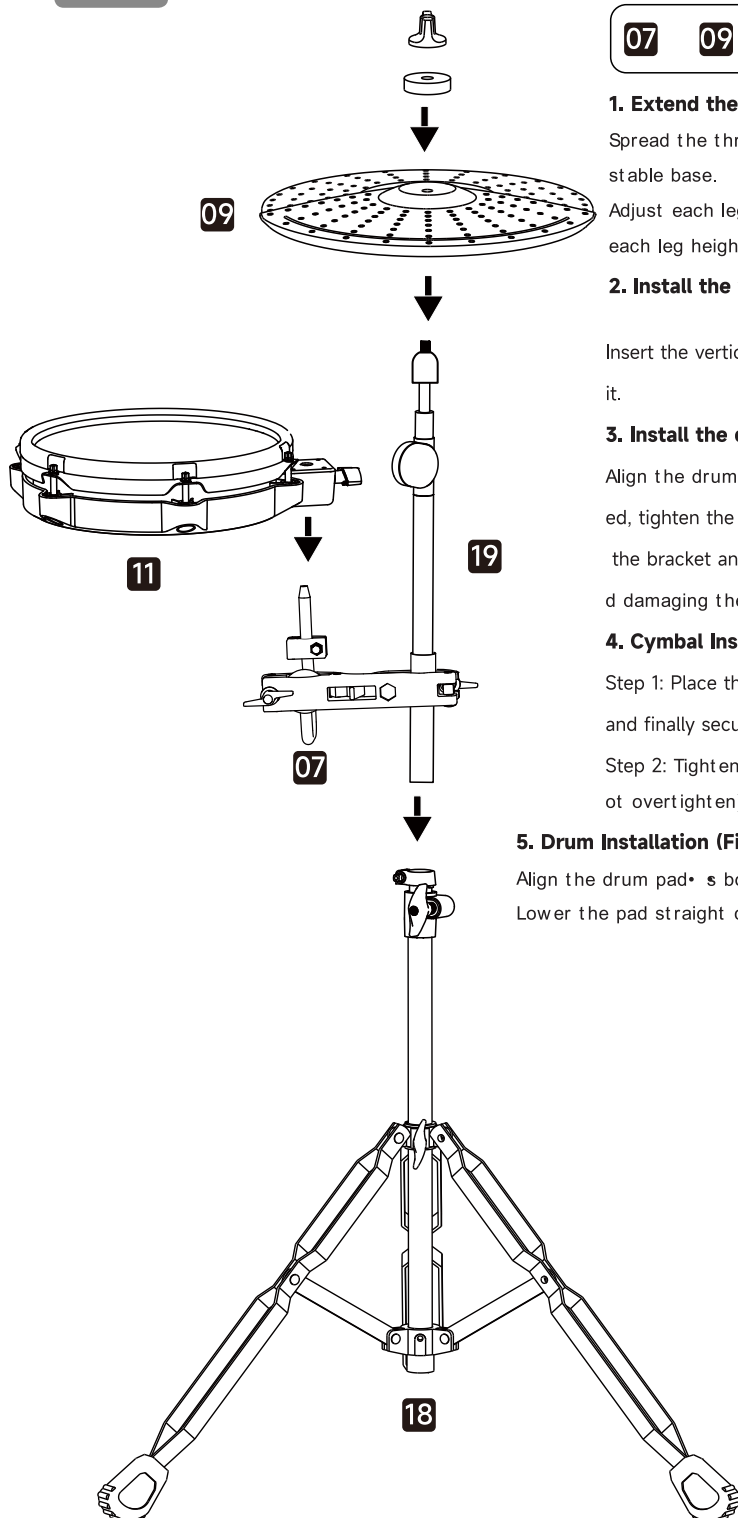



INSTALLATION GUIDE

06

Install the Snare Drum

Assemble according to the directions specified.

12

26

27

1. Extend the Legs (Fig 27)

Spread the three snare drum legs evenly to about 120°, making sure the telescopic rods are fully extended.


Height Adjustment: Use the telescopic rods at the ends of the legs to adjust the height of the snare drum from the ground.

2. Insert the Snare Drum Stand (Fig 26)

Insert the snare drum stand vertically into the top of the tripod support. Tighten the screws at the connection to ensure the stand does not wobble.

3. Position the Snare Drum (Fig 12)

Place the snare drum vertically on the support plate at the top of the legs. Adjust the snare drum's tilt using the knob below the snare drum support rod.

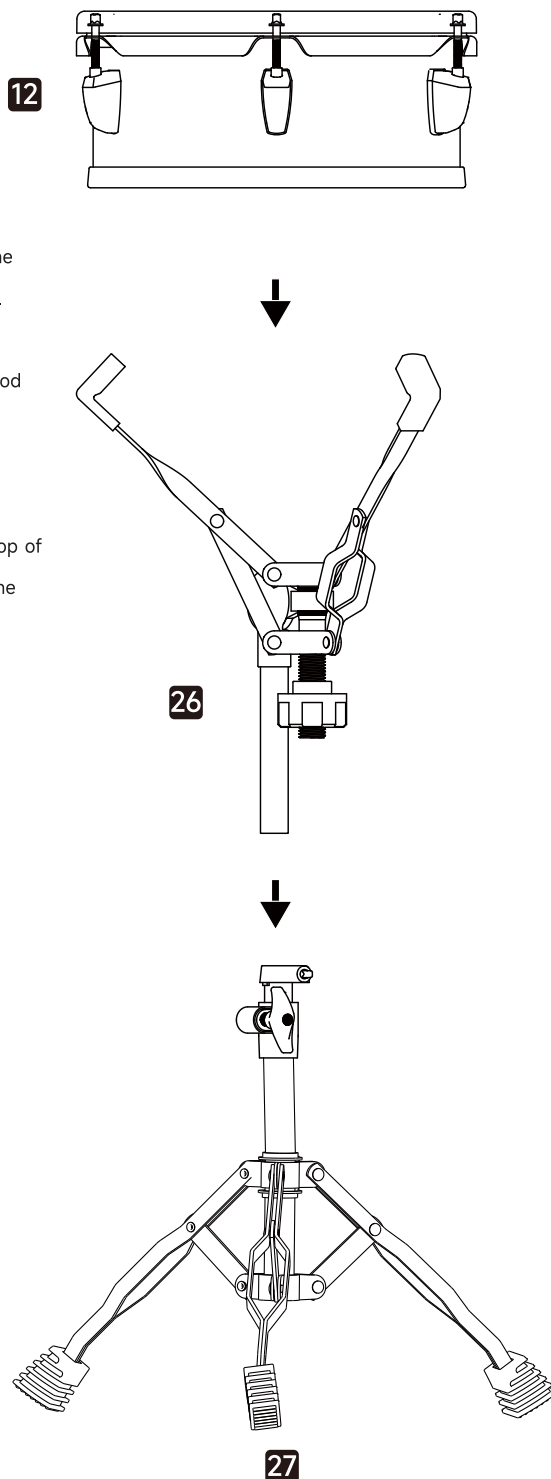




INSTALLATION GUIDE


06

Bass Drum and Pedal Set up

- 1) Insert the metal bracket into the pedal bracket slot.
- 2) Attach the front bracket of the bass drum to the pedal bracket and tighten the screw.
- 3) Use a drum key to loosen the screw, then insert the beater head into the round hole.
- 4) Adjust the beater head so it strikes the center of the drum head, then tighten the screw.

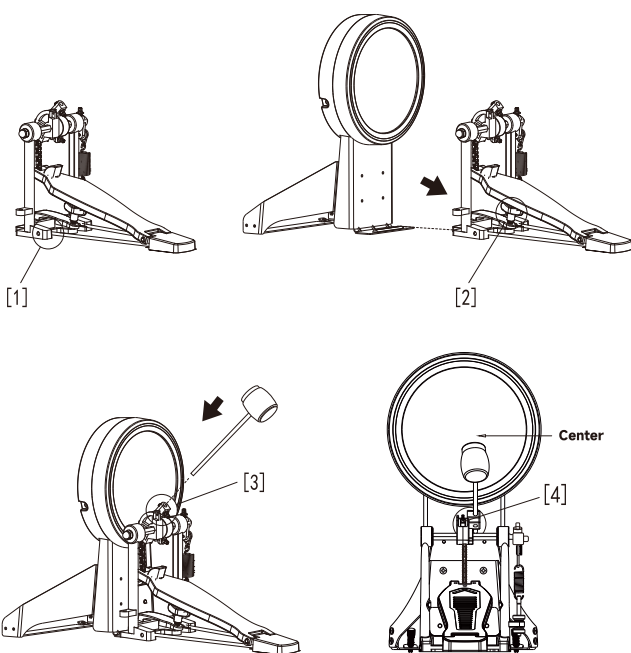

- 5) This bass drum supports double-pedal use.

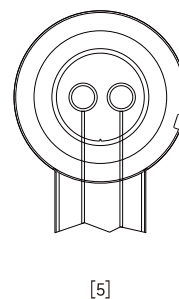




07

Connect the Trigger Cables

Insert each cable securely as shown to avoid loose connections.

Plug the multi-pin connector into the main module as shown. Then connect each cable to the matching pad jack, following the English labels on the cable ends.

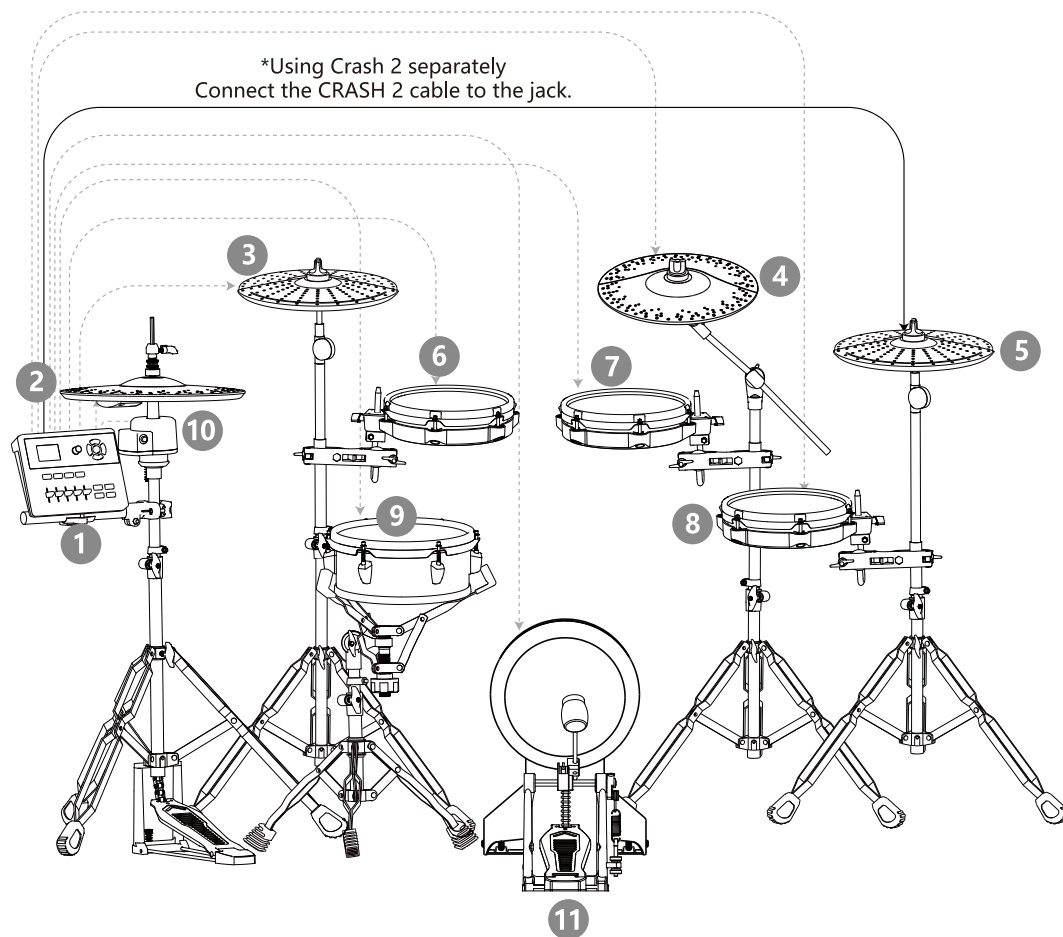

1. Sound module

2. Hi-hat

3. Crash

4. Ride

5. Crash2

6. Tom1

7. Tom2

8. Tom3


9. Snare

10. Hi-hat control

11. Kick drum



ILLUSTRATION OF SOUND MODULE PORT

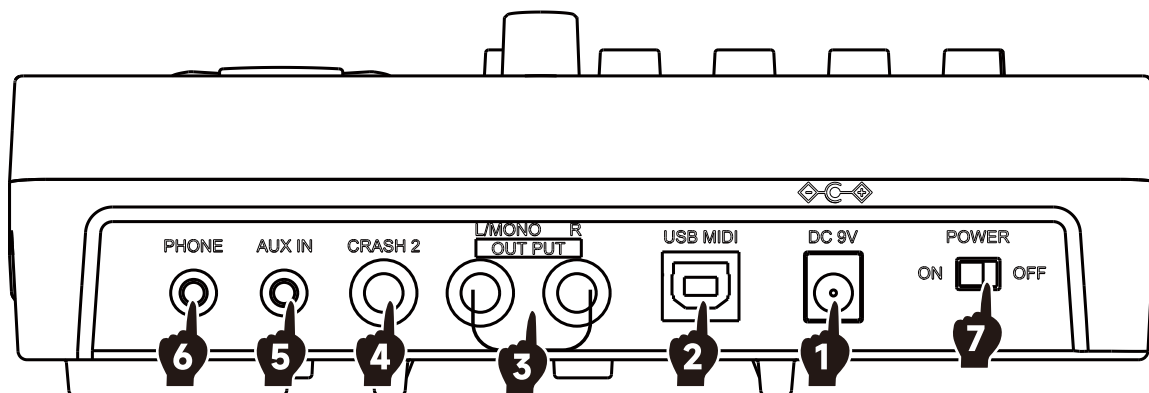

1 POWER CORD CONNECTION

1. Plug one end of the power cord into the module's DC 9V jack, and the other end into a 100–240V household outlet (Fig 1)
2. If not in use for a long time, unplug the power cord and store it safely.

2 USB MIDI PORT

The MIDI USB port of the electronic drum can be connected to music devices with MIDI for interaction.

1. Learning or operating functions such as playing, composing, and storing through pre-installed software on a computer or tablet. (Fig 2)
2. After connecting with the computer or tablet, the audio output on the device needs to be connected to the audio input socket of the Drum Sound module to synchronize the device's audio effects on the device.

3 AUDIO OUTPUT PORT

1. The audio output port can be connected to an external active speaker (requires a special drum speaker), and large-scale audio equipment.
2. The audio output port outputs to the recording equipment(such as sound card and other recording equipment) for electric drum recording. (Fig 3)

4 EXPANSION TAB INTERFACE

External Crash2 interface to expand richer tones (Fig 4)

5 AUDIO INPUT PORT

The audio input port can connect an external audio source to the sound module for playback (such as linear audio signal input such as MP3 and mobile phones). (Fig 5)

6 HEADPHONE PORT


Connect headphones to monitor the details of your performance without disturbing others when playing without an amplifier. (Fig 6)

7 POWER

The POWER button to turn the power on/off.



SOUND MODULE OPERATION GUIDE

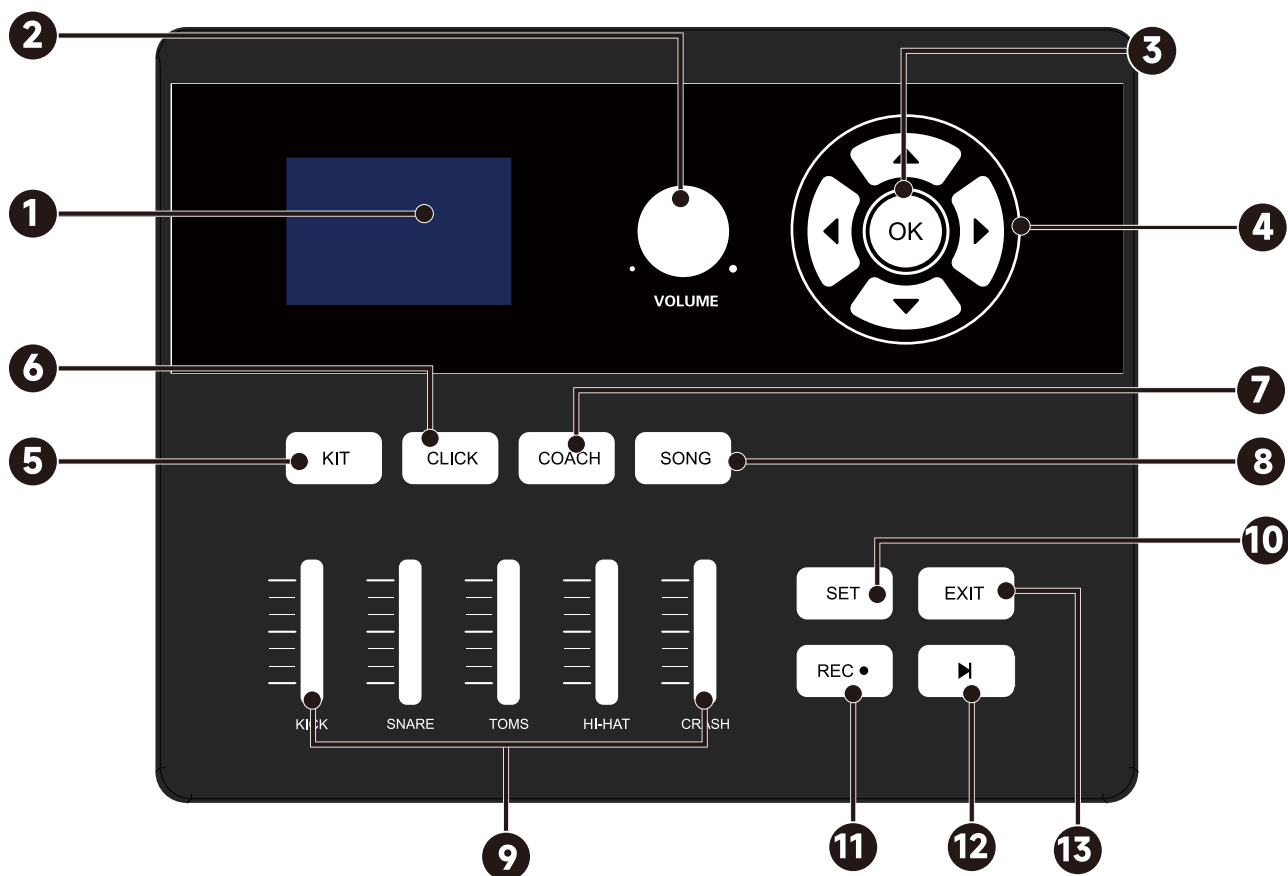

1. Display Window

Display the operation information

2. Volume

Volume control

3. OK

Confirmation operation

4. ◀▶▲▼

Parameter value Adjustment

5. KIT

Drum kit selection

6. CLICK

The metronome interface

7. COACH

Coaching

8. SONG

Built-in demo song



SOUND MODULE OPERATION GUIDE

9. Strike Components Volume Adjustment

10.SET Quick access to adjust drum disk parameters

11.REC Start the record mode

12.  Stop/Play button

13. EXIT EXIT,it can back to main interface under MENU mode

14.Wireless Connection Mode

1 KIT

Power on and enter Kit mode.

In Kit mode, use the <◀><▶><▲><▼> buttons to switch between different drum kits. There are 25 preset kits and 25 user-defined kits built in, catering to all musical styles.

2 CLICK

Press CLICK to turn on the metronome.: TEMPO\RHYTHM\BEAT\SOUND\CLICK VOL five-level adjustable parameter interface, use <▲><▼> to select the mode you want, and <◀><▶> to adjust the parameter value.

 CLICK SET
 TEMPO 120

 CLICK SET
 RHYTHM 1/32

 CLICK SETA
 BEAT 09

 CLICK SET
 SOUND 05

 CLICK SET
 CLICK VOL 127

Press the <CLICK> button to enter the <CLICK> mode, the metronome will start, and you can change the metronome parameters by pressing<◀><▶><▲><▼> .



OPERATION GUIDE



PARAMETER COMPARISON TABLE

PARAMETER	TEMPO	RHYTHM	BEAT	SOUND	CLICK VOL
ADJUSTMENT RANGE	30-250	1/2,1/4,1/8,1/16,1/32	1-9	1/2/3/4/5	1-127

3 COACH MODEL



Click the <COACH> button to enter coach mode

The default display is COACH - TIME CHECK. In COACH mode, it is the first level interface. <◀> <▶> <▲> <▼> . You can choose COACH-TIME CHECK, COACH-QUIET CONT, COACH-AUTO U/D 3 three interfaces to practice. The display parameters are:

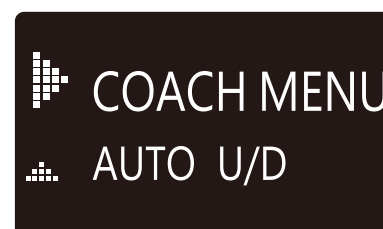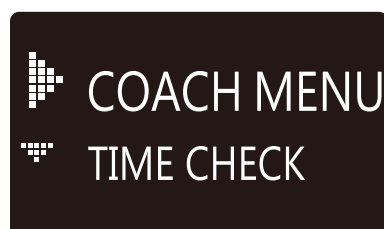

Press the COACH button to enter COACH mode. The COACH button light will also light up. Use the buttons <☒> <☒> <☐> <☐> to select different COACH modes. Let's learn together!

1. In COACH 1 - TIME CHECK mode, press the <▶|> button to start TIME CHECK training. In TIME CHECK mode, press <SET> to enter the TIME CHECK settings interface. The settings interface specifies the number of bars after which scoring begins. The <◀> <▶> buttons allow you to adjust the parameters, with the adjustable range ranging from 1 to 32. The settings interface is as follows:

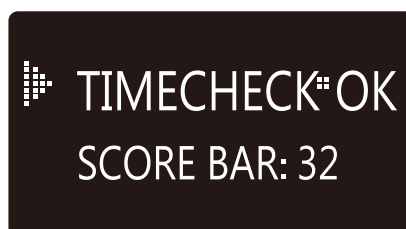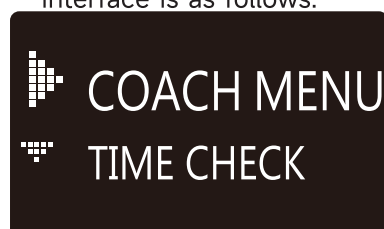

After entering TIME CHECK, there are 8 beats of count-in. When the last count-in appears on the display, "GO!" begins TIME CHECK training.





OPERATION GUIDE



COACH
FAST



COACH
SLOW



COACH
GOOD

After completing the TIME CHECK round of training, the score will be displayed. The score display interface is as shown below:



COACH
SCORE : 90

2. In COACH-QUIET CONT mode, press the < ►| > button to start. In QUIET CONT mode, press the <SET> button to access the QUIET COUT settings interface. This interface allows you to set the number of practice bars after which silence begins and to begin scoring when the metronme resumes.

The settings range is 1-32. The interface is shown below:



COACH MENU



QUIET CONT



QUIETCONT #OK

MUTE BAR : 32

After entering QUIET CONT, there are 8 beats of count-in. When the last count-in is displayed, GO! is displayed to start QUIET CONT training. When QUIET CONT is in progress, the score will be displayed after the metronome is muted.



COACH
READY



COACH
GO!



COACH
QUIET




COACH
SCORE : 100




OPERATION GUIDE

3. COACH - In AUTO U/D mode, press the <Start/Pause> button to start AUTO U/D training. In AUTO U/D mode, press <SET> to enter the AUTO U/D settings interface. The settings interface allows you to select the number of bars after which the metronome tempo changes. The adjustable range is 1-9 for changing the number of gradual beats. The settings interface is as follows:

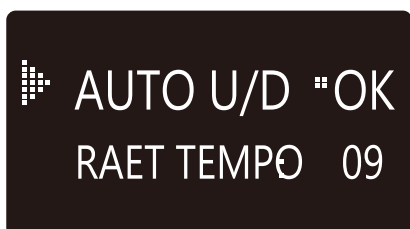

After entering AUTO U/D, press the <Start/Pause> button to start AUTO U/D training directly. The default speed starts at 60-180 as the cycle speed. After starting AUTO U/D, there will be prompts for speeding up and down. The display interface during the process is as follows:

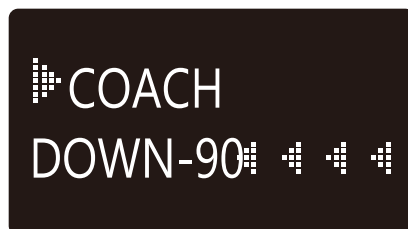


After starting AUTO U/D, stop the training after the speed increases and decreases.

PARAMETER COMPARISON TABLE			
PARAMETER	SCORE BAR	MUTE BAR	RAET TEMPO
ADJUSTMENT RANGE	1-32	1-32	1-9

4 SONG MODEL

Press the <SONG> button to enter the demo music mode, and the "SONG" button light will light up.

Press <◀> <▶> <▲> <▼> to select a different practice track. There are 50 built-in tracks with diverse styles. You can mute the drums in the SONG mode settings, arrange the built-in exercises differently, and even change the tempo of the songs in the settings. Have fun practicing!



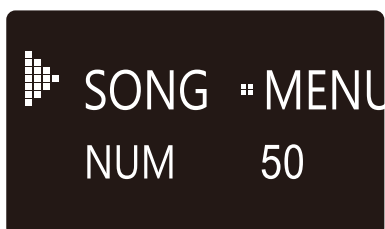


Parameter comparison table			
PARAMETER	TEMPO	SONG VOL	DRUM
ADJUSTMENT RANGE	30-250	0-127	ON/OFF



OPERATION GUIDE



Enter the "SONG" mode to select different tracks, press the <Play/Pause button> to play or pause the music, and press the <SET> button in the current mode to enter the "SONG" mode setting interface to adjust the current practice track.

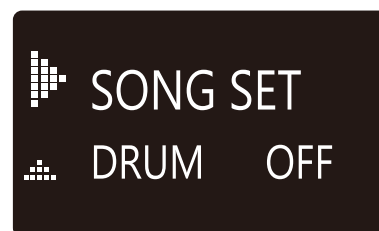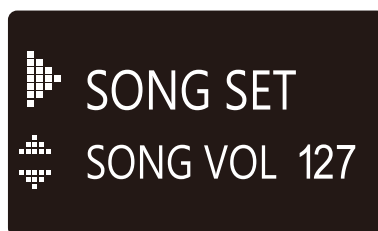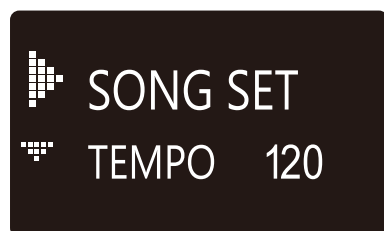

5 SET SETTINGS

In DRUM KIT mode, press the <SET> button to enter the Drum Kit settings. There are five settings within the Drum Kit settings: PAD SET, SENSITIVITY, AMBIENCE, MIDI NOTE, and FTY RESET. Use the <◀> <▶> <▲> <▼> buttons to select. Press the OK button to enter the settings. You can modify the parameters of each setting to suit your specific percussion needs.

1. In the PAD SET interface, you can quickly modify the parameters of the corresponding drum pad. The modified parameters can be quickly saved in the user group for future use.

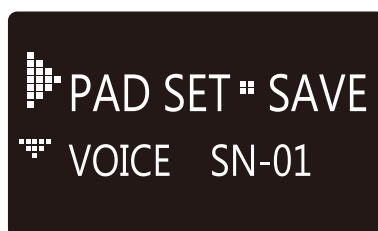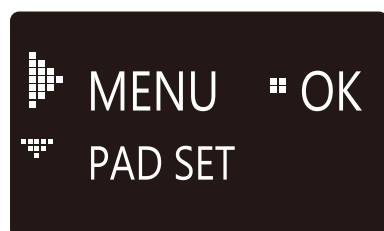

VOICE :Change drum pad sounds quickly

PAN :Change the left and right pan of the drum pad quickly

PITCH : Change the pitch of the pad quickly

VELO: Change the drum pad velocity curve quickly

Hit the drum pad/cymbal whose parameters need to be changed, select the mode you want to change the parameters, and use the arrow keys <◀> <▶> <▲> <▼> to change the parameters. The specific parameters can be adjusted as follows:

TYPE	INFORMATION	PARAMETER
VOICE	SN\TO1\TO2\TO3\BD\HH\CR\RD	0-25
PITCH	SN\TO1\TO2\TO3\BD\HH\CR\RD	0-127
PAN	SN\TO1\TO2\TO3\BD\HH\CR\RD	0-127
VELO	SN\TO1\TO2\TO3\BD\HH\CR\RD	01-03


After you have finished adjusting the parameters of the drum kit, press and hold the <REC-> key to quickly save the current settings to the KIT 26. You can save the position range of K26-K50, which supports a total of 25 user-defined drum kits, making it easy to create your own personal drum kit configuration.



OPERATION GUIDE

Once saved, the system will automatically switch to the newly created kit. If you have created multiple customized drum kits, you can conveniently switch between different user drum kits by using the arrow keys <> <> <> <> (Fig 4) in KIT mode.

2. SENSITIVY interface can be different settings for the percussion drum plate, you can change the sensitivity of the percussion, to adapt to the feel of the percussion, or to eliminate unnecessary sound crosstalk.

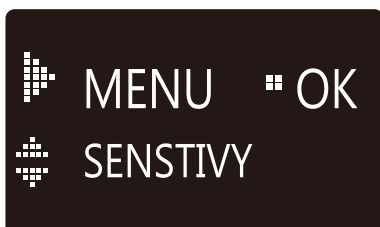

SEN :Strike Component Sensitivity Adjustment

THREH. :Trigger value adjustment

XTALK :Crosstalk value adjustment

RETR: Repeat trigger adjustment



VOL : Drum pad volume adjustment

Tap on the part of the strike that you want to change the parameter, and press the key<◀> <▶> <▲> <▼> to change the parameter, the specific parameter can be adjusted as follows

TYPE	INFORMATION	PARAMETER
PSEN	SN\TO1\TO2\TO3\ BD\HH\CR\RD	0-6
RSEN	SN\TO1\TO2\TO3\ BD\HH\CR\RD	0-6
ADJ	SN\TO1\TO2\TO3\ BD\HH\CR\RD	0-16
THREH	SN\TO1\TO2\TO3\ BD\HH\CR\RD	0-32
XTALK	SN\TO1\TO2\TO3\ BD\HH\CR\RD	0-32
RETR.	SN\TO1\TO2\TO3\ BD\HH\CR\RD	0-32

After adjusting the parameters of the drum set, long press the <REC·> key to quickly save it to the current PRESET, and you can adjust the parameters of the drum set to fit your own hitting habits.



3. AMBIENCE interface can be changed to different types of reverb effects, built-in 5 different reverb effects, you can add the corresponding reverb effects for different environments, making drumming more interesting.

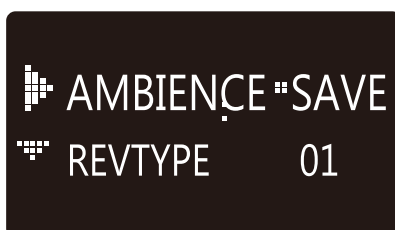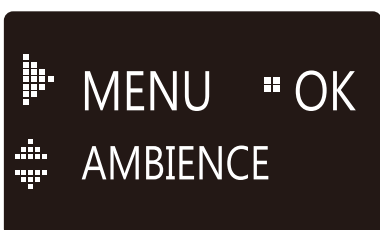

OPERATION GUIDE

After adjusting the parameters of the drum kit, press and hold the <REC·> key to quickly save the current PRESET, and open the AMBIENCE knob to add reverb depth to the entire drum kit, adding a deeper sound to different occasions.

4. The MIDI NOTE screen allows you to change the current MIDI numeric signal output of the drum kit to correspond to different software or hardware sources. <◀> <▶> <▲> <▼> to select, press OK to enter the mode to change the parameters, the specific parameters adjustable as follows.

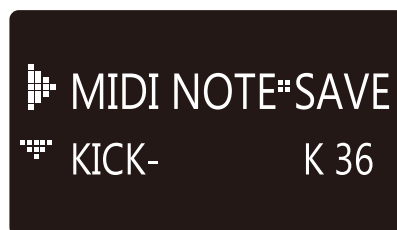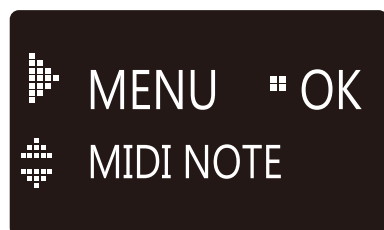


After adjusting the parameters of the drum set, long press the <REC·> key to quickly save it to the current PRESET, it will complete the MIDI NOTE editing of different drum disks, when you need to restore the default parameters need to be restored to the factory settings.

Parameter comparison table					
PARAMETER	ADJUSTMENT RANGE		PARAMETER	ADJUSTMENT RANGE	
KICK	K	36	RIDE ED	RBE	59
STICK	S2	37	RIDE BD	RBB	53
SNARE	S1	38	CRS1	CB1	49
C. HAT	CH	42	CRS1 ED	CE1	55
P.HAT	HH	44	CRS2	CB2	57
O.HAT	OH	46	CRS2 ED	CE2	52
TOM1	T1	48	TOM1 R	T1R	87
TOM2	T2	45	TOM2 R	T2R	88
TOM3	T3	43	TOM3 R	TR3	89
TOM4	T4	41	TOM4 R	TR4	90
RIDE	RB	51			



OPERATION GUIDE

5. FTY RESET interface can be the host computer to restore the factory settings, enter the interface and press OK to restore the factory settings, when restoring the factory settings will restore all the saved settings of the drum set to the factory settings, please be careful! Specific display content is as follows.

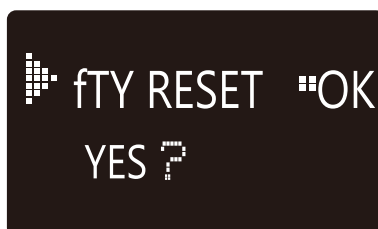

6 RECORDING FUNCTION

Press the REC key to enter the recording and playback interface, the interface will prompt to play any drum disk to start recording, press the REC key again to pause the current recording. And default save (save will overwrite the last recording), in the recording process, press the < ▶| > will directly start to playback the recording, automatic default save (overwrite save (save will overwrite the last recording) recording is complete, press REC again to exit the recording mode.

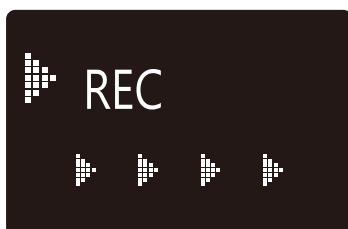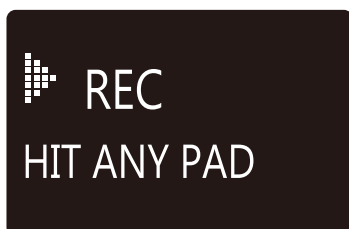

7 WIRELESS FUNCTION

Open wireless connectivity in the app to search for the device named: "BT Audio" and click to connect. After connecting successfully, the wireless connection display light on the sound box can be lit up.



Drum timbre

Kick

- 1 . Pop Kick
- 2 . Rock Kick
- 3 . Metal Kick
- 4 . Funk Kick
- 5 . Jazz Kick
- 6 . Punk Kick
- 7 . Blues Kick
- 8 . Fusion Kick
- 9 . Latin Kick
- 10 . Country Kick
- 11 . Classical Kick
- 12 . HipHop Kick
- 13 . Disco Kick
- 14 . Electronic Kick
- 15 . Heavy Metal Kick
- 16 . Club Electronic Kick
- 17 . Modern Electronic Kick
- 18 . Techno Kick
- 19 . Trip Electronic Kick
- 20 . Percussion Kick
- 21 . R&B Kick
- 22 . House Kick
- 23 . Drum&Bass Kick
- 24 . Reggae Kick
- 25 . Modern Percussion Kick

Snare

- 26 . Pop Snare
- 27 . Rock Snare
- 28 . Metal Snare
- 29 . Funk Snare
- 30 . Jazz Snare
- 31 . Punk Snare
- 32 . Blues Snare
- 33 . Fusion Snare
- 34 . Latin Snare
- 35 . Country Snare
- 36 . Classical Snare
- 37 . HipHop Snare
- 38 . Disco Snare
- 39 . Electronic Snare
- 40 . Heavy Metal Snare
- 41 . Club Electronic Snare
- 42 . Modern Electronic Snare
- 43 . Techno Snare
- 44 . Trip Electronic Snare
- 45 . Percussion Snare
- 46 . R&B Snare
- 47 . House Snare

- 48 . Drum&Bass Snare
- 49 . Reggae Snare
- 50 . Modern Percussion Snare
- 51 . Pop Snare Rim
- 52 . Rock Snare Rim
- 53 . Metal Snare Rim
- 54 . Funk Snare Rim
- 55 . Jazz Snare Rim
- 56 . Punk Snare Rim
- 57 . Blues Snare Rim
- 58 . Fusion Snare Rim
- 59 . Latin Snare Rim
- 60 . Country Snare Rim
- 61 . Classical Snare Rim
- 62 . HipHop Snare Rim
- 63 . Disco Snare Rim
- 64 . Electronic Snare Rim
- 65 . Heavy Metal Snare Rim
- 66 . Club Electronic Snare Rim
- 67 . Modern Electronic Snare Rim
- 68 . Techno Snare Rim
- 69 . Trip Electronic Snare Rim
- 70 . Percussion Snare Rim
- 71 . R&B Snare Rim
- 72 . House Snare Rim
- 73 . Drum&Bass Snare Rim
- 74 . Reggae Snare Rim
- 75 . Modern Percussion Snare Rim

TOM

- 76 . Pop Tom1
- 77 . Rock Tom1
- 78 . Metal Tom1
- 79 . Funk Tom1
- 80 . Jazz Tom1
- 81 . Punk Tom1
- 82 . Blues Tom1
- 83 . Fusion Tom1
- 84 . Latin Tom1
- 85 . Country Tom1
- 86 . Classical Tom1
- 87 . HipHop Tom1
- 88 . Disco Tom1
- 89 . Electronic Tom1
- 90 . Heavy Metal Tom1
- 91 . Club Electronic Tom1
- 92 . Modern Electronic Tom1
- 93 . Techno Tom1
- 94 . Trip Electronic Tom1
- 95 . Percussion Tom1

- 96 . R&B Tom1
- 97 . House Tom1
- 98 . Drum&Bass Tom1
- 99 . Reggae Tom1
- 100 . Modern Percussion Tom1
- 101 . Pop Tom1 Rim
- 102 . Rock Tom1 Rim
- 103 . Metal Tom1 Rim
- 104 . Funk Tom1 Rim
- 105 . Jazz Tom1 Rim
- 106 . Punk Tom1 Rim
- 107 . Blues Tom1 Rim
- 108 . Fusion Tom1 Rim
- 109 . Latin Tom1 Rim
- 110 . Country Tom1 Rim
- 111 . Classical Tom1 Rim
- 112 . HipHop Tom1 Rim
- 113 . Disco Tom1 Rim
- 114 . Electronic Tom1 Rim
- 115 . Heavy Metal Tom1 Rim
- 116 . Club Electronic Tom1 Rim
- 117 . Modern Electronic Tom1 Rim
- 118 . Techno Tom1 Rim
- 119 . Trip Electronic Tom1 Rim
- 120 . Percussion Tom1 Rim
- 121 . R&B Tom1 Rim
- 122 . House Tom1 Rim
- 123 . Drum&Bass Tom1 Rim
- 124 . Reggae Tom1 Rim
- 125 . Modern Percussion Tom1 Rim
- 126 . Pop Tom2
- 127 . Rock Tom2
- 128 . Metal Tom2
- 129 . Funk Tom2
- 130 . Jazz Tom2
- 131 . Punk Tom2
- 132 . Blues Tom2
- 133 . Fusion Tom2
- 134 . Latin Tom2
- 135 . Country Tom2
- 136 . Classical Tom2
- 137 . HipHop Tom2
- 138 . Disco Tom2
- 139 . Electronic Tom2
- 140 . Heavy Metal Tom2
- 141 . Club Electronic Tom2
- 142 . Modern Electronic Tom2
- 143 . Techno Tom2
- 144 . Trip Electronic Tom2
- 145 . Percussion Tom2



APPENDIX

146 . R&B Tom2
147 . House Tom2
148 . Drum&Bass Tom2
149 . Reggae Tom2
150 . Modern Percussion Tom2
151 . Pop Tom2 Rim
152 . Rock Tom2 Rim
153 . Metal Tom2 Rim
154 . Funk Tom2 Rim
155 . Jazz Tom2 Rim
156 . Punk Tom2 Rim
157 . Blues Tom2 Rim
158 . Fusion Tom2 Rim
159 . Latin Tom2 Rim
160 . Country Tom2 Rim
161 . Classical Tom2 Rim
162 . HipHop Tom2 Rim
163 . Disco Tom2 Rim
164 . Electronic Tom2 Rim
165 . Heavy Metal Tom2 Rim
166 . Club Electronic Tom2 Rim
167 . Modern Electronic Tom2 Rim
168 . Techno Tom2 Rim
169 . Trip Electronic Tom2 Rim
170 . Percussion Tom2 Rim
171 . R&B Tom2 Rim
172 . House Tom2 Rim
173 . Drum&Bass Tom2 Rim
174 . Reggae Tom2 Rim
175 . Modern Percussion Tom2 Rim
176 . Pop Tom3
177 . Rock Tom3
178 . Metal Tom3
179 . Funk Tom3
180 . Jazz Tom3
181 . Punk Tom3
182 . Blues Tom3
183 . Fusion Tom3
184 . Latin Tom3
185 . Country Tom3
186 . Classical Tom3
187 . HipHop Tom3
188 . Disco Tom3
189 . Electronic Tom3
190 . Heavy Metal Tom3
191 . Club Electronic Tom3
192 . Modern Electronic Tom3
193 . Techno Tom3
194 . Trip Electronic Tom3
195 . Percussion Tom3
196 . R&B Tom3
197 . House Tom3
198 . Drum&Bass Tom3

199 . Reggae Tom3
200 . Modern Percussion Tom3
201 . Pop Tom3 Rim
202 . Rock Tom3 Rim
203 . Metal Tom3 Rim
204 . Funk Tom3 Rim
205 . Jazz Tom3 Rim
206 . Punk Tom3 Rim
207 . Blues Tom3 Rim
208 . Fusion Tom3 Rim
209 . Latin Tom3 Rim
210 . Country Tom3 Rim
211 . Classical Tom3 Rim
212 . HipHop Tom3 Rim
213 . Disco Tom3 Rim
214 . Electronic Tom3 Rim
215 . Heavy Metal Tom3 Rim
216 . Club Electronic Tom3 Rim
217 . Modern Electronic Tom3 Rim
218 . Techno Tom3 Rim
219 . Trip Electronic Tom3 Rim
220 . Percussion Tom3 Rim
221 . R&B Tom3 Rim
222 . House Tom3 Rim
223 . Drum&Bass Tom3 Rim
224 . Reggae Tom3 Rim
225 . Modern Percussion Tom3 Rim

CRASH

226 . Pop Crash1
227 . Rock Crash1
228 . Metal Crash1
229 . Funk Crash1
230 . Jazz Crash1
231 . Punk Crash1
232 . Blues Crash1
233 . Fusion Crash1
234 . Latin Crash1
235 . Country Crash1
236 . Classical Crash1
237 . HipHop Crash1
238 . Disco Crash1
239 . Electronic Crash1
240 . Heavy Metal Crash1
241 . Club Electronic Crash1
242 . Modern Electronic Crash1
243 . Techno Crash1
244 . Trip Electronic Crash1
245 . Percussion Crash1
246 . R&B Crash1
247 . House Crash1
248 . Drum&Bass Crash1
249 . Reggae Crash1

250 . Modern Percussion Crash1
251 . Pop Crash1 Rim
252 . Rock Crash1 Rim
253 . Metal Crash1 Rim
254 . Funk Crash1 Rim
255 . Jazz Crash1 Rim
256 . Punk Crash1 Rim
257 . Blues Crash1 Rim
258 . Fusion Crash1 Rim
259 . Latin Crash1 Rim
260 . Country Crash1 Rim
261 . Classical Crash1 Rim
262 . HipHop Crash1 Rim
263 . Disco Crash1 Rim
264 . Electronic Crash1 Rim
265 . Heavy Metal Crash1 Rim
266 . Club Electronic Crash1 Rim
267 . Modern Electronic Crash1 Rim
268 . Techno Crash1 Rim
269 . Trip Electronic Crash1 Rim
270 . Percussion Crash1 Rim
271 . R&B Crash1 Rim
272 . House Crash1 Rim
273 . Drum&Bass Crash1 Rim
274 . Reggae Crash1 Rim
275 . Modern Percussion Crash1 Rim
293 . Techno Crash2
294 . Trip Electronic Crash2
295 . Percussion Crash2
276 . Pop Crash2
277 . Rock Crash2
278 . Metal Crash2
279 . Funk Crash2
280 . Jazz Crash2
281 . Punk Crash2
282 . Blues Crash2
283 . Fusion Crash2
284 . Latin Crash2
285 . Country Crash2
286 . Classical Crash2
287 . HipHop Crash2
288 . Disco Crash2
289 . Electronic Crash2
290 . Heavy Metal Crash2
291 . Club Electronic Crash2
292 . Modern Electronic Crash2
293 . Techno Crash2
294 . Trip Electronic Crash2
295 . Percussion Crash2
296 . R&B Crash2
297 . House Crash2



APPENDIX

298 . Drum&Bass Crash2
299 . Reggae Crash2
300 . Modern Percussion Crash2
301 . Pop Crash2 Rim
302 . Rock Crash2 Rim
303 . Metal Crash2 Rim
304 . Funk Crash2 Rim
305 . Jazz Crash2 Rim
306 . Punk Crash2 Rim
307 . Blues Crash2 Rim
308 . Fusion Crash2 Rim
309 . Latin Crash2 Rim
310 . Country Crash2 Rim
311 . Classical Crash2 Rim
312 . HipHop Crash2 Rim
313 . Disco Crash2 Rim
314 . Electronic Crash2 Rim
315 . Heavy Metal Crash2 Rim
316 . Club Electronic Crash2 Rim
317 . Modern Electronic Crash2 Rim
318 . Techno Crash2 Rim
319 . Trip Electronic Crash2 Rim
320 . Percussion Crash2 Rim
321 . R&B Crash2 Rim
322 . House Crash2 Rim
323 . Drum&Bass Crash2 Rim
324 . Reggae Crash2 Rim
325 . Modern Percussion Crash2
Rim

RIDE

326 . Pop Ride
327 . Rock Ride
328 . Metal Ride
329 . Funk Ride
330 . Jazz Ride
331 . Punk Ride
332 . Blues Ride
333 . Fusion Ride
334 . Latin Ride
335 . Country Ride
336 . Classical Ride
337 . HipHop Ride
338 . Disco Ride
339 . Electronic Ride
340 . Heavy Metal Ride
341 . Club Electronic Ride
342 . Modern Electronic Ride
343 . Techno Ride
344 . Trip Electronic Ride
345 . Percussion Ride
346 . R&B Ride

347 . House Ride
348 . Drum&Bass Ride
349 . Reggae Ride
350 . Modern Percussion Ride
351 . Pop Ride Rim
352 . Rock Ride Rim
353 . Metal Ride Rim
354 . Funk Ride Rim
355 . Jazz Ride Rim
356 . Punk Ride Rim
357 . Blues Ride Rim
358 . Fusion Ride Rim
359 . Latin Ride Rim
360 . Country Ride Rim
361 . Classical Ride Rim
362 . HipHop Ride Rim
363 . Disco Ride Rim
364 . Electronic Ride Rim
365 . Heavy Metal Ride Rim
366 . Club Electronic Ride Rim
367 . Modern Electronic Ride Rim
368 . Techno Ride Rim
369 . Trip Electronic Ride Rim
370 . Percussion Ride Rim
371 . R&B Ride Rim
372 . House Ride Rim
373 . Drum&Bass Ride Rim
374 . Reggae Ride Rim
375 . Modern Percussion Ride Rim
376 . Pop Ride Bell
377 . Rock Ride Bell
378 . Metal Ride Bell
379 . Funk Ride Bell
380 . Jazz Ride Bell
381 . Punk Ride Bell
382 . Blues Ride Bell
383 . Fusion Ride Bell
384 . Latin Ride Bell
385 . Country Ride Bell
386 . Classical Ride Bell
387 . HipHop Ride Bell
388 . Disco Ride Bell
389 . Electronic Ride Bell
390 . Heavy Metal Ride Bell
391 . Club Electronic Ride Bell
392 . Modern Electronic Ride Bell
393 . Techno Ride Bell
394 . Trip Electronic Ride Bell
395 . Percussion Ride Bell
396 . R&B Ride Bell
397 . House Ride Bell
398 . Drum&Bass Ride Bell

399 . Reggae Ride Bell
400 . Modern Percussion Ride Bell

HI-HAT

401 . Pop Hi-Hat Open
402 . Rock Hi-Hat Open
403 . Metal Hi-Hat Open
404 . Funk Hi-Hat Open
405 . Jazz Hi-Hat Open
406 . Punk Hi-Hat Open
407 . Blues Hi-Hat Open
408 . Fusion Hi-Hat Open
409 . Latin Hi-Hat Open
410 . Country Hi-Hat Open
411 . Classical Hi-Hat Open
412 . HipHop Hi-Hat Open
413 . Disco Hi-Hat Open
414 . Electronic Hi-Hat Open
415 . Heavy Metal Hi-Hat Open
416 . Club Electronic Hi-Hat Open
417 . Modern Electronic Hi-Hat Open
418 . Techno Hi-Hat Open
419 . Trip Electronic Hi-Hat Open
420 . Percussion Hi-Hat Open
421 . R&B Hi-Hat Open
422 . House Hi-Hat Open
423 . Drum&Bass Hi-Hat Open
424 . Reggae Hi-Hat Open
425 . Modern Percussion Hi-Hat
Open
426 . Pop Hi-Hat Close
427 . Rock Hi-Hat Close
428 . Metal Hi-Hat Close
429 . Funk Hi-Hat Close
430 . Jazz Hi-Hat Close
431 . Punk Hi-Hat Close
432 . Blues Hi-Hat Close
433 . Fusion Hi-Hat Close
434 . Latin Hi-Hat Close
435 . Country Hi-Hat Close
436 . Classical Hi-Hat Close
437 . HipHop Hi-Hat Close
438 . Disco Hi-Hat Close
439 . Electronic Hi-Hat Close
440 . Heavy Metal Hi-Hat Close
441 . Club Electronic Hi-Hat Close
442 . Modern Electronic Hi-Hat
Close
443 . Techno Hi-Hat Close
444 . Trip Electronic Hi-Hat Close
445 . Percussion Hi-Hat Close
446 . R&B Hi-Hat Close



APPENDIX

447 . House Hi-Hat Close
448 . Drum&Bass Hi-Hat Close
449 . Reggae Hi-Hat Close
450 . Modern Percussion Hi-Hat Close
451 . Pop Hi-Hat Pedal
452 . Rock Hi-Hat Pedal
453 . Metal Hi-Hat Pedal
454 . Funk Hi-Hat Pedal
455 . Jazz Hi-Hat Pedal
456 . Punk Hi-Hat Pedal
457 . Blues Hi-Hat Pedal
458 . Fusion Hi-Hat Pedal
459 . Latin Hi-Hat Pedal
460 . Country Hi-Hat Pedal
461 . Classical Hi-Hat Pedal
462 . HipHop Hi-Hat Pedal

463 . Disco Hi-Hat Pedal
464 . Electronic Hi-Hat Pedal
465 . Heavy Metal Hi-Hat Pedal
466 . Club Electronic Hi-Hat Pedal
467 . Modern Electronic Hi-Hat Pedal
468 . Techno Hi-Hat Pedal
469 . Trip Electronic Hi-Hat Pedal
470 . Percussion Hi-Hat Pedal
471 . R&B Hi-Hat Pedal
472 . House Hi-Hat Pedal
473 . Drum&Bass Hi-Hat Pedal
474 . Reggae Hi-Hat Pedal
475 . Modern Percussion Hi-Hat Pedal

Preset drum kit

1 . Pop
2 . Rock
3 . Metal
4 . Funk
5 . Jazz
6 . Punk
7 . Blues

8 . Fusion
9 . Latin
10 . Country
11 . Classical
12 . HipHop
13 . Disco
14 . Electronic

15 . Heavy Metal
16 . Club Electronic
17 . Modern Electronic
18 . Techno
19 . Trip Electronic
20 . Percussion
21 . R&B

User defined drum kit

22 . House
23 . Drum&Bass
24 . Reggae
25 . Modern Percussion

Demo song

Number 01	Number 10	Number 19	Number 28	Number 37	Number 46
Number 02	Number 11	Number 20	Number 29	Number 38	Number 47
Number 03	Number 12	Number 21	Number 30	Number 39	Number 48
Number 04	Number 13	Number 22	Number 31	Number 40	Number 49
Number 05	Number 14	Number 23	Number 32	Number 41	Number 50
Number 06	Number 15	Number 24	Number 33	Number 42	
Number 07	Number 16	Number 25	Number 34	Number 43	
Number 08	Number 17	Number 26	Number 35	Number 44	
Number 09	Number 18	Number 27	Number 36	Number 45	



PRODUCT MAINTENANCE

Careful maintenance and protection of this product plays an important role in prolonging the service life of the product and reducing the failure.

1 AVOID HEATING, DAMPNESS OR DIRECT SUNLIGHT

Do not over expose the product to direct sunlight, or place it near air conditioning or extremely hot place.

2 DO NOT USE NEAR THE TV OR RADIO

This product may cause video or audio interference to the reception of TV and radio. If this happens, the product should be removed from the TV or radio.

3 NO DILUENTS OR SIMILAR CHEMICALS SHOULD BE USED FOR CLEANING

Clean the product with a soft cloth wetted with weak water solution and neutral detergent. Soak the cloth in a solution and wring it dry until it approaches drying.

4 DO NOT SHAKE, AVOID COLLISION

When moving, the product should be handled carefully and lightly. Violent vibration and collision are strictly prohibited in order to avoid damage to the shell or internal electronic components.



SAFETY PRECAUTIONS

POWER SUPPLY

This product can be powered by standard indoor wall sockets. Please only use the power cord specified in this product. When not in use, please turn off the power supply. When not in use for a long time, pull out the power cord and keep it properly.

SIGN

To ensure that you use this product safely and correctly, to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs. The various signs and their meanings are as follows:



WARNING

This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled.



BE CAREFUL

This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated incorrectly.

EXAMPLE OF LOGO



This triangle sign ($\triangle$) indicates what users should pay attention to.
(The left example is careful shocks)



A circular sign ($\bigcirc$) with an oblique line indicates prohibitions. The icons in or beside the logo indicate the contents specifically prohibited. (The example on the left is no disassembly)



The round black bottom sign ($\bullet$) indicates what must be observed. The diagrams in this sign indicate the contents of the specific matters that must be observed.
(The example on the left is that the power plug must be pulled out of the socket)



SAFETY PRECAUTIONS

WARNING

Smoke, odor, overheating

When the product smokes, smells or overheats, there is a danger of fire and electric shock when it is used continually. In case of the above situation, the following operations should be performed immediately:

01. Turn off the power supply.
02. Pull the plug out of the power outlet.
03. Contact your dealer.

Power cord

1. The improper use of power cord may cause fire and electric shock. The following precautions must be observed:

- The special power cord designated for this product must be used.
- The AC power supply with output voltage within the rated voltage range for household use must be used.
- Do not overload power sockets and extension lines.



2. The improper treatment of power line will lead to its damage or breakage, which will cause fire and electric shock hazards. The following precautions must be observed:

- Do not place or heat heavy objects on power lines.
- Do not attempt to alter or bend the power cord too much.
- Do not twist or pull the power cord. If the power cord or plug is damaged, please replace the same type of power cord.



3. Do not touch the power cord and plug with wet hands, otherwise there is a danger of electric shock.



4. Please use the power cord where the water will not splash. Water is in danger of causing fire and electric shock.



5. Never place vases or any other container containing water on this product. Water is dangerous of causing fire and electric shock.



6. Do not allow minors to unplug and touch power lines or connection boards.

Minors

have no common sense of electricity safety, which may cause electric shock.

BE CAREFUL

The improper use of power cord may cause fire and electric shock. The following precautions must be observed:

- Never put the power cord near the oven or other heat source.
- Do not pull the cable when pulling out of the power socket. The main body of the plug must be grasped.
- The power cord plug must be inserted in the socket to the end.
- Make sure the power supply is off before connecting or disconnecting it.
- When thunderstorms occur or before traveling or other long-term departure, disconnect the power cord from the wall outlet.
- At least once a year, remove the power cord from the wall outlet and clean the dust accumulated around the plug.



Do not burn this product

Do not put this product in the fire, otherwise it will lead to product combustion and explosion of internal electronic components, which will cause fire and personnel injury.



Water and foreign bodies

Water, other liquids and (metal sheets, etc.) entering this product are in danger of causing fire and electric shock. In case of the above situation, the following operations shall be performed immediately:

1. Turn off the power supply.
2. If you are using a power cord for power supply, unplug it from the wall outlet.
3. Contact your distributor.



Disassembly and transformation

Do not disassemble or transform the product in any way, otherwise there is a risk of electric shock, scald or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your distributor.





SAFETY PRECAUTIONS

Falling or colliding

If the product falls or is damaged by strong impact, it will be in danger of causing fire and electric shock. In case of the above situation, the following operations shall be performed immediately:

1. Turn off the power supply.
2. If you are using a power cord for power supply, you need to unplug it from the wall outlet.
3. Contact your distributor.



Plastic bag

Do not let anyone put plastic bags for this product on his head or in his mouth. Otherwise, there is a risk of asphyxia. Families with young children should pay special attention to it.



Keep a distance from the product and the bracket

Climbing the bracket is dangerous of overturning or damage. Families with young children should pay special attention to it.



Put

Avoid placing the product on an uneven surface or any other unstable place. Otherwise, it will cause the product to fall down, which will lead to the risk of injury.



Product Mobility

Before moving this product, you must unplug the power cord plug from the wall outlet and pull out all other cables and connecting wires. Otherwise, it will lead to damage of power or connection wires, resulting in fire and electric shock.



clean

Before cleaning this product, you must unplug the power cord plug from the wall outlet, otherwise there is a risk of fire and electric shock.



Jack

The socket of this product can only be connected to the designated equipment and devices. Connecting non-designated equipment or devices is dangerous of causing fire and electric shock.



Location selection

It should be avoided to place the product in the following places, otherwise there is a risk of fire and electric shock.



- High temperature or dusty places.
- Kitchen or other places with lampblack.
- Where the product is exposed to direct sunlight, or any other place where the product will produce high temperature.

Volume

Don't play music long and loud. Pay special attention when using headphones. Excessive volume can damage your hearing.



Heavy

Do not place heavy objects on this product. Otherwise, the top of the product will be overweight, causing the product to overturn or drop objects on it, which will lead to the risk of injury.



Correct assembly of scaffolds

The incorrect assembly of the bracket may overturn, causing the product to fall off and posing a risk of injury to personnel. Therefore, it must be assembled according to the instructions in the attached installation guide to ensure that the product is properly mounted on its bracket.





TROUBLESHOOTING

Suppose you suspect a malfunction, please read the information first.

Cymbal sound triggered when hitting the kick pad

If you hear a faint cymbal sound when striking the kick pad:

- Identify which cymbal pad is unintentionally triggering the sound.
- Enter the Pad Settings menu.
- Strike the affected cymbal and gradually increase its SEN (Sensitivity) value. Continue adjusting until the cymbal no longer responds when the kick pad is played.
- If adjusting sensitivity doesn't resolve the issue, increase the THR (Threshold) value for that cymbal.
- Important: Only adjust the cymbal pad that is producing the unexpected sound. Overly high sensitivity on cymbal pads can result in false triggering due to crosstalk.
- This issue is usually caused by excessive pad sensitivity or insufficient crosstalk suppression. It can be resolved by adjusting the SEN, THR, or XTALK parameters accordingly.

Cannot turn on the power

- Power switch not on.
- Power supply not connected.
- Bad power supply.
- Improper supply. Power supply must be 9V DC.

No sound/low volume

- Check the volume switch.
- Is the unit properly connected to other devices? Check the connections.
- Are the volume settings and input /output connections correct?
- Could the volume of the connected amplified speaker be lowered? Adjust the volume to an appropriate level. If you are using headphones, are the headphone jack or OUTPUT jack correctly connected?

The timbre is too soft / loud during performance

- Inspect the sensitivity adjustment status.

The output timbre is distorted

- Reduce the volume of the electronic drum sound module. If the connected amplifier is equipped with an input level adjustment function, corresponding adjustments can be made to improve the problem of distorted output timbre.

The sound in the headphones is distorted

- Adjust the volume.
- Are the headphones working properly? Check the headphones by connecting them to other audio devices.

An instance of double - triggering arises.

- Check the bolts of the fixed tom - drum trigger pad.
- Make sure the connecting wires do not touch the trigger pad.
- Use wire ties to help with loose connections.
- Check that the cable is not pulled by the cymbal pad movement.

The external sound source connected to the AUX IN interface does not produce sound

- If the connecting cable you are using contains resistance, the volume will decrease. Please use a cable without resistance.
- Have you used a damaged connecting cable? Please replace the connecting cable.
- Are the volume settings of the connected sound source equipment correct?
- Are the connections and settings of the amplifier or audio system proper?

If you still can't find the information needed to solve the problem, please contact our after - sales staff for assistance.

.Aklot

Beatcore Series by Aklot

If there is anything you would like to say to us

contact our brand after-sales: cs@aklot.com

www.aklot.com

