

BUILD YOUR ULTIMATE RIG

Upper Panel Installation Manual

RIG DUAL

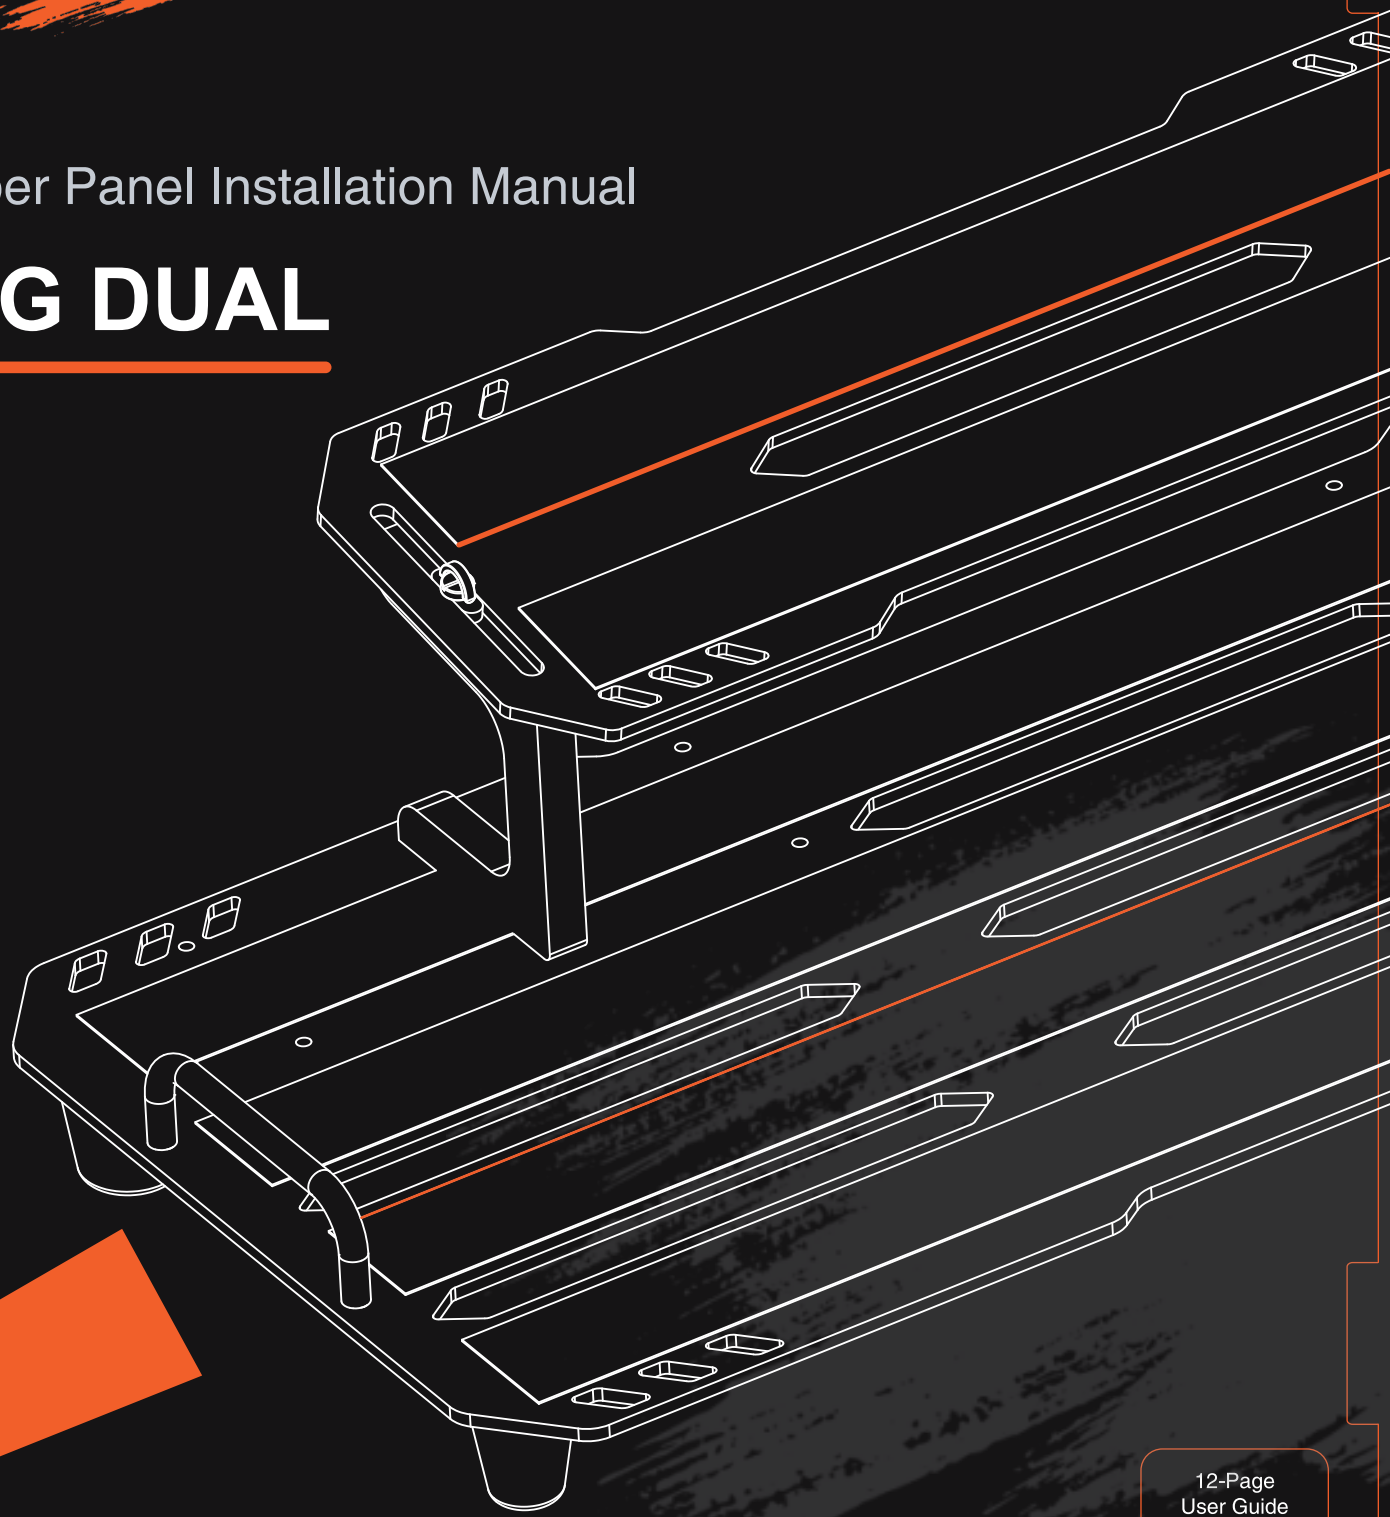


Table of Contents

Use this guide to install the raised upper panel, choose the correct mounting position, adjust the sliding shelf, and review safety information before use.

1	Package Contents	3
2	Install the Support Posts	4
3	Identify the Correct Direction	5
4	Choose the Mounting Position	6
5	Lock and Adjust	7
6	Layout Ideas	8
7	Troubleshooting	9
8	Warning and Safety Information	10

Read Before Installation

- Work on a clean, flat surface.
- Do not fully tighten the hand screws until the parts are aligned.
- Both support posts must use the same hole position on the left and right sides.

After-Sales Support

Scan the QR code for installation videos, setup help, and warranty support.
Need help? Contact AKLOT Support: cs@aklot.com



1. Package Contents

A**Upper Panel**

Raised shelf with left and right sliding slots for positioning above the base panel.

**B****Base Panel**

Main board with multiple left, center, and right mounting hole positions.

**C****U-Shaped Support Posts x 2**

Two posts support the upper panel. Install both in the same hole position.

**D****Hand Screws x 2**

Used to lock the upper panel after position adjustment. Loosen to slide.

**E****E Small Screws x 4**

Used to secure the U-shaped support posts during assembly. Tighten them after aligning the mounting holes

**F****F Cross Wrench x 1**

Used to tighten the small screws. Keep it for future adjustments or reassembly.




Pre-Assembly Check

- Confirm all parts are included and free from visible damage.
- Make sure the hand screws turn smoothly before installation.
- Clear the screw holes and sliding slots of packaging material or dust.
- Prepare a flat work surface to keep the pedalboard from sliding during assembly.

2. Install the Support Posts

Insert the two U-shaped support posts into the selected hole position on the base panel. Keep both posts upright and parallel.

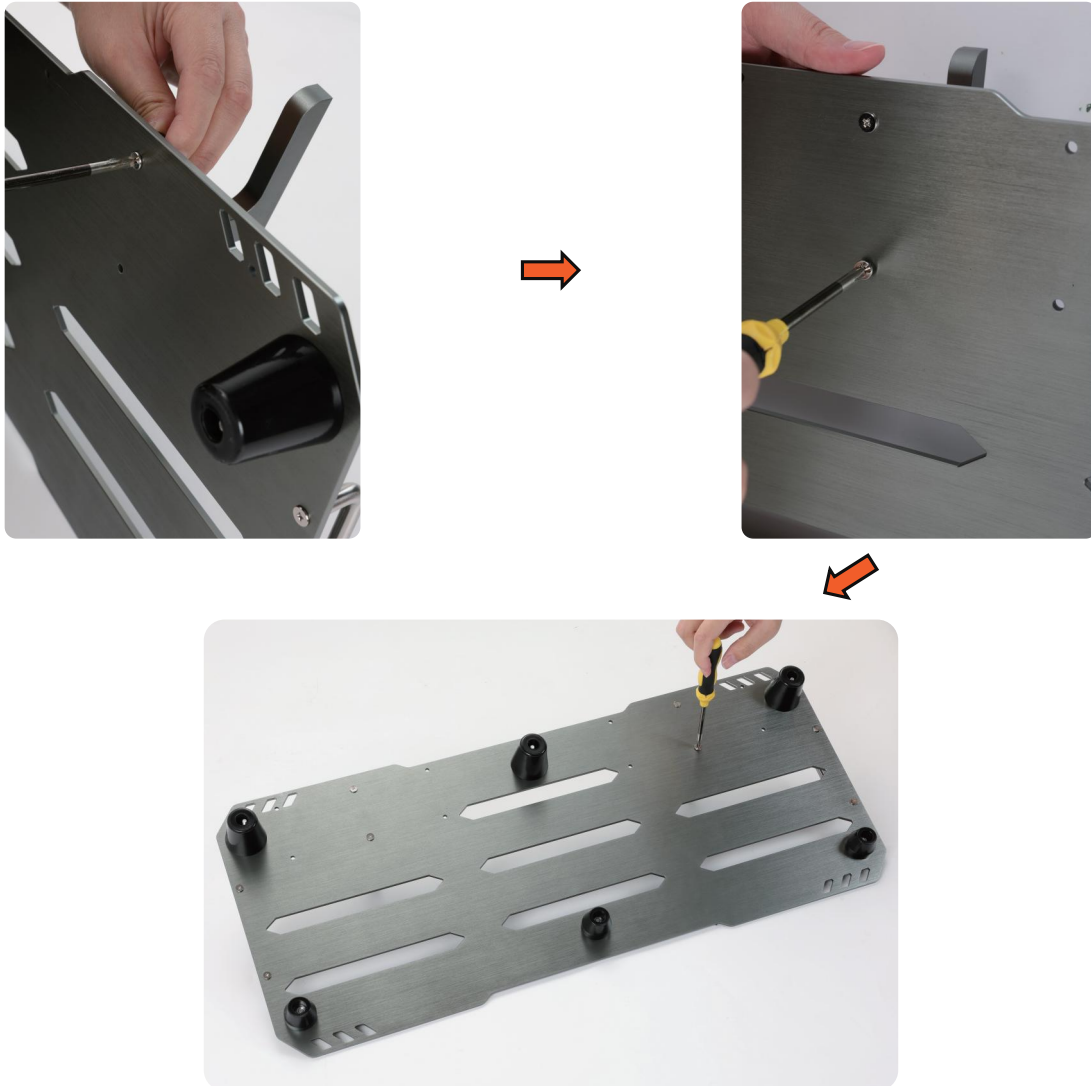


Fasten screws from the underside of the base panel

Tightening Notes

- Start each screw by hand first to avoid cross-threading.
- Tighten until the post is stable, but do not overtighten.
- After tightening, lightly shake each post to confirm it does not wobble.

3. Identify the Correct Direction

Place the base panel in front of you and identify the front edge. The opening of each U-shaped support post should face forward during installation.

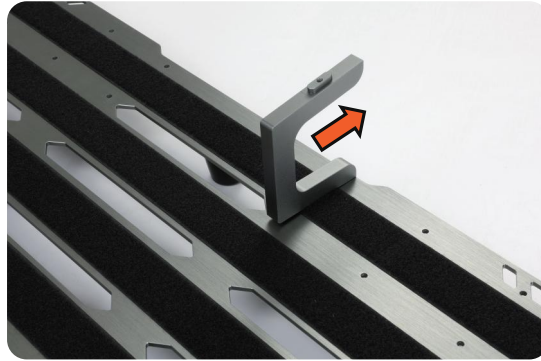

Open side faces the front

Quick Check

- The vertical part of each post should stand straight up.
- The short bent part should face inward toward the upper panel slot area.
- If the post direction is reversed, the upper panel may not sit properly.

4. Choose the Mounting Position

The base panel provides three mounting choices. Select one position according to your pedal layout, cable route, or power supply position.



LEFT



CENTER



RIGHT



Correct

Both support posts use the same position set: left + left, center + center, or right + right.



Incorrect

Do not mix positions, such as left + center or center + right. The slots will not align.

Layout Tip

- Choose center position for a balanced setup.
- Choose left or right position when you need extra space for pedals, cables, or power supply placement.
- Plan the position before tightening any screws.

5. Lock and Adjust

Use the hand screws to secure the upper panel. The hand screws should hold the upper panel in place while still allowing adjustment when loosened.





Forward / Backward Sliding Adjustment

Adjustment Method

- To adjust: loosen both hand screws slightly.
- Slide the upper panel forward or backward to the desired position.
- To lock: tighten both hand screws evenly until the upper panel is stable.
- Do not leave one side tight and the other side loose; uneven locking may cause misalignment.

6. Layout Ideas

The raised upper panel helps create a cleaner two-level setup. It can improve access to frequently used pedals and leave storage space underneath.

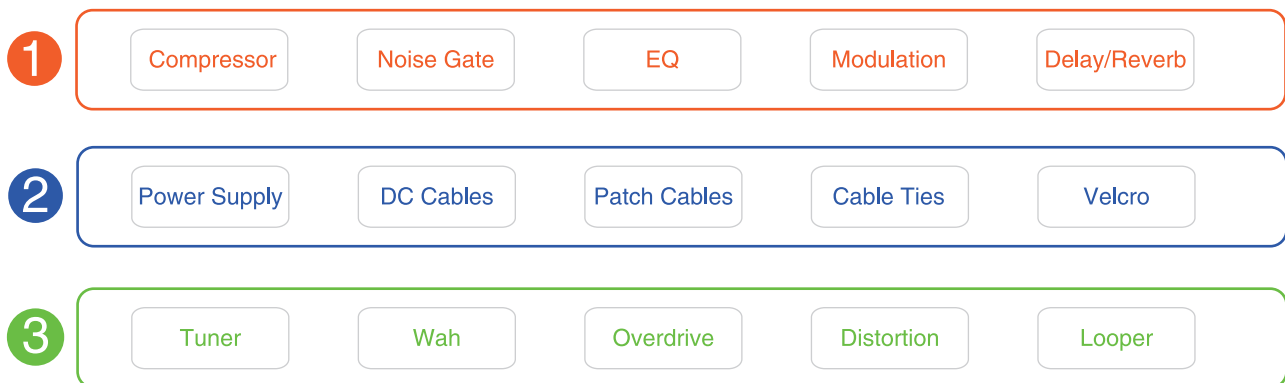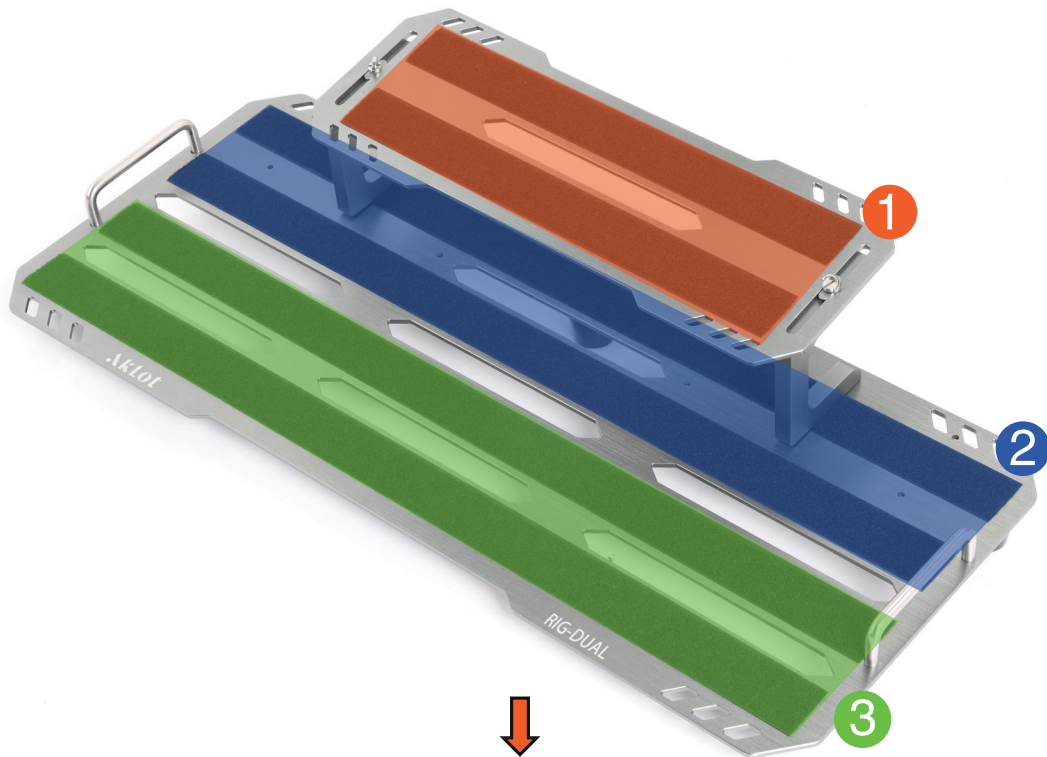

Example only. Arrange pedals according to your own signal chain and cable direction.

Practical Placement Tips

- Place frequently used pedals on the front row for easier access.
- Use the raised upper panel for utility pedals, always-on pedals, or pedals that are adjusted less often.
- Keep cable bends smooth. Avoid forcing patch cables into sharp angles.
- The space under the upper panel is suitable for a compact power supply or low-frequency-use accessories.

7. Troubleshooting

If installation feels difficult, stop and check the alignment before applying force. Most installation issues are caused by unmatched hole positions or overtightened hand screws.

Issue 1 Upper panel will not fit

Move both support posts to matching left, center, or right holes.

Issue 2 Panel cannot slide

Loosen both hand screws slightly before sliding.

Issue 3 Support post wobbles

Reinstall the bottom screw by hand, then tighten evenly.

Issue 4 Panel looks tilted

Check that both posts are vertical and fully seated.

Issue 5 Hand screw feels stuck

Back it out gently and restart the thread by hand. Do not force it.

Issue 6 Cable space is tight

Slide the upper panel slightly forward or backward to improve clearance.

8. Warning and Safety Information

Read all warning and caution notes before use. Improper installation or misuse may damage the product or cause personal injury.



Pinch Hazard

Keep fingers away from sliding slots when adjusting the upper panel.



Do Not Overtighten

Overtightening may damage screw threads, slots, or support posts.



Small Parts

Keep screws and small accessories away from children and pets.



Stable Surface Only

Use the product only on a flat, stable surface. Do not stand on the panel.



Check Before Use

Confirm both support posts are secure and the upper panel is locked before placing equipment.



Cable Clearance

Leave enough clearance for power cables, patch cables, and power supply connectors.

Care and Maintenance

- Check screws regularly, especially after transport.
- Wipe panels with a dry soft cloth. Do not use harsh chemicals.
- Do not overload the upper panel beyond normal pedalboard accessory use.
- Stop using the product if any component is bent, cracked, loose, or damaged.



RIG DUAL

Build Your Ultimate Rig

cs@aklot.com
www.aklot.com