

Aklot

Vibratory Metronome II

User Manual



Precautions Before Use

1. Water Resistance Warning

- This product does not have professional waterproof functionality. To avoid fire, electric shock, or device damage, do not use or wear this product during activities such as bathing, swimming, or other water-related activities.

2. Environmental Requirements

- Do not place the product near water sources, high temperatures, direct sunlight, or excessively humid environments.
- Avoid placing the device near strong magnetic fields to prevent performance issues.
- Do not expose the device to extreme temperatures (below 0°C or above 40°C) to avoid damaging internal components.

3. Safety Tips

- Use only the original charging equipment to charge the device. Avoid using non-standard chargers to prevent battery damage or hazards.
- If the device exhibits abnormal heating, unusual odors, or noises, stop using it immediately and contact customer service.

Device Button Functions

1. Rotary Knob

- **Press Once:** In Metronome Mode, switch between adjusting tempo, beat, and rhythm patterns.
- **Long Press:** Long press for 2 seconds to switch to Time Mode.
- **Double Press:** Switch between Metronome Mode and Sports Mode.
- **Press Three Times:** Switches to Time Mode and adjusts time parameters. (Wireless connection to the cell phone will automatically update to the cell phone's time)
- **Rotate:** Adjust the currently selected parameter (e.g., tempo, beat, rhythm pattern, time).



2. Button

- **Long Press Power On:** Press and hold for 2 seconds.
- **Long Press Power Off:** Press and hold for 3 seconds.
- **Press Once:** Start or pause the current function.
- **Double Press:** In metronome mode, Pre-set the beat and rhythm → Double-Press the button to adjust to your desired tempo → Tap to confirm → Tap again to start looping



Device Mode Description

- This product offers four page modes for different scenarios.
- Categorized into metronome mode, time mode, and sport mode, with metronome mode also allowing switching to beat loop mode.

1



Metronome Mode

Tempo(40-240bpm)

Beat(0-9)

Rhythm(♩ ♪ ♫ ♫ ♫ ♫ ♫ ♫ ♫ ♫)



Beat Loop Mode

2



Sports Mode

Tempo(10-240bpm)

3



Time Mode

24-Hour Format


- **Metronome Mode** for Music practice, rhythm training, and other similar scenarios.
- **Sports Mode** for outdoor or indoor sports such as running, jumping rope, and fitness.
- **Time Mode** (24-hour format) for precise time management.
- **Beat Loop Mode** for repetitive practice, intensive training.

APP Guide


- Once connected to the app, you can additionally adjust screen brightness, vibration intensity, and control multiple devices simultaneously.

1 Download the App

AppStore

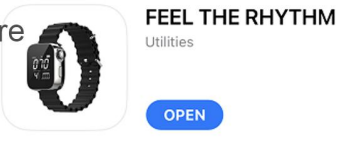

Google Play

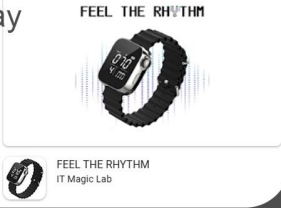


2 Connect the Device

Turn on the device, wireless connection



3 Adjust the Settings

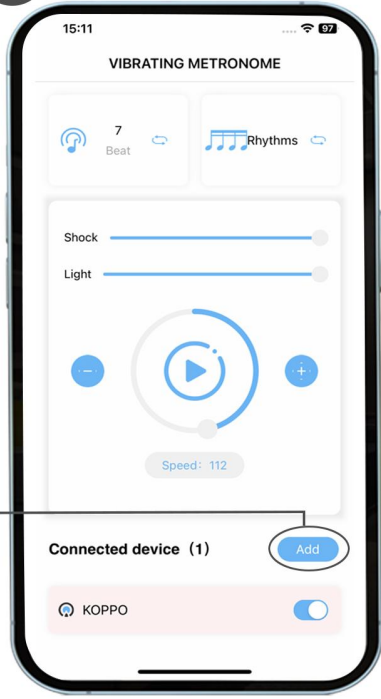

- Can connect up to 6 devices
- Within the app, you can additionally adjust vibration intensity and screen brightness

Daily Use and Operation

1. Power On/Off and Sleep Mode

- **Power On:** Press and hold the button for 2 seconds to turn on the device. It will enter time mode.
- **Power Off:** Press and hold the button for 3 seconds to turn off the device.
- **Screen Off Mode:** The device will enter screen off when it is idle (after 10 seconds), during which it will still consume a small amount of power. Pressing a button at random will bring it back on.

2. Charging Instructions

- **Charging Status:** When connected to a charger, the screen will light up automatically, and the battery icon will flash to indicate charging.
- **Full Charge Notification:** When fully charged, the screen will turn off, and the device will power down automatically.
- **Low Battery Notification:** When the battery level is below 10%, the battery icon's progress bar will empty, and a low battery alert sound will be emitted. Please charge the device promptly.

Frequently Asked Questions

- **Q1:** What should I do if the device does not power on?

Check if the battery is depleted. Connect the charger and try powering it on again. If the issue persists, contact customer service.

- **Q2:** Is it normal for the screen not to light up while charging?

The screen should light up automatically during charging. If it does not, check if the charging connection is secure.

- **Q3:** What should I do if I feel uncomfortable/skin redness after wearing it for a long time?

First check if you are allergic to ABS straps. In addition, the strap should not be too tight. Or try changing the wearing point intermittently.

- **Q4:** What to do if the metronome won't charge?

First, check the charging port for dust. Then wipe it with a clean, soft cloth and try charging again.

Maintenance and Care

- **Cleaning:** Wipe the device surface with a soft, dry cloth. Avoid using chemical cleaners or liquids directly on the device.
- **Storage:** When not in use for extended periods, power off the device and store it in a dry, cool environment.
- **Battery Maintenance:** It is recommended to charge the device at least once a month to maintain battery health.