

USER MANUAL

Aklot

DIGITAL PIANO **AUR-IV Neo**

Thank you for choosing Aklot
to be a part of your musical story.

Please Read This Manual Carefully Before Use.



CONTENTS	01
WARRANTY	03
FUNCTION INTRODUCTION	04
INSTALLATION GUIDE	05
PLUG DIAGRAM	06
Power Cord Port	06
Audio Output Port	06
Audio Input Port	06
Triple Pedal Port.....	06
USB MIDI Port.....	06
USB Port.....	06
Triple Pedal Port.....	06
Dual Headphone Ports	06
Ambient light switch	06
QUICK OPERATION GUIDE.....	07
Start Power Supply.....	07
Master Volume.....	07
Function Buttons	07
Demo	08
Timbre	08
Dual Timbre.....	08
Split	08
Accompaniment Control	09
Accompaniment Speed.....	09
Accompaniment Volume	10
Metronome.....	10
Playing Recording.....	10
Reverberation Sound Effect.....	10
Touch	11
Transposition	11
Tuning Adjustable	11



CONTENTS

USB Flash Drive Controls Playback.....	11
Wireless Connectivity	11
Preset Recall.....	11
APPENDIX.....	12
Timbre Table	12
Rhythm Table	13
Demonstration Song.....	14
PRODUCT MAINTENANCE.....	15
SAFETY PRECAUTIONS	16



WARRANTY

Any questions about the use of the product, you can contact our brand after-sales staff. We will solve your problem until it is resolved.

- ◆ 1-Year Warranty
- ◆ 24/7 Online Support

For guidance on product use and warranty extension, please contact our brand after-sales staff via email:
[cs@aklot.com]

If any questions related to orders, please contact the seller through the shopping platform.

WARRANTY



FUNCTION INTRODUCTION


Thank you for choosing our digital piano. This product is elegant and exquisite. It is the perfect presentation of contemporary new electronic technology and acoustics.

- Before using the instrument, you must read this manual carefully.




88-KEY PROGRESSIVE HAMMER ACTION KEYBOARD

1. 88-Key Progressive Hammer Action Keyboard Engineered with graded hammer mechanism that replicates the weighted touch of a grand piano, providing dynamic resistance from 52g (lower register) to 48g (upper register). The keys utilize cellulose-resin composite surfaces for moisture resistance and carbon-reinforced sharps for durability.

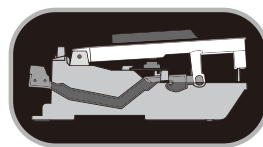

DREAM V8 Sound Engine

Powered by DREAM's Dynamic Sampling Technology, featuring 32-layer multi-sampling from CFX concert grand pianos. Integrated Virtual Resonance Modeling (VRM) simulates string resonance, pedal mechanics, and soundboard vibrations for lifelike acoustics.

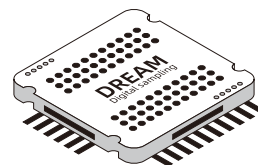

- Tone: 128 kinds of tones
- Rhythm: 160 kinds of rhythms
- Built-in music library: 60 demo songs
- Volume adjustment: total volume, accompaniment volume
- Accompaniment: rhythm, intro/outro, interlude insertion, automatic chord, synchronization
- Recording: Recording + Playback
- Parameter adjustment: speed, keyboard tuning, fine tuning of intonation
- Metronome: 4 types
- Other functions: dual tone / keyboard segmentation / reverberation sound effect / force sensing
- Habit setting: save/call
- Connectivity: Power supply, pedal board, Audio input/audio output, USB MIDI, USB flash drive, headphones, Bluetooth

REMARK!

- This product is an electro-acoustic instrument product. It is normal that there is a little current sound in the speaker or earphone after power-on.
Keep away from "radio, TV, antenna receiver, router, refrigerator, TV, motor and other RF electrical interference sources" during use.



INSTALLATION GUIDE

REMARK!


- This product needs to be installed by adults, do not let minors install independently! Carefully read the "safety precautions" in the user manual before use.
- This installation drawing is only applicable to the version of wooden underframe.
(For other types of underframe, please refer to their respective installation drawings)

01

Installation Diagram

- Lock the bottom bracket screws according to the direction shown in the diagram, then place the digital piano on the bracket and lock the fixing screws.


- 1 Left/Right Support Plate (2 PCS)
- 2 foot pedal crossbeams (1 PCS)
- 3 middle fixed crossbeams (1 PCS)
- 4 Digital Pianos (1 PCS)
- 5 pointed screws (M5 × 50=4 PCS+1spare)
- 6 flat head screws (M6 × 50=4 PCS+1spare)
- 7 flat head screws (M6 × 18=4 PCS+1spare)

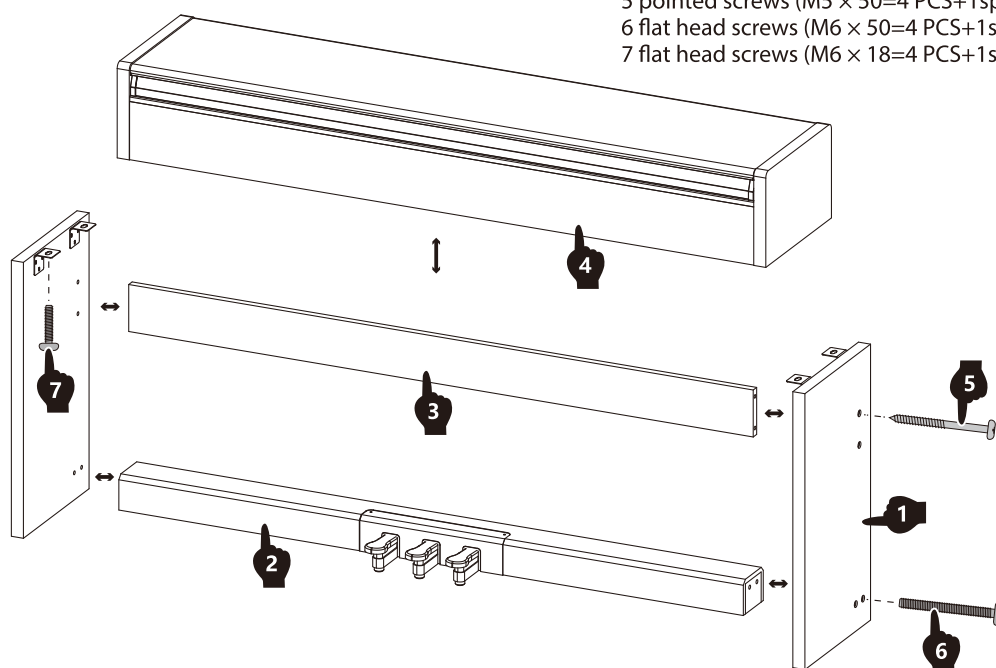


02

Connecting Pedal Wires

- Insert the triple pedal cable into the Pedal Unit Jack located on the rear panel of the digital piano. Ensure the connector is fully seated for stable signal transmission.

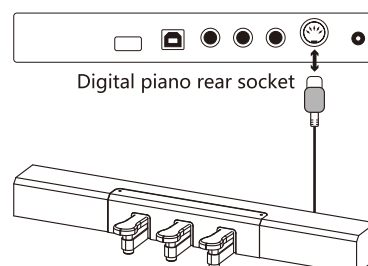

PLUG DIAGRAM

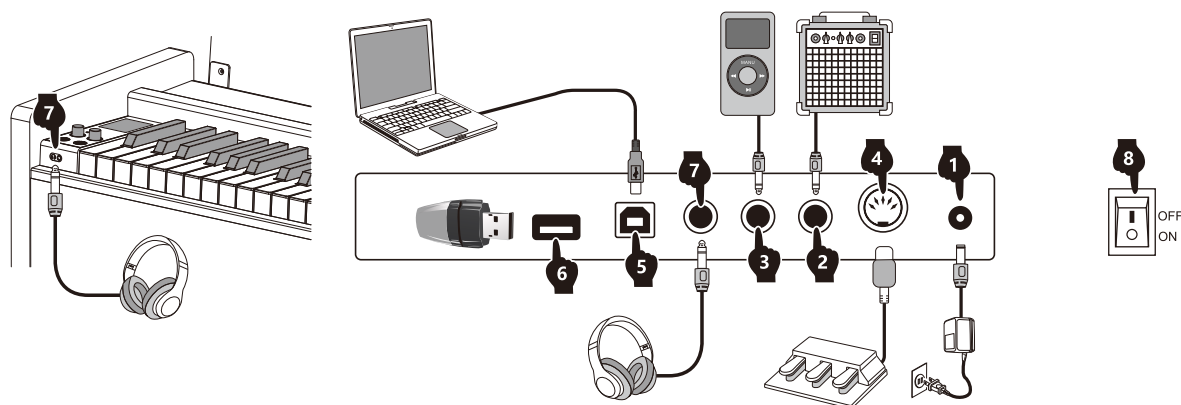

1 Power Supply Port Connection

Connection: Insert the DC plug into the DC IN port on the piano. Connect the other end to a standard 100-240V household power outlet.

Technical Tip: Use surge-protected power strips for voltage stability. Avoid bending the DC cable sharply near the connector.

2 Audio Output Port - 1/4'in(6.35mm) Function

Function: Connect active speakers or amplifiers via the AUDIO OUT port for enhanced sound projection.

Supported Devices: Studio monitors, home theater systems, or PA systems.

Signal Type: Line-level unbalanced audio (RCA/TRS compatible).

3 Audio Input Port - 1/4'in(6.35mm) Function

Function: Feed external audio sources (e.g., smartphones, MP3 players) into the piano via AUDIO IN for playback through built-in speakers.

Compatibility: Accepts - 1/8'in(3.5mm) TRS or RCA inputs.

Usage Scenario: Play backing tracks while practicing.

4 Triple Pedal Port Function

Function: Connect the triple pedal unit to control:

Soft Pedal (Left): Reduces volume and tonal brightness.

Sostenuto Pedal (Middle): Sustains selectively held notes.

Damper Pedal (Right): Full sustain for all played notes.

Technical Note: Pedal polarity can be customized in advanced settings (if supported).

5 USB MIDI Port Function

Connect to computers/tablets via USB-MIDI for: Music software integration (e.g., DAWs, notation apps). MIDI data transmission for recording/composing.

Supported Formats: Class-compliant MIDI over USB (no drivers required for most OS).

Applications: Real-time MIDI control in Garage Band, FL Studio, etc..

6 USB Flash Drive Port Function

Function: Insert USB drives to play audio files (MP3, WAV, FLAC, etc.) directly.

File System Compatibility: FAT32 recommended for broad format support.

Operation: Auto-plays files upon insertion (if enabled in system settings).

7 Dual Headphone Ports - 1/4'in(6.35mm) Function

Function: Front and rear PHONES ports allow simultaneous headphone monitoring: Automatically mutes internal speakers.

Usage Tips: Ideal for silent practice or detailed sound analysis.

Compatibility: Supports 3.5mm TRS stereo.

8 Ambient Light Switch

The ambient light is on by default when you turn it on for the first time. If you want to turn it off, just press the switch.

Safety & Compatibility Notes

Power Sequence: Always connect the DC plug to the piano before plugging into the power outlet.

Audio Devices: Use shielded cables to minimize interference in AUDIO IN/OUT connections.

Pedal Calibration: Reset pedal settings if latency or unresponsive behavior occurs.



QUICK OPERATION GUIDE

1 Start Power Supply

Long press the "Power" button, the indicator light will light up, and you can enter the performance mode. Press again to turn off. (Figure 1)

- After 30 minutes of inactivity, it automatically enters sleep mode and can be awakened by pressing any key on the keyboard.
- The processor chip of this product is complex and similar to a computer system. Sometimes it cannot respond. Please turn off the power switch and then turn it on to work normally.

2 Master Volume


Rotate the volume wheel to adjust the total volume, and the screen displays the volume value. (Figure 2)

Please adjust the volume to the appropriate position.


3 Function Buttons

1. Press the "Function" button to display the function options on the screen. (Figure 3)
2. Rotate the "speed selection wheel" to select the corresponding function, press confirm, and enter the sub option. (Figure 4)
3. Rotate the "speed selection wheel" to select the desired parameters for confirmation.

- Press the "Function" button again to return to the main menu of functions and select other options to adjust.

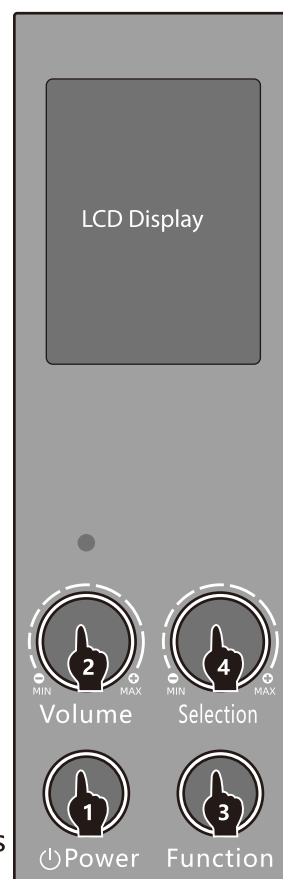


Function: 1/3 page

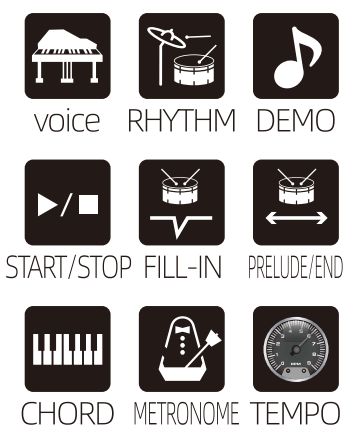

Function: 2/3 page




Function: 3/3 page

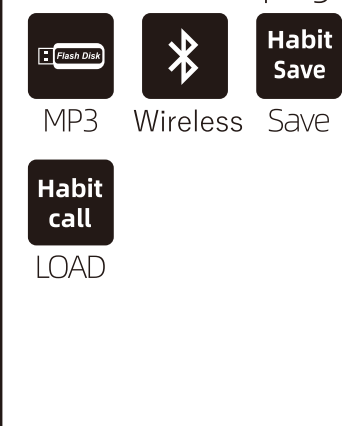



QUICK OPERATION GUIDE

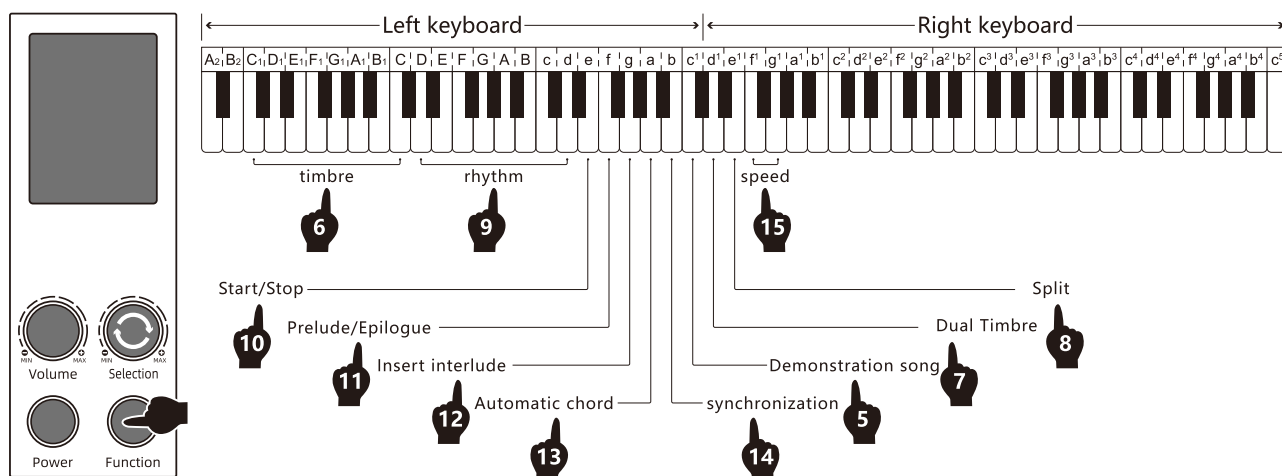

4 Demo

1. Press and hold the "Function" button while pressing the "Demonstration Song C¹ White Key" to enter the demonstration song playback mode, and the screen will display the song name.(Figure 5)
 2. Rotate the "selection "wheel to select the demonstration songs in the library.
(There are a total of 60 demonstration songs to choose from)
- Pressing the "speed selection wheel" can start/stop playing songs.

5 Timbre

1. Press and hold the "Function" button without releasing it, and then press the "Voice Region C₁-C White Key" to select 8 directly selected voices. The screen will display the names of the voices.(Figure 6)
2. Rotate the "speed selector" to select other hidden voices. (There are a total of 128 tones to choose from)

6 Dual Timbre

1. According to the method of selecting timbre, first select a timbre as the first timbre.
 2. Press and hold the "Function" button without releasing it, and then press the "Dual Tone d¹ White Key" to enter dual tone mode. The screen displays the current status. (Figure 7)
 3. Rotate the "speed selection wheel" to select the second tone
- At this point, playing the keyboard can produce a mixed sound of two instruments.

7 Split

1. According to the method of selecting a tone, first select a tone as the left keyboard tone.
 2. Press and hold the "Function" button without releasing it, and then press the "Keyboard Split e¹ White Key" to enter dual keyboard mode. The screen displays the current status. (Figure 8)
 3. Rotate the "speed selection wheel" to select the right keyboard tone.
- At this point, playing the left and right keyboards produces different instrument sounds.



QUICK OPERATION GUIDE

8 Accompaniment Control

Choose rhythm:

1. Press and hold the "Function" button while pressing the "Rhythm Area D-d White Key" to select 8 directly selected rhythms for playback, and the screen displays the rhythm name. (Figure 9)
2. Rotate the "speed selection wheel" to select other hidden rhythms. (There are a total of 160 rhythms to choose from)
3. Press and hold the "Function" button while pressing the "Start/Stop" button to control playback/stop. (Figure 10)
 - Pressing the "speed selection wheel" can also control playback/stop.

Prelude/Epilogue:


1. Press and hold the "Function" button without releasing it, and at the same time, press the "Foreplay/Endplay f white key" to enter the Foreplay standby mode. (Figure 11)
2. Press and hold the "Function" button while pressing the "Rhythm Area D-d White Key" to start playing the prelude to the selected rhythm, and then continue playing the rhythm.
3. During the rhythm playback process, hold down the "Function" button and press the "Introduction/Ending f White Key" at the same time to insert an ending for the currently playing rhythm. After the ending is played, the rhythm playback will stop.

Insert interlude:

During the rhythm playback process, hold down the "Function" button while pressing the "Insert Interlude G White Key" to insert a transitional interlude for the currently playing rhythm. (Figure 12)

Automatic chord:

1. Press and hold the "Function" button while pressing the "Auto Chord a White Key" to enter chord mode. At this time, the left keyboard switches to the chord keyboard area, and the screen displays the current status. (Figure 13)
2. Play the left piano key and automatically recognize the playing chord based on single finger or multi finger fingering.
 - Repeat the operation to exit the function.

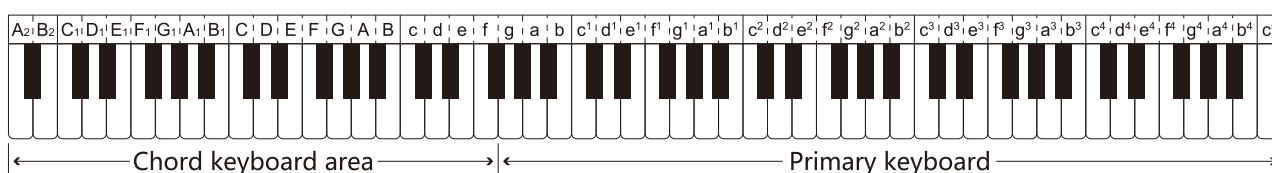

Synchronous start:

1. Press and hold the "Function" button without releasing it, and at the same time press the "Sync B White Key" to enter the rhythm synchronization playback mode. (Figure 14)
2. Playing in the "chord keyboard area" triggers synchronized rhythm playback.
 - If the "automatic chord" function is turned on, the chord and the selected rhythm will be played synchronously.

9 Accompaniment Speed


Press and hold the "Function" button while pressing the "Speed f1-g1 White Key" to adjust the playback speed of rhythm, demonstration song, and metronome. The screen displays the current status. (Figure 15)

Press and hold the "Function" button while pressing the "Speed f1-g1" two white keys to restore the default value.

- Press and hold the "Function" button while pressing the "Speed f1-g1" two white keys to restore the default value.



QUICK OPERATION GUIDE

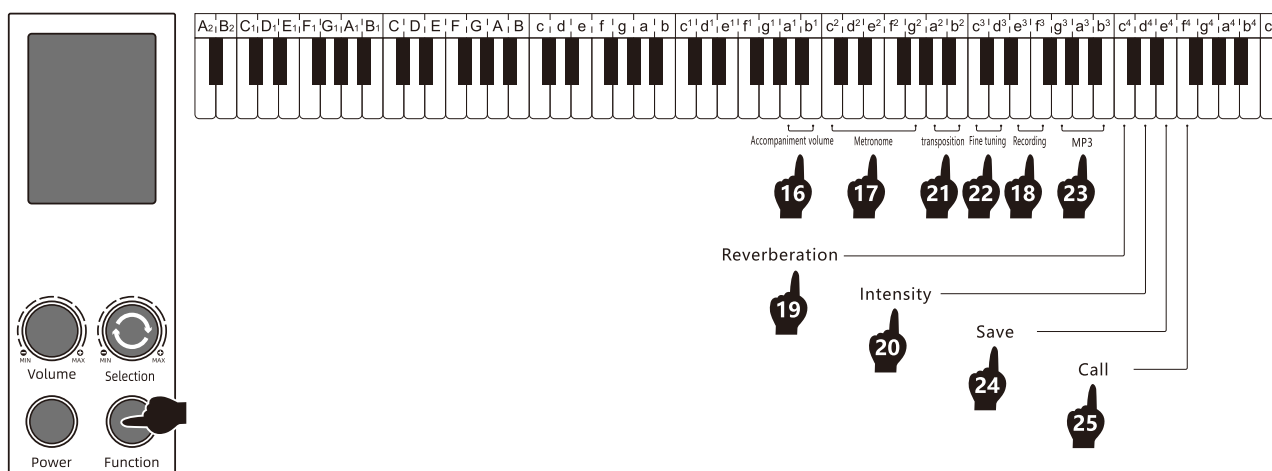

10 Accompaniment Volume

Press and hold the "Function" button without releasing it, and then press the "accompaniment volume a¹-b¹ white key" to adjust the rhythm, demonstration song, metronome MP3 playback volume, the screen displays the current status. (Figure 16)

Press and hold the "Function" button, and then press the "accompaniment volume+- two white keys" to restore the default value.

11 Metronome

Press and hold the "Function" button without releasing it, and then press the "Close c²-g² white key on metronome"1\2\3\4" to select the metronome type and turn off metronome playback. The screen displays the current status. (Figure 17)

- Pressing the "speed selection wheel" in metronome mode can also control playback/stop.

12 Playing Recording

1. Press and hold the "Function" button without releasing it, and then press the "Record e³ Recording White Key" to enter the playback recording mode. At this time, the playback keyboard will start recording. The screen displays the current status. (Figure 18)

- Press the "Record" button again to stop recording.

2. Press and hold the "Function" button while pressing the "Record f³ Play White Key" to play previously recorded music.

- Repeat the above operation to stop playing.

13 Reverberation Sound Effect

Press and hold the "Function" button while pressing the "Reverb c⁴ White Key" to turn off the reverb sound field effect. Repeat the operation to turn it on. The screen displays the current status. (Figure 19)

- The default startup status is on.



QUICK OPERATION GUIDE

14 Touch

1. Press and hold the "Function" button while pressing the "Force d⁴ White Key" to turn off keyboard force response. At this point, playing the keyboard emits the same volume of sound regardless of the strength of the fingers. The screen displays the current status. (Figure 20)
 2. Repeat the operation to turn it on. When it is turned on, playing the keyboard can emit the corresponding volume based on finger strength.
- The default startup status is on.

15 Transposition

Press and hold the "Function" button without releasing it, and then press the "Adjust a²-b² White Key" to adjust the keyboard pitch. This feature allows you to make no changes Play position, adjust the range of the keyboard in half tones. The screen displays the current status. (Figure 21)

The adjustment range is: ± 12 half tones.

16 Tuning Adjustable

Press and hold the "Function" button without releasing it, and then press the "Fine tune c³-d³ White Key" to adjust the keyboard pitch. The screen displays the current status. (Figure 22)

- The adjustment range is ± 99 sound minutes.

17 USB Flash Drive Controls Playback

1. Insert the saved audio files into a USB socket, and the song will automatically play (supports audio formats such as MP3. WMA. MP4. WAV. FLAC. ACC). The screen displays the playback status. (Figure 23)
2. Press and hold the "Function" button while pressing the "MP3 Control g³-b³ White Key" to control song selection and playback/pause.
3. Press and hold the "Function" button, and then press the "Style Volume+- White Key" to adjust the MP3 playback volume.

18 Wireless Connectivity

Wireless audio connection:

Open the phone settings, enter the Wireless option to turn on Wireless, and find the new device "Audio" (password: 8888) to perform Wireless audio Connect, after successful connection, the Wireless light will light up, the screen will display the Wireless connection icon, the smart piano will become a Wireless speaker, and the phone will operate and play it Songs or other audio sounds will be emitted through a smart piano.

Wireless MIDI connection:

Pre install MIDI type music software on smart devices such as computers, tablets, and phones with Wireless transmission, and then connect with them through the music software The Wireless of this device is paired and connected. After successful connection, users can learn or compose music according to the functions of their respective music software.

19 Preset Recall

1. Press and hold the "Function" button without releasing it, and then press the "Save e⁴ White Key" to save the current parameter settings. The screen displays the current status. (Figure 24)
- Can save parameters: timbre, rhythm, speed, shift, fine-tuning, dual timbre, keyboard split, and accompaniment volume.
2. Press and hold the "Function" button without releasing it, and then press the "Call f⁴ White Key" to call up the previously saved parameter settings. (Figure 25)



APPENDIX

Timbre Table

PIANO

- 001 GRAND PIANO
- 002 BRIGHT PIANO
- 003 ELECTRIC PIANO
- 004 HONKY-TONK PIANO
- 005 RHODES PIANO
- 006 CHORUSED PIANO
- 007 HARPSICHORD
- 008 CLAVINET

GLOCK

- 009 CELESTA
- 010 GLOCKENSPIEL
- 011 MUSIC BOX
- 012 VIBRAPHONE
- 013 MARIMBA
- 014 XYLOPHONE
- 015 TUBULR BELLS
- 016 DULCIMER

ORGAN

- 017 HAMMOND ORGAN
- 018 PERCHY ORGAN
- 019 ROCK ORGAN
- 020 CHURCH ORGAN
- 021 REED ORGAN
- 022 ACCORDION
- 023 HARMONICA
- 024 TANGO ACCORDION

GUITAR

- 025 GUITAR NYLON
- 026 GUITAR STEEL
- 027 ELE GUITAR (JAZZ)
- 028 ELE GUITAR (CLEAN)
- 029 ELE GUITAR (MUTED)
- 030 OVDR GUITAR
- 031 DISTORTION GUITAR
- 032 GUITAR HARMONIC

BASS

- 033 ACOUSTIC BASS
- 034 ELE.BASS(FINGER)
- 035 ELE. BASS(PICK)
- 036 FRETLESS BASS
- 037 SLAP BASS 1
- 038 SLAP BASS 2
- 039 SYNTH BASS 1
- 040 SYNTH BASS 2

STRING

- 041 VIOLIN
- 042 VIOLA
- 043 CELLO
- 044 CONTRABASS
- 045 TREMOLO STRINGS
- 046 PIZZICATO STRINGS
- 047 ORCHESTRAL HARP
- 048 TIMPANI

CONCERT

- 049 STRING ENSEMBLE1
- 050 STRING ENSEMBLE2
- 051 SYNTHSTRINGS 1
- 052 SYNTHSTRINGS 2
- 053 CHOIR AAHS
- 054 VOICE OOHS
- 055 SYNTH VOICE
- 056 ORCHESTRA HIT

BRASS

- 057 TRUMPET
- 058 TROMBONE
- 059 TUBA
- 060 MUTED TRUMPET
- 061 FRENCH HORN
- 062 BRASS SECTION
- 063 SYNTH BRASS 1
- 064 SYNTH BRASS 2

PIPE

- 065 SOPRANO SAX
- 066 ALTO SAX
- 067 TENOR SAX
- 068 BARITONE SAX
- 069 OBOE
- 070 ENGLISH HORN
- 071 BASSON
- 072 CLARINET

WOODPIPE

- 073 PICCOLO
- 074 FLUTE
- 075 RECORDER
- 076 PAN FLUTE
- 077 BOTTLE BLOW
- 078 SHAKUHACHI
- 079 WHISTLE
- 080 OCARINA

SYNTH PIPE

- 081 LD.1(SQUARE)
- 082 LD.2(SAWTOOTH)
- 083 LD.3 CALLIOPE LEAD
- 084 LD.4(CHIFF LEAD)
- 085 LD.5(CHARANG)
- 086 LD.6(VOICE)
- 087 LD.7(FIFTHS)
- 088 LD.8(BASS+LEAD)

SYNTH VOICE

- 089 PAD 1(NEW AGE)
- 090 PAD 2(WARM)
- 091 PAD 3(POLYSYNTH)
- 092 PAD 4(CHOIR)
- 093 PAD 5(BOWED)
- 094 PAD 6(METALLIC)
- 095 PAD 7(HALO)
- 096 PAD 8(SWEEP)

SYNTH EFFECT

- 097 FX1 (RAIN)
- 098 FX2 (SOUNDTRACK)
- 099 FX3 (CRYSTAL)
- 100 FX4 (ATMOSPHERE)
- 101 FX5 (BRIGHTNESS)
- 102 FX6 (GOBLINS)
- 103 FX7 (ECHOES)
- 104 FX8 (SCI-FI)

FOLK SOUND

- 105 SITAR
- 106 BANJO
- 107 SHAMISEN
- 108 KOTO
- 109 KALIMBA
- 110 BAGPIPE
- 111 FIDDLE
- 112 SHANAI

PERCUSSION

- 113 TINKLE BELL
- 114 AGOGO
- 115 STEEL DRUMS
- 116 WOODBLOCK
- 117 TAIKO DRUM
- 118 MELODIC TOM
- 119 SYNTH DRUM
- 120 REVERSE CYMBAL

EFFECT

- 121 GUITAR FRETNOISE
- 122 BREATH NOISE
- 123 SEASHORE
- 124 BIRD TWEET
- 125 TELEPHONE RING
- 126 HELICOPTER
- 127 APPLAUSE
- 128 GUNSHOT



APPENDIX

Rhythm Table

001	8 Beat 1(A)	056	Disco Tropic (A)	111	Organ Ballad(B)
002	8 Beat 2(A)	057	Disco Hands(A)	112	Bluse Ballad(B)
003	8 Beat 3(A)	058	Two Step (A)	113	Epic Ballad(B)
004	8 Beat Rock (A)	059	Polk Pop (A)	114	Rock Ballad (B)
005	8 Beat Head(A)	060	Waltz 1(A)	115	Slow Ballad (B)
006	8 Beat Pop 1(A)	061	Waltz Pop 1(A)	116	Pop Ballad (B)
007	8 Beat Pop 2(A)	062	Waltz Pop 2(A)	117	Ele.PopBallad (B)
008	Ballad 1(A)	063	Rai(A)	118	Polk Ballad (B)
009	Ballad 2(A)	064	Twist 1(A)	119	16 Beat 1(B)
010	Guitar Ballad (A)	065	Twist 2(A)	120	16 Beat 2(B)
011	Organ Ballad(A)	066	Miami Pop (A)	121	16 Beat 3(B)
012	Bluse Ballad (A)	067	Motown (A)	122	16 Beat 4(B)
013	Epic Ballad (A)	068	Reggae (A)	123	16 Beat Funk(B)
014	Rock Ballad(A)	069	Swing Reggae(A)	124	16 Beat Pop(B)
015	Slow Ballad(A)	070	Mambo (A)	125	16 Beat Ballad (B)
016	Pop Ballad (A)	071	Beguine (A)	126	Bossa Nova 1(B)
017	Ele.PopBallad(A)	072	Musette(A)	127	Guitar Bossa (B)
018	Polk Ballad (A)	073	House(A)	128	Pop Bossa(B)
019	16 Beat 1(A)	074	Slow Fox(A)	129	Tango(B)
020	16 Beat 2(A)	075	Vienna Waltz(A)	130	Cha Cha(B)
021	16 Beat 3(A)	076	Salsa(A)	131	Rhumba (B)
022	16 Beat 4(A)	077	Disco (A)	132	TEX TEX(B)
023	16 Beat Funk(A)	078	Hip Hop Pop(A)	133	Country (B)
024	16 Beat Pop(A)	079	Analog Pop(A)	134	Country Rock (B)
025	16 Beat Ballad(A)	080	Club Dance (A)	135	Country Shuffle(B)
026	Bossa Nova 1(A)	081	Boogie(A)	136	Country Swing (B)
027	Guitar Bossa(A)	082	Funky Pop (A)	137	Country Ballad (B)
028	Pop Bossa (A)	083	Jazz Rock(A)	138	Country Waltz (B)
029	Tango(A)	084	Swing 1(A)	139	50's Rock (B)
030	Cha Cha(A)	085	Dixieland(A)	140	Heavy Metal (B)
031	Rhumba (A)	086	Jazz Samba(A)	141	Rock 1 (B)
032	TEX TEX (A)	087	March(A)	142	Rock 2 (B)
033	Country (A)	088	US. March(A)	143	Soft Rock (B)
034	Country Rock(A)	089	Samba(A)	144	Slow Rock (B)
035	Country Shuffle (A)	090	Polka(A)	145	Hard Rock (B)
036	Country Swing (A)	091	Polka Ober(A)	146	Rock & Roll 1(B)
037	Country Ballad (A)	092	Tarantella(A)	147	Rock & Roll 2(B)
038	Country Waltz (A)	093	Slow Waltz (A)	148	Chicago Blues(B)
039	50's Rock(A)	094	Ober Waltz (A)	149	Fast Gospel(B)
040	Heavy Metal (A)	095	Piano Ballad(A)	150	Groove Soul(B)
041	Rock 1(A)	096	Waltz 2(A)	151	Rap(B)
042	Rock 2(A)	097	Guitar Waltz(A)	152	GospelSI (B)
043	Soft Rock(A)	098	2/4 Piano (A)	153	Blues(B)
044	Slow Rock(A)	099	3/4 Piano (A)	154	Slow Blues(B)
045	Hard Rock(A)	100	4/4 Piano(A)	155	Foxtrot (B)
046	Rock & Roll 1(A)	101	8 Beat 1(B)	156	Disco Tropic(B)
047	Rock & Roll 2(A)	102	8 Beat 2(B)	157	Disco Hands(B)
048	Chicago Blues(A)	103	8 Beat 3(B)	158	Two Step(B)
049	Fast Gospel(A)	104	8 Beat Rock(B)	159	Polk Pop(B)
050	Groove Soul(A)	105	8 Beat Head (B)	160	Waltz 1(B)
051	Rap(A)	106	8 Beat Pop 1(B)		
052	GospelSI (A)	107	8 Beat Pop 2(B)		
053	Blues (A)	108	Ballad 1(B)		
054	Slow Blues (A)	109	Ballad 2(B)		
055	Foxtrot(A)	110	Guitar Ballad (B)		



Demonstration Song

- 001 DJ Dance
- 002 Minut Watz
- 003 Fountian
- 004 Spanish Girl
- 005 Sonata Piano
- 006 Liszt Etudes
- 007 Bee
- 008 Horse Racing
- 009 Chopin Nocturne
- 010 TheSpain
- 011 Busy Transmit
- 012 Mexico
- 013 Mozart Piano
- 014 Minuet
- 015 Nifuma
- 016 Disco
- 017 FolkSong
- 018 Girl Sea
- 019 Little Star
- 020 My KinderGarten
- 021 Wahaha
- 022 Ducks&Chicks
- 023 Humorous
- 024 Joy Song
- 025 Going Hometown
- 026 Dove
- 027 Friend Forever
- 028 Moonligh
- 029 Happy Birthday
- 030 Praise Song
- 031 Doll's Dream
- 032 Market
- 033 Sweet Family
- 034 A cradle
- 035 At Home
- 036 Four Seasons
- 037 YearsAgo
- 038 Pigeons
- 039 Inner Vioce
- 040 Violin
- 041 Swan
- 042 Musettes
- 043 Gypsy Swirl
- 044 Serenade
- 045 Polka
- 046 SoilPull
- 047 Trout
- 048 Send-off
- 049 March
- 050 ForElise
- 051 Swani River
- 052 France
- 053 Blue Danube
- 054 Hungary
- 055 Spaceman
- 056 Patriot
- 057 Cuckoo
- 058 SingKite
- 059 TongChil
- 060 DoReMi



PRODUCT MAINTENANCE

Careful maintenance and protection of this product plays an important role in prolonging the service life of the product and reducing the failure.

1 AVOID HEATING, DAMPNESS OR DIRECT SUNLIGHT

Do not over expose the product to direct sunlight, or place it near air conditioning or extremely hot place.

2 DO NOT USE NEAR THE TV OR RADIO

This product may cause video or audio interference to the reception of TV and radio. If this happens, the product should be removed from the TV or radio.

3 NO DILUENTS OR SIMILAR CHEMICALS SHOULD BE USED FOR CLEANING

Clean the product with a soft cloth wetted with weak water solution and neutral detergent. Soak the cloth in a solution and wring it dry until it approaches drying.

4 DO NOT SHAKE, AVOID COLLISION


When moving, the product should be handled carefully and lightly. Violent vibration and collision are strictly prohibited in order to avoid damage to the shell or internal electronic components.



SAFETY PRECAUTIONS

POWER SUPPLY

This product can be powered by standard indoor wall socket. Please only use the power cord equipped with this product. Be sure to turn off the power when not in use temporarily. When not in use for a long time, please unplug the power cord and keep it properly.

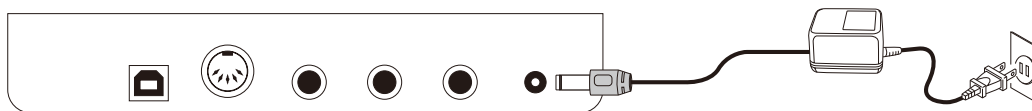

SIGN

To ensure that you use this product safely and correctly, to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs. The various signs and their meanings are as follows:



WARNING

This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled.



BE CAREFUL

This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated incorrectly.

EXAMPLE OF LOGO



This triangle sign ($\triangle$) indicates what users should pay attention to. (The left example is careful shocks)



A circular sign ($\odot$) with an oblique line indicates prohibitions. The icons in or beside the logo indicate the contents specifically prohibited. (The example on the left is no disassembly)



The round black bottom sign ($\bullet$) indicates what must be observed. The diagrams in this sign indicate the contents of the specific matters that must be observed. (The example on the left is that the power plug must be pulled out of the socket)



SAFETY PRECAUTIONS

WARNING

Smoke, odor, overheating

When the product smokes, smells or overheats, there is a danger of fire and electric shock when it is used continually. In case of the above situation, the following operations should be performed immediately:

1. Turn off the power supply.
2. Pull the plug out of the power outlet.
3. Contact your dealer.

Power cord

1. The improper use of power cord may cause fire and electric shock. The following precautions must be observed:

- The special power cord designated for this product must be used.
- The AC power supply with output voltage within the rated voltage range for household use must be used.
- Do not overload power sockets and extension lines.



2. The improper treatment of power line will lead to its damage or breakage, which will cause fire and electric shock hazards. The following precautions must be observed:

- Do not place or heat heavy objects on power lines.
- Do not attempt to alter or bend the power cord too much.
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, please replace the same type of power cord.



3. Do not touch the power cord and plug with wet hands, otherwise there is a danger of electric shock.



4. Please use the power cord where the water will not splash. Water is in danger of causing fire and electric shock.



5. Never place vases or any other container containing water on this product. Water is dangerous of causing fire and electric shock.



6. Do not allow minors to unplug and touch power lines or connection boards. Minors have no common sense of electricity safety, which may cause electric shock.



BE CAREFUL

The improper use of power cord may cause fire and electric shock. The following precautions must be observed:

- Never put the power cord near the oven or other heat source.
- Do not pull the cable when pulling out of the power socket. The main body of the plug must be grasped.
- The power cord plug must be inserted in the socket to the end.
- Make sure the power supply is off before connecting or disconnecting it.
- When thunderstorms occur or before traveling or other long-term departure, disconnect the power cord from the wall outlet.
- At least once a year, remove the power cord from the wall outlet and clean the dust accumulated around the plug.



Do not burn this product

Do not put this product in the fire, otherwise it will lead to product combustion and explosion of internal electronic components, which will cause fire and personnel injury.



Water and foreign bodies

Water, other liquids and (metal sheets, etc.) entering this product are in danger of causing fire and electric shock. In case of the above situation, the following operations shall be performed immediately:

1. Turn off the power supply.
2. If you are using a power cord for power supply, unplug it from the wall outlet.
3. Contact your distributor.



Disassembly and transformation

Do not disassemble or transform the product in any way, otherwise there is a risk of electric shock, scald or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to your distributor.





SAFETY PRECAUTIONS

Falling or colliding

If the product falls or is damaged by strong impact, it will be in danger of causing fire and electric shock. In case of the above situation, the following operations shall be performed immediately:

1. Turn off the power supply.
2. If you are using a power cord for power supply, you need to unplug it from the wall outlet.
3. Contact your distributor.



Plastic bag

Do not let anyone put plastic bags for this product on his head or in his mouth. Otherwise, there is a risk of asphyxia. Families with young children should pay special attention to it.



Keep a distance from the product and the bracket

Climbing the bracket is dangerous of overturning or damage. Families with young children should pay special attention to it.



Put

Avoid placing the product on an uneven surface or any other unstable place. Otherwise, it will cause the product to fall down, which will lead to the risk of injury.



Product Mobility

Before moving this product, you must unplug the power cord plug from the wall outlet and pull out all other cables and connecting wires. Otherwise, it will lead to damage of power or connection wires, resulting in fire and electric shock.



clean

Before cleaning this product, you must unplug the power cord plug from the wall outlet, otherwise there is a risk of fire and electric shock.



Jack

The socket of this product can only be connected to the designated equipment and devices. Connecting non-designated equipment or devices is dangerous of causing fire and electric shock.



Location selection

It should be avoided to place the product in the following places, otherwise there is a risk of fire and electric shock.

- High temperature or dusty places.
- Kitchen or other places with lampblack.
- Where the product is exposed to direct sunlight, or any other place where the product will produce high temperature.



Volume

Don't play music long and loud. Pay special attention when using headphones. Excessive volume can damage your hearing.



Heavy

Do not place heavy objects on this product. Otherwise, the top of the product will be overweight, causing the product to overturn or drop objects on it, which will lead to the risk of injury.



Correct assembly of scaffolds

The incorrect assembly of the bracket may overturn, causing the product to fall off and posing a risk of injury to personnel. Therefore, it must be assembled according to the instructions in the attached installation guide to ensure that the product is properly mounted on its bracket.



.Aklot

Auralis Range Collection by Aklot

If there is anything you would like to say to us

contact our brand after-sales: cs@aklot.com

www.aklot.com

