

Aklot


PIANO BENCH INSTALLATIONS

Thank you very much for purchasing the Aklot hydraulic piano bench. Please read the instructions and precautions carefully before using the piano, and please keep the instructions properly. Thank you!


Notes:

1. Install the piano bench on a flat, clean floor.
2. Keep small accessories away from children and carefully count them.
3. Tighten the screws tightly to prevent loosening, squeaking, shaking, or falling during use, which could cause injury.
4. Keep the piano bench away from direct sunlight, wind, rain, or fire to prevent damage.
5. Wipe with a dry cloth. If water is spilled on the surface, wipe it dry immediately, air dry it with cool air, and place it in a cool, dry place.


ACCESSORIES

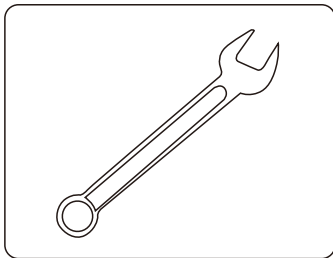


Wrench*1

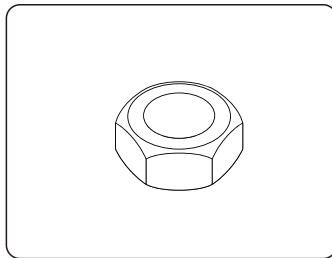


Screw cap*4

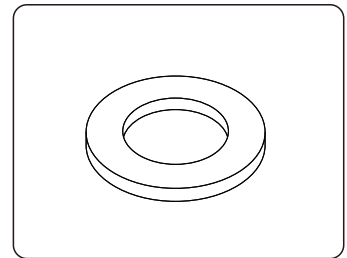


Washer*4

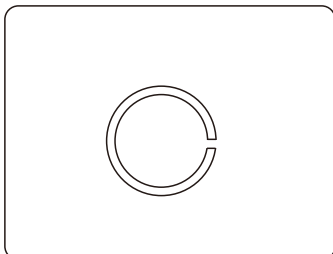

Opening washer*4

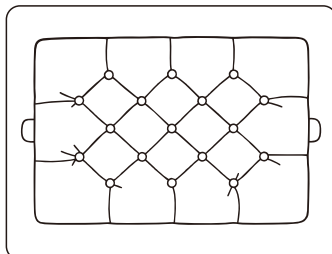


Hydraulic stand

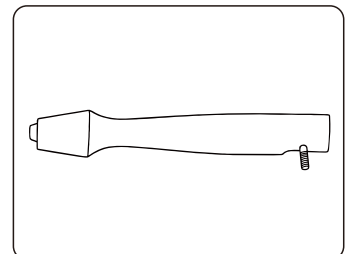

Flat support tripod*4


STEP1: SEAT AND STAND INSTALLATION

1

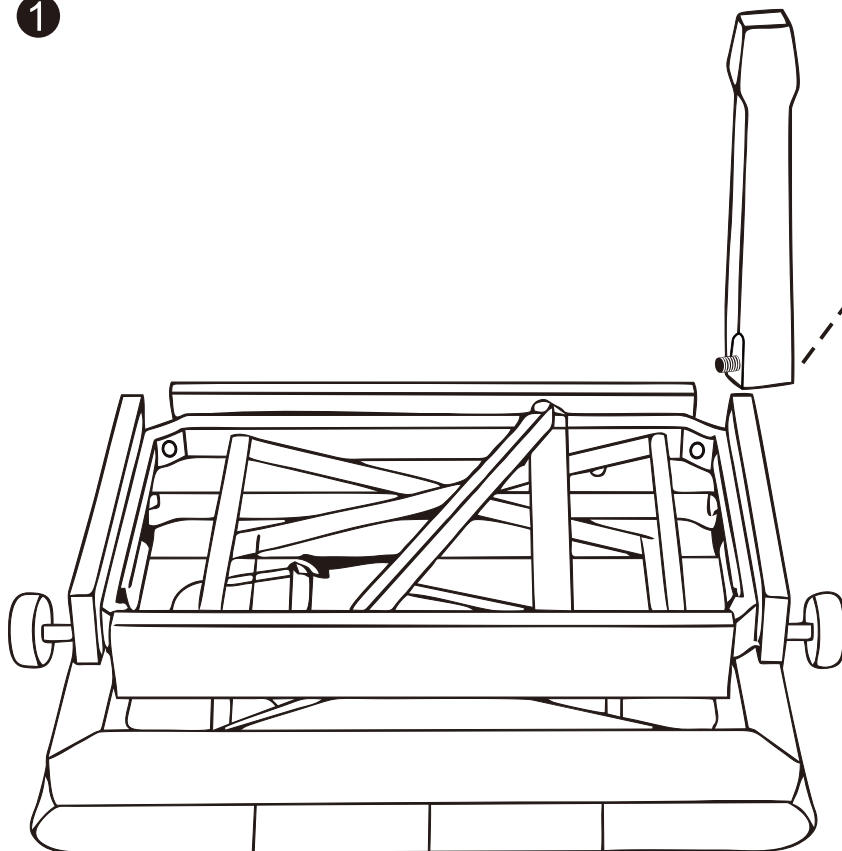


Please raise the stool surface and then install the stool legs

2

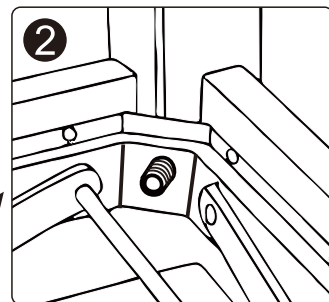


Put the screws of the stool legs into the corresponding positions of the stool surface

3

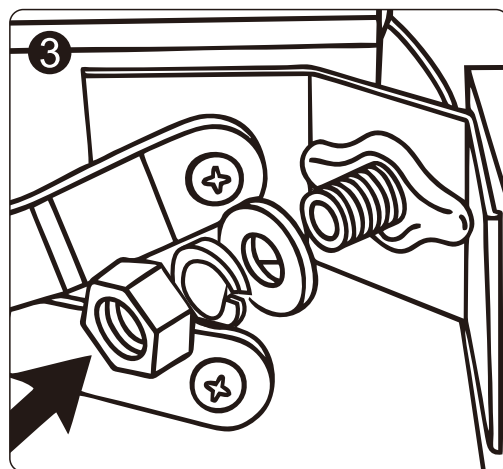


Install the washer, opening washer, nut in sequence and tighten

5

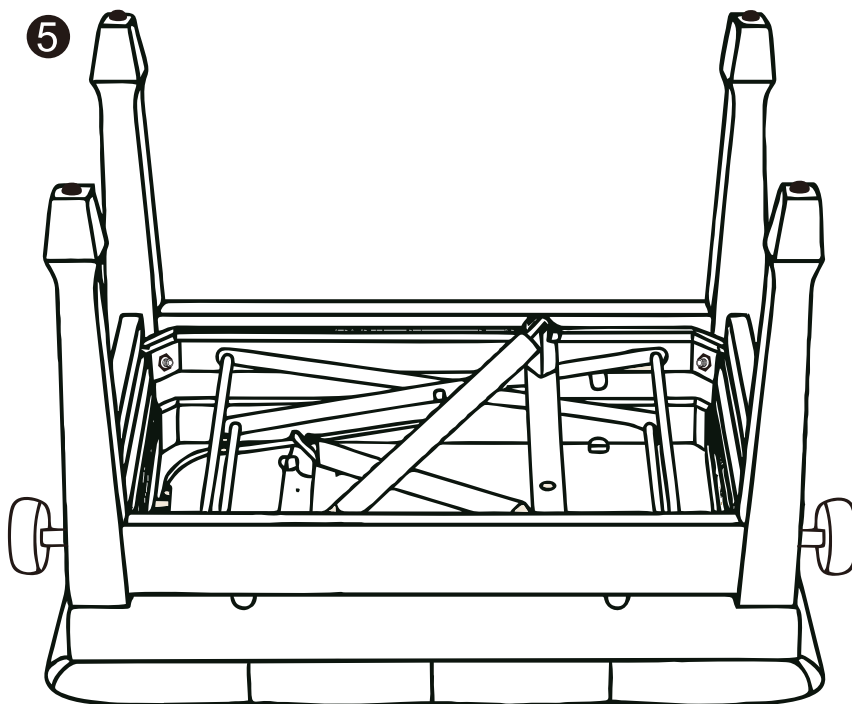

Repeat the above steps for the remaining legs.

4


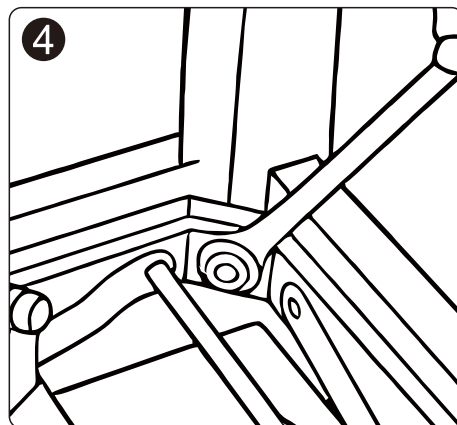


Use a wrench to tighten the nut until it cannot be tightened any further.

Aklot



PIANO BENCH INSTALLATIONS

STEP2: (YOU CAN CHOOSE WHETHER TO OPERATE)

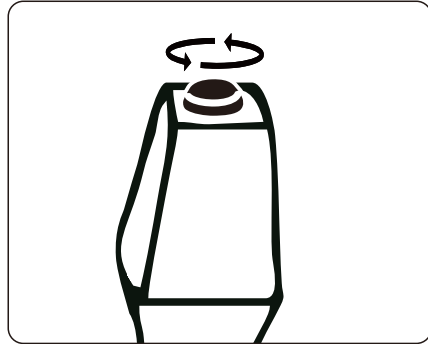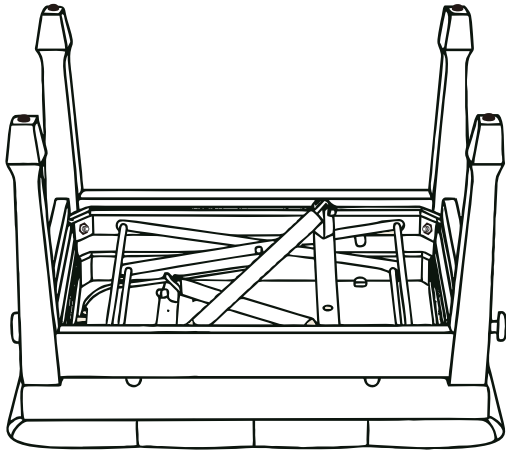

The bottom knob can be adjusted, and you can keep the stool surface flat by simply raising it in small potholes

STEP3: HEIGHT ADJUSTMENT

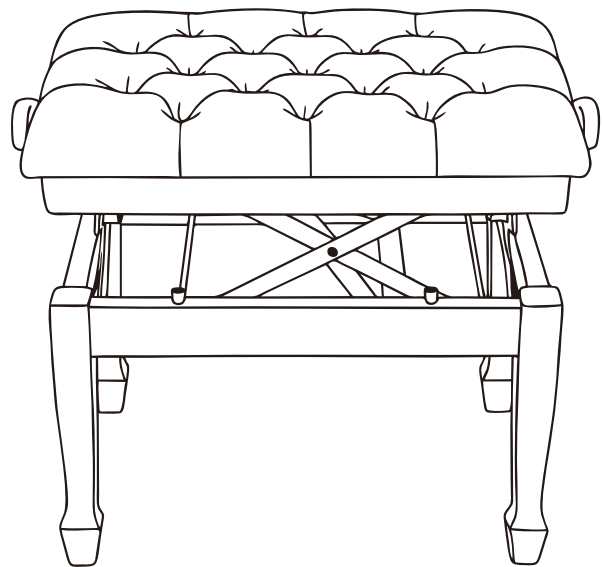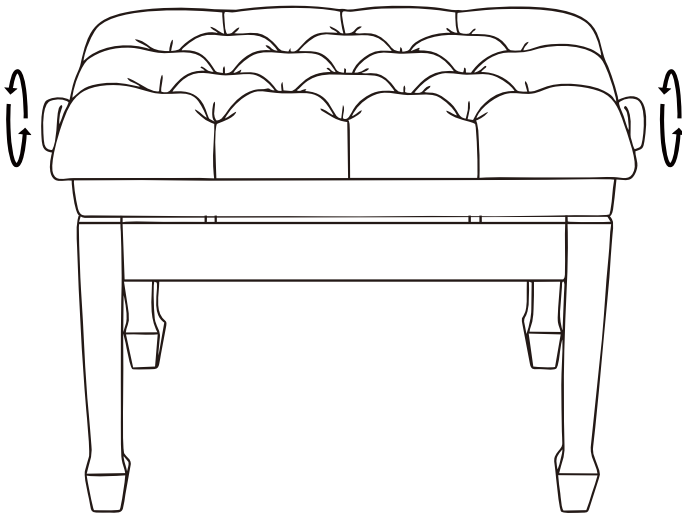

- ✓ Piano bench load capacity 440 lb/200 kg
- ✓ Trigger the lever under the seat to lift the throne.
- ✓ Please note that a minimum of 80 lb/40 kg of force is required to lower the throne.
- ✓ If you encounter any problems while using the overhead lifting feature, please contact us immediately for assistance.
- ✓ Do not attempt to remove the seat yourself, as the lifting mechanism is fragile.
- ✓ Regular inspection and maintenance of the seat is recommended.
- ✓ Please see the detailed diagram for the installation video.