

Bardac Drive Download Procedure

Connect your laptop to the newly installed Bardac Drive with the Ethernet cable provided



Fig1_Connect cable to Bardac

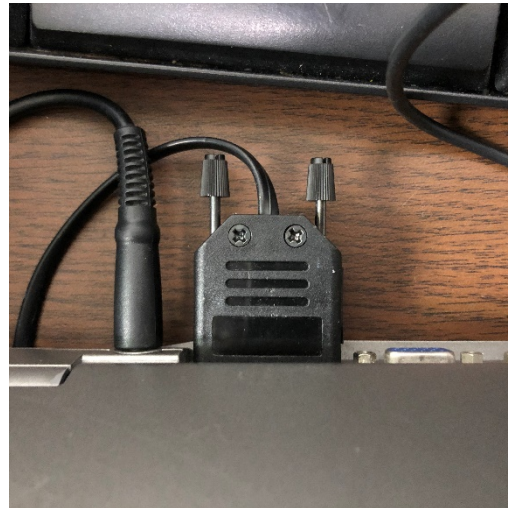


Fig2_Connect cable to Laptop

1. Check Bardac Drive communication and baud rates:

a. RDDRRDR=>ensure it is in ASCII Comm; if not use up or down key to change.

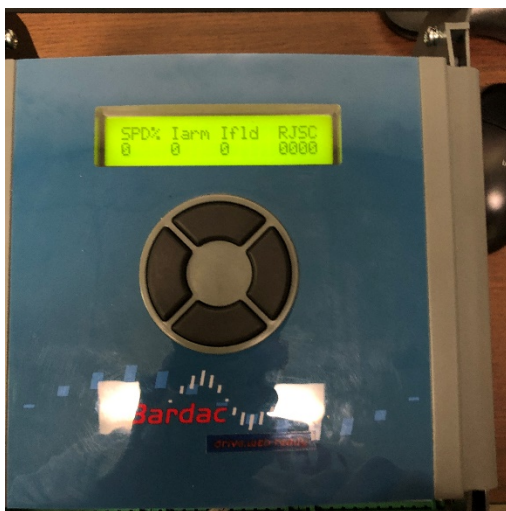


Fig3_Original



Fig4_R



Fig5_RD



Fig6_RDD



Fig7_RDDD



Fig8_RDDDR



Fig9_RDDDRR



Fig10_RDDDRRD



Fig11_ RDDDRRD



Fig12_ RDDDRDU

b. RDDDRRR=>ensure it is in 19200; if not use up or down key to change.

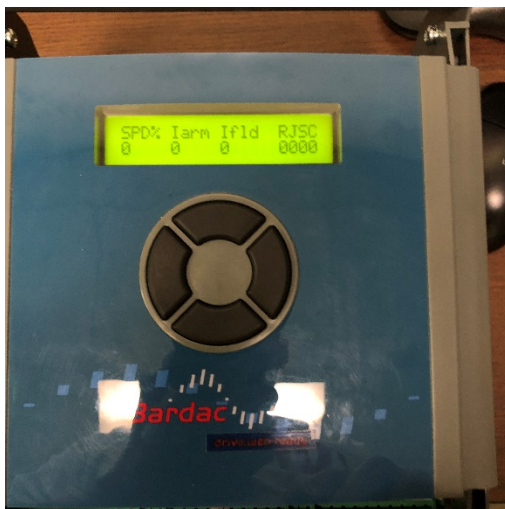


Fig13_ Orignal



Fig14_R



Fig15_RD



Fig16_RDD



Fig17_RDDD



Fig18_RDDDR



Fig19_RDDDDR



Fig20_RDDDRRD



Fig21_ RDDRRR



Fig22_ RDDRRRU

2. Click RURU on drive to Save info.

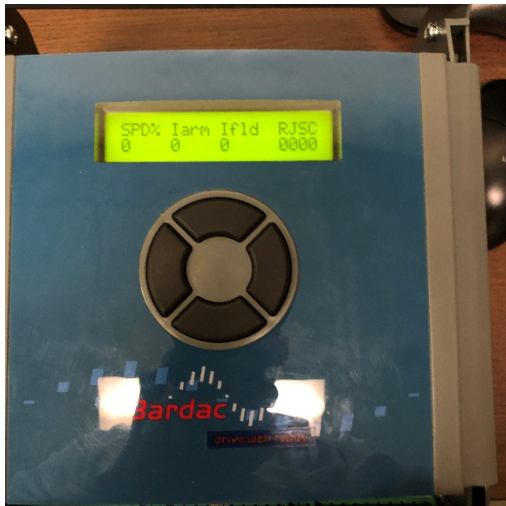


Fig23_ Orignal



Fig24_R



Fig25_RU



Fig26_RURU



Fig27_RURU Savig

3. Open Bardac Drive Icon



Fig28

4. (No password) click on “Accept”.

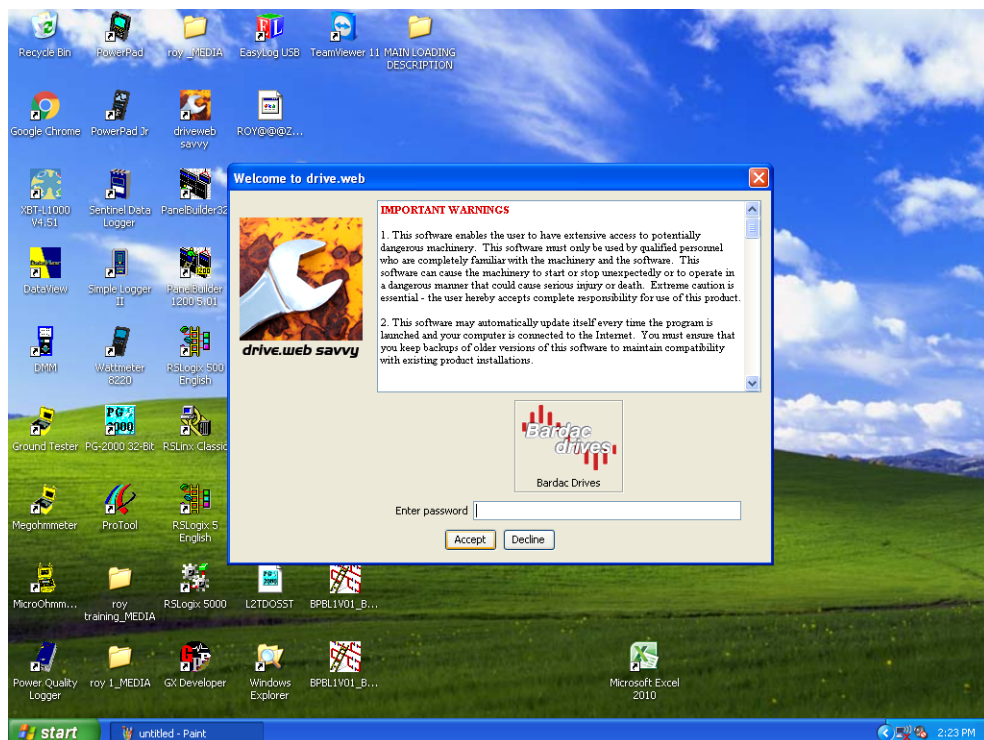


Fig29

5. Click on “Directory” and scroll down to “Discover on serial port”.

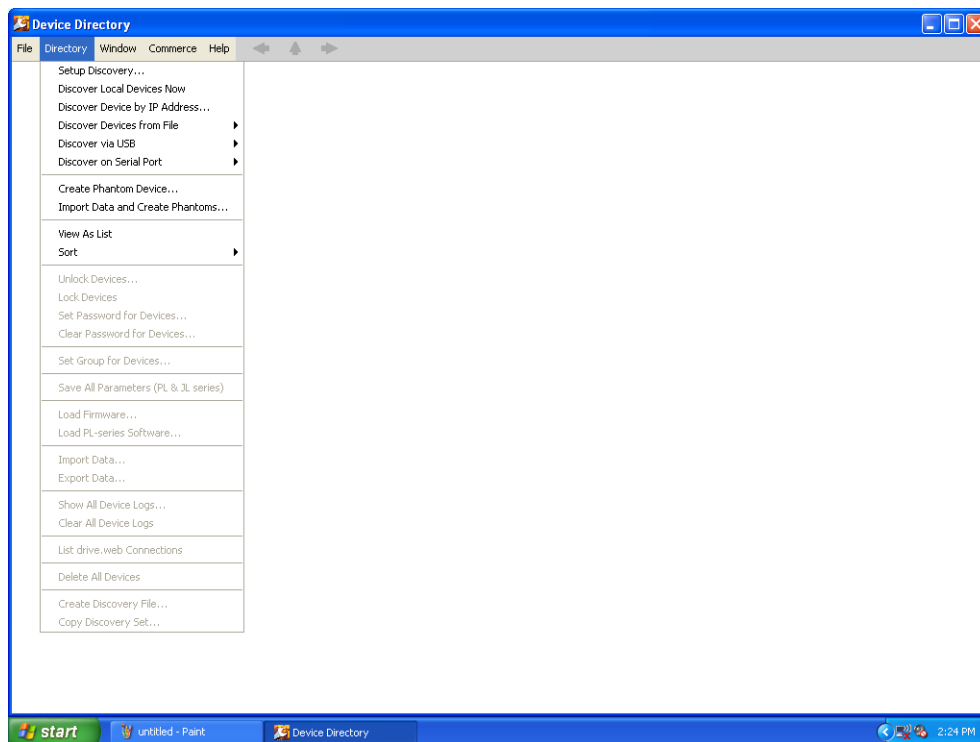


Fig30

6. Right arrow and select PL Series DC Drive.

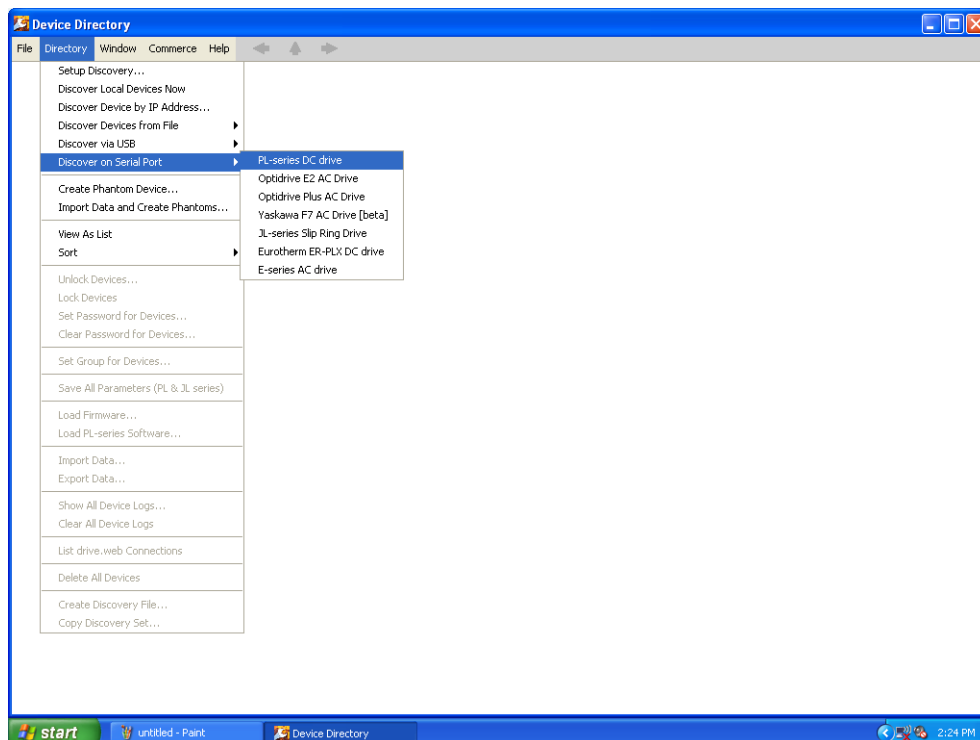


Fig31

7. Click on "OK".

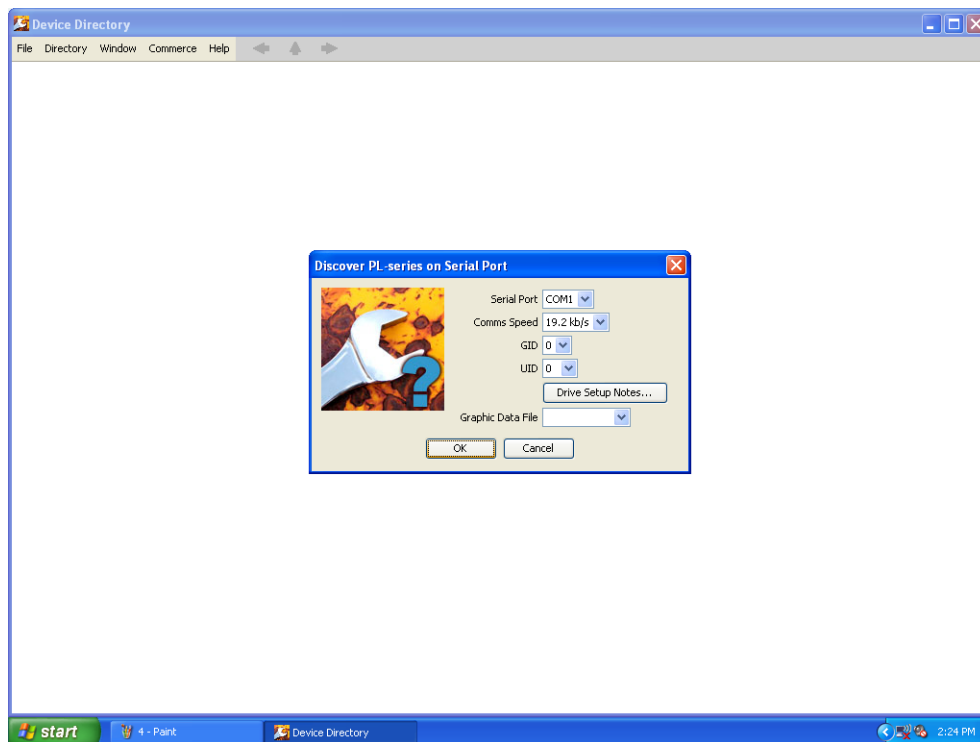


Fig32

*Note: To find any parameters...right click drive icon.

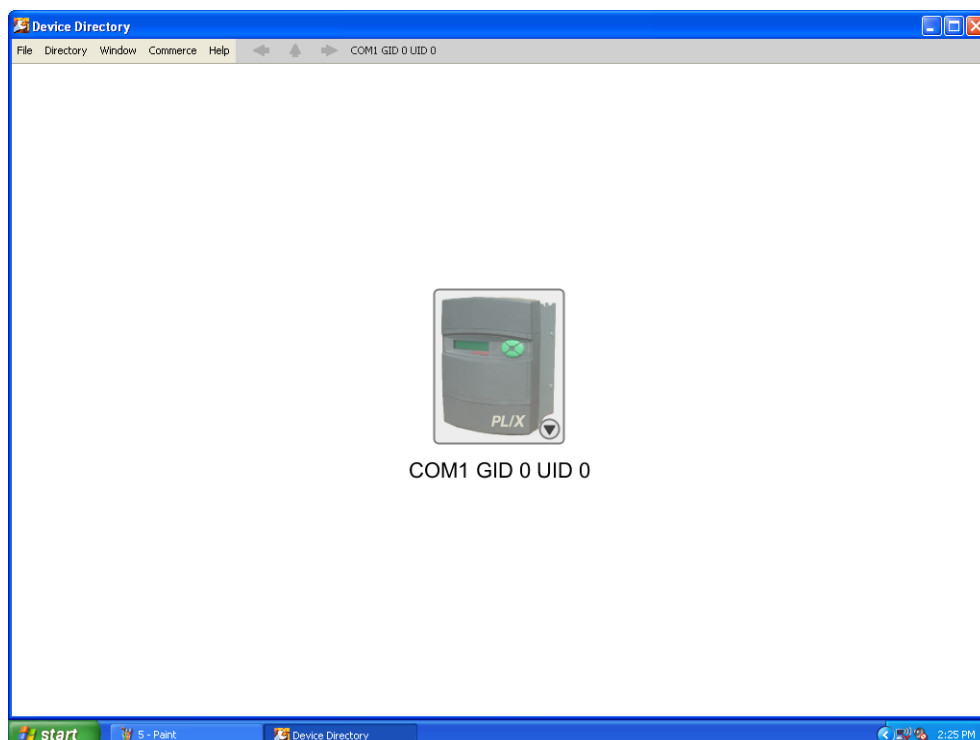


Fig33

Importing or Exporting Parameters

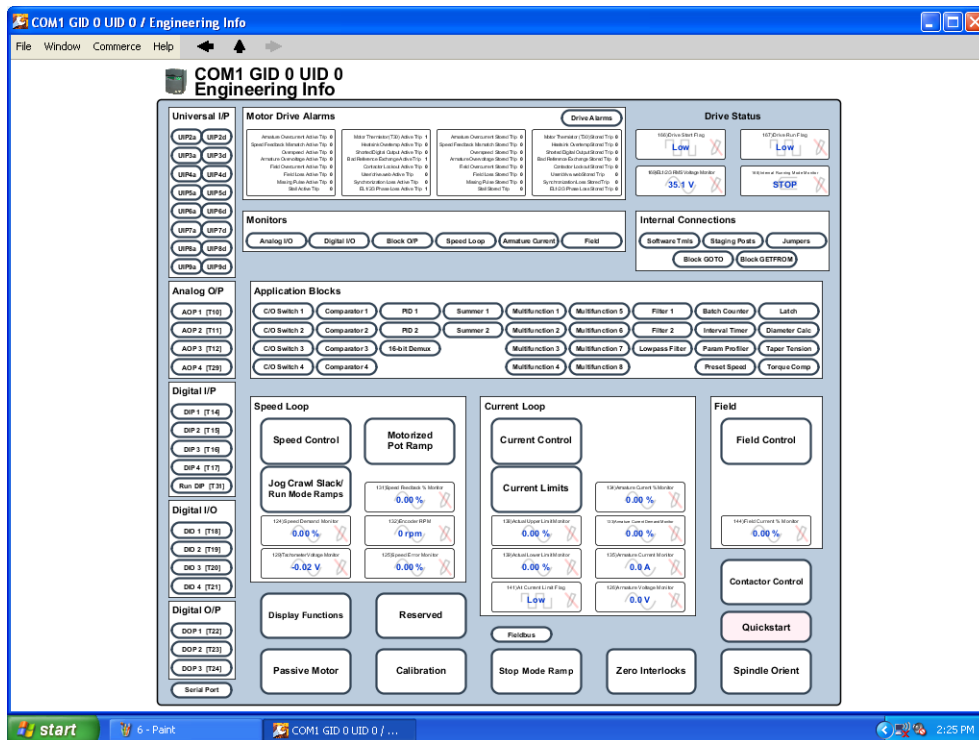


Fig34

8. Right click Drive icon...scroll down to "Import Device Data".

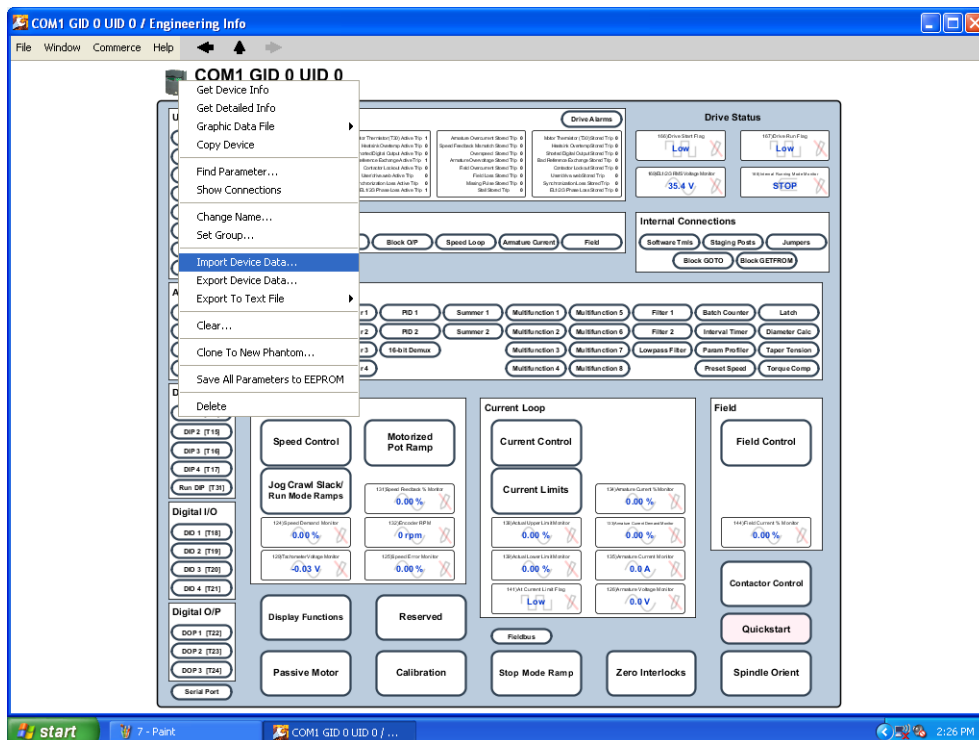


Fig35

9. Select file needed (most current).

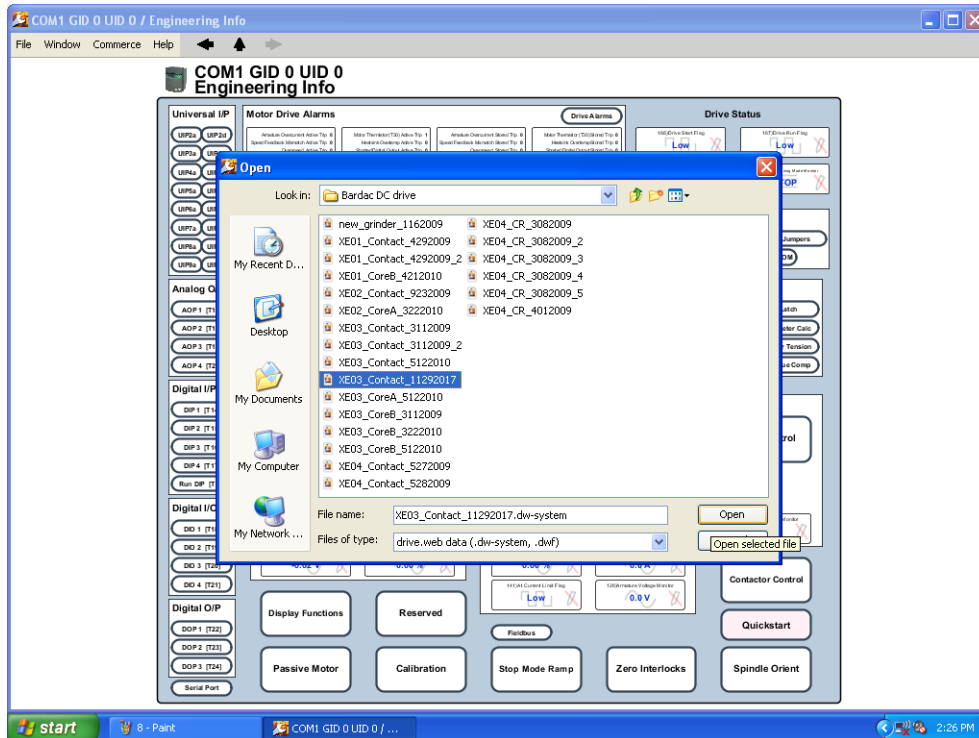


Fig36

10. Click "OK".



Fig37

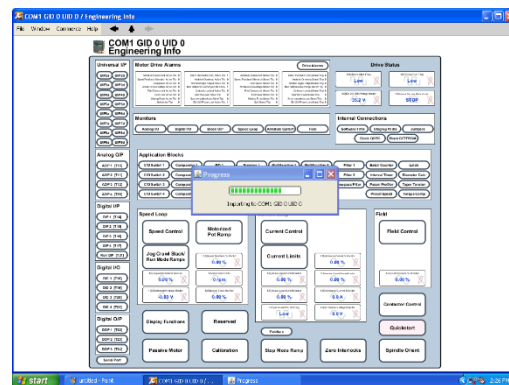


Fig38

11. Right click icon again and scroll down to "Save all parameters to EEPROM" and SAVE.

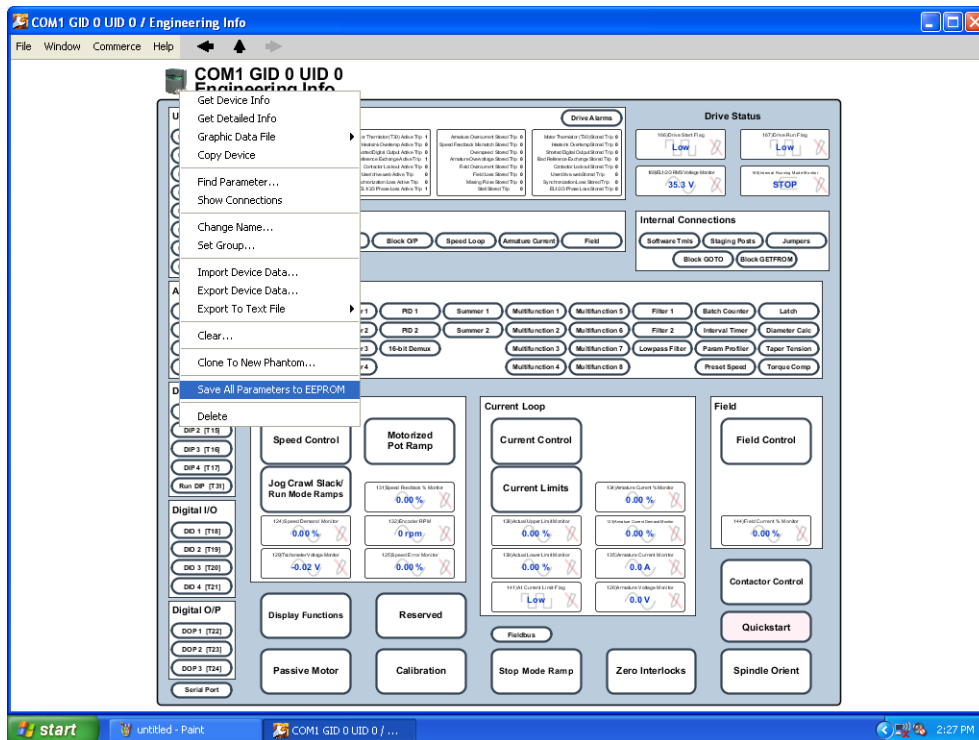


Fig39

12. Go back and enter Armature Current and Field Current settings manually at Drive:
 - a. RRURR... ensure setpoint for Armature or adjust by using the up or down key.
Type "2" for Rated Field Amps and press "OK".



Fig40

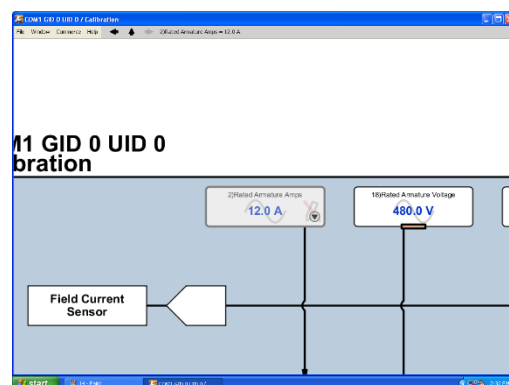


Fig41



Fig42

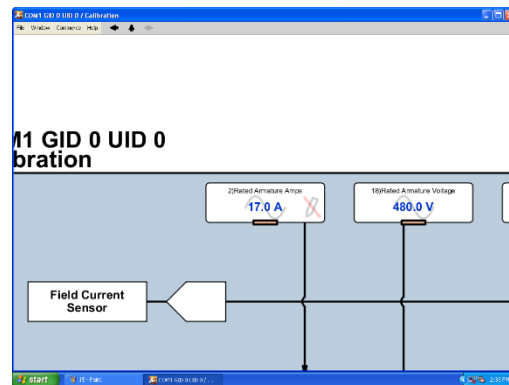


Fig43

- a. LDDR... ensure setpoint for field current or adjust by using the up or down key.

Type "4" for Rated Field Amps and press "OK".



Fig44

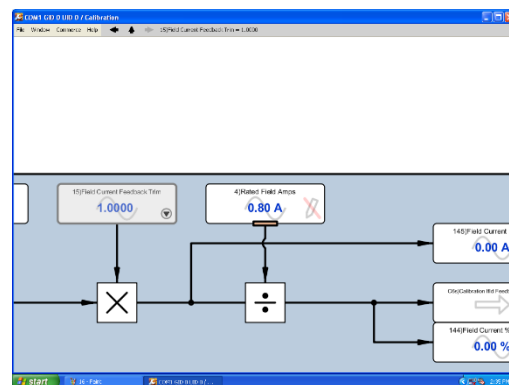


Fig45



Fig46

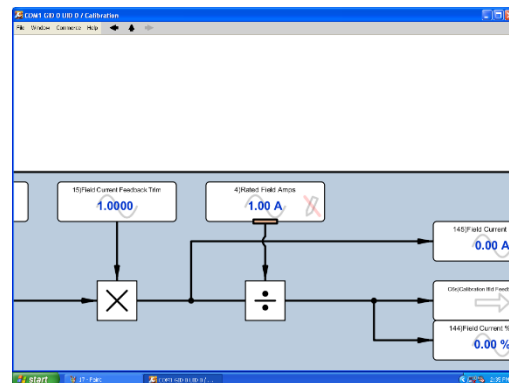


Fig47

13. Use LLLL to get all the way back out.
14. Use RURU to SAVE all paraments on drive.
15. You are now finished at the drive..... close the Bardac Icon on the by exiting.

*DO NOT save changes to PC file uncles changes were made to the original settings.....

Close the file and close the Bardac program.