


WINDER MAGELIST Transmission/Modification



01 Insert PCMCIA PC CARD into the control panel

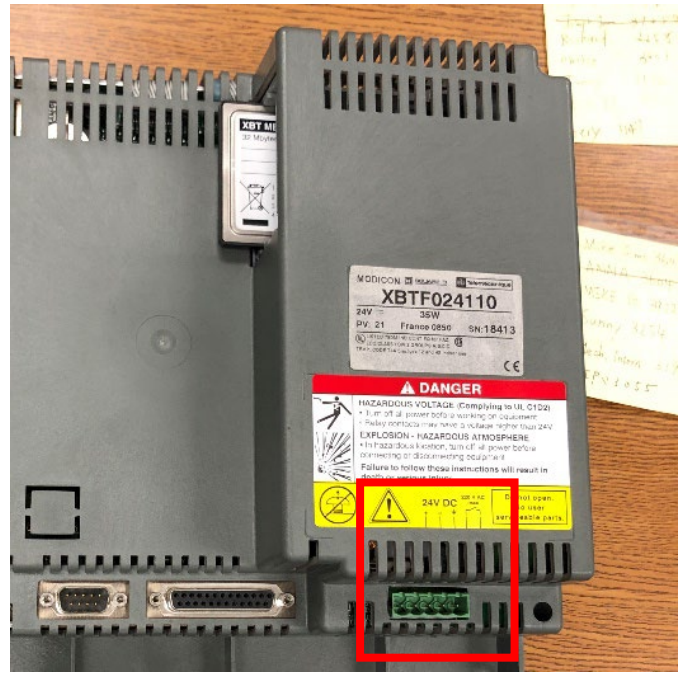


02 Look and check carefully for the power supply pin



03 Lock the wire firmly



04 Must use the wire from OEM

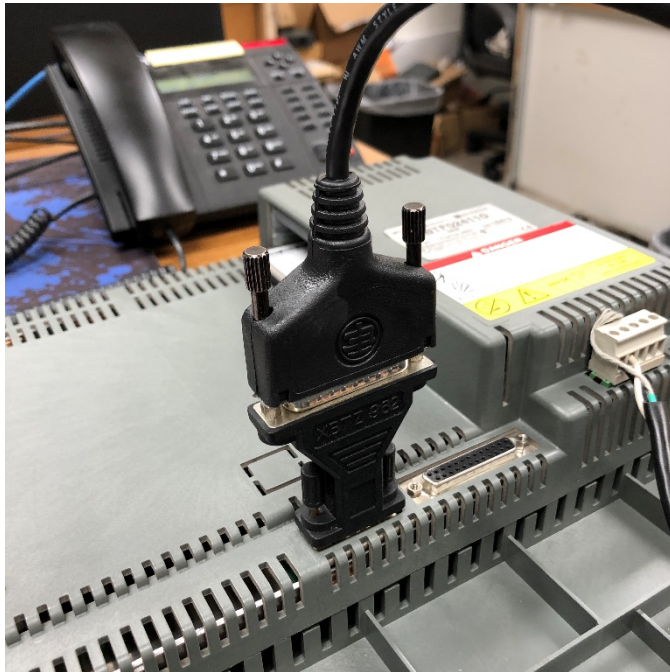


05 Insert RS232 port into control panel




06 Insert RS232 port into PC




07 Open XBT-L1000 software for transmission/modification

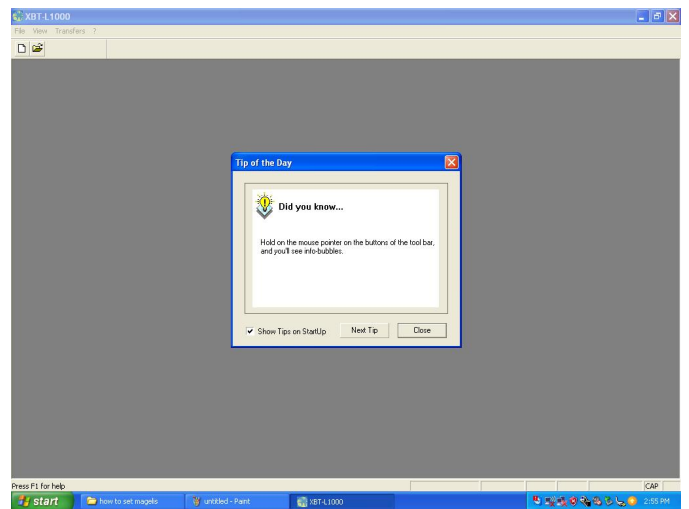


08 Press "CLOSE" button

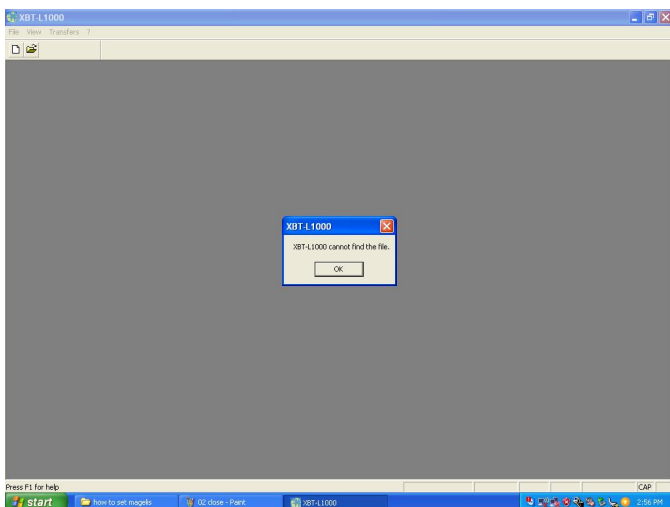

09 Press "OK" button

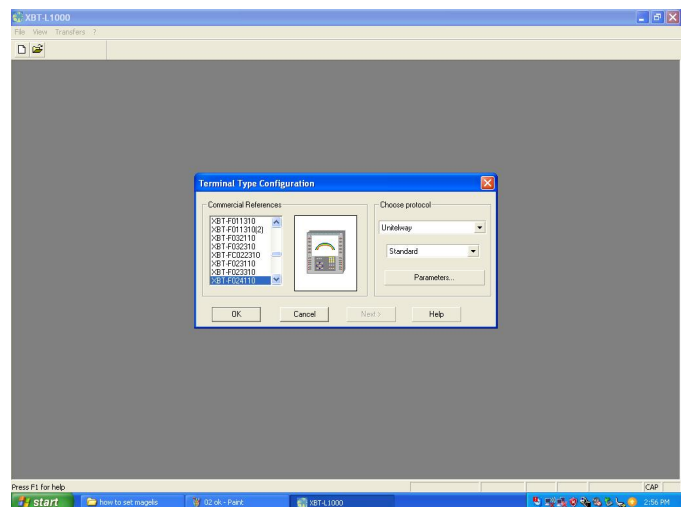


10 This step is for set up a new file. Press "CANCEL" button

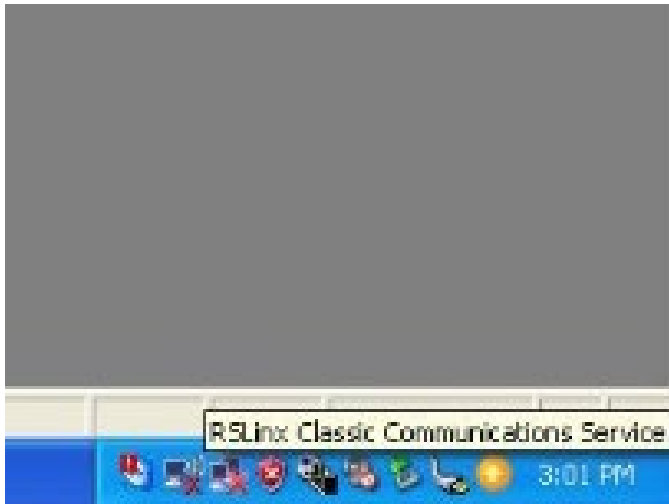


11 Close RSLink communication service when transmit the data




12 Choose transfers=>import=>from terminal

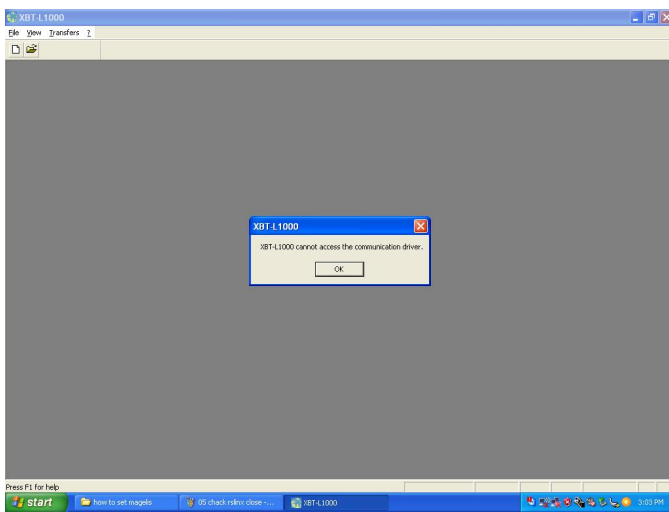


13 Press "OK" button

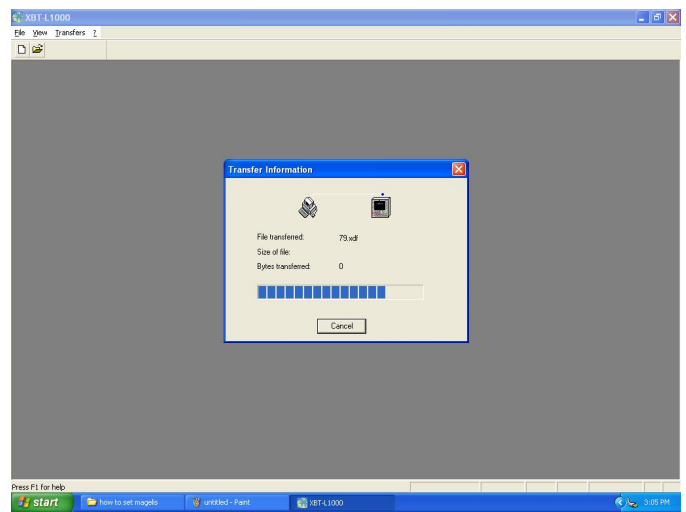


14 Transmitting the data

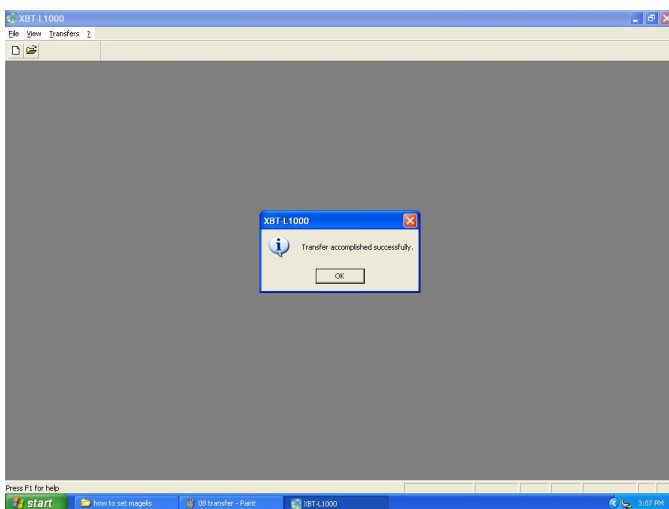


15 Press "OK" button

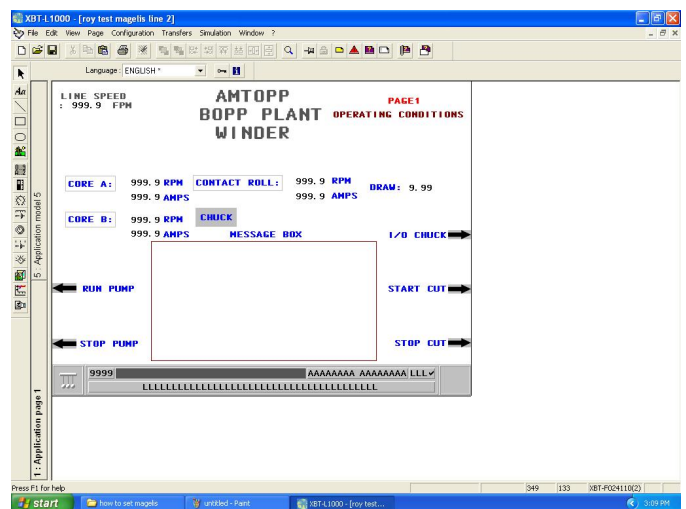


16 Load successfully

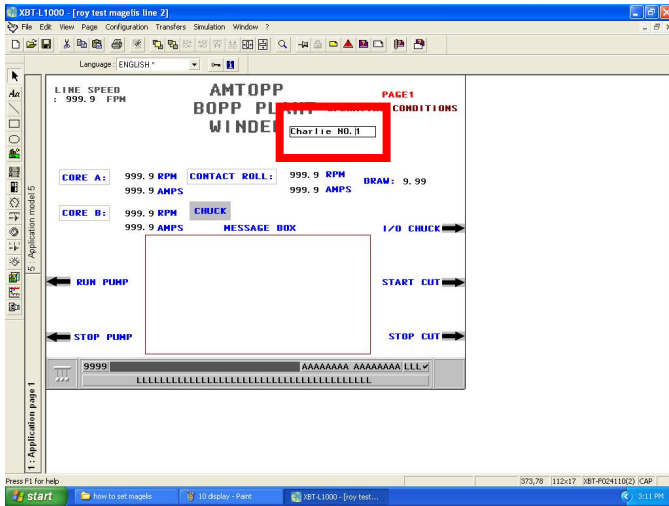


17 Enter or change some word

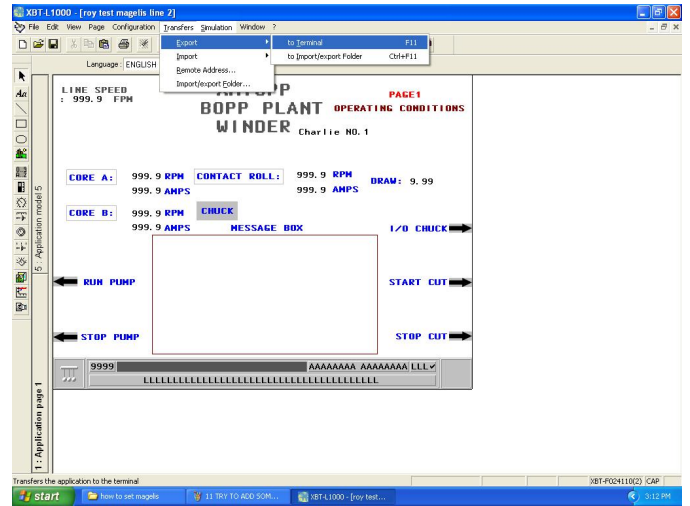


18 Choose transfers=>export=>to terminal

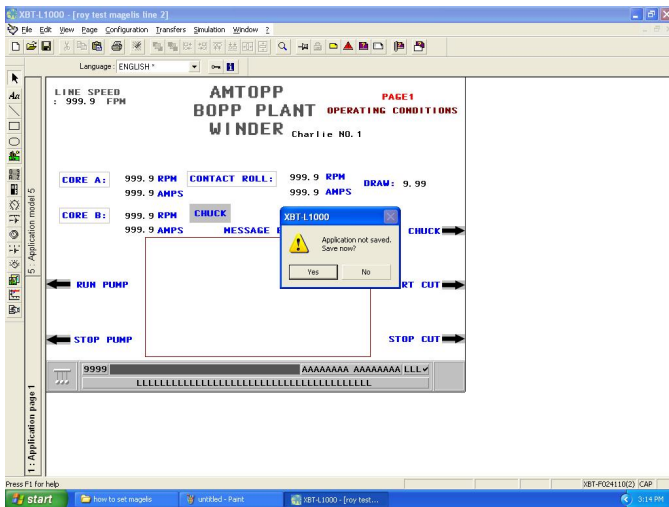


19 Press "YES" button

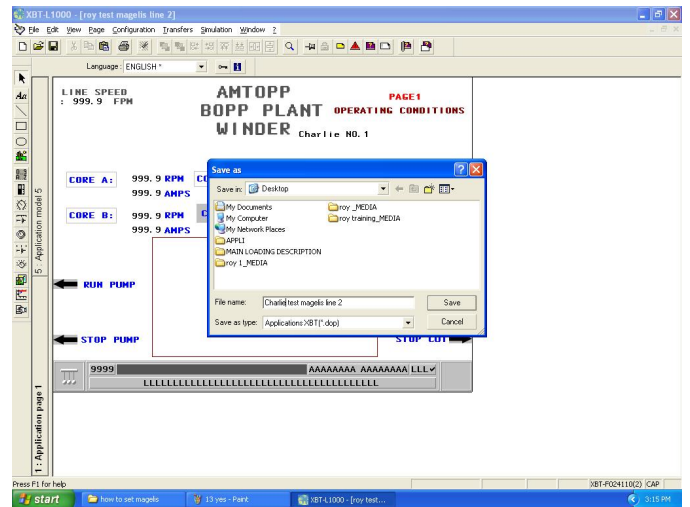

20 Save file

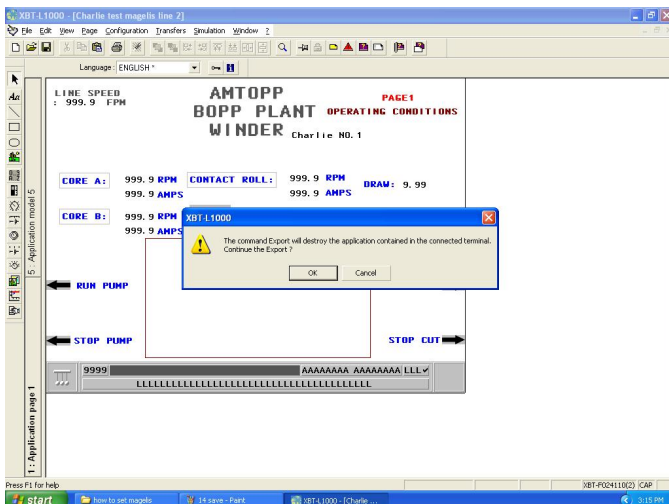


21 Press "OK" button

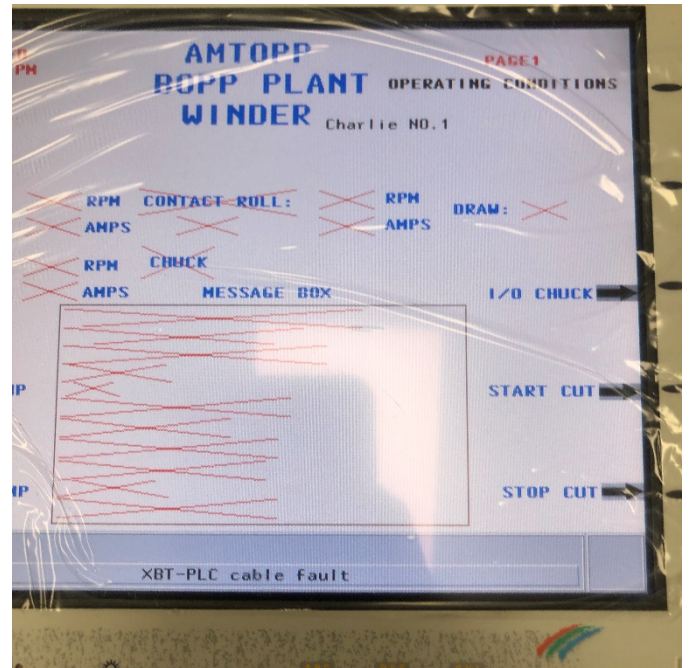


22 Check if it have successful load into the panel

If the panel screen didn't show up, it might be battery problem.


Please check the mercury battery if it still has power.

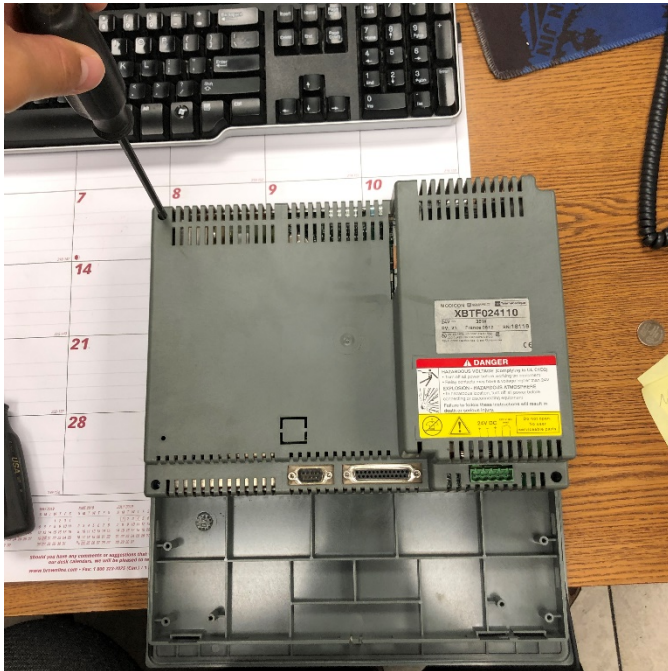


01 Loosen the screw form each corner

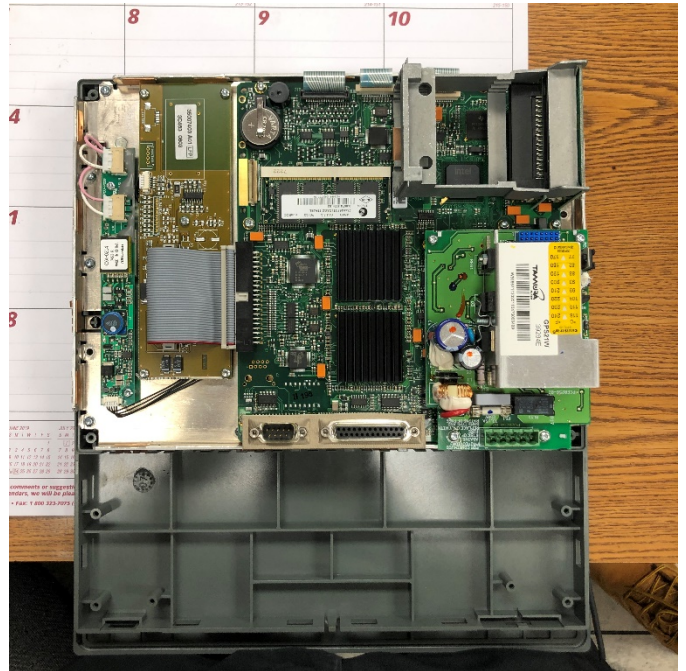

02 Check the internal structure.

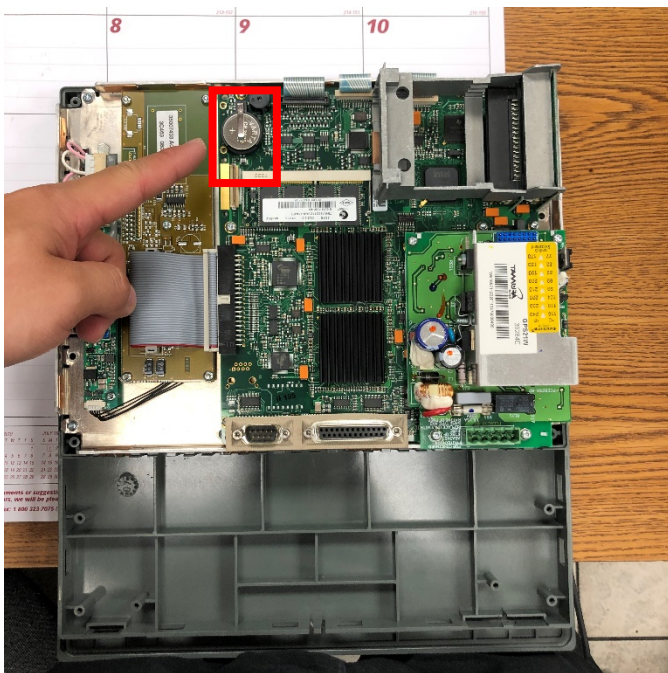


03 Change the mercury battery

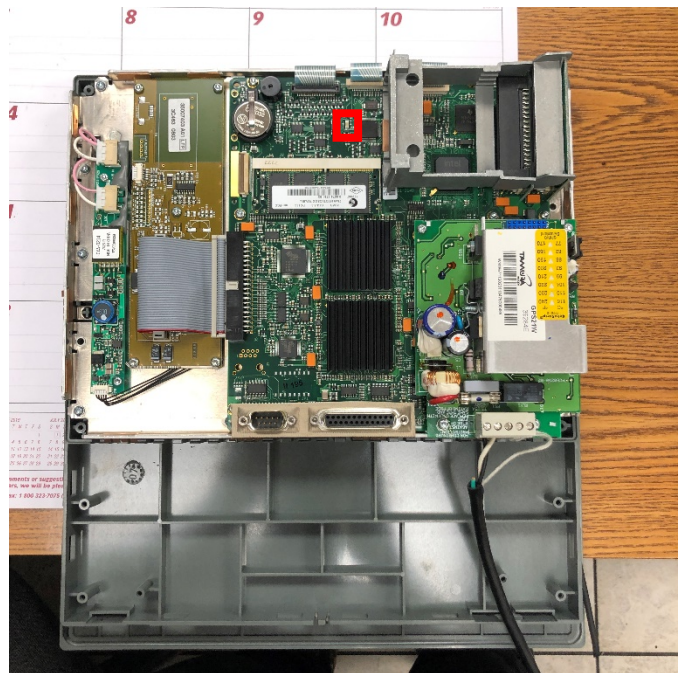


04 Insert the power. If it success the green light will start flashing.


Transmission/Modification without connect to MAGELIS board

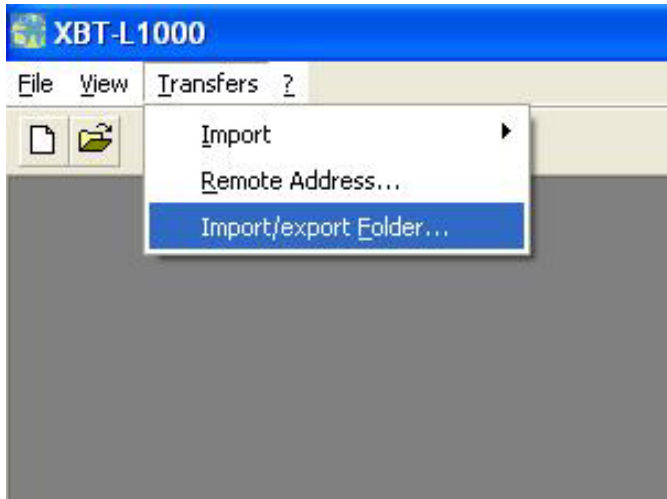


01 Press Transfer >> Import/Export Folder

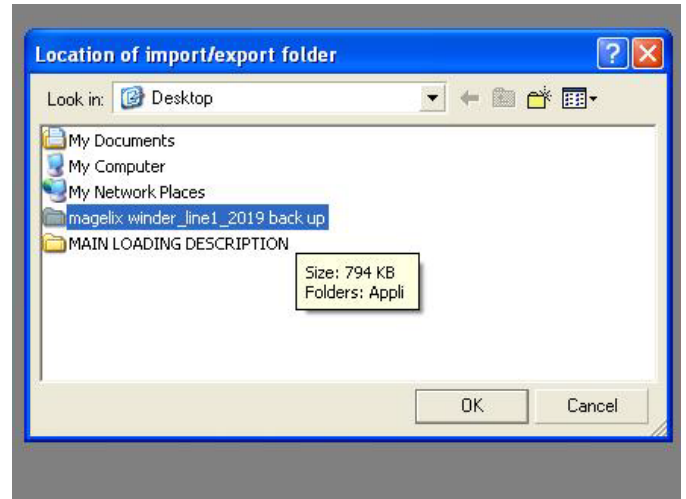

02 Find folder in desktop

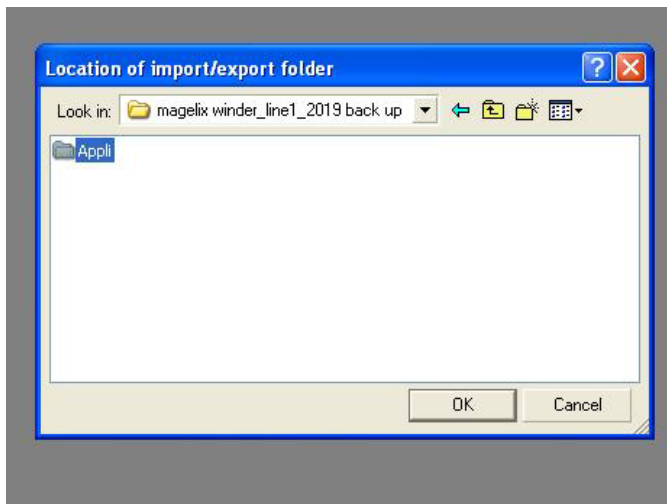


03 Press APPLI and "OK"

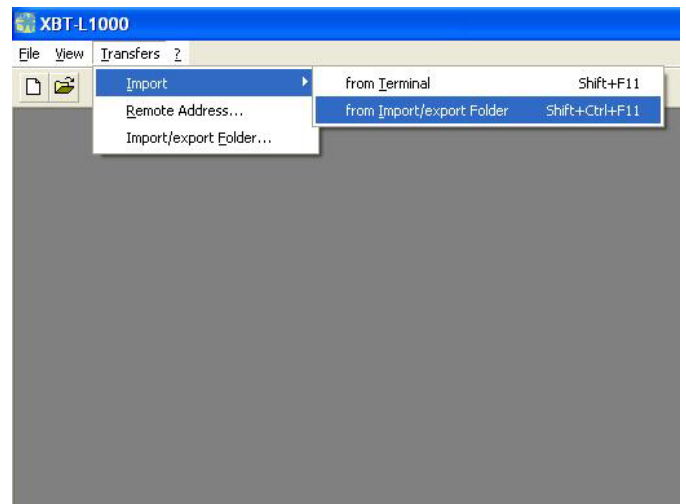


04 Press Transfer >> Import>> from Import/Export Folder




05 Shows error

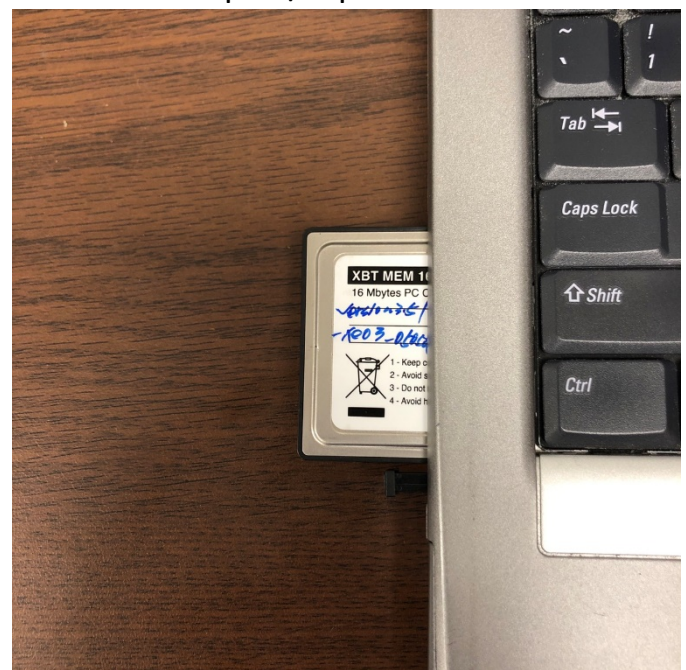

06 Insert CMCIA PC CARD

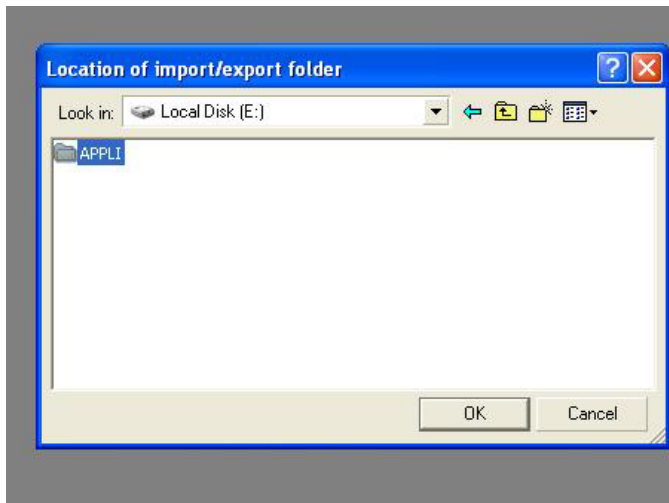


07 Press APPLI and "OK"

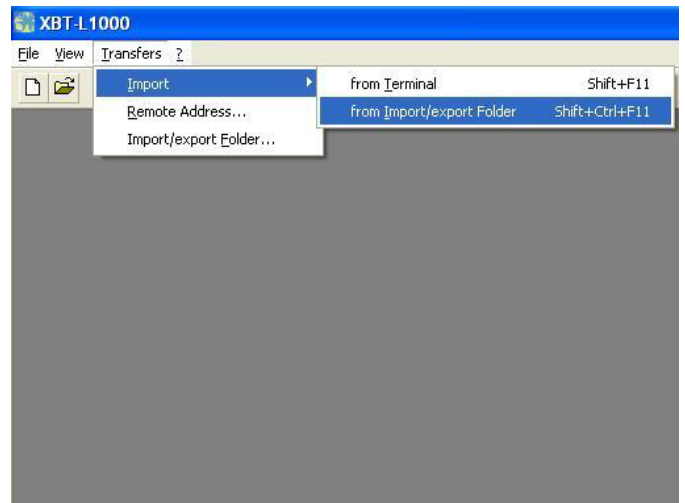

08 Press Transfer >> Import>> from Import/Export Folder



09 Load Successfully

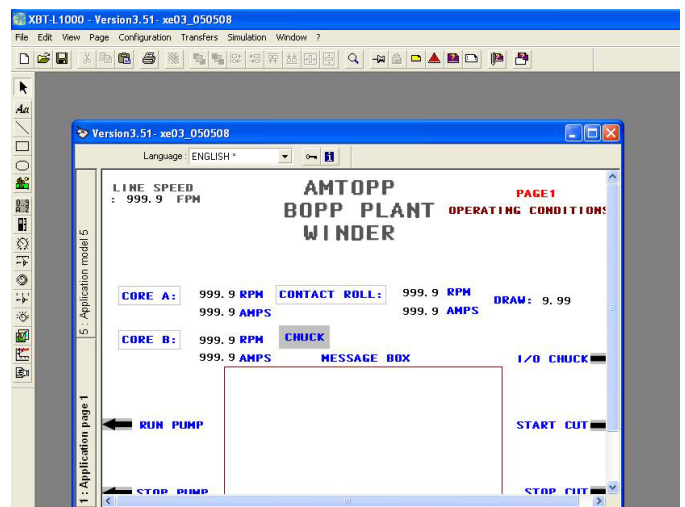

10 Successful editing interface