


S5 Download, upload and monitor procedure .

A For Download


- 1 Click “PG-2000 32bit”




- 2 Select menu bar File → Open → file

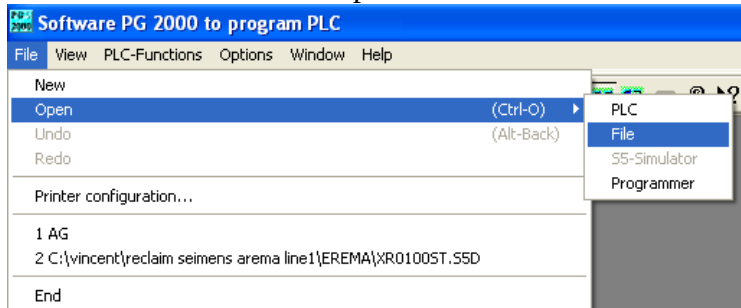


- 3 Select file

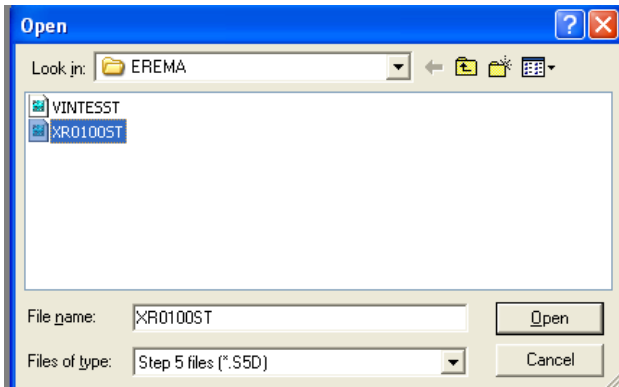


- 4 Go to Block → Transfer to → PLC

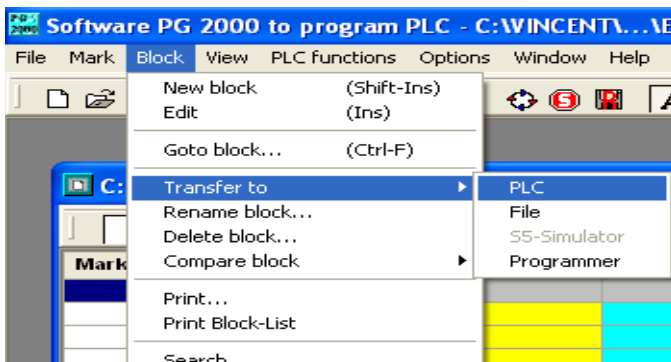


5. Go to mark → Mark all blocks

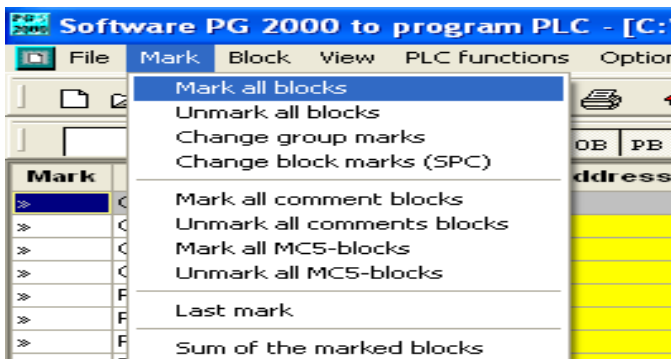


6. On menu bar, Select Block→ Transfer to → PLC

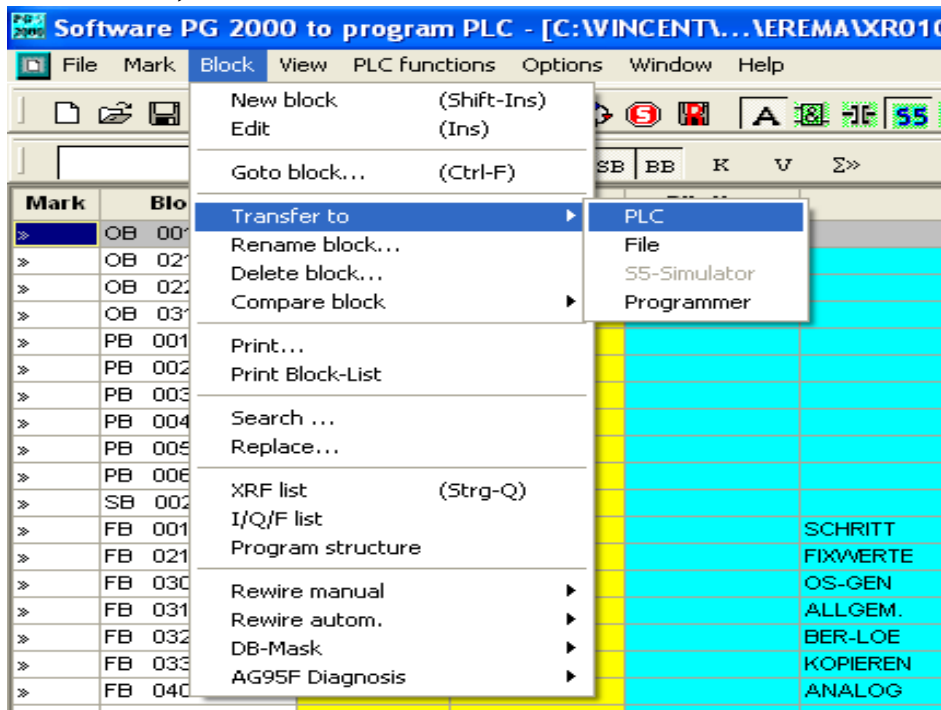

7. Select “All” button

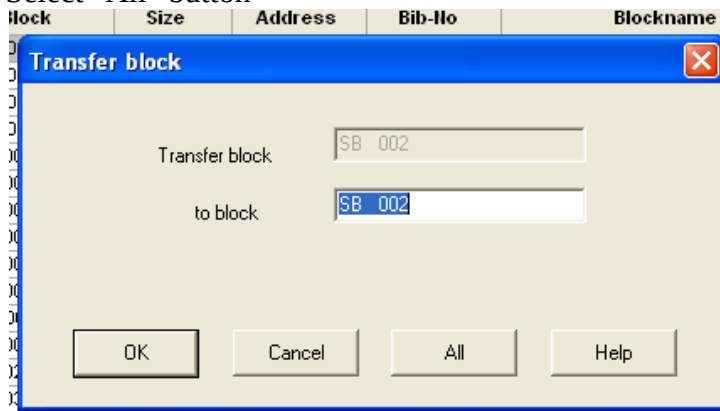


8 Select yes to confirm . Select “No” that this message will not be viewed for all the following intern block or cancel

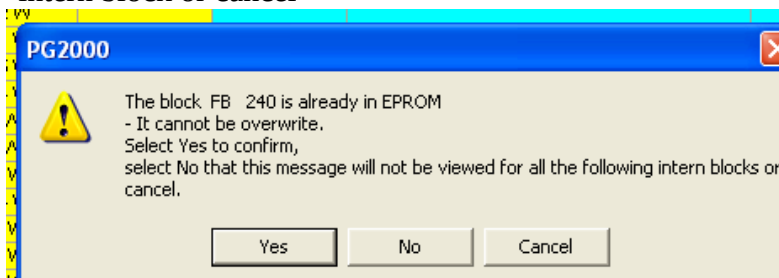


B. For upload


1. Select Menu bar “file” → Open → PLC

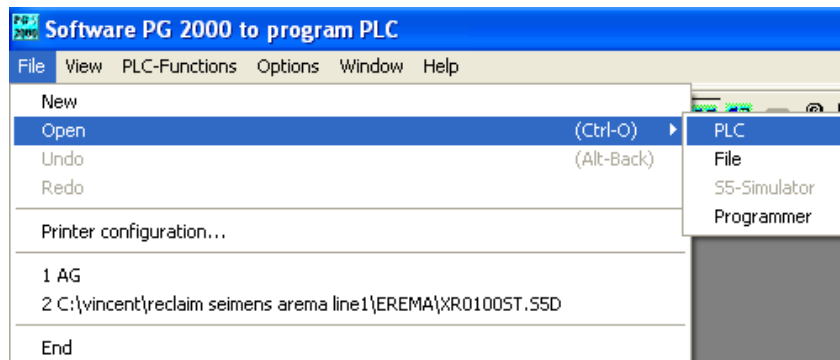


2. Select “ Mark” then select “Mark all blocks”

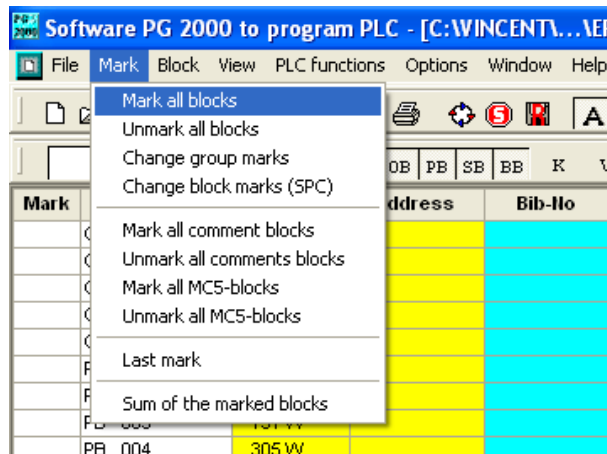


3. Select “ Block” → Transfer to → File

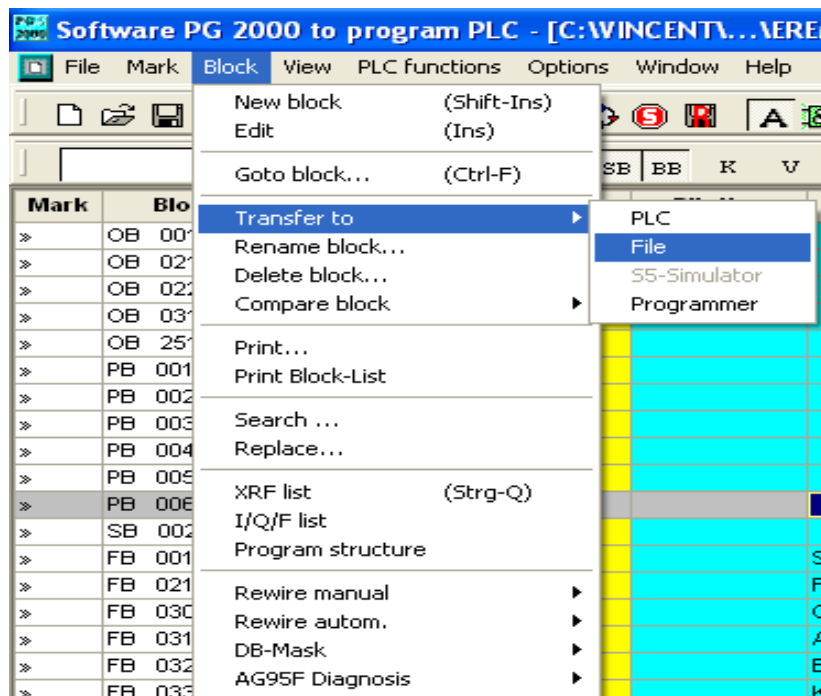

4. Type file name

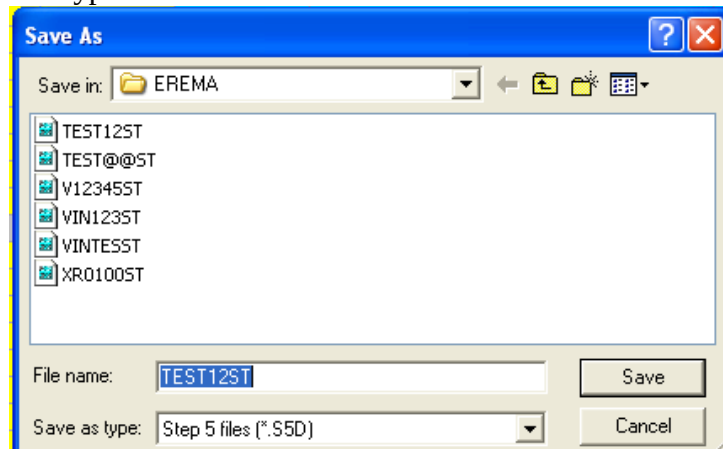


5 Select "all"

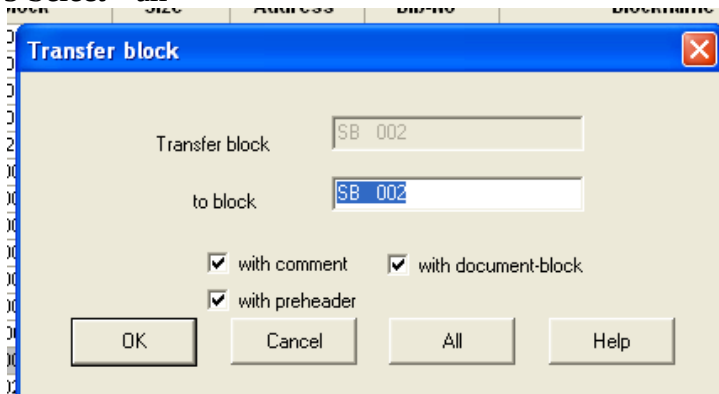

C. Monitor

1. Select "block" → XRF list

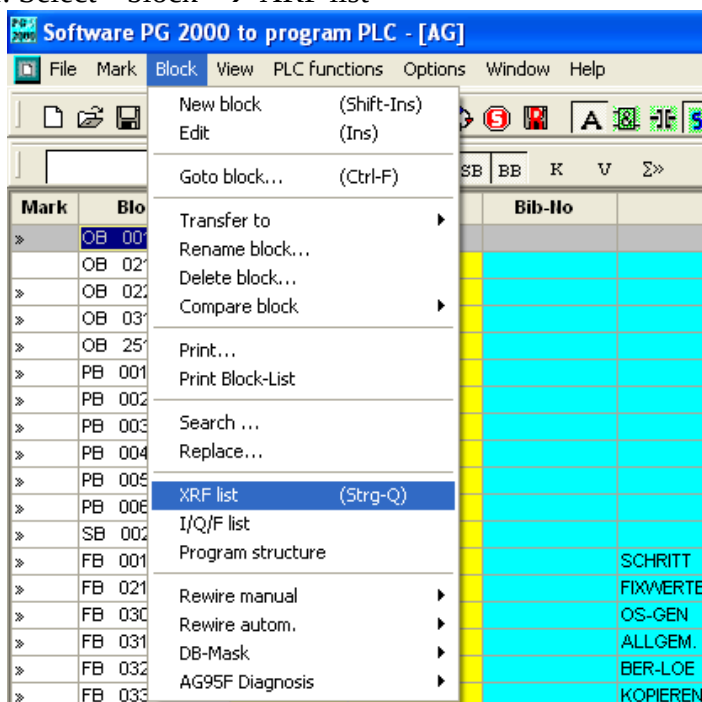

2. Select “ I/O “ you want .

operand	symbolic	Blk	Seg/Ac	Seg/Ac	Seg/Ac	Seg/Ac
IW 0		OB 001	9/L			
I 0.0		PB 005	1/A			
I 0.1		PB 005	2/A	3/#	4/A	
I 0.2		PB 005	17/A			
I 0.3		PB 005	18/A	19/#	20/A	
IW 2		OB 001	9/L			
I 2.0		FB 040	1/A			
I 2.1		OB 001	9/L			

3. Select “ Start status blocks” from “PLC function”.

Segment 1 of 9	DB 010	RL0	Status/Accu1	---Accu2---	STATUS	SAC
:C DB 10						
:***						
Segment 2 of 9						
:A(						
:O F 51.2	01					00000000 2B0
:O F 53.2	01	0	0			00000000 2B0
:)	01	0	0			00000000 2B0
:AN F 56.1		0	0			00000000 2B0
:L DW 131		0	1010	00B7		00000000 2B0
:SD T 15		0	000.0			00000001 2B0
:NOP 0		0				00000001 2B0
:NOP 0		0				00000001 2B1
:NOP 0		0				00000001 2B1
:A T 15		0	000.0			00000000 2B1
:E F 56.0		0		0		00000001 2B1

4. Or select “ Force variables “ from PLC function .

Segment 1 of 9	DB 10	***	Segment 2 of 9	PLC functions	Options	Window	Help
:C DB 10			:A(	Start PLC			
:***			:O F 51.2	Stop PLC			
Segment 2 of 9			:O F 53.2	Compress memory			
:A(			:)	Delete PLC			
:O F 51.2	01		:AN F 56.1	Force variables...			
:O F 53.2	01		:L DW 131	Force outputs...			
:)	01		:SD T 15	Start status block			
:AN F 56.1			:NOP 0	Stop status block			
:L DW 131			:NOP 0	Display PLC-Info			
:SD T 15			:NOP 0	Output memory configuration			
:NOP 0			:A T 15	Display PLC-memory			
:NOP 0			:E F 56.0	ISTACK			
:NOP 0				BSTACK			

5. Type I/O address you need

Mark	Address	Type	Value	comment
	I33.0	KM	0	

