

MITSUBISHI PLC



Figure 1

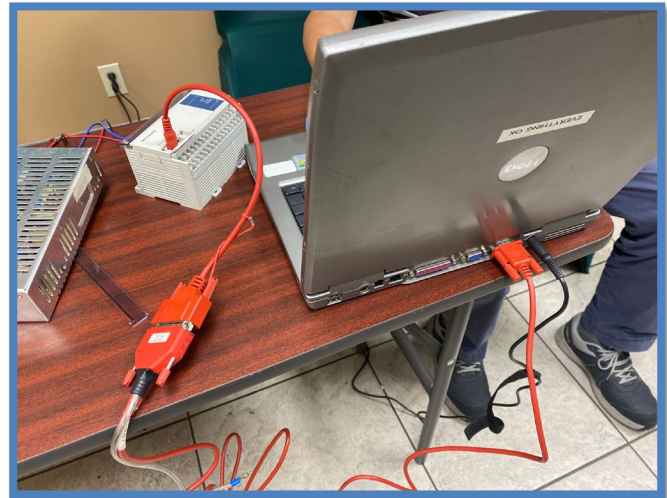


Figure 2

The power supply of mitubishi plc is 24v, connect the power supply and the transmission line.

A. How to upload the program



Figure 3

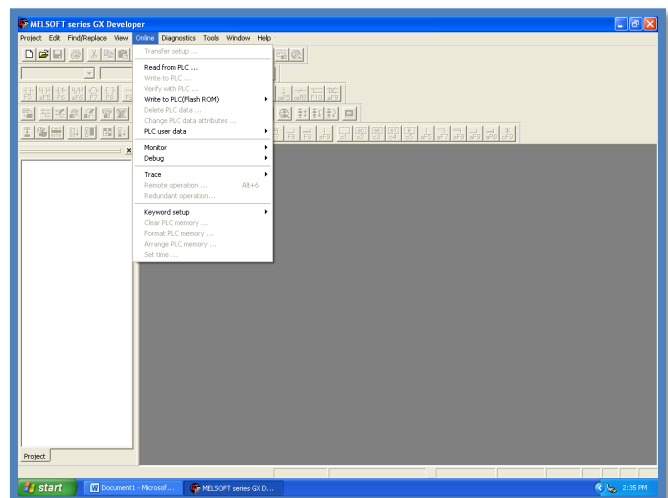


Figure 4

Then open gx developer and need to shutdown rs linx. After entering this program, you need to test whether the transmission line is connected.

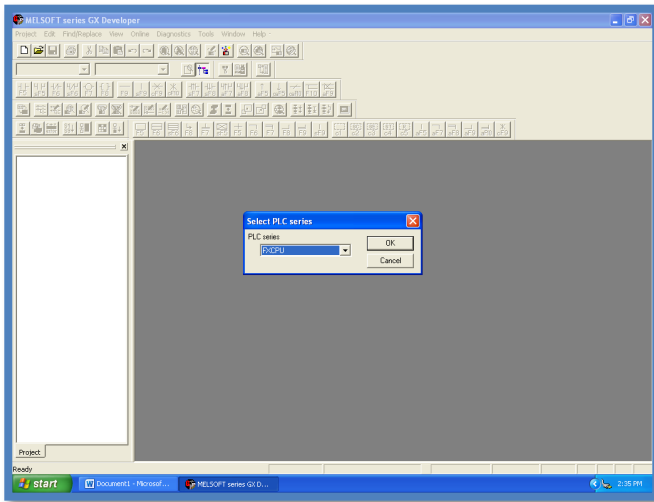


Figure 5

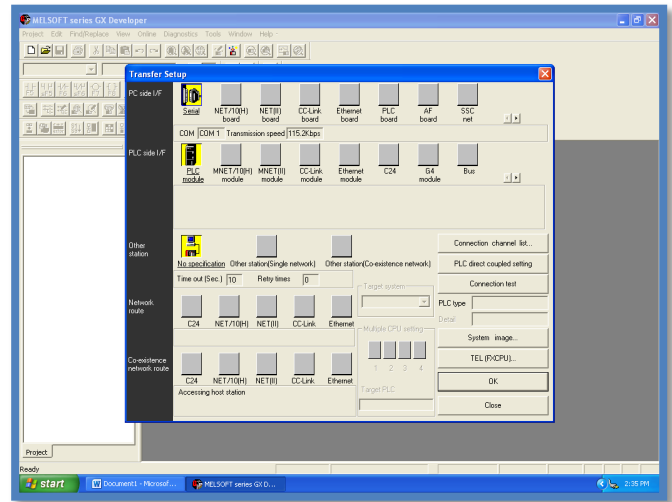


Figure 6

Select fxcpu, then click connection test.

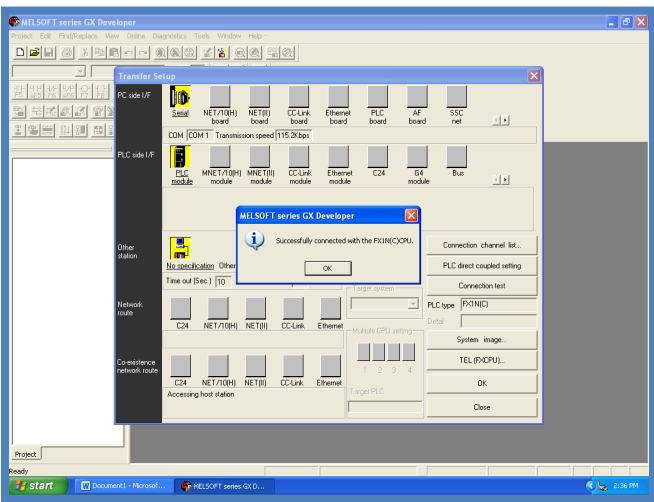


Figure 7

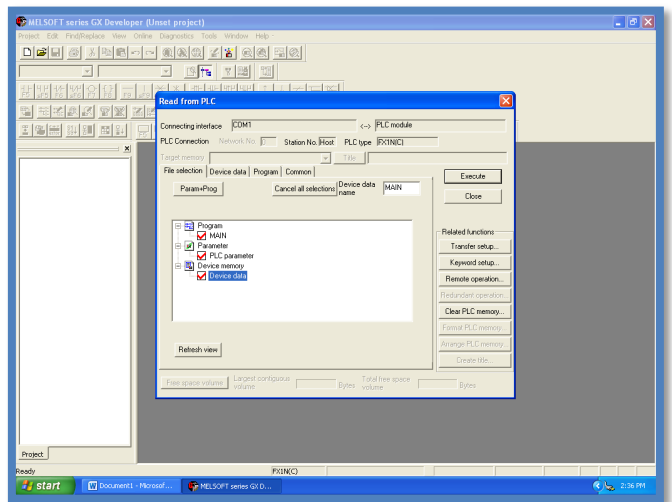


Figure 8

The connection is successful, then select the program you want to backup, click excute, and the backup will start.

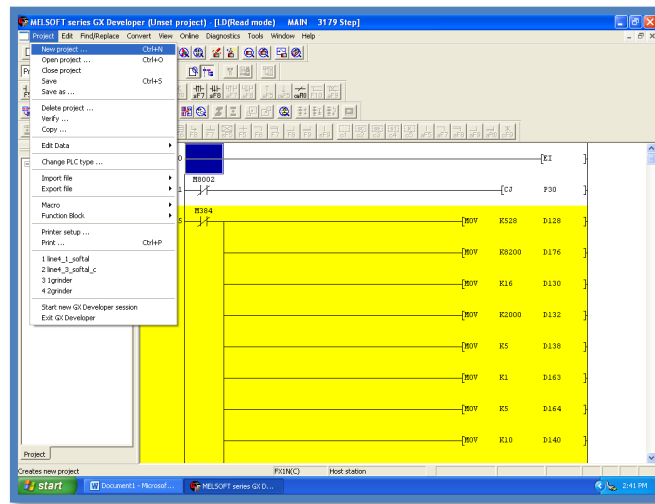


Figure 9

After the backup completed ,save as back up program .

A. How to download the program

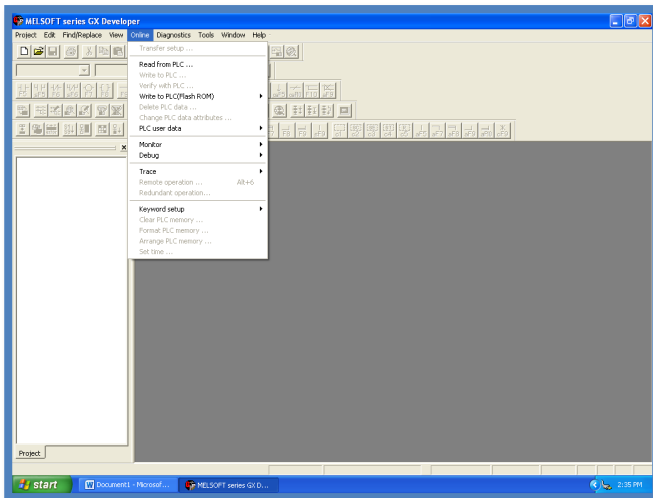


Figure 10

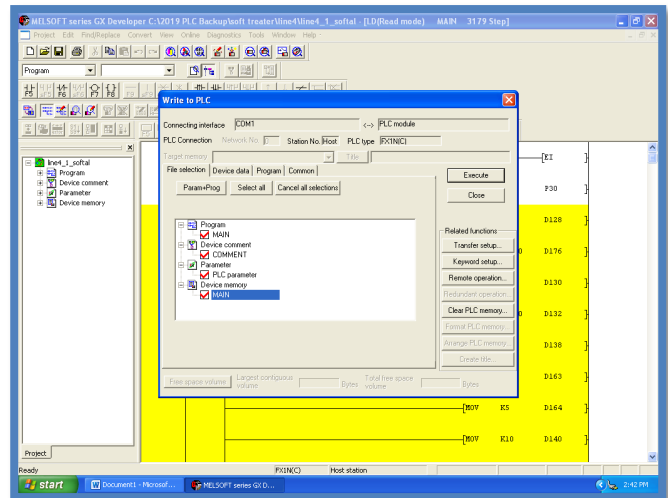


Figure 11

The method of downloading the program to plc is also the same as back up. different between upload and download is download have to click write to plc, then click excute, Finifh!