


Procedure to setup IP address on 1756 ENBT Ethernet card


1. Run RSLinx
2. Select Communication-Configure Drivers
3. Select RS232 DF1 device on "Available driver type"
4. Click Add New and create New driver" AB_DF1-1
5. Select "AB_DF1-1"Configure RS 232 DF1 device page will pop up.

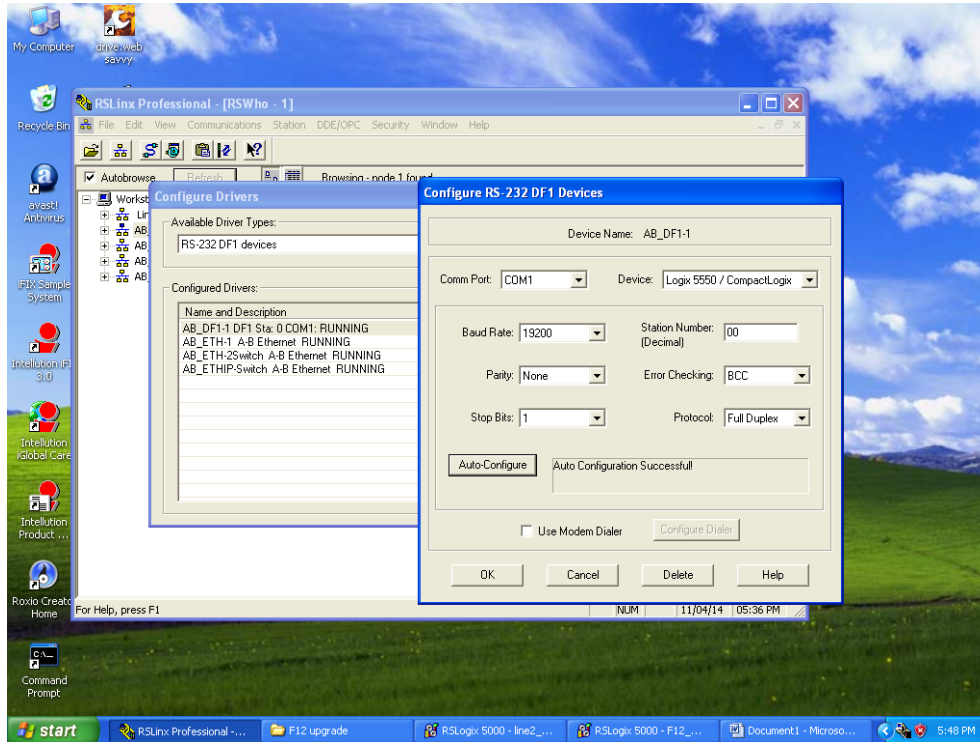


6. Use AutoConfigure button. If the connection is valid, it will show "Auto Configuration successful". Then Press OK
7. Go back to Communication-RSWho
8. Open AB-DF1-1756-L61- Backplane, 1756 A13/A.
9. Right click on network device "00, 1756-ENBT/A. Select module configure. The page"1756-ENBT configuration" will pop up.

Procedure to setup IP address on 1756 ENBT Ethernet card

10. Setup the IP address in Port. For example “169.254.0.120”

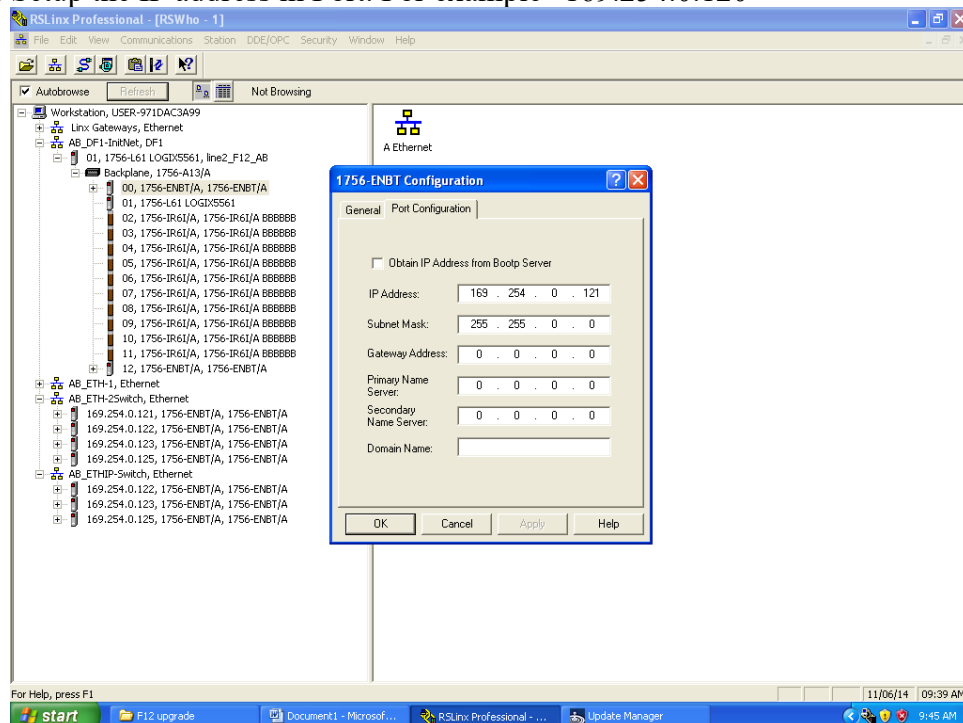


11. Press Apply after IP address setup. Click on Yes to confirm the change.

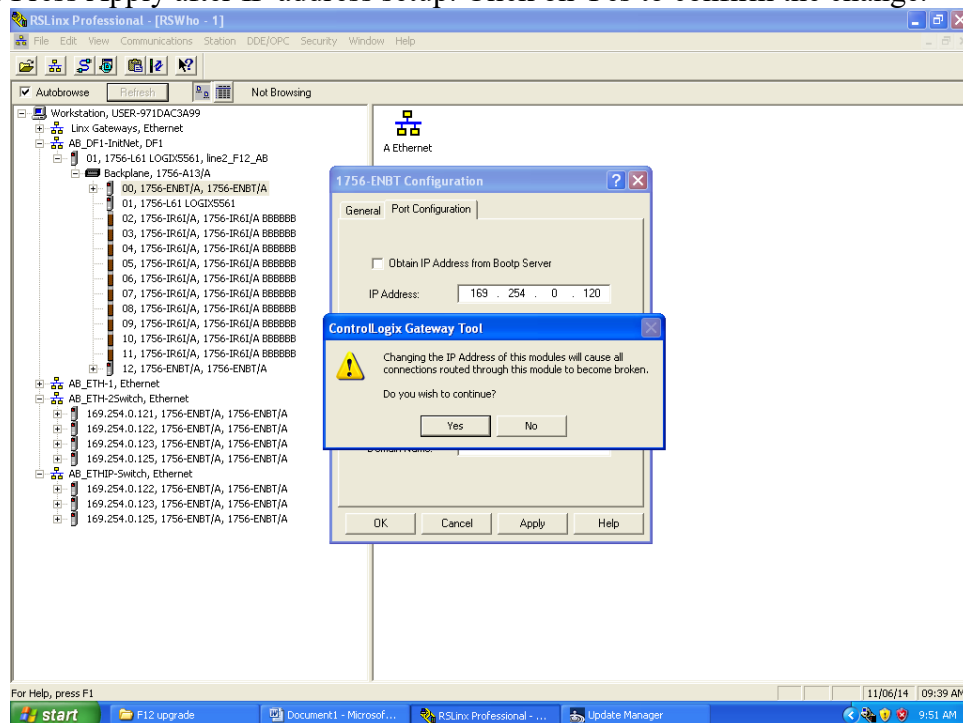

Procedure to setup IP address on 1756 ENBT Ethernet card

12. Start downloading configuration and wait till done.

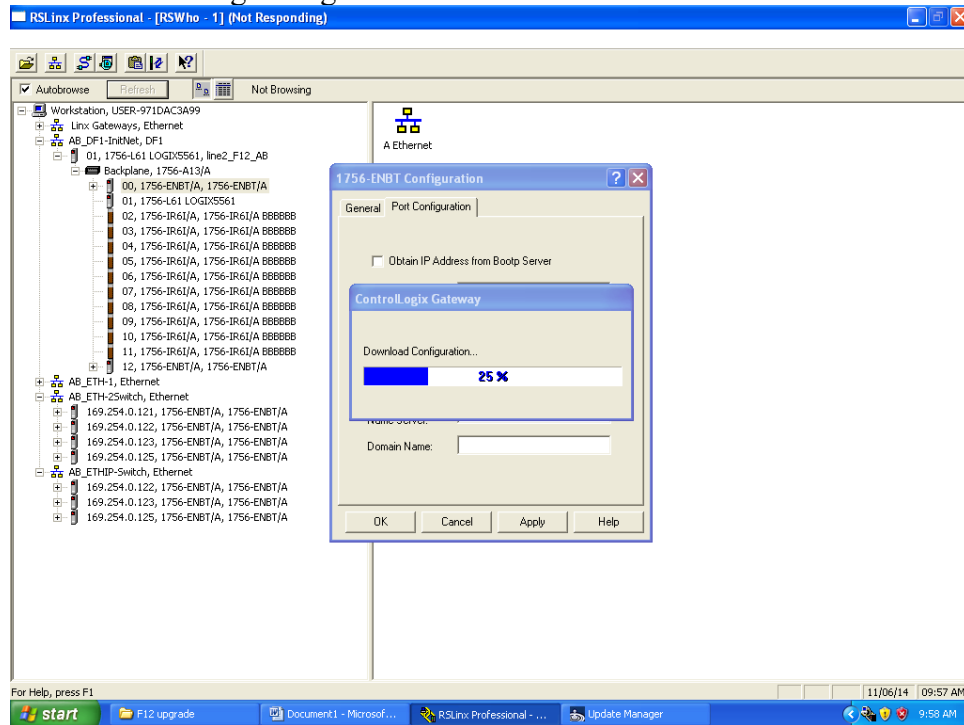

13. Verify the IP address showing on 1756-ENBT network device.