

Mitsubishi PLC Upload/Download Procedure


I. To upload copy from known PLC to laptop PC

Power up PC and connect red communication cable from PC to Mitsubishi PLC.


1. Open GX Developer program.




2. Click “Online” and “Read from PLC”.

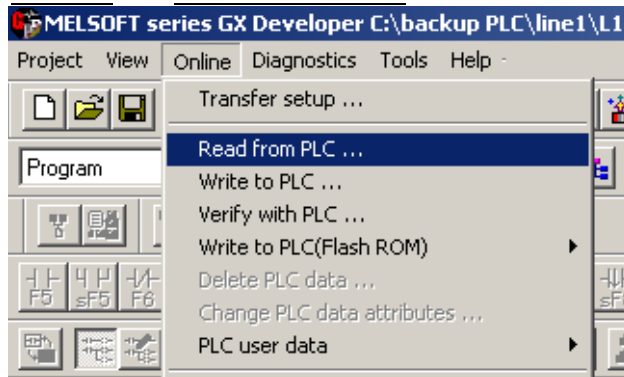


3. Select “FXCPU” and click on “OK”.

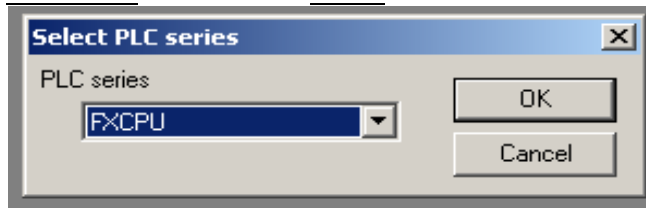


4. Under “Connection Set-up” click on “Connection Test” (Write down the FX model #).

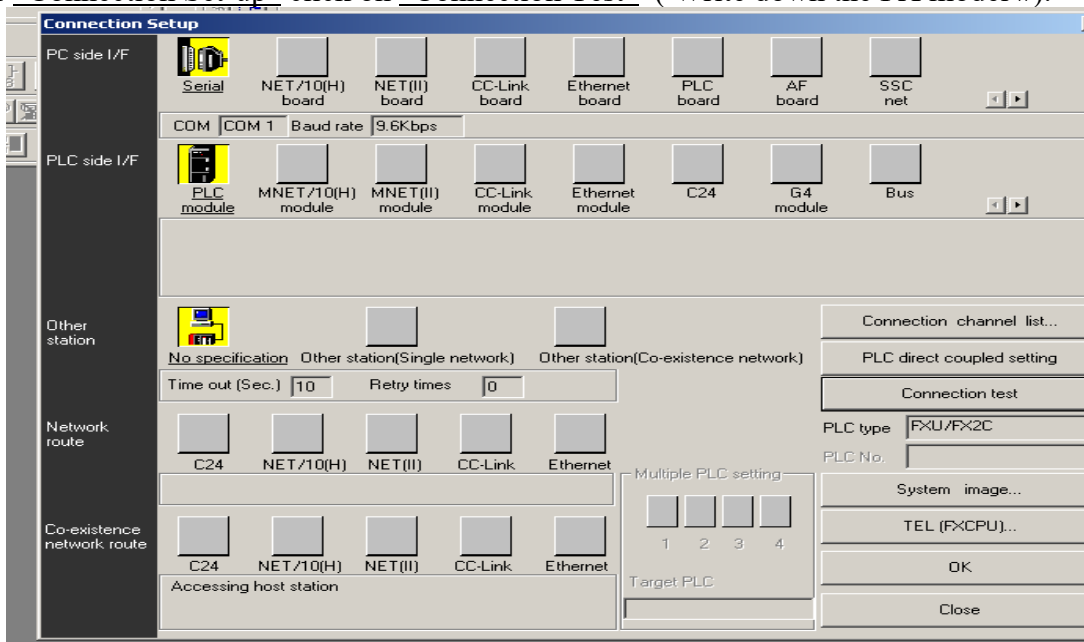


5. Show “successfully connected “. Click “OK”. If no, Check cable .

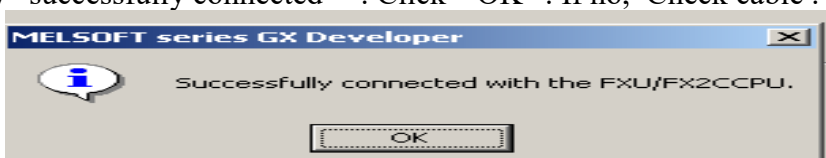


6. Select “OK “ button . Then click it .

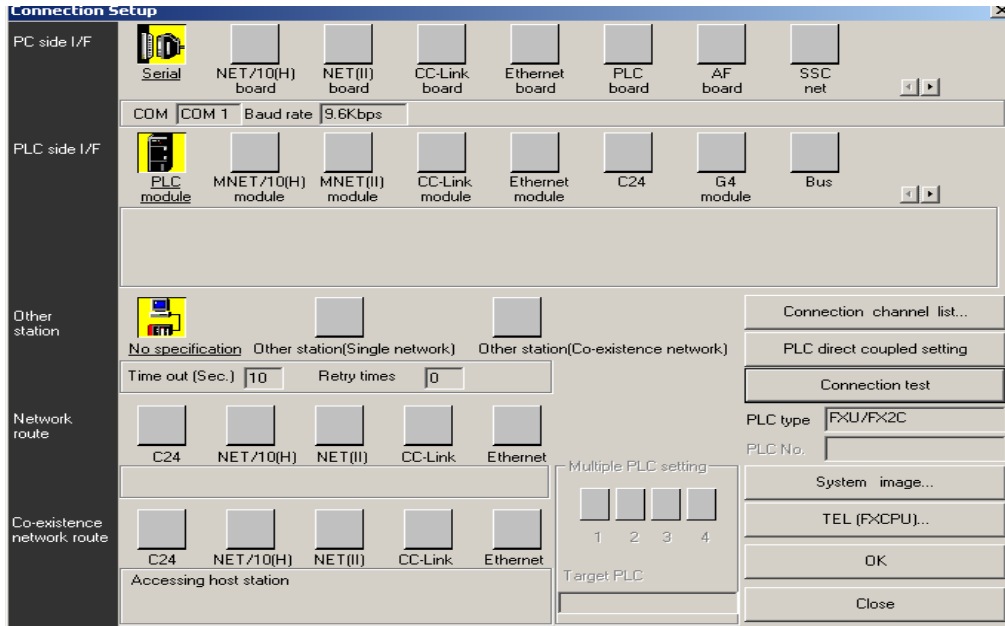


7. Select “MAIN” and PLC parameter “ . Then click “Execute”

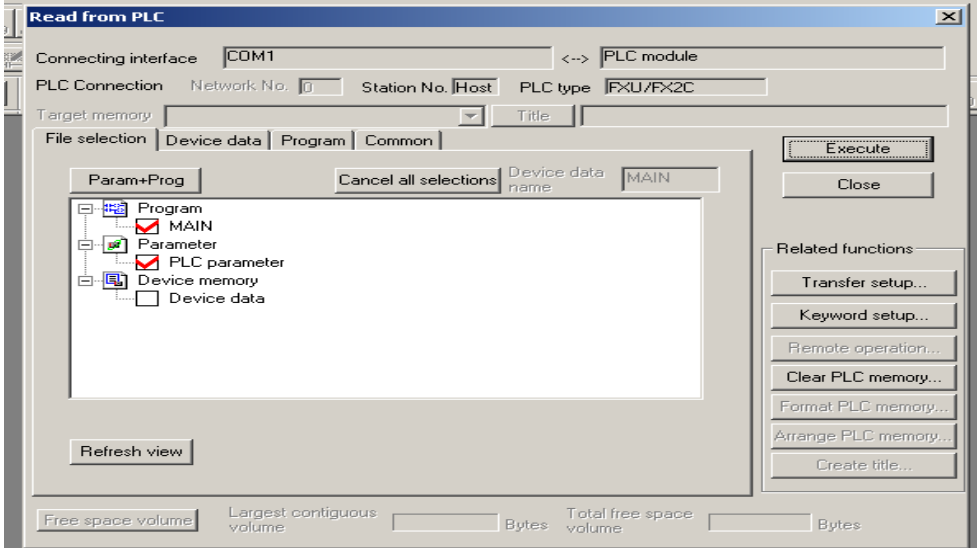


8 Click “ Yes”

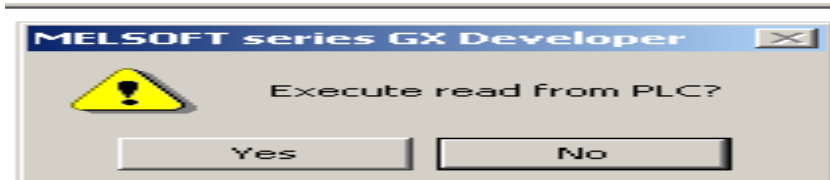


9 Show “ reading “ from PLC

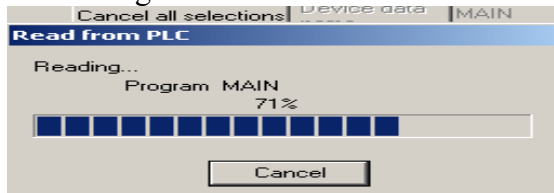

10. Select device memory and click” Execute”

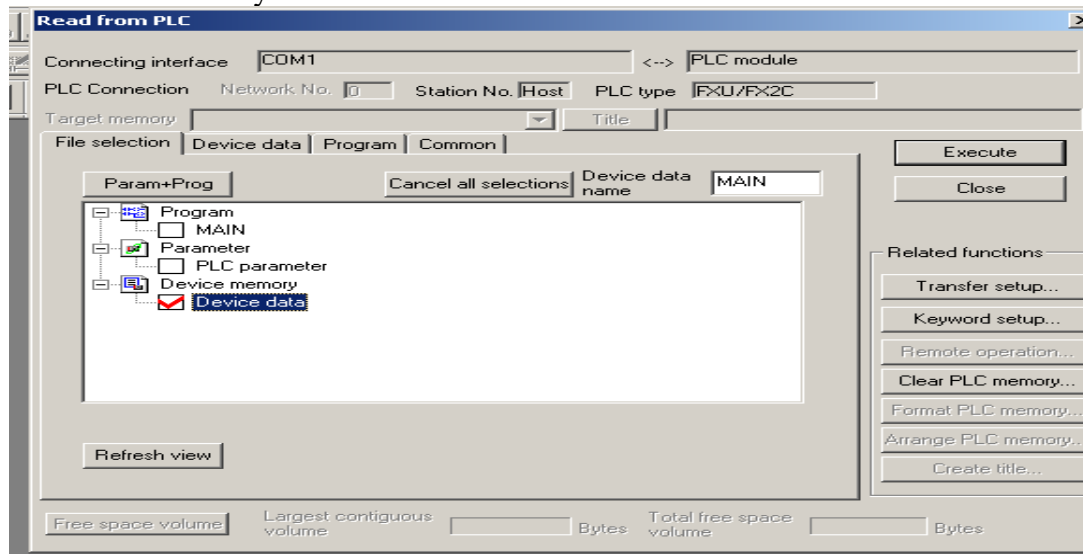


11 . Click “Yes”

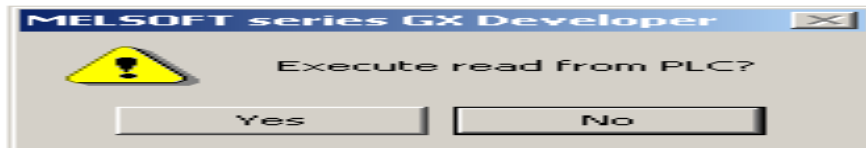


12. Show “reading “



13. Click “OK” after completed.

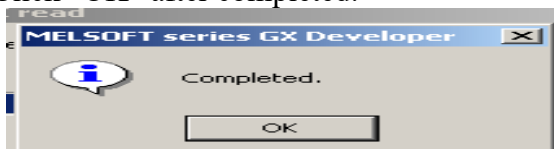

14. Then show “ PLC Program “

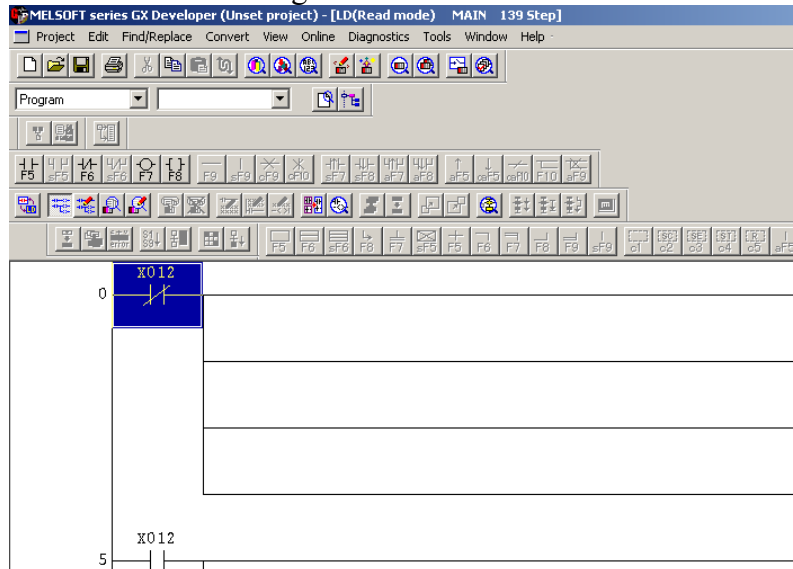


II. Downloading from PC to PLC


1. open “GX Developer FX”.




- 2 Click on “Project” and “Open Project”

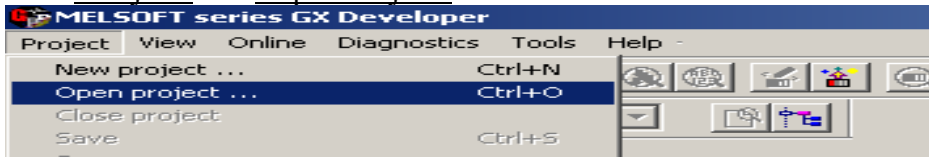


3. Now highlight or (select) file you wish to download and click on “Open” file.

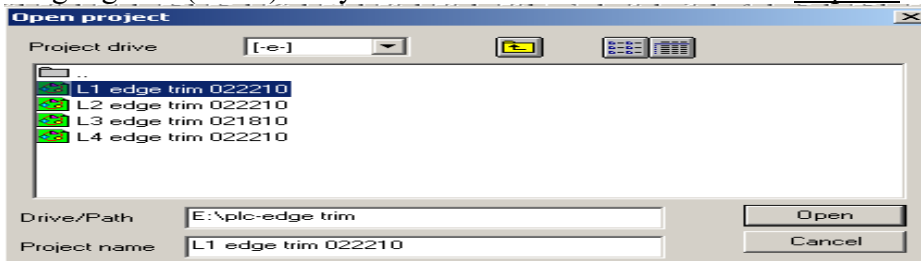


4. Show “ PLC program “ .

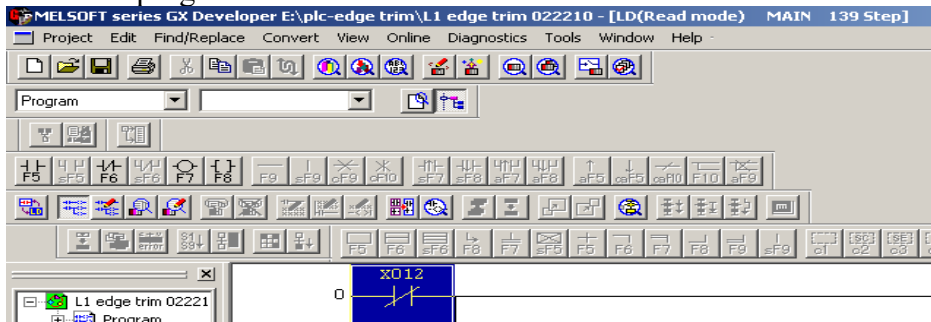


5. Make sure switch on the “stop” position before downloading program to PLC.

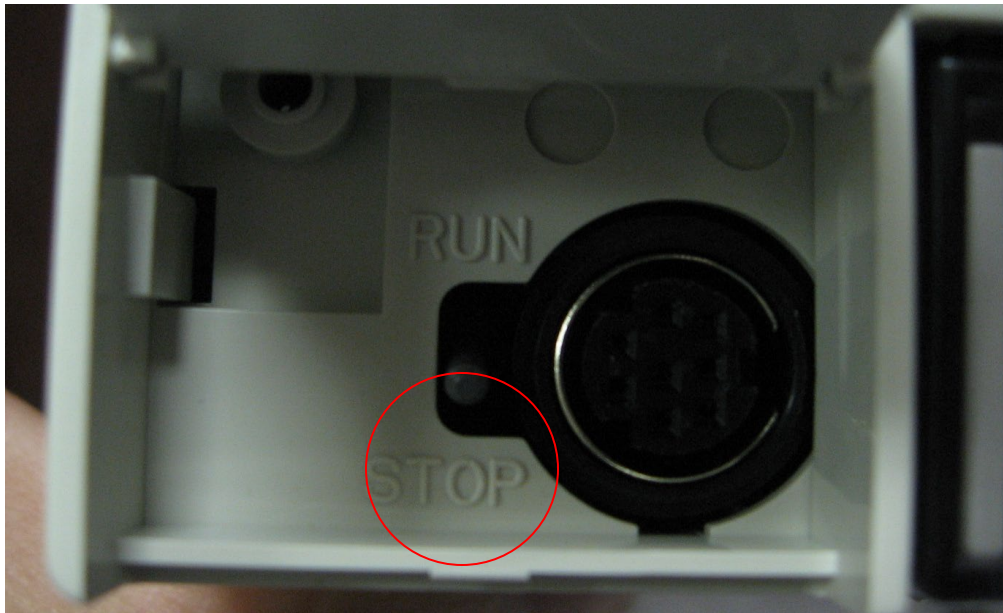


5. Click “Online” icon then select “Transfer setup”. Under “Connection Set-up” click on “Connection Test” (Write down the FX model #). Make sure “successfully connected”

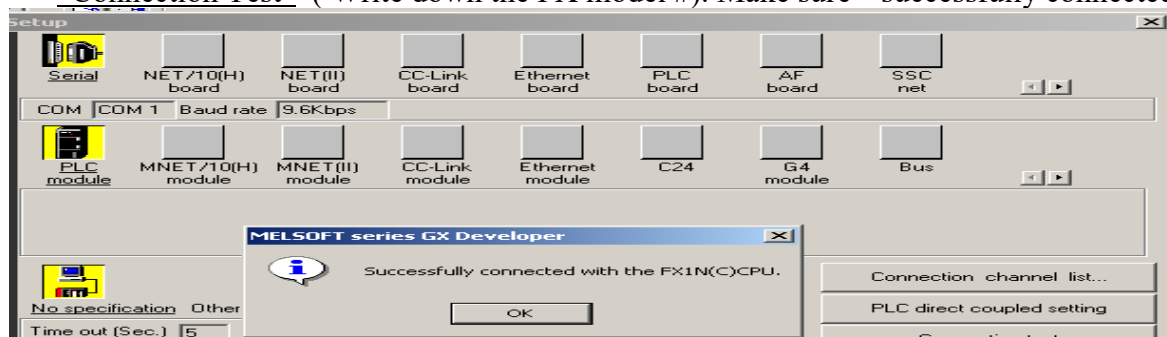


6. Click “On-Line” and “Write to PLC”.

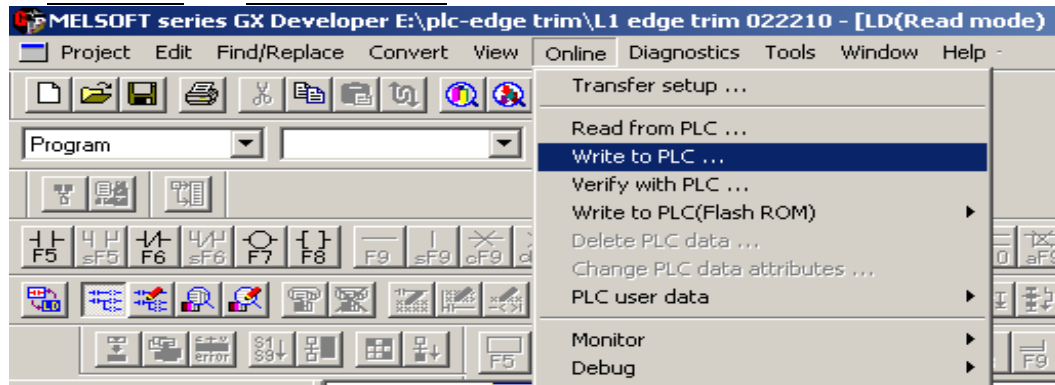


- 7.. Left click check marks on all 4 boxes and click on “Execute” and “Yes”.

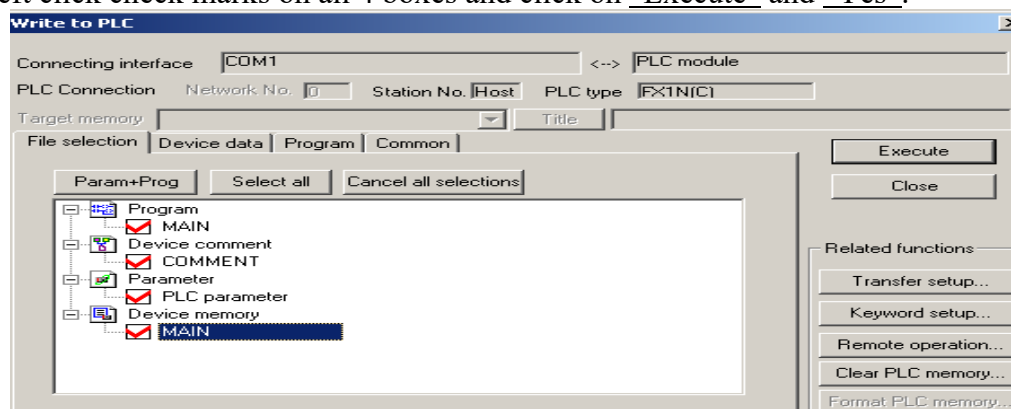

8. Click “Yes”

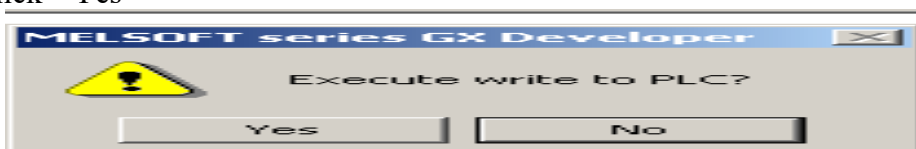


9. Click” Yes”

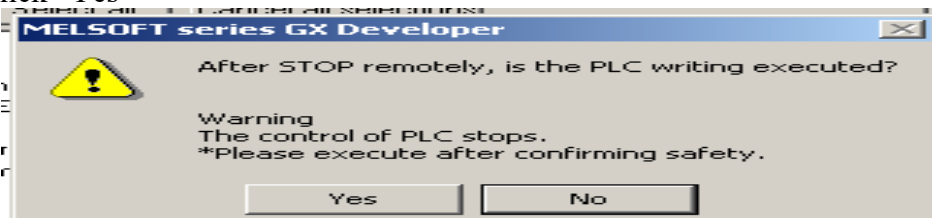

10. Click” OK”



11. Click “Yes”

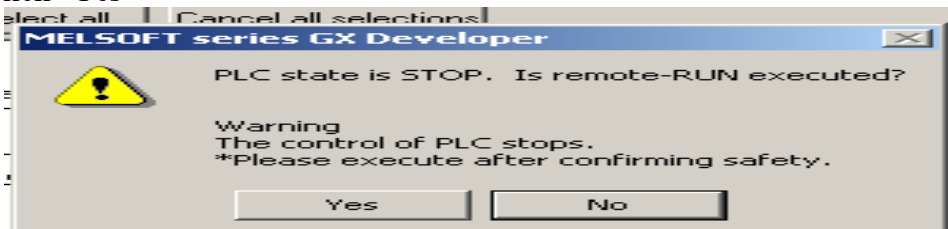

12. Click” OK”



13. Close “Project” first.....click “OK. Then Close Program.

