



# **SL876Q5-A**

## **Product User Guide**

**1VV0301333 Rev. 5**

2018-08-29

**TELIT**  
**TECHNICAL**  
**DOCUMENTATION**

---

## SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

### NOTICES

While reasonable efforts have been made to assure the accuracy of this document, Telit assumes no liability resulting from any inaccuracies or omissions in this document, or from use of the information obtained herein. The information in this document has been carefully checked and is believed to be reliable. However, no responsibility is assumed for inaccuracies or omissions. Telit reserves the right to make changes to any products described herein and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Telit does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others.

It is possible that this publication may contain references to, or information about Telit products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Telit intends to announce such Telit products, programming, or services in your country.

### COPYRIGHTS

This manual and the Telit products described in it may be, include or describe copyrighted Telit material, such as computer programs stored in semiconductor memories or other media. Laws in Italy and other countries preserve for Telit and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Telit and its licensors contained herein or in the Telit products described in this manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Telit. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit, as arises by operation of law in the sale of a product.

### COMPUTER SOFTWARE COPYRIGHTS

The Telit and 3rd Party supplied Software (SW) products described in this manual may include copyrighted Telit and other 3rd Party supplied computer programs stored in semiconductor memories or other media. Laws in Italy and other countries preserve for Telit and other 3rd Party supplied SW certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Telit or other 3rd Party supplied SW computer programs contained in the Telit products described in this manual may not be copied (reverse engineered) or reproduced in any manner without the express written permission of Telit or the 3rd Party SW supplier. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit or other 3rd Party supplied SW, except for the normal non-exclusive, royalty free license to use that arises by operation of law in the sale of a product.

## USAGE AND DISCLOSURE RESTRICTIONS

### I. License Agreements

The software described in this document is the property of Telit and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

### II. Copyrighted Materials

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Telit.

### III. High Risk Materials

Components, units, or third-party products used in the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: the operation of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems (High Risk Activities"). Telit and its supplier(s) specifically disclaim any expressed or implied warranty of fitness for such High-Risk Activities.

### IV. Trademarks

TELIT and the Stylized T Logo are registered in Trademark Office. All other product or service names are the property of their respective owners.

### V. Third Party Rights

The software may include Third Party Right software. In this case you agree to comply with all terms and conditions imposed on you in respect of such separate software. In addition to Third Party Terms, the disclaimer of warranty and limitation of liability provisions in this License shall apply to the Third-Party Right software.

TELIT HEREBY DISCLAIMS ANY AND ALL WARRANTIES EXPRESS OR IMPLIED FROM ANY THIRD PARTIES REGARDING ANY SEPARATE FILES, ANY THIRD PARTY MATERIALS INCLUDED IN THE SOFTWARE, ANY THIRD PARTY MATERIALS FROM WHICH THE SOFTWARE IS DERIVED (COLLECTIVELY "OTHER CODE"), AND THE USE OF ANY OR ALL THE OTHER CODE IN CONNECTION WITH THE SOFTWARE, INCLUDING (WITHOUT LIMITATION) ANY WARRANTIES OF SATISFACTORY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE.

NO THIRD PARTY LICENSORS OF OTHER CODE SHALL HAVE ANY LIABILITY FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING WITHOUT LIMITATION LOST PROFITS), HOWEVER CAUSED AND WHETHER MADE UNDER CONTRACT, TORT OR OTHER LEGAL THEORY, ARISING IN ANY WAY OUT OF THE USE OR DISTRIBUTION OF THE OTHER CODE OR THE EXERCISE OF ANY RIGHTS GRANTED UNDER EITHER OR BOTH THIS LICENSE AND THE LEGAL TERMS APPLICABLE TO ANY SEPARATE FILES, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## PRODUCT APPLICABILITY TABLE

Product
SE876Q5-A

***Table 0-1 Product Applicability Table***

## **CONTENTS**

<b>NOTICES .....</b>	<b>2</b>
<b>PRODUCT APPLICABILITY TABLE.....</b>	<b>4</b>
<b>1. INTRODUCTION .....</b>	<b>11</b>
1.1. Purpose.....	11
1.2. Contact and Support Information .....	11
1.3. Related Documents and Downloads.....	11
1.3.1. Related Documents Requiring a Non-Disclosure Agreement .....	11
1.4. Text Conventions .....	12
<b>2. PRODUCT DESCRIPTION.....</b>	<b>13</b>
2.1. Product Overview .....	13
2.2. SL876Q5-A Block Diagram.....	14
2.3. SL876Q5-A Module Photo.....	15
<b>3. SL876Q5-A EVALUATION KIT (EVK).....</b>	<b>16</b>
3.1. SL876Q5-A Evaluation Board (EVB) .....	17
<b>4. SL876Q5-A FEATURES.....</b>	<b>18</b>
4.1. Built-in Antenna and RF Switch .....	18
4.2. Multi-Constellation Navigation .....	18
4.3. Quasi-Zenith Satellite System (QZSS) support.....	18
4.4. Satellite Based Augmentation System (SBAS) .....	18
4.4.1. SBAS Corrections .....	18
4.4.2. SBAS Ranging .....	18
4.5. Assisted GPS (AGPS) - SiRFInstantFix™ .....	18
4.5.1. Client-generated Extended Ephemeris (CGEE) .....	19
4.5.2. Server-generated Extended Ephemeris (SGEE) .....	19
4.6. 2-D Positioning .....	19
4.7. Static Navigation .....	19
4.8. Velocity Dead-Reckoning .....	19
4.9. Jamming Rejection – Continuous Wave (CW) Jamming Mitigation.....	20
4.10. Elevation Mask Angle .....	20
4.11. 5 Hz and 10 Hz Navigation.....	20
4.12. 1PPS .....	20
4.13. Internal LNA .....	21
4.14. Serial I/O Ports .....	21
4.15. Power Management Modes.....	22
4.15.1. Full Power Mode (default) .....	22
4.15.2. SmartGNSS .....	22
4.15.3. Trickle Power .....	23
4.15.4. Push-to-Fix.....	23

4.15.5.	SiRFaware .....	23
4.15.6.	Hibernate .....	23
<b>5.</b>	<b>PRODUCT PERFORMANCE .....</b>	<b>24</b>
5.1.	Horizontal Position Accuracy .....	24
5.2.	Time to First Fix.....	24
5.3.	Sensitivity .....	25
<b>6.</b>	<b>MESSAGE INTERFACE.....</b>	<b>26</b>
6.1.	NMEA Output Messages .....	26
6.1.1.	Standard Messages .....	26
6.1.2.	Proprietary Messages .....	27
6.1.3.	Telit Proprietary Messages.....	27
6.2.	NMEA Input Commands .....	28
6.2.1.	Change output sentences and their rates .....	28
6.2.2.	Change data rate .....	28
6.2.3.	Switch to OSP protocol .....	28
6.3.	OSP Output Messages.....	28
6.4.	OSP Input Commands.....	28
6.4.1.	Change output messages .....	28
6.4.2.	Change data rate .....	28
6.4.3.	Switch to NMEA protocol and data rate.....	28
<b>7.</b>	<b>FLASH UPGRADABILITY.....</b>	<b>29</b>
<b>8.</b>	<b>ELECTRICAL INTERFACE .....</b>	<b>30</b>
8.1.	Module Pin-out .....	30
8.2.	DC Characteristics.....	33
8.3.	Absolute Maximum Ratings.....	33
8.4.	Power Supply .....	34
8.4.1.	1.8 V Supply Voltage.....	34
8.4.2.	DC Power Requirements.....	34
8.4.3.	Power Supply Capacitance .....	34
8.4.4.	DC Power Consumption.....	35
8.5.	Control Input Signals .....	36
8.5.1.	ON-OFF (input) and SYSTEM-ON (output) .....	36
8.5.2.	nReset .....	36
8.5.3.	Boot Select.....	37
8.5.4.	Internal / nExternal Antenna Enable .....	37
8.6.	Status Output Signals .....	37
8.6.1.	SYSTEM-ON (output).....	37
8.6.2.	LNA Enable (GPIO8).....	37
8.6.3.	1PPS.....	37
8.7.	Serial I/O Ports - Configuration and Operation.....	38
8.7.1.	Primary Port Configuration .....	38
8.7.2.	Secondary Serial Port Configuration .....	38

8.7.3.	Data Ready Indicator (DRI) .....	38
8.7.4.	UART Operation.....	39
8.7.5.	I <sup>2</sup> C Operation .....	40
8.7.6.	SPI Operation .....	40
8.8.	RF Interface.....	41
8.8.1.	Built-in chip antenna.....	41
8.8.2.	External RF Input .....	41
8.8.3.	Ground Plane .....	41
8.8.4.	External Active Antenna Voltage .....	42
8.8.5.	Burnout Protection .....	42
8.8.6.	Jamming Rejection.....	42
8.8.7.	Frequency Plan .....	42
8.8.8.	Local Oscillator Leakage.....	42
<b>9.</b>	<b>RF SIGNALS .....</b>	<b>43</b>
9.1.	RF Input .....	43
9.2.	GNSS Antenna Polarization .....	44
9.3.	GNSS Antenna Gain .....	44
9.4.	System Noise Floor .....	45
9.5.	PCB stack and Trace Impedance .....	45
9.6.	RF Trace Losses .....	46
9.7.	Implications of the Pre-Select SAW Filter .....	46
9.8.	RF Interference .....	46
9.9.	Shielding .....	47
9.10.	Powering an External LNA (External Active Antenna).....	47
<b>10.</b>	<b>REFERENCE DESIGN .....</b>	<b>48</b>
<b>11.</b>	<b>MECHANICAL DRAWING.....</b>	<b>50</b>
<b>12.</b>	<b>PCB FOOTPRINT AND GROUND PLANE.....</b>	<b>51</b>
<b>13.</b>	<b>PRODUCT PACKAGING AND HANDLING .....</b>	<b>53</b>
13.1.	Product Labelling and Serialization.....	53
13.1.1.	Product Label – SL876Q5-A .....	53
13.2.	Product Packaging .....	54
13.3.	Moisture Sensitivity.....	55
13.4.	ESD Sensitivity .....	56
13.5.	Reflow .....	56
13.6.	Assembly Considerations .....	56
13.7.	Washing Considerations.....	56
13.8.	Safety .....	56
13.9.	Disposal .....	56
<b>14.</b>	<b>ENVIRONMENTAL REQUIREMENTS .....</b>	<b>57</b>
14.1.	Operating Environmental Limits.....	57

---

14.2. Storage Environmental Limits .....	57
<b>15. COMPLIANCES .....</b>	<b>58</b>
15.1. EU RED Certification .....	58
15.2. eCall Compliance .....	58
15.3. GOST R-55534 Certification .....	58
15.5. EU Declaration of Conformity (RED) .....	59
<b>16. GLOSSARY AND ACRONYMS.....</b>	<b>60</b>
<b>17. SAFETY RECOMMENDATIONS.....</b>	<b>63</b>
17.1. READ CAREFULLY .....	63
17.2. Electrical and Fire Safety.....	64
<b>18. DOCUMENT HISTORY .....</b>	<b>65</b>

## **FIGURES**

Figure 2-1 SL876Q5-A Block Diagram .....	14
Figure 2-2 SL876Q5-A module photo.....	15
Figure 3-1 Evaluation Kit (EVK) contents .....	16
Figure 3-2 SL876Q5-A Evaluation Board .....	17
Figure 8-1 SL876Q5-A Pin-out Diagram.....	30
Figure 9-1 RF Trace Examples.....	46
Figure 10-1 Reference Design.....	48
Figure 11-1 SL876Q5-A Mechanical Drawing.....	50
Figure 12-1 SL876Q5-A Footprint and Ground Plane.....	51
Figure 12-2 SL876Q5-A PCB Footprint (detail) .....	52
Figure 13-1 SL876Q5-A Product Label.....	53
Figure 13-2 Product Packaging – Tray 90 pcs. each .....	54
Figure 13-3 Moisture-Sensitive Device Label .....	55
Figure 15-1 EU (RED) Declaration of Conformity - SL876Q5-A.....	59

## TABLES

Table 0-1 Product Applicability Table .....	4
<b>Table 4-1 Internal gain value and external gain range</b> .....	<b>21</b>
Table 4-1 Power Management Modes.....	22
Table 5-1 SL876Q5-A Horizontal Position Accuracy.....	24
Table 5-2 SL876Q5-A Time to First Fix .....	24
Table 5-3 SL876Q5-A Sensitivity.....	25
Table 6-1 Default NMEA Output Messages.....	26
Table 6-2 Available NMEA Output Messages.....	26
Table 6-3 NMEA Talker IDs.....	27
Table 8-1 SL876Q5-A Pin-out Function Table .....	32
Table 8-2 DC Characteristics .....	33
Table 8-3 Absolute Maximum Ratings .....	33
Table 8-4 DC Supply Requirements .....	34
Table 8-5 Power Consumption – SL876Q5-A.....	35
Table 8-6 Power Consumption – SL876Q5-A Low Power modes.....	35
Table 8-7 Primary Serial I/O Port Configuration.....	38
Table 8-8 UART Pin Assignments .....	39
Table 8-9 I <sup>2</sup> C Pin Assignments .....	40
Table 8-10 SPI Mode Pin Assignments .....	40
Table 8-11 Ground Plane Size .....	41
Table 8-12 Frequency Plan .....	42
Table 8-13 LO Leakage.....	42
Table 9-1 Inductor Loss.....	47
Table 13-1 SL876Q5-A Product Label Description .....	53
Table 14-1 Operating Environmental Limits.....	57
Table 14-2 Storage Environmental Limits .....	57

## 1. INTRODUCTION

### 1.1. Purpose

The purpose of this document is to provide information regarding the function, features, and usage of the Telit product(s) listed in **Table 0-1 Product Applicability Table**.

### 1.2. Contact and Support Information

For general contact, technical support services, technical questions and report documentation errors contact Telit Technical Support at:

- [TS-EMEA@telit.com](mailto:TS-EMEA@telit.com)
- [TS-AMERICAS@telit.com](mailto:TS-AMERICAS@telit.com)
- [TS-APAC@telit.com](mailto:TS-APAC@telit.com)

For detailed information about where you can buy the Telit modules or for recommendations on accessories and components visit:

<http://www.telit.com>

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Telit appreciates feedback from the users of our information.

### 1.3. Related Documents and Downloads

Please refer to <http://www.telit.com/gnss/> for current documentation and downloads

SL876Q5-A Data Sheet

SL876Q5-A Evaluation Kit User Guide

#### 1.3.1. Related Documents Requiring a Non-Disclosure Agreement

SiRFstarV B02 Designer's Guide (CS-319281-AN-2)

SiRFstarV B02 Software User's Guide (CS-314345-UG-2)

NMEA Reference Guide (CS-129435-MA8)

SiRFstarV One Socket Protocol Interface Control Document (CS-129291-DCP15)

SiRFstarV OSP Extensions (CS-303979-7)

Product firmware

## 1.4. Text Conventions

- Dates are in ISO 8601 format, i.e. YYYY-MM-DD.

Symbol	Description
	<b>Danger</b> – This information MUST be followed or catastrophic equipment failure and/or bodily injury may occur.
	<b>Caution or Warning</b> – This is an important point about integrating the product into a system. If this information is disregarded, the product or system may malfunction or fail.
	<b>Tip</b> – This is advice or suggestion that may be useful when integrating the product.

## 2. PRODUCT DESCRIPTION

The SL876Q5-A modules are complete multi-constellation position, velocity, and time (PVT) engines featuring high performance, high sensitivity, and low power consumption.

The SL876Q5-A modules are based on the SiRFstar 5e (B02) flash GNSS chip.

A built-in tri-band chip antenna receives RF signals from the GNSS satellites. Provision is also made for switching to an external active antenna under host control.

The inclusion of the GLONASS and BeiDou constellations yields better coverage, greater accuracy, and improved availability.

### Special Features:

Built-in chip antenna

RF Switch allows external RF input

### 2.1. Product Overview

- Complete GNSS receiver module including memory, LNA, TCXO, and RTC
  - Built-in tri-band chip antenna
  - External antenna may be used via an internal RF switch
- Based on the SiRFstar 5e (B02) flash GNSS chip
- Constellations: GPS, Galileo, QZSS, and either Glonass or BeiDou
- SBAS capable (WAAS, EGNOS, MSAS, GAGAN), including ranging
- AGPS support for extended ephemeris using local or server-based solutions:
  - Client-Generated Extended Ephemeris (CGEE)
  - Server-Generated Extended Ephemeris (SGEE)
- Jamming Rejection
- Multipath mitigation
- 1PPS output
- Power management modes for extended battery life
  - SiRFSmartGNSS I, SiRFSmartGNSS II
  - Push-to-Fix, Trickle Power, SiRFaware
- Fix reporting at 1 Hz 5 Hz, or 10 Hz
- Command input and data output:
  - NMEA-0183
  - OSP (binary)
- Two serial ports
  - The primary serial port is configurable for UART, I<sup>2</sup>C, or SPI interface
  - The secondary serial port is configurable for UART or I<sup>2</sup>C interface
- 16 Megabit built-in flash memory
- Less than 70 mW typical power consumption (Full Power mode – GPS + GLO)
- Supported by evaluation kits
- -40°C to +85°C industrial temperature range
- 11.0 x 11.9 x 2.15 mm (nominal) 24-pad LCC package
- Surface mountable by standard SMT equipment
- eCall and ERA/GLONASS compliant
- RoHS and RED compliant design

## 2.2. SL876Q5-A Block Diagram

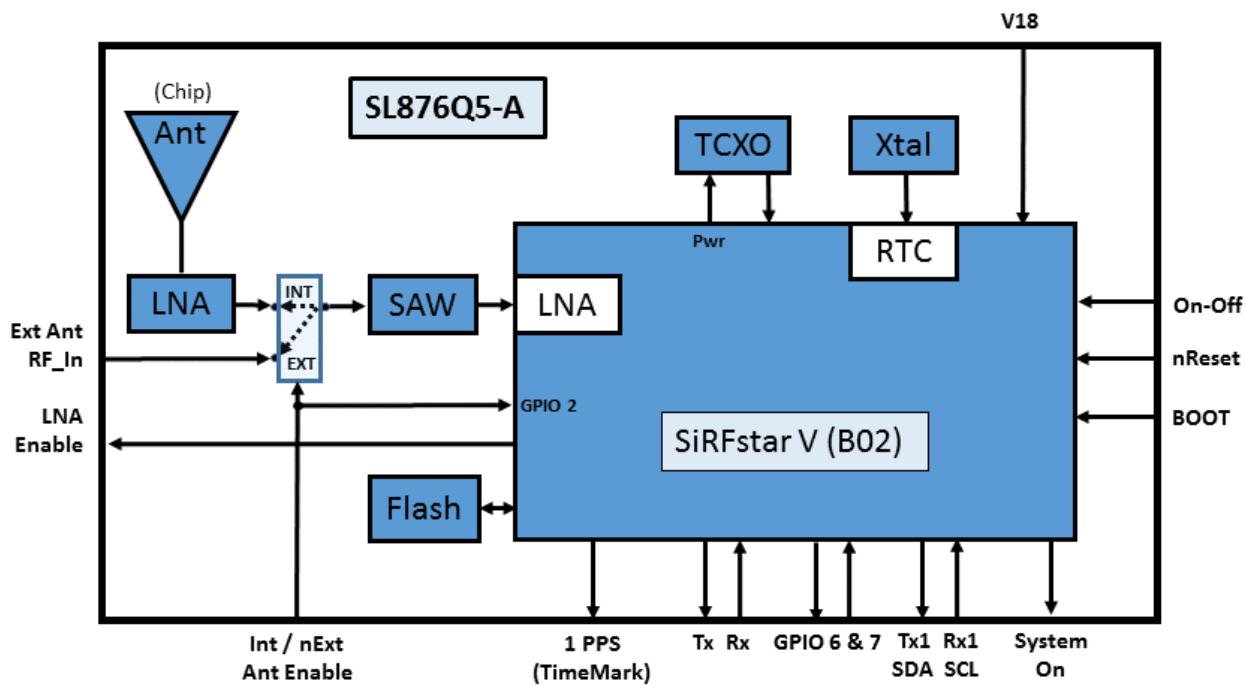


Figure 2-1 SL876Q5-A Block Diagram

## 2.3. SL876Q5-A Module Photo

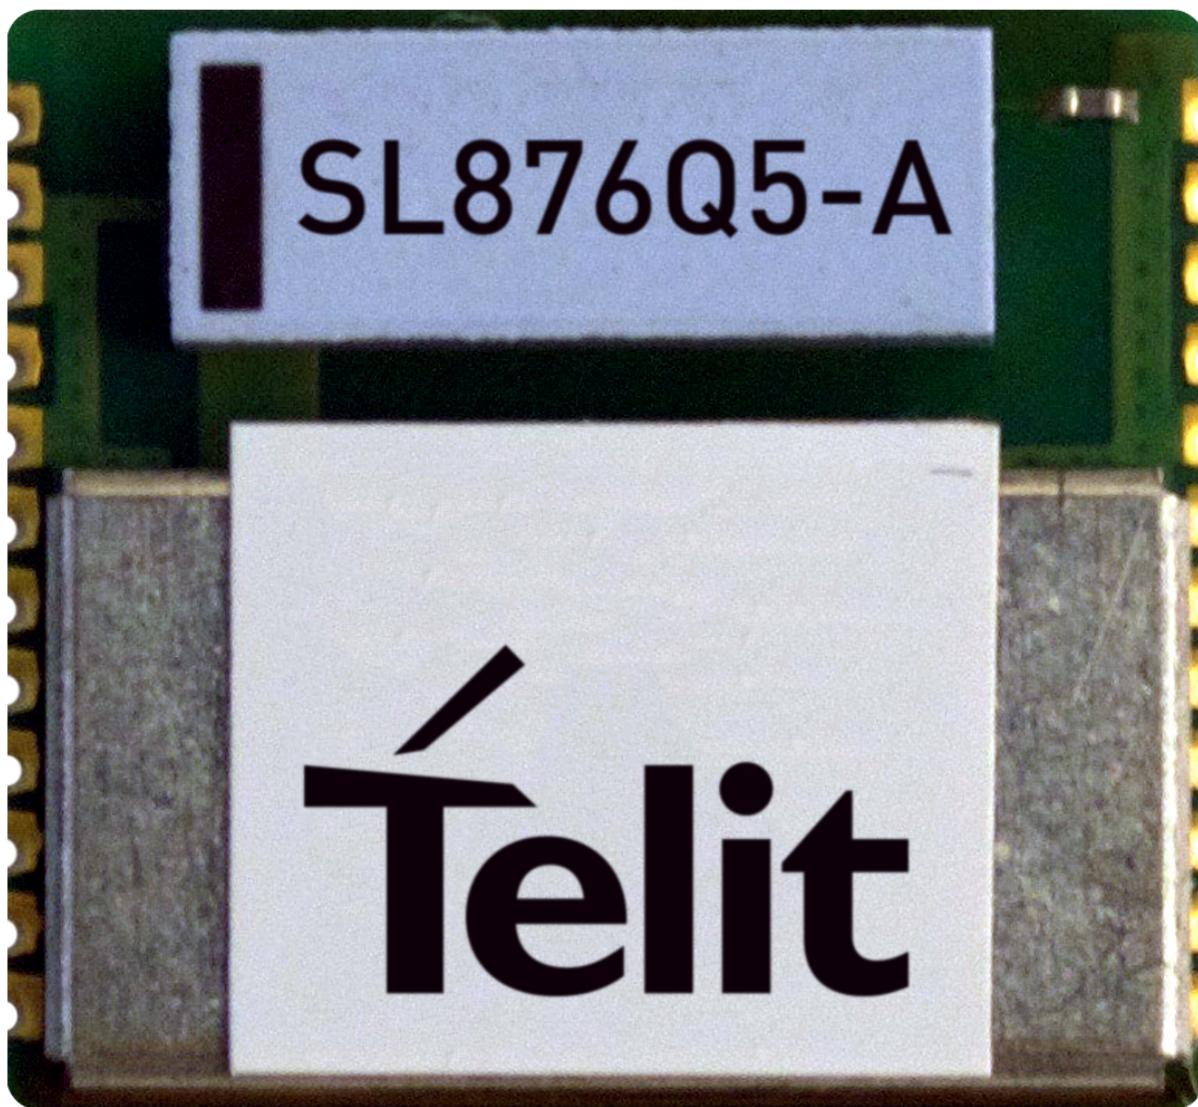



Figure 2-2 SL876Q5-A module photo

### 3. SL876Q5-A EVALUATION KIT (EVK)



**Figure 3-1 Evaluation Kit (EVK) contents**

### 3.1. SL876Q5-A Evaluation Board (EVB)

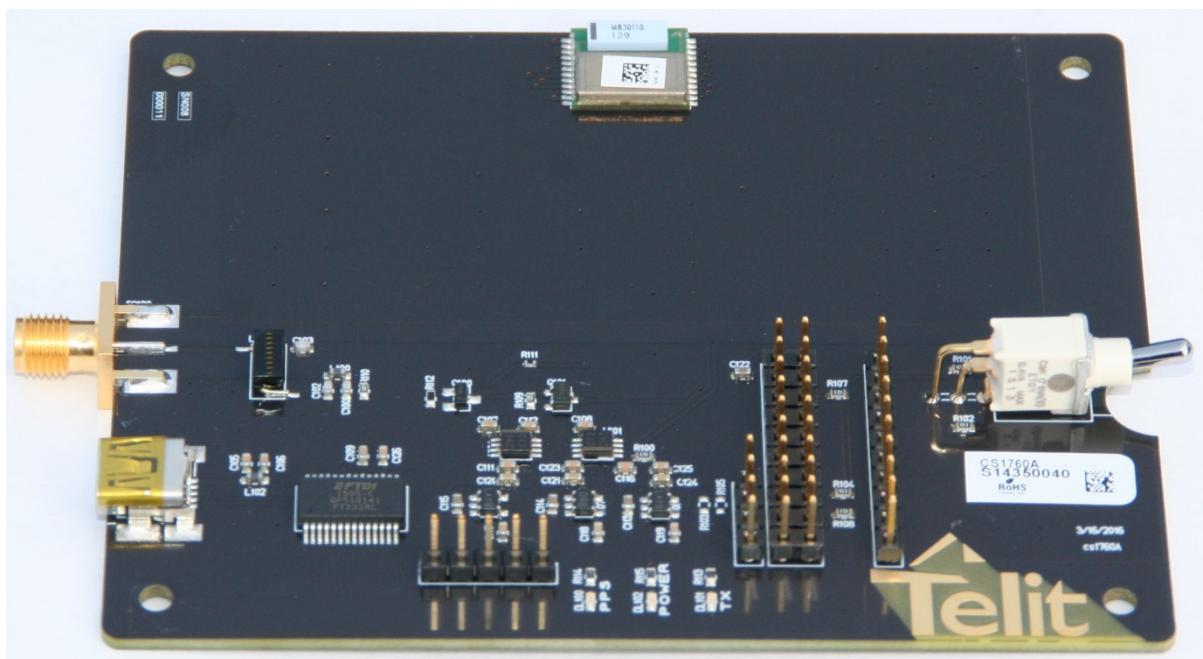

**Figure 3-2 SL876Q5-A Evaluation Board**

## 4. SL876Q5-A FEATURES

### 4.1. Built-in Antenna and RF Switch

The SL876Q5-A module includes a built-in tri-band chip antenna, and an RF switch that provides for input from an external active antenna. See section **8.5.4 Internal / nExternal Antenna Enable**.

### 4.2. Multi-Constellation Navigation

GPS and GLONASS constellations are enabled by default. GLONASS and BeiDou cannot both be enabled at the same time. GPS, Galileo, GLONASS, and/or BDS constellations are enable/disabled via OSP command **MID 222,16..**

### 4.3. Quasi-Zenith Satellite System (QZSS) support

The satellites of the Japanese regional system are in a highly inclined, elliptical geosynchronous orbit, allowing continuous high-elevation coverage over Japan and other countries using only three satellites plus one geostationary satellite. They provide additional ranging signals to augment the GNSS systems along with a corrections data stream.

QZSS ranging is enabled by default, but can be disabled via OSP command **MID 222,16.**

### 4.4. Satellite Based Augmentation System (SBAS)

The receiver is capable of using SBAS satellites both as a source of differential corrections and satellite ranging measurements. These systems (WAAS, EGNOS, GAGAN and MSAS) use geostationary satellites to transmit regional corrections via a GNSS-compatible signal.

#### 4.4.1. SBAS Corrections

The SBAS satellites transmit a set of differential corrections to their respective regions. The use of SBAS corrections can improve positioning accuracy. However, the nav solution cannot use mixed corrected and uncorrected satellites.

SBAS corrections are disabled by default but can be enabled via OSP **MIDs 133, 138, and 170** commands. Thereafter, the receiver will demodulate and use corrections data from the SBAS signal for satellites over 36 dB-Hz.signal level.

#### 4.4.2. SBAS Ranging

The use of SBAS satellites can augment the number of measurements available for the navigation solution, thus improving availability and accuracy.

SBAS satellite ranging is disabled by default but can be enabled via a \$PSRF103 MNEA command or OSP Mode Control command **MID 136**.

### 4.5. Assisted GPS (AGPS) - SiRFInstantFix™

A GNSS receiver requires ephemeris data to calculate the precise position in space of each satellite to be used in the navigation solution. Since the satellites move at a speed of 3874 km/s along their orbits and are subject to gravitational perturbations from all masses in the solar system, this data must be both current and accurate. Each GPS satellite transmits a complete set of its ephemeris coefficients (called the broadcast ephemeris or BE) every 30 seconds. This is therefore the minimum time required for a cold start Time to First Fix (TTFF). The BE data is usually refreshed every 2 hours.

The minimum cold start TTFF can be reduced from 30 seconds to just a few seconds by implementing AGPS, which can provide Extended Ephemeris (EE) data by two methods -

1. Locally-generated (CGEE): The receiver includes software to project the future positions of the satellites. This data may be calculated out to 14 days or even longer, depending on the resources available in the receiver, e.g. computation ability and memory.
2. Server-generated (SGEE): A server calculates the future position projections and makes them available to a receiver, typically over the internet. This data may be good for 30 days, depending on available resources, e.g. communication links and storage.

Both CGEE and SGEE are available for GPS and GLONASS satellites.

#### 4.5.1. Client-generated Extended Ephemeris (CGEE)

Extended ephemeris is computed in the receiver and then stored locally in the flash memory.

Whenever the module receives ephemeris data for a satellite, it checks if it has computed CGEE for that satellite recently. If it has not, it computes EE for that satellite (for the next 3 days for GPS and 1 day for GLONASS) and stores it in flash memory. The next time the module turns on and broadcast ephemeris is not available for a visible satellite, the stored CGEE data is searched to see if it is still valid and can be used. If EE data is available for enough satellites, the receiver can obtain a first fix in a few seconds rather than the usual 30+ seconds without EE data. CGEE is enabled by default.

#### 4.5.2. Server-generated Extended Ephemeris (SGEE)

Extended ephemeris is computed at the server and saved in a file which can then be downloaded to the receiver's flash memory. The server file contains 1, 3, 7, and 14, days of ephemerides. To use SGEF data, a file must be transferred using NMEA or OSP commands. Please contact Telit support for subscription details.

### 4.6. 2-D Positioning

By default, the module will compute a 2-D solution if possible when performing initial acquisition. In a 2-D solution, the receiver assumes a value for altitude and uses it to estimate the nav solution. Under warm and hot start conditions, the receiver uses the last known value of altitude, which is a good assumption in most situations. However, under cold start conditions, the last position is unknown, and the receiver assumes a value of 0. In situations where the true altitude is significantly higher than that, the horizontal position estimate will be noticeably impacted. 2\_D positioning is controlled by OSP **MID 136**.

### 4.7. Static Navigation

Static Navigation is an operating mode in which the receiver will freeze the position fix when the speed falls below a set threshold (indicating that the receiver is stationary). The course is also frozen, and the speed is reported as 0. The navigation solution is unfrozen when the speed increases above a threshold or when the computed position exceeds a set distance from the frozen position (indicating that the receiver is again in motion). These thresholds cannot be changed by the user.

This feature is useful for applications in which very low dynamics are not expected, the classic example being an automotive application.

Static Navigation is disabled by default, but can be enabled by OSP **MID 143** command.

### 4.8. Velocity Dead-Reckoning

Velocity dead-reckoning is the use of the last known velocity to propagate the navigation solution when there are insufficient measurements to calculate an updated solution. It serves to mitigate the effects of blocked satellite signals by continuing to provide a position output. **Note:** The receiver outputs status information which indicates that a solution is being maintained using dead-reckoning.

This feature is disabled by default but can be enabled using the OSP Mode Control message (**MID 136**). Valid timeout values are in a range from zero (which disables dead-reckoning) to two minutes.

## 4.9. Jamming Rejection – Continuous Wave (CW) Jamming Mitigation

Continuous Wave (CW) jamming mitigation improves performance in a system that is affected by these predictable jamming signals:

- Stable jamming signals generated by your system implementation, such as harmonics of digital clocks and logic switching
- Predictable jamming signals in the RF environment (e.g. from collocated transmitters)

When this feature is activated, the process for jamming mitigation is:

1. Detect jamming signals above the noise floor.
2. Isolate and filter frequencies containing jamming signals.

The GNSS signal is constantly monitored for CW jammers and up to eight are detected and cancelled in each band without any operator intervention.

GPS, GLONASS, and BDS band cancellers are activated and reported using OSP **Message ID 92**. This feature is useful both in the design stage and during the production stage for uncovering issues related to unexpected jamming. Use OSP **MID 220,1** to configure this feature.

## 4.10. Elevation Mask Angle

The default elevation mask angle is 5° which can be changed using OSP **MID 139**.

## 4.11. 5 Hz and 10 Hz Navigation

When this feature is enabled, the receiver starts in 1 Hz mode and continues until it achieves an over-determined fix with 5 or more satellites. It then computes and outputs solutions 5 or 10 times per second. Each computation uses fewer, but more frequent satellite observations. In most situations this gives a better response to vehicle velocity and course changes but might cause slightly more erratic performance in stationary or low-dynamic situations.

The receiver also attempts to send out 5 or 10 times as many messages per second. The data rate may need to be increased or the set of scheduled messages be reduced to avoid overloading the available bandwidth.

For NMEA protocol, with default messages set on (GGA, GSA and RMC output once per cycle and GSV output once every 5 cycles) output is nearly 1300 characters per second at 5 Hz. Including start and stop bits, at least 19200 bps is required to avoid running out of bandwidth.

For multi-constellation output, one GNGNS and one GNGSA would be added to each report cycle, and three GNGSV sentences every 5<sup>th</sup> cycle, requiring a minimum of 38,400 bps data rate at 5 Hz. For OSP protocol, CSR recommends a minimum data rate of 115,200 bps.

To enable 5 or 10 Hz Navigation, use a **\$PSRF103** command or an OSP **MID 136** command with bit 2 of the pos\_mode\_enable field set to 1.

## 4.12. 1PPS

The module provides a 1PPS timing pulse output. See section **8.6.3 1PPS** for details.

## 4.13. Internal LNA

The GNSS engine has an internal adjustable gain LNA.

An additional LNA is in the module circuit for the built-in chip antenna. It is not in the circuit for an external antenna. Therefore, an external antenna should be an active one.

Internal antenna LNA power is controlled by the **LNA Enable** output line. This line may also be used to control the external antenna LNA power when it is selected.

When GPIO8 is high, the external LNA should be enabled. When low, it should be disabled

External antenna total RF gain should not exceed the recommend limit of 30dB.

Internal LNA gain	Internal LNA NF	External Gain Range
6 dB	6.5 dB (typical)	14 to 24 dB

**Table 4-1 Internal gain value and external gain range**

## 4.14. Serial I/O Ports

The primary serial port (TX / RX) can be configured to communicate using UART, I<sup>2</sup>C, or SPI interface.

It is used for command input and message output.

The secondary serial port (TX1 / RX1) can be configured to communicate using UART or I<sup>2</sup>C interface. It is disabled by default.

See section **8.7 Serial I/O Ports - Configuration and Operation** for details.

## 4.15. Power Management Modes

The receiver features several operating modes that provide reduced power consumption.

Availability of GNSS signals in the operational environment will be a factor in choosing power management modes. The designer can choose a mode that provides the best trade-off of navigation performance versus power consumption.

Each of the power management modes can be commanded using the OSP Power Mode Request message **MID218,6**. Please refer to the SiRFstarV OSP Extensions manual (CS-303979) for details.

Power Mode	Name	Description
Continuous Fixes	Full Power	Continuous operation in reporting position fixes optimized for the best all-around performance.
	SiRFSmartGNSS 1	SmartGNSS modes save power based on satellite signal strength.
	SiRFSmartGNSS 2	
Periodic Fixes	Trickle Power	Power cycling: RUN - STANDBY
	Push To Fix	Power cycling: RUN - HIBERNATE
	SiRFAware	Periodic data collection & updating
No Fixes	Hibernate	Only RTC and BBRAM are powered up for maximum power saving.

**Table 4-2 Power Management Modes**

### 4.15.1. Full Power Mode (default)

This mode has the highest average power consumption, but it is the most accurate navigation mode and supports the most dynamic motion scenarios. Full Power is required during initial satellite acquisition, tracking, & navigation and while receiving SGEE assistance data.

### 4.15.2. SmartGNSS

SmartGNSS modes are power saving alternatives for GNSS operation while maintaining complete functionality of the device similar to full power mode.

The module defaults to full power during the initial acquisition of the first fix, and will continue tracking in SmartGNSS if enabled. Therefore, all first fix metrics for SmartGNSS are equivalent to full power.

#### 4.15.2.1. SmartGNSS I

SmartGNSS I autonomously manages GNSS system usage to save power based on signal conditions.

The adaptive mechanism uses fewer system resources during strong signal conditions and uses more resources during weak signal conditions in order to maintain navigation performance. Full constellation tracking is maintained while in this mode. 1PPS is available.

#### 4.15.2.2. SmartGNSS II

SmartGNSS II includes the benefits of SmartGNSS I and achieves further power reduction by minimizing the usage of the secondary GNSS constellation. The adaptive mechanism adjusts constellation usage based on signal conditions to maintain performance while minimizing power consumption. 1PPS is available.

#### 4.15.3. Trickle Power

This mode cycles between FULL POWER and STANDBY states. It provides GPS-only navigation updates at a fixed rate of 1 to 10 seconds, and retains good accuracy and dynamic motion response, but at a lower average power consumption than Full Power. The receiver will go to FULL POWER if signals are weak or the fix is lost. 1PPS is not available. TricklePower mode yields significant power savings in strong signal conditions.

#### 4.15.4. Push-to-Fix

This mode switches between FULL POWER and HIBERNATE states. It provides for even lower power consumption than TricklePower and is intended for applications that require relatively infrequent position reports. The position is reported periodically (once every 6, 12, 18, 24 seconds or 30 to 86400 seconds in 30 s increments) and also when requested by toggling the On-Off pin.

Push-to-FixII allows vehicle velocity to be taken into account for PTF period, and QoS checks to be enabled or disabled.

#### 4.15.5. SiRFaware

This mode switches between FULL POWER and HIBERNATE states. It is a power-saving mode that maintains GPS data by waking up at intervals (e.g. every 30 minutes) to collect signals. Time and position estimates are updated (e.g. every 10 minutes). Extended Ephemeris will be used if available.

#### 4.15.6. Hibernate

The receiver can be commanded into the HIBERNATE state, which is the lowest power mode available. Only the RTC and BBRAM domains are powered up. Use the NMEA **\$PSRF117,16** or OSP **MID 205** command to transition to this state. The module will also transition to HIBERNATE when the ON-OFF pin is brought low.

## 5. PRODUCT PERFORMANCE

### 5.1. Horizontal Position Accuracy

Constellation	CEP (m)
GPS	1.5
BeiDou	N/A
GPS + Glonass	1.5
GPS + BeiDou	2.5
Test Conditions: 24-hr Static, -130 dBm, Full Power mode	

**Table 5-1 SL876Q5-A Horizontal Position Accuracy**

### 5.2. Time to First Fix

Constellations(s)	Start Type	Max TTFF (s)
GPS	Hot	1.1
	Warm - Assisted	7.5
	Warm	23
	Cold	31
GPS + GLO	Hot	1.1
	Warm	23
	Cold	27
GPS + BeiDou	Hot	1.1
	Warm	30
	Cold	32
Test Conditions: Static scenario, -130 dBm, Full Power mode		

**Table 5-2 SL876Q5-A Time to First Fix**

### 5.3. Sensitivity

Constellation(s)	State	Minimum Signal Level (dBm) External Ant
GPS	Acquisition	-148
	Navigation	-161
	Tracking	-165
GPS + GLO	Acquisition	-148
	Navigation	-161
	Tracking	-165
Test conditions: Static scenario, Full Power mode		

**Table 5-3 SL876Q5-A Sensitivity**

## 6. MESSAGE INTERFACE

The primary serial I/O port (UART, I<sup>2</sup>C, or SPI) supports full duplex communication between the receiver and the user.

The default configuration is: NMEA, 9600 bps, 8 data bits, no parity, 1 stop bit.

Two protocols are available for command input and data output:

- NMEA-0183
- SiRF One Socket Protocol (OSP)

### 6.1. NMEA Output Messages

1 Hz fix rate. 5 Hz or 10 Hz may be selected..

#### 6.1.1. Standard Messages

The following messages are sent by default.

Message ID	Description	Frequency
RMC	GNSS Recommended minimum navigation data	1
GGA	GNSS position fix data	1
GSA	GNSS Dilution of Precision (DOP) and active satellites	1
GSV	GNSS satellites in view.	1 / 5

**Note:** Multiple GSA and GSV messages may be output per cycle.

**Table 6-1 Default NMEA Output Messages**

The following messages can be enabled by command:

Message ID	Description
GLL	Geographic Position – Latitude & Longitude
VTG	Course Over Ground & Ground Speed
ZDA	Time and Date
GNS	GNSS Fix Data

**Table 6-2 Available NMEA Output Messages**

The following Talker IDs are used:

Talker ID	Constellation
GA	Galileo
GB	BeiDou
GL	GLONASS
GP	GPS
GN	Solutions using multiple constellations

**Table 6-3 NMEA Talker IDs**

### 6.1.2. Proprietary Messages

The receiver can issue several proprietary NMEA output messages (\$PSRF) which report additional receiver data and status information.

Some of these messages exceed the 80-character limitation of the NMEA-0183 standard.

### 6.1.3. Telit Proprietary Messages

#### 6.1.3.1. RF Input Status (Internal vs. External)

To query the status of the RF input, send the command:

**\$PTWS,ANT,INPUT,GET\*77**

A message indicating the RF input source (Internal vs. External Antenna) will be output.

**\$PTWS,ANT,INPUT,VAL,INTERNAL,1\*AC** (default)

or

**\$PTWS,ANT,INPUT,VAL,EXTERNAL,0\*57**

## 6.2. NMEA Input Commands

The receiver uses NMEA proprietary messages for commands and command responses. This interface provides configuration and control over selected firmware features and operational properties of the module.

The format of a command is:

```
$<command-ID>[,<parameters>]*<cr><lf>
```

Commands are NMEA proprietary format and begin with "\$PSRF".

Parameters, if present, are comma-delimited as specified in the NMEA protocol.

### 6.2.1. Change output sentences and their rates

Use the Query/Rate Control (\$PSRF103) command to enable and disable output NMEA messages and set their output rates.

### 6.2.2. Change data rate

Use the Set Serial Port (**\$PSRF100**) command to change the port data rate.

### 6.2.3. Switch to OSP protocol

Use the Set Serial Port (**\$PSRF100**) command to switch to the OSP protocol. It may be necessary to change the data rate since OSP can generate a much larger volume of output per reporting cycle.

## 6.3. OSP Output Messages

Please refer to SiRF OSP documentation.

## 6.4. OSP Input Commands

### 6.4.1. Change output messages

Use **OSP MID 166** to change the output messages.

### 6.4.2. Change data rate

Use **OSP MID 134** to change the baud rate

### 6.4.3. Switch to NMEA protocol and data rate

Use the **OSP MID 129** command to switch to the NMEA protocol and change the port data rate.

## 7. FLASH UPGRADABILITY

The firmware stored in the internal Flash memory of the SL876Q5-A may be upgraded via the serial port TX/RX pads.

Please refer to the **SL876Q5-A Evaluation Kit User Guide** to update the firmware.

## 8. ELECTRICAL INTERFACE

### 8.1. Module Pin-out

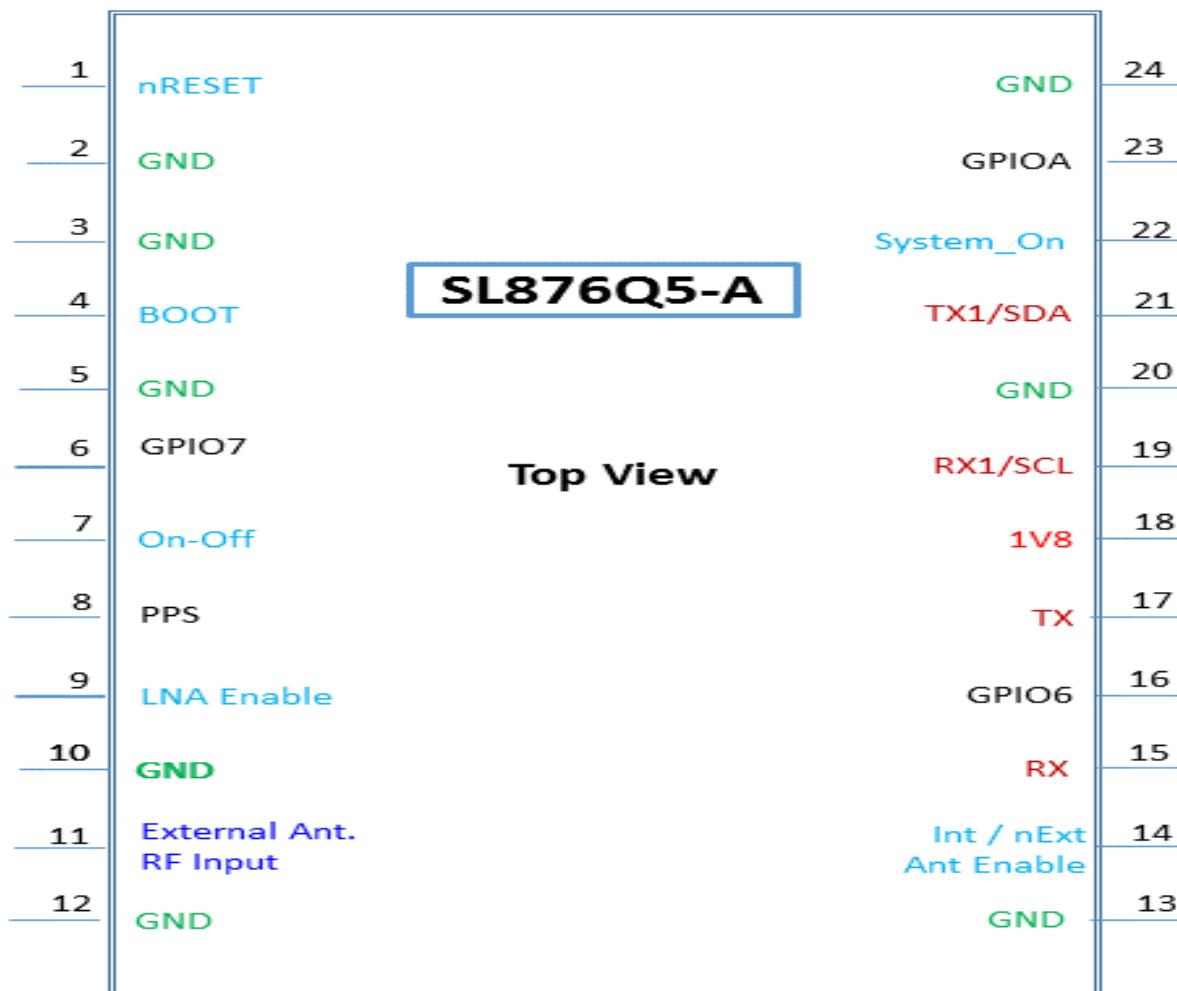


Figure 8-1 SL876Q5-A Pin-out Diagram

Pin	Name	Type	Function
<b>Power</b>			
18	1V8	Pwr	Connect to 1.8 V supply. See section <b>8.4 Power Supply</b>
<b>Ground</b>			
2, 3, 5, 10, 12, 13, 20, 24	GND	Gnd	Connect all pins to ground.
<b>RF Input</b>			
11	Ext Ant RF_In	I	External Antenna RF Input. <b>Max 16V DC may be applied.</b> See section <b>8.8 RF Interface</b> .
<b>Control Input</b>			
7	ON-OFF	I	On/Off. See section <b>8.5.1 ON-OFF (input) and SYSTEM-ON (output)</b> .
1	nRESET	I	Reset (active low)..See section <b>8.5.2 nReset</b> . This signal is not necessary for normal operation and should be brought out to a test point or may be left unconnected.
4	BOOT-Select	I	Low during normal operation. BOOT-SEL may be pulled high to force the module into the programmable state. BOOT-SEL is read prior to the port configuration lines (GPIO 6 & 7). This pin should be brought out to a test point or left floating. <b>Max: 1.8 V.</b> See section <b>7 Flash Upgradability</b> .
16	GPIO6	I	GPIOs 6 & 7 are read during power-up and reset (only) to configure the primary serial port. After configuration, they may be used for UART or SPI signal lines depending on the firmware options enabled. See section <b>8.7 Serial I/O Ports - Configuration and Operation</b>
6	GPIO7		
14	Int / nExt Ant Enable	I	Enable the internal Chip Antenna (and disable the external (active) antenna). Internal pullup. See section <b>8.5.4 Internal / nExternal Antenna Enable</b>
<b>Output</b>			
22	System On	O	Indicates the power state of the module. Also called <b>Wakeup</b> . See section <b>8.5.1 ON-OFF (input) and SYSTEM-ON (output)</b> .
9	LNA Enable	O	LNA control (used for both internal and external antennas). High when the receiver is operating, low when in a low-power state. Also called <b>GNSS_ON</b> . See section <b>4.13 Internal LNA</b> .
8	PPS	O	1PPS time mark. See section <b>8.6.3 1PPS</b> .
Continued on next page			

**Primary Serial Port I/O.**See section **8.7 Serial I/O Ports - Configuration and Operation**

17	TX	O	Primary Serial Port Output. UART: TX, I <sup>2</sup> C: CLK, or SPI: Data Out (MISO).
15	RX	I	Primary Serial Port Input. UART: RX, I <sup>2</sup> C: DIO, or SPI: Data In (MOSI).
16	GPIO6	I/O	After configuration, may be used for UART: nCTS or SPI: CLK.
6	GPIO7	I/O	After configuration, may be used for UART: nRTS or SPI: nCS.
23	GPIOA		Data Ready Indicator (DRI). See <b>8.7.3 Data Ready Indicator (DRI)</b> .

**Secondary Serial Port I/O**See section **8.7 Serial I/O Ports - Configuration and Operation**

19	SCL / RX1	I/O	Secondary Serial Port I/O. UART: Receive (RX1), or I <sup>2</sup> C: Clock (SCL)
21	SDA / TX1	I/O	Secondary Serial Port I/O. UART: Transmit(TX1), or I <sup>2</sup> C: Data (SDA)

**Table 8-1 SL876Q5-A Pin-out Function Table**

## 8.2. DC Characteristics

Signal	Description	Min	Typ	Max	Units
$V_{OL}$	Low level output voltage, $I_{OL}$ 2mA	0.0	-	$0.22 \times V_{DD}$	V
$V_{OH}$	High level output voltage, $I_{OH}$ 2mA	$0.75 * V_{DD}$	-	$V_{DD}$	V
$V_{IL}$	Low level input voltage	-0.3	-	$0.3 \times V_{DD}$	V
$V_{IH}$	High level input voltage, $I_{IH}$ 2mA	$0.7 \times V_{DD}$	-	$V_{DD} + 0.3$	V
$R_{PU}$	Internal pull-up resistor equivalent	50	86	157	kΩ
$R_{PD}$	Internal pull-down resistor equivalent	51	91	180	kΩ
$I_I$	Input leakage at $V_I = 1.8$ V or 0 V	-10	-	10	μA
$I_O$	Tristate output leakage at $V_O = 1.8$ V or 0 V	-10	-	10	μA
$C_I$	Input capacitance, digital output	-	8	-	pF

**Table 8-2 DC Characteristics**

## 8.3. Absolute Maximum Ratings

Parameter	Pins	Absolute Max Rating	Units
RF Input Voltage	All RF inputs	1.5	V
RF Input Power	All RF inputs	10	dBm
ESD Voltage CDM JESD22-C101E	All Pins	± 1100	V
ESD Voltage HDM JEDEC JS-001-2012	All Pins	± 500	V
1.8 V Supply Voltage	1V8	2.2	V
BOOT_SEL pin 	BOOT_SEL	1.8	V
I/O Pin Voltage	All digital inputs	3.60	V

**Table 8-3 Absolute Maximum Ratings**

## 8.4. Power Supply

### 8.4.1. 1.8 V Supply Voltage

Unlike previous GNSS receiver modules, the SL876Q5-A requires a single always-on 1.8 V supply. Rather than having a “split” power supply design of main and backup, the module manages all of its power modes internally. The module will power up into the state determined by the ON-OFF pin (High: RUN; Low: HIBERNATE).

The power state of the SL876Q5-A can be determined by monitoring the “SYSTEM-ON” signal. A logic low indicates the module is in OFF, RESET, HIBERNATE, or STANDBY; whereas logic high indicates the module is in RUN state.

If the 1.8 volt DC supply is removed from the module (regardless of power state) it will lose current RTC time and the contents of the internal SRAM. To execute an orderly shutdown, place the module into the HIBERNATE state, then remove power. To prevent improper startup, keep the power removed for approximately 10 seconds to reliably clear the SRAM contents.

The module monitors the 1.8 volt supply and issues an internal hardware reset if the supply drops below 1.7 volts. This reset protects the memory from accidental writes during a power down condition. This reset forces the module into a low power stand-by state.

To prevent the reset, the 1.8 volt supply must be regulated to be within  $\pm 50$  mV of nominal voltage (including load regulation and power supply noise and ripple). Noise and ripple outside of these limits can affect GNSS sensitivity and also risk tripping the internal voltage supervisors, thereby shutting down the module unexpectedly. Regulators with very good load regulation are strongly recommended along with adequate power supply filtering to prevent power supply glitches as the module transitions between power states.

The power supply voltage, including noise and ripple must be as specified below in **Table 8-4 DC Supply** for all frequencies. To help meet these requirements, a separate LDO for the module is suggested.

### 8.4.2. DC Power Requirements

Name	Min	Typ	Max	Units
1V8	1.71	1.8	1.89	V
Max ripple: 54 mV (0 to 3 MHz), 15 mV (> 3 MHz)				

**Table 8-4 DC Supply Requirements**

### 8.4.3. Power Supply Capacitance

Aluminum electrolytic capacitors are not recommended at the input to the module due to their high ESR. Tantalum capacitors are recommended with a minimum value of 10uF in parallel with a 0.1uF ceramic capacitor. Ceramic capacitors alone can be used, but ensure that the LDO is stable with such capacitors tied to the output.

#### 8.4.4. DC Power Consumption

	Smart 2		Smart 1		Full Power		
State & Constellation	Typ	Max	Typ	Max	Typ	Max	Units
<b>Acquisition</b>							
GPS only	63	96	65	93	64	93	mW
GPS and Glonass	81	104	80	100	81	111	mW
GPS and BeiDou	91	102	92	112	89	113	mW
<b>Navigation/Tracking</b>							
GPS Only	50	57	65	93	64	71	mW
GPS and Glonass	47	54	56	64	83	91	mW
GPS and BeiDou	49	49	70	77	88	103	mW
<b>Battery Backup (Hibernate)</b>					69		uW
Operating temperature: 25°C. Supply voltages: 1.8 VDC nominal							

**Table 8-5 Power Consumption – SL876Q5-A**

	Low Power Modes	
State & Constellation	Typ	Units
<b>Trickle Power</b>		
GPS only	24	mW
GPS and Glonass	24	mW
GPS and BeiDou	23	mW
<b>Push To Fix</b>		
GPS only	29	mW
GPS and Glonass	27	mW
GPS and BeiDou	19	mW
Trickle Power mode: On 100 ms, Max Off 30 s Push To Fix mode: Max Search: 6 s, Max Off: 120 s		

**Table 8-6 Power Consumption – SL876Q5-A Low Power modes**

## 8.5. Control Input Signals

### 8.5.1. ON-OFF (input) and SYSTEM-ON (output)

The SL876Q5-A module has three power states: OFF, RESET, and ON.

The OFF state is when power is removed from the module.

Upon initial application of power, the module enters the RESET state until the internal reset process is completed. It then transitions to the ON state.

In the ON state, the module will transition to either the RUN or HIBERNATE substate depending on the ON-OFF pin status.

- If the ON-OFF pin is high, the module will transition to the RUN substate.
- If the ON-OFF pin is low, the module will transition to the HIBERNATE substate.

The ON state is indicated by a logic high output on the SYSTEM-ON signal.

 **Note:** The ON\_OFF pin must not be tied to V18 because it must be brought low, then high to transition out of a commanded hibernate state.

The module will transition to the RESET state when external reset (nRESET) is pulled low, or upon internal reset (e.g. supply voltage out of spec). The external nRESET signal takes precedence over the state of the ON-OFF signal. SYSTEM-ON will be logic low.

While in the ON state, there are three substates, depending upon commands or selected power management modes. The three substates are: HIBERNATE, STANDBY, and RUN.

The module transitions between RUN and STANDBY via TricklePower modes; and between RUN and HIBERNATE via PushToFixII and SiRFaware modes. It can also transition from RUN to HIBERNATE by de-asserting the ON-OFF signal. The firmware is configured to transition from HIBERNATE to RUN when data is received on the RX pin.

The SYSTEM-ON signal will be logic low in HIBERNATE and STANDBY. In RUN, it will be high.

To execute an orderly shutdown, place the module in the HIBERNATE substate, then remove power.

Also, see the next section **8.5.2 nReset**.

### 8.5.2. nReset

The module will generate an internal reset as appropriate. Therefore, no external signal is required for the module to operate properly and this pin may be left unconnected. However, it is desirable to bring it out to a test point if otherwise unconnected.

If an external reset is desired, the signal must be either open collector or open drain without any form of pull up. Do not pull this line high with either a pull up or a driven logic one. When this line is pulled low, the module will immediately transition into reset mode.

When the external reset is released, the module will go through its normal power up sequence provided the V18 supply is within specifications. See section **8.5.1 ON-OFF (input) and SYSTEM-ON (output)**.

Pulling nRESET low at any time forces the module into the reset state regardless of the ON-OFF signal. In the reset state, the SYSTEM-ON signal is low.

Once the nRESET signal is released the module will transition to the HIBERNATE state or to the ON state as determined by the ON-OFF signal input.

### 8.5.3. Boot Select

It is not necessary to use the Boot Select pin to re-flash the receiver since SiRFlive can use commands to perform this task. However, it is desirable to bring it out to a test point if otherwise unconnected.



Max voltage is 1.8 V.

### 8.5.4. Internal / nExternal Antenna Enable

When high, the module enables RF input from the internal chip antenna and disables input from the external antenna.

When low, the external antenna is enabled, and the internal chip antenna is disabled.

The LNA Enable signal may then be used to control power to the external LNA (or active antenna) according to the power state of the receiver (operating vs. low-power).

This pin is connected to GPIO2 of the SS5-B02 GNSS chip. Therefore, a custom FW build can sense the position of the RF input switch.

This pin has an internal pullup which makes the internal antenna the default RF input.

See section **8.6.2 LNA Enable**.

## 8.6. Status Output Signals

### 8.6.1. SYSTEM-ON (output)

See section **8.5.1 ON-OFF (input) and SYSTEM-ON (output)**.

### 8.6.2. LNA Enable (GPIO8)

This signal indicates the power state of the module. It is high when the receiver is operating and can accept an RF input. When the receiver is in a low-power state, it does not accept RF input, therefore the LNA can be turned off to save power.

This signal controls the internal chip antenna and may also be used to control the external antenna LNA if desired.

### 8.6.3. 1PPS

1PPS is a one pulse per second signal which is enabled after the receiver has achieved a 5-satellite Kalman filter position fix. It is disabled 5 seconds after the position fix becomes invalid. However, if Velocity Dead Reckoning is enabled, the pulse is continued until its timeout has expired.

The time mark is within 1 µs of the GPS epoch and normally within 100 ns.

Pulse width is 250 ms.

## 8.7. Serial I/O Ports - Configuration and Operation

The receiver module includes two full-duplex serial ports which are configurable for the desired interface.

### 8.7.1. Primary Port Configuration

The primary port is configured for UART, I<sup>2</sup>C or SPI interface via reading GPIO6 and GPIO7 pins at startup or reset (only).

Pin	Pullup / Pulldown	UART	I <sup>2</sup> C (multi-master)	SPI (slave)
GPIO6	Weak internal pulldown	Pullup 10 kΩ to +1.8 V (may become CTS)	Float	Float (becomes SCLK)
GPIO7	Weak internal pullup	Float (may become RTS)	Pulldown 10 kΩ to ground	Float (becomes SPI_CS)

**Table 8-7 Primary Serial I/O Port Configuration**

**Note:** GPIO6 and GPIO7 are read for configuration purposes only at power up or reset. Afterwards, they may be used for UART or SPI signal lines depending on firmware options.

### 8.7.2. Secondary Serial Port Configuration

The secondary Port is configured for UART or I<sup>2</sup>C interface by loading the desired FW build.

SPI is not available because it requires 4 pins.

It is disabled by default.

### 8.7.3. Data Ready Indicator (DRI)

Also called Message Waiting (MW).

The module will raise the DRI signal when data is waiting to be transmitted on the primary port and it is configured for either UART with flow control interface or SPI interface.

Note that flow control is disabled by default.

#### 8.7.4. UART Operation

See section **8.7.1 Primary Port** to specify UART interface.

The secondary port is configured by loading the appropriate FW.

Default: NMEA at 9600 bps, 8-bit, no parity, and 1 stop bit.

Upon power up, the module will communicate using a standard asynchronous 8 bit protocol with output messages appearing on the TX line and input commands and data being received on the RX line. The UART can operate at data rates from 4800 bps to 1.2288 Mbps, however speeds above 115,200 bps have not been fully tested and verified.

If the module is operated in TricklePower mode, a baud rate of at least 38,400 is recommended. This reduces the time required to empty the output buffer and allows the receiver to drop into the low power state for a longer period of time.

The minimum recommended baud rate for OSP is 38400, or 115200 if debug data messages are enabled.

Use the Query/Rate Control (**PSRF103**) to enable and disable output NMEA messages and set their output rates.

Flow control is disabled by default. Use the OSP **MID 178,70** command to enable/disable flow control on the primary port.

After configuration, the pins are defined below:

Pin Name	UART Function
<b>Primary Port</b>	
TX	Transmit Data (TX)
RX	Receive Data (RX)
GPIO6	nCTS (if enabled)
GPIO7	nRTS (if enabled)
GPIOA	See <b>8.7.3 Data Ready Indicator (DRI)</b>
<b>Secondary Port</b>	
TX1	Transmit Data (TX1)
RX1	Receive Data (RX1)

**Table 8-8 UART Pin Assignments**

### 8.7.5. I<sup>2</sup>C Operation

See section **8.7.1 Primary Port** to specify I<sup>2</sup>C interface for the primary port. The secondary port is configured by loading the appropriate FW.

Clock rates of 100 and 400 kbps are supported.

Default addresses – Transmit: 0x60, Receive: 0x62.

Upon power up, the module acts as a master transmitter and a slave receiver (multi-master mode).

After configuration, the pins are defined below:

Pin Name	I <sup>2</sup> C Function
<b>Primary Port</b>	
TX	I <sup>2</sup> C Clock (SCL)
RX	I <sup>2</sup> C Data (SDA)
GPIO6	Not used
GPIO7	Not used
<b>Secondary Port</b>	
TX1	I <sup>2</sup> C Data (SDA)
RX1	I <sup>2</sup> C Clock (SCL)



When used in I<sup>2</sup>C mode, external pull-ups in the range of 1K to 2.2K to a 1.8V to 3.6V power supply are required on the clock and data lines.

**Table 8-9 I<sup>2</sup>C Pin Assignments**

### 8.7.6. SPI Operation

See section **8.7.1 Primary Port** to specify SPI interface fro the primary port.

The 2<sup>nd</sup> port cannot be configured for SPI interface since there are only two pins available.

SPI is supported in the slave mode. The MicroWire format is not supported.

Maximum speed is 6.8 MHz.

After configuration, the pins are defined below:

Pin Name	SPI Function
<b>Primary Port</b>	
TX	SPI Data Out (MISO)
RX	SPI Data In (MOSI)
GPIO6	SPI Clock (SCLK)
GPIO7	SPI Chip Select (CS#)
GPIOA	See <b>8.7.3 Data Ready Indicator (DRI)</b>
<b>Secondary Port</b>	
Not Available	

**Table 8-10 SPI Mode Pin Assignments**

## 8.8. RF Interface

### 8.8.1. Built-in chip antenna

The SL876Q5-A module includes an internal chip antenna and LNA which is used when the Internal / nExternal\_Ant\_Enable signal is high. See section **8.5.4 Internal / nExternal Antenna Enable**.

For important information regarding the required ground plane, see section **8.8.3 Ground Plane**

### 8.8.2. External RF Input

When the Internal/nExternal\_Ant\_Enable signal is low, the RF input pin (External Antenna RF\_In) accepts GNSS signals and the internal antenna is disabled. See section **8.5.4 Internal / nExternal Antenna Enable**.

The LNA\_Enable output signal may be used to control power to the External Antenna LNA (when it is selected).



A maximum of 16 V DC can be applied to the RF input.



The RF-IN pin is ESD sensitive.

An active antenna (that is, an antenna with a built-in low noise amplifier) with a noise figure of less than 1.0 dB should be used for optimum results. The SL876Q5-A contains an internal pre-select SAW filter which is in both the External and Internal antenna input paths.

The chipset is in the Low Gain configuration by default. This is the correct choice for the internal chip antenna and an external active antenna. Using an external passive antenna (which is not recommended) would require changing the gain to High via an OSP command.

### 8.8.3. Ground Plane

Due to the very small size of the built-in chip antenna, a proper ground plane is critical to achieving good performance. Please refer to **Figure 12-1 SL876Q5-A Footprint and Ground Plane** for ground plane requirements.

The recommended minimum size is 40 mm x 80 mm. Using a smaller size ground plane will result in significant performance degradation. A smaller ground plane will affect GLONASS reception to a greater degree than GPS. Please note that the guideline values in the table below are only a very rough approximation since there are many variables that affect the results.

Ground Plane Performance Reduction (approximate)	
Size	Signal Strength (relative) dB
40 mm x 80 mm	-0
40 mm x 60 mm	-5
40 mm x 40 mm	-7
40 mm x 20 mm	-10

**Table 8-11 Ground Plane Size**

#### 8.8.4. External Active Antenna Voltage

An external bias-T is required to provide voltage to an external antenna. A maximum of 16 V DC may be applied to the External Ant. RF\_In pin. See section **9.10 Powering an External LNA (External Active Antenna)**.

#### 8.8.5. Burnout Protection

The receiver can accept an external RF signal of up to -20 dBm with a DC voltage of  $\pm 15$  V without risk of damage.

#### 8.8.6. Jamming Rejection

Jamming Rejection can be used for solving narrow band (CW) EMI problems in the customer's system. It is effective against narrow band clock harmonics. Jamming Rejection is not effective against wide band noise, e.g. from a host CPU memory bus or switching power supply because these sources typically cannot be distinguished from thermal noise. A wide band jamming signal effectively increases the noise floor and reduces GNSS signal levels.

Please refer to section **4.9 Jamming Rejection – Continuous Wave (CW) Jamming Mitigation** for further details.

#### 8.8.7. Frequency Plan

Signal	Frequency (MHz)
TCXO Frequency	26.000
LO Frequency	1588.6

**Table 8-12 Frequency Plan**

#### 8.8.8. Local Oscillator Leakage

Signal	Level
LO Leakage	-70 dBm (typical)

**Table 8-13 LO Leakage**

## 9. RF SIGNALS

### 9.1. RF Input

The receiver can achieve Cold Start acquisition with a signal level above the specified minimum at its input. This means that it can acquire and track visible satellites, download the necessary ephemeris data and compute the location within a 5 minute period. In the GNSS signal acquisition process, decoding the navigation message data is the most difficult task, which is why Cold Start acquisition requires a higher signal level than navigation or tracking. For the purposes of this discussion, autonomous operation is assumed, which makes the Cold Start acquisition level the dominant design constraint. If assistance data in the form of time or ephemeris aiding is available, lower signal levels can be used for acquisition.

The GPS signal is defined by IS-GPS-200. This document states that the signal level received by a linearly polarized antenna having 3 dBi gain will be a minimum of -130 dBm when the antenna is in the worst-case orientation and the satellite is 5 degrees or more above the horizon.

In actual practice, the GPS satellites transmit slightly more power than specified by IS-GPS-200, and the signal level typically increases if a satellite has higher elevation angles.

The GLONASS signal is defined by GLONASS ICD 2008 Version 5.1. This document states that the power level of the received RF signal from GLONASS satellite at the output of a 3dBi linearly polarized antenna is not less than -131dBm for L1 sub-band provided that the satellite is observed at an angle 5 degrees or more above the horizon.

The receiver will display a reported C/No of 40 dB-Hz for a GPS signal level of -130 dBm at the RF input. This assumes a SEN (system equivalent noise) of the receiver of 4dB. System Equivalent Noise includes the Noise Figure of the receiver plus signal processing or digital noise. For an equivalent GLONASS signal level the GLONASS signal will report a C/No of approximately 39 dB-Hz. This is due to the receiver's higher losses (NF) for GLONASS signals and a higher signal processing noise for GLONASS signals.

Each GNSS satellite presents its own signal to the receiver, and best performance is obtained when the signal levels are between -130 dBm and -125 dBm. These received signal levels are determined by:

- GNSS satellite transmit power
- GNSS satellite elevation angle
- Free space path loss
- Extraneous path loss (such as rain)
- Partial or total path blockage (such as foliage or buildings)
- Multipath interference (caused by signal reflection)
- GNSS antenna characteristics
- Signal path after the GNSS antenna

The satellite transmit power is specified in each constellation's reference documentation, readily available online.

The GNSS signal is relatively immune to attenuation from rainfall.

However, the GNSS signal is heavily influenced by attenuation due to foliage (such as tree canopies, etc.) as well as outright blockage caused by buildings, terrain or other items near the line of sight to the specific GNSS satellite. This variable attenuation is highly dependent upon satellite location. If enough satellites are blocked, say at a lower elevation, or all in one general direction, the geometry

of the remaining satellites will result in a lower position accuracy. The receiver reports this geometry effect in the form of PDOP, HDOP and VDOP numbers.

For example, in a vehicular application, the GNSS antenna may be placed on the dashboard or rear package tray of an automobile. The metal roof of the vehicle will cause significant blockage, plus any thermal coating applied to the vehicle glass can attenuate the GNSS signal by as much as 15 dB. Again, both of these factors will affect the performance of the receiver.

Multipath interference is a phenomenon where the signal from a particular satellite is reflected and is received by the GNSS antenna in addition to or in place of the line of sight signal. The reflected signal has a path length that is longer than the line of sight path and can either attenuate the original signal, or, if received in place of the original signal, can add error in determining a solution because the distance to the particular satellite is actually shorter than measured. It is this phenomenon that makes GNSS navigation in urban canyons (narrow roads surrounded by high rise buildings) so challenging. In general, the reflection of a GNSS signal causes the polarization to reverse. The implications of this are covered in the next section.

## 9.2. GNSS Antenna Polarization

The GPS broadcast signal is Right Hand Circularly Polarized (RHCP).

An RHCP antenna will have 3 dB gain compared to a linearly-polarized antenna (assuming the same antenna gain specified in dBic and dBi respectively).

An RHCP antenna is better at rejecting multipath interference than a linearly polarized antenna because the reflected signal changes polarization to LHCP. This signal would be rejected by the RHCP antenna, typically by 20 dB or greater.

If the multipath signal is attenuating the line of sight signal, then the RHCP antenna would show a higher signal level than a linearly polarized antenna because the interfering signal is rejected.

However, in the case where the multipath signal is replacing the line of sight signal, such as in an urban canyon environment, then the number of satellites in view could drop below the minimum needed to determine a 3D position. This is a case where a bad signal may be better than no signal. The system designer needs to understand trade-offs in their application to determine the better choice.

## 9.3. GNSS Antenna Gain

Antenna gain is defined as the amplified signal power from the antenna compared to a theoretical isotropic antenna (equally sensitive in all directions).

Optimum performance is realized only if the firmware build and hardware configuration match the type of antenna used (active or passive). The firmware must set the internal LNA gain to correspond to the installed antenna.

For example, a 25 mm by 25 mm square patch antenna on a reference ground plane (usually 70 mm by 70 mm) may give an antenna gain at zenith of 5 dBic. A smaller 18 mm by 18 mm square patch on a reference ground plane (usually 50 mm by 50 mm) may give an antenna gain at zenith of 2 dBic.

An antenna vendor should specify a nominal antenna gain (usually at zenith, or directly overhead) and antenna pattern curves specifying gain as a function of elevation, and gain at a fixed elevation as a function of azimuth. Pay careful attention to the requirement to meet the required design, such as ground plane size and any external matching components. Failure to follow these requirements could result in very poor antenna performance.

It is important to note that GNSS antenna gain is not the same as external LNA gain. Most antenna vendors will specify these numbers separately, but some combine them into a single number. Both numbers are significant when designing the front end of a GNSS receiver.

For example, antenna X has an antenna gain of 5 dBic at azimuth and an LNA gain of 20 dB for a combined total of 25 dB. Antenna Y has an antenna gain of -5 dBic at azimuth and an LNA gain of 30 dB for a combined total of 25 dB. However, in the system, antenna X will outperform antenna Y by about 10 dB (Refer to section **4.13 Internal LNA** for more details on external LNA gain).

An antenna with higher gain will generally outperform an antenna with lower gain. However, once the signals are above about -130 dBm for a particular satellite, no improvement in performance would be realized. But for those satellites with a signal level below about -135 dBm, a higher gain antenna would amplify the signal and improve the performance of the GNSS receiver. In the case of really weak signals, a good antenna could mean the difference between being able to use a particular satellite signal or not.

## 9.4. System Noise Floor

The receiver will display a reported C/No of 40 dB-Hz for an input signal level of -130 dBm. The C/No number means the carrier (or signal) is 40 dB greater than the noise floor measured in a one Hz bandwidth. This is a standard method of measuring GNSS receiver performance.

The simplified formula is:

$$\text{C/No} = \text{GNSS Signal level} - \text{Thermal Noise} - \text{System NF}$$

### **Equation 9-1 Carrier to Noise Ratio**

Thermal noise is -174 dBm/Hz at 290K.

We can estimate a system noise figure of 4 dB for the module, consisting of the pre-select SAW filter loss, the LNA noise figure, and implementation losses within the digital signal processing unit. The DSP noise is typically 1.0 to 1.5 dB.

However, if a good quality external LNA is used, the noise figure of that LNA (typically better than 1dB) could reduce the overall system noise figure from 4 dB to approximately 2 dB.


## 9.5. PCB stack and Trace Impedance

It is important to maintain a  $50\ \Omega$  impedance on the RF path trace. Design software for calculating trace impedance can be found from multiple sources on the internet. The best method is to contact your PCB supplier and request a stackup for a  $50\ \Omega$  controlled impedance board. They will give you a suggested trace width along with PCB stackup needed to create the  $50\ \Omega$  impedance.

It is also important to consider the effects of component pads that are in the path of the  $50\ \Omega$  trace. If the traces are shorter than a 1/16th wavelength, transmission line effects will be minimized, but stray capacitance from large component pads can induce additional RF losses. It may be necessary to ask the PCB vendor to generate a new PCB stackup and suggested trace width that is closer to the component pads, or modify the component pads themselves

## 9.6. RF Trace Losses

RF Trace losses on a PCB are difficult to estimate without having appropriate tables or RF simulation software. A good rule of thumb would be to keep the RF traces as short as possible, make sure they are  $50\ \Omega$  impedance, and don't contain any sharp bends.

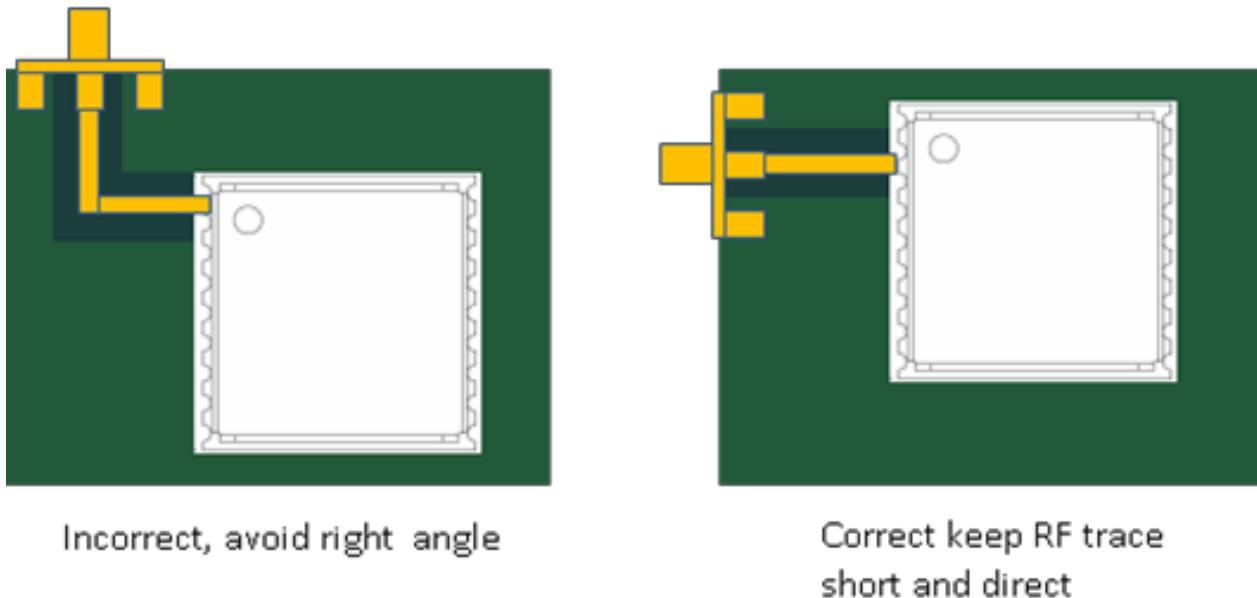

*Figure 9-1 RF Trace Examples*

## 9.7. Implications of the Pre-Select SAW Filter

The RF input of the module is connected directly to the SAW filter (after the RF switch). Therefore, any circuit connected to the RF input pin would see a complex impedance presented by the SAW filter (especially out of band), rather than the relatively broad and flat return loss presented by an LNA. Filter devices pass the desired in-band signal, resulting in low reflected energy (good return loss), and reject the out-of-band signals by reflecting it back to the input, resulting in bad return loss.

If an external amplifier is to be used with the receiver, the overall design should be checked for RF stability to prevent the external amplifier from oscillating. Amplifiers that are unconditionally stable at their output will function correctly.

If an external filter is to be connected directly to the module, care needs to be used in making sure the external filter or the internal SAW filter performance is not compromised. These components are typically specified to operate into  $50\ \Omega$  impedance, which is generally true in-band, but would not be true out of band. If there is extra gain associated with the external filter, then a 6 dB Pi or T resistive attenuator is suggested to improve the impedance match between the two components.

## 9.8. RF Interference

RF interference into the GNSS receiver tends to be the biggest problem when determining why the system performance is not meeting expectations. As mentioned earlier, the GNSS signals are at -130 dBm and lower. If signals higher than this are presented to the receiver, the RF front end can be overdriven. The receiver can reject CW jamming signals in each band (GPS, GLONASS, and BeiDou), but would still be affected by non-CW signals.

The most common source of interference is digital noise, often created by the fast rise and fall times and high clock speeds of modern digital circuitry. For example, a popular netbook computer uses an Atom processor clocked at 1.6 GHz. This is only 25 MHz away from the GNSS signal, and depending upon temperature of the SAW filter, can be within its passband. Because of the nature of the address and data lines, this would be broadband digital noise at a relatively high level.

Such devices are required to adhere to a regulatory standard for emissions such as FCC Part 15 Subpart J Class B or CISPR 22. However, these regulatory emission levels are far higher than the GNSS signal.

## 9.9. Shielding

Shielding the RF circuitry generally is ineffective because the interference is received by the GNSS antenna itself, the most sensitive portion of the RF path. The antenna cannot be shielded because it could not then receive the GNSS signals.

There are two solutions, one is to move the antenna away from the source of interference, and the other is to shield the digital interference source to prevent it from getting to the antenna.

## 9.10. Powering an External LNA (External Active Antenna)

An external LNA requires a source of power. Many active antennas accept 3 V to 5 V DC that is impressed upon the RF signal line.

Two approaches can be used:

1. Use an inductor to tie directly to the RF trace. This inductor should be at self-resonant at L1 (1.57542 GHz) and should have good Q for low loss. The higher the inductor Q, the lower the loss will be. The side of the inductor connecting to the antenna supply voltage should be bypassed to ground with a good quality RF capacitor, again with self-resonance at the L1 frequency.
2. Use a quarter wave stub in place of the inductor. The length of the stub is designed to be exactly  $\frac{1}{4}$  wavelength at L1, which has the effect of making an RF short at one end of the stub to appear as an RF open at the other end. The RF short is created by a high quality RF capacitor operating at self-resonance.

The choice between the two would be determined by:

- RF path loss introduced by either the inductor or quarter wave stub.
- Cost of the inductor.
- Space availability for the quarter wave stub.


Simulations done by Telit show the following losses:

Inductor	Additional signal loss (dB)
Murata LQG15HS27NJ02	0.65
Quarter wave stub on FR4	0.59
Coilcraft B09TJLC (used in ref. design)	0.37

**Table 9-1 Inductor Loss**

Since this additional loss occurs after the LNA, it is generally not significant unless the circuit is being designed to work with both active and passive antennas.

## 10. REFERENCE DESIGN

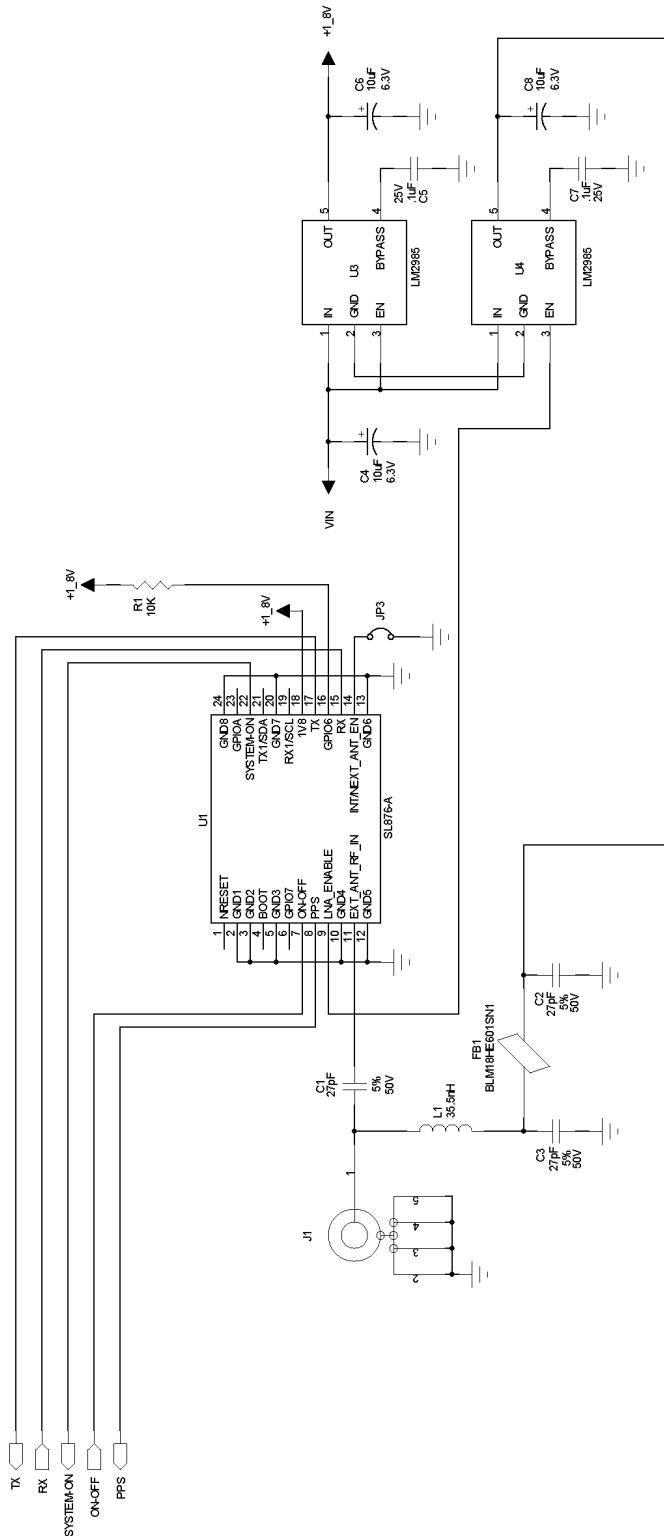

**Figure 10-1 Reference Design**



Please refer to section **8 Electrical Interface** for important details for each pin.

Along with power and ground, the signals required to operate the module properly are: an external antenna RF input (optional), a UART TX/RX pair, and several control lines as described below.

The power supply must have tight voltage regulation under varying line and load conditions to prevent falsely tripping the internal voltage supervisor within the module. See section **8.4 Power Supply** for details of requirements for the power supply.

Due to the very small size of the built-in chip antenna, a proper ground plane is critical to achieving good performance. Please refer to Figure 12-1 SL876Q5-A Footprint and Ground Plane for requirements.

An optional active GNSS antenna can be connected through C1 (which is used to block DC voltage) to the External\_Ant\_RF\_Input pin. The reference design shows a DC power feed for the external antenna's LNA which is controlled by the state of the module (operating vs. low power) on the LNA\_ENABLE pin. The inductor L1 is chosen to be self-resonant at the GPS L1 frequency (1.57542 GHz) to minimize loading on the RF trace. Capacitor C3 is also chosen to be self-resonant to provide a near short at that RF frequency. The internal chip antenna is enabled by grounding the INT/nEXT\_Ant\_En pin through JP3.

The TX/RX serial port can be configured for UART, I<sup>2</sup>C, or SPI interface using GPIO 6 and 7. As shown, GPIO7 is floating and resistor R4 pulls GPIO6 high, which specifies the serial port configuration to be UART. See section **8.7 Serial I/O Ports - Configuration and Operation** for details.

TX and RX are a standard serial UART port with a default bit rate of 9600 bps, 8 data bits, 1 stop bit, and no parity. As is the case with all UART data, the idle state is logic one.

TX is a 1.8 V logic level signal. RX is tolerant to 3.6 VDC.

ON-OFF is an input to control the power state of the module. After power-up, the module will enter the RUN state if it is high, or the HIBERNATE state if it is low. The SYSTEM- ON output pin indicates the system's state.

**Note:** ON-OFF must not be tied to 1V8 or the module will not be able to exit a commanded HIBERNATE state.


nRESET (active low) will cause the module to be reset and then resume operation when released. It is desirable to bring this pin out to a test point if not otherwise connected.

BOOT is used to configure the boot source. It is desirable to bring this pin out to a test point.

SYSTEM-ON is a 1.8V output indicating the power state of the module. If the module is in the RUN state, the logic level will be high, otherwise the logic level will be low.


PPS is a one pulse per second time mark output pulse. It may be left unconnected.

## 11. MECHANICAL DRAWING

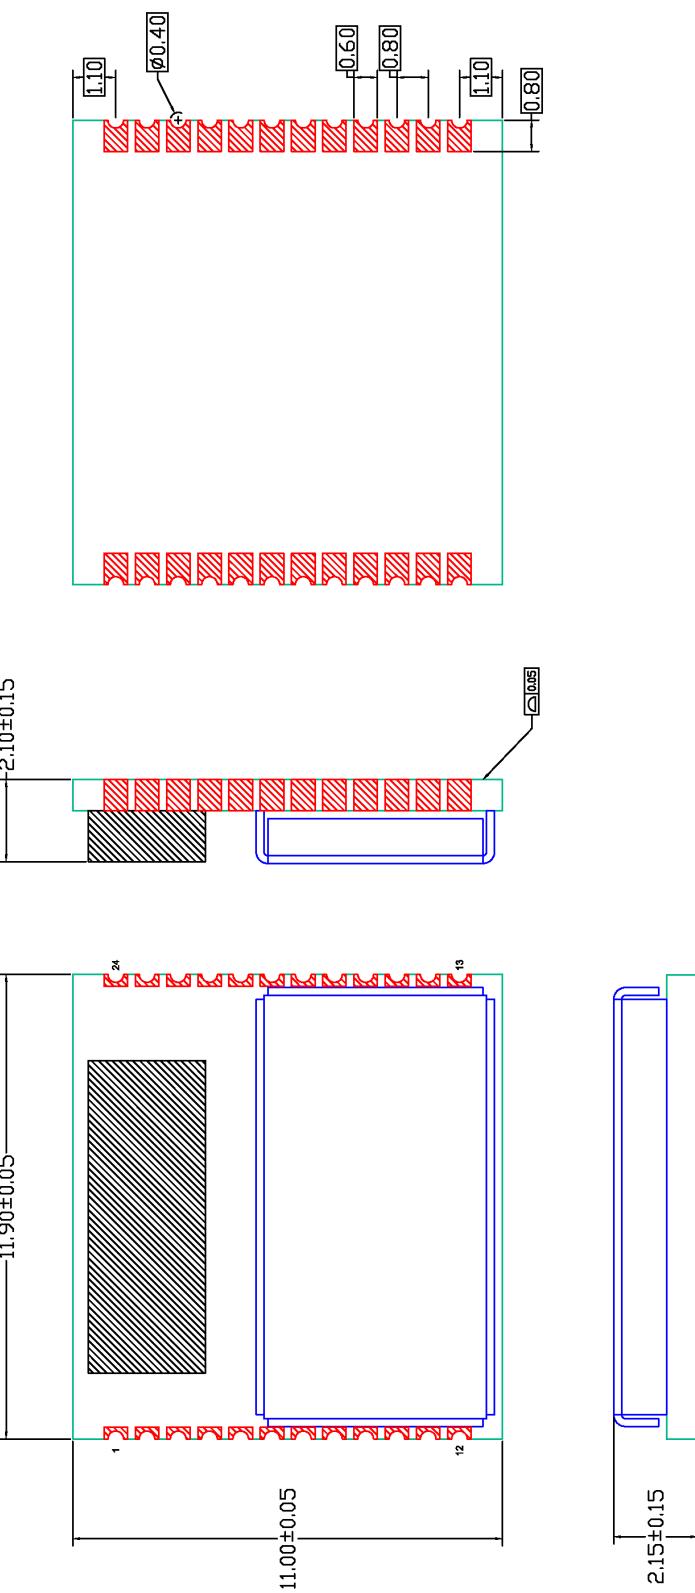

**Figure 11-1 SL876Q5-A Mechanical Drawing**

## 12. PCB FOOTPRINT AND GROUND PLANE

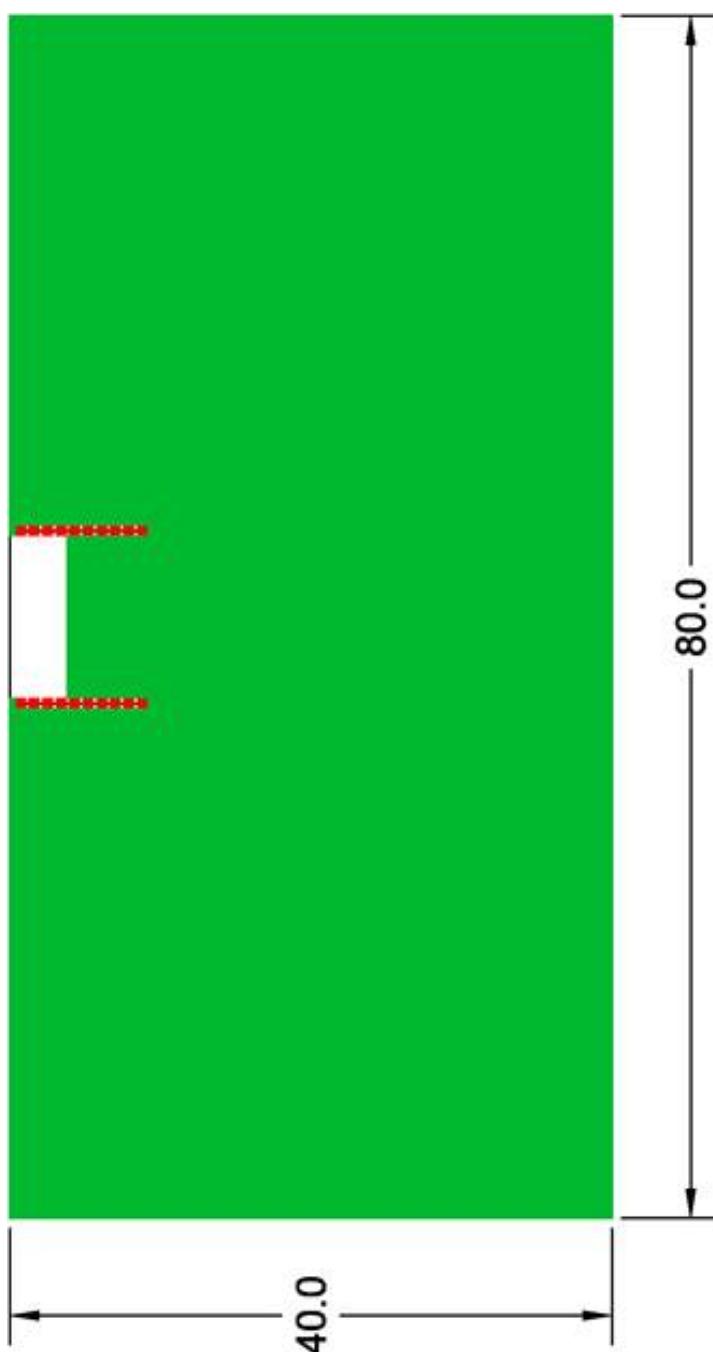

**Figure 12-1 SL876Q5-A Footprint and Ground Plane**


The SL876-A requires a ground plane of 40mm by 80mm for the chip antenna to work properly.

The module is centered on the long axis, but flush with the top edge of the ground plane (shown to the left here).

The keepout area underneath the module must extend to all layers of the host PCB.

All dimensions are in mm.

See the detail drawing on the next page.

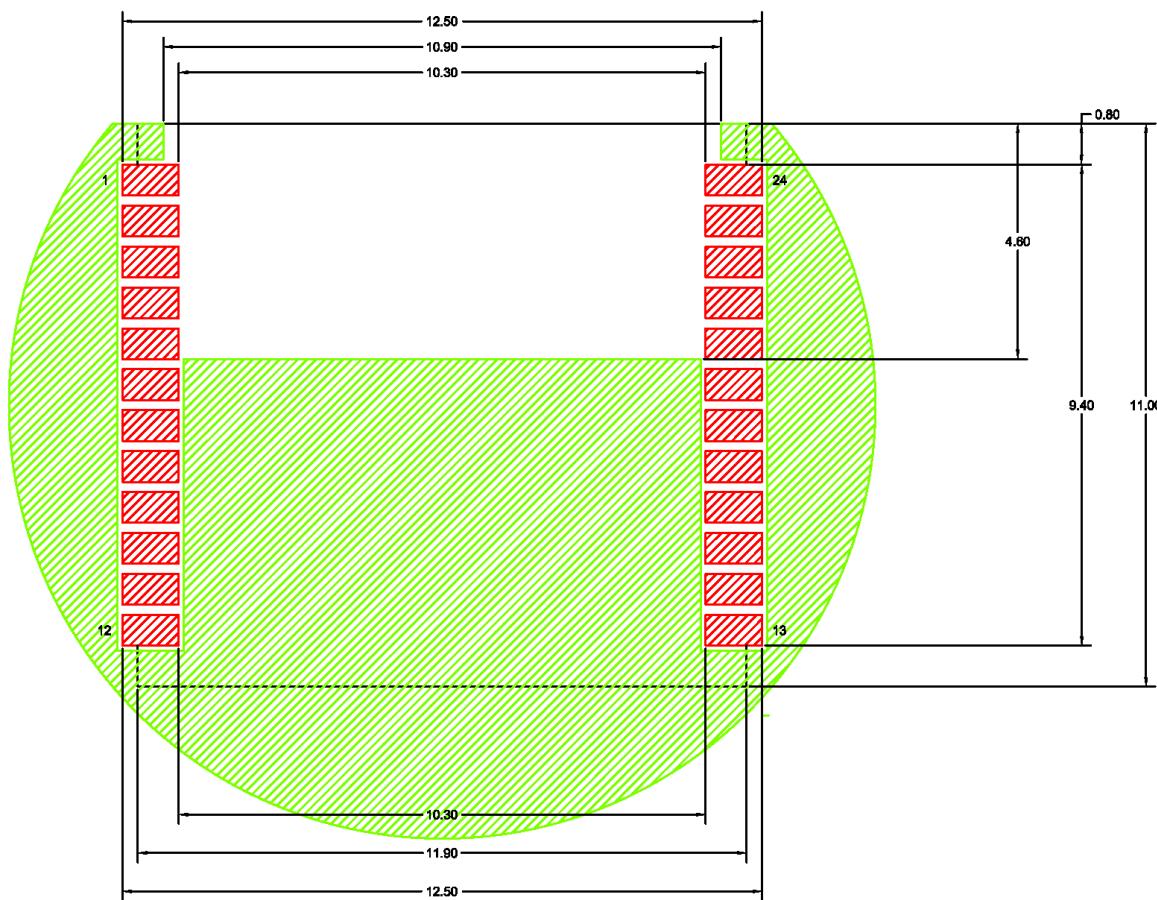

**Figure 12-2 SL876Q5-A PCB Footprint (detail)**

The SL876-A requires a ground plane of 40mm by 80mm for the chip antenna to work properly. See the overall drawing on the preceding page.

This drawing identifies the dimensions for the user's PCB for the module pads. The module is centered on the long axis, but flush with the top edge of the ground plane. The keepout area underneath the module must extend to all layers of the host PCB.

Red = Module pads

Green = Ground plane

White = Keepout area

All dimensions are in mm.


Please refer to section **8.8.3 Ground Plane** for further information.

## 13. PRODUCT PACKAGING AND HANDLING

### 13.1. Product Labelling and Serialization

The SL876Q5-A module label has a 2D Barcode with the module serial number. Contact a Telit representative for information on specific module serial numbers.

#### 13.1.1. Product Label – SL876Q5-A

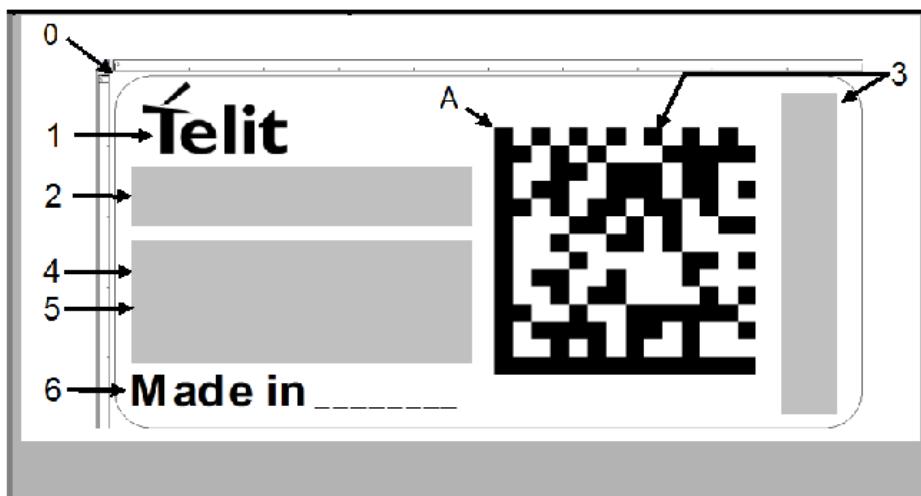


*Figure 13-1 SL876Q5-A Product Label*

Key	Description
0	Pin 1 location
1	Telit Logo
2	Module Name
3	Telit Serial Number (Barcode type 2D Datamatrix and text)
4	Reserved for Product Variant
5	Certification mark
6	Production Country

*Table 13-1 SL876Q5-A Product Label Description*

## 13.2. Product Packaging

SL876Q5-A modules are supplied in Tray packaging of 90 pcs as shown below

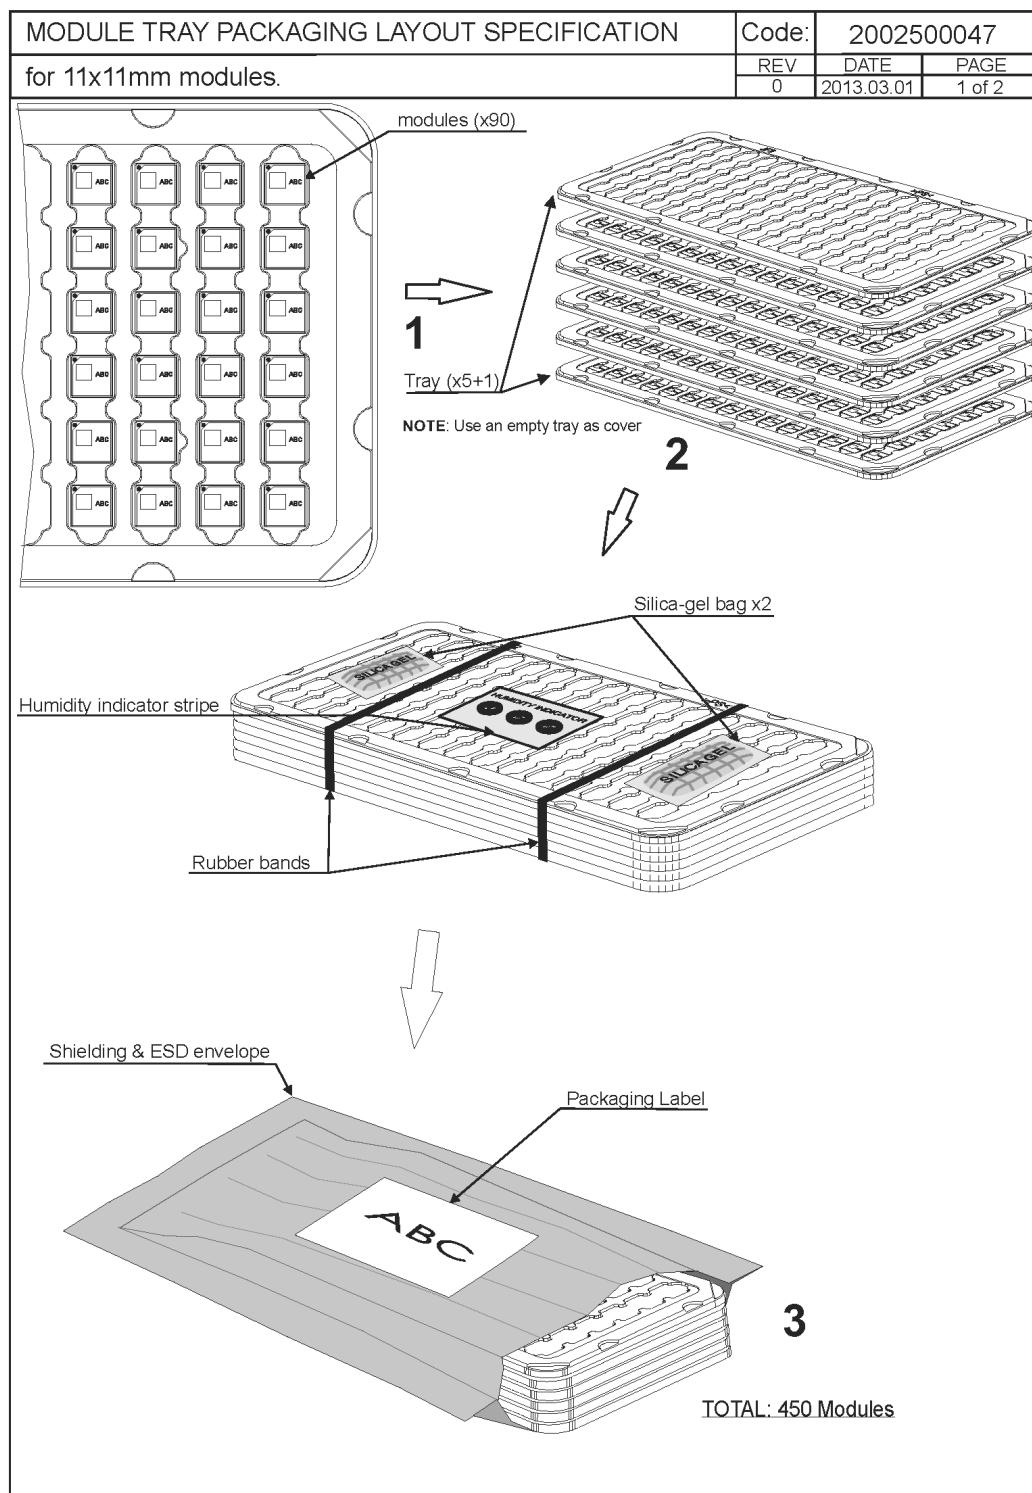

**Figure 13-2 Product Packaging – Tray 90 pcs. each**

### 13.3. Moisture Sensitivity

Precautionary measures are required in handling, storing and using these devices to avoid damage from moisture absorption. If localized heating is required to rework or repair the device, precautionary methods are required to avoid exposure to solder reflow temperatures that can result in performance degradation.


The SL876Q5-A module has a moisture sensitivity level rating of 3 as defined by **IPC/JEDEC J-STD-020**. This rating is assigned due to some of the components used within the module.

The SL876Q5-A packaging is hermetically sealed with desiccant and humidity indicator card. The SL876Q5-A parts must be placed and reflowed within 168 hours of first opening the hermetic seal provided the factory conditions are less than 30°C and less than 60% and the humidity indicator card indicates less than 10% relative humidity.

If the package has been opened or the humidity indicator card indicates above 10%, then the parts must be baked prior to reflow. The parts may be baked at  $+125^{\circ}\text{C} \pm 5^{\circ}\text{C}$  for 48 hours. However, the tape and reel cannot withstand that temperature. Lower temperature baking is feasible if the humidity level is low and time is available. Please see **IPC/JEDEC J-STD-033** for additional information.

Additional information can be found on the MSL tag affixed to the outside of the hermetically sealed bag.

JEDEC standards are available free of charge from the JEDEC website <http://www.jedec.org>.

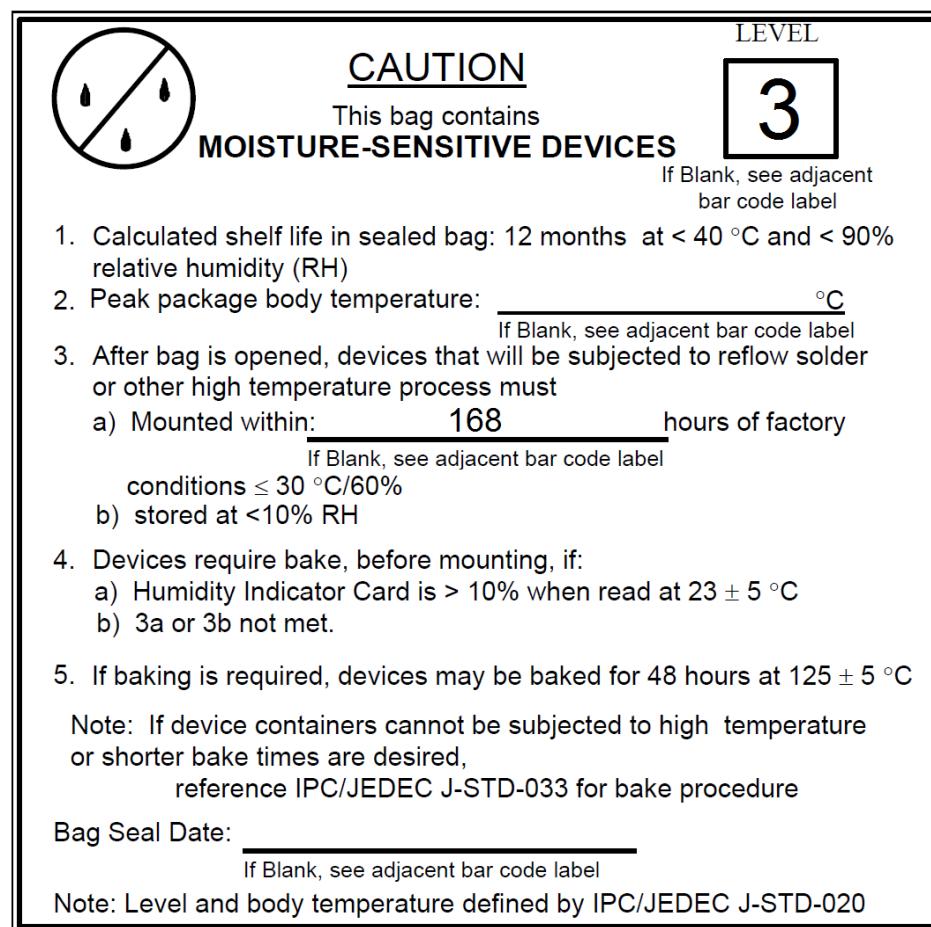

**Figure 13-3 Moisture-Sensitive Device Label**

## 13.4. ESD Sensitivity

The SL876Q5-A module contains class 1 devices and is classified as Electro-Static Discharge Sensitive (ESDS).

Telit recommends the two basic principles of protecting ESD devices from damage:

- Handle sensitive components only in an ESD Protected Area (EPA) under protected and controlled conditions;
- Protect sensitive devices outside the EPA using ESD protective packaging.

All personnel handling ESDS devices have the responsibility to be aware of the ESD threat to the reliability of electronic products.

Further information can be obtained from the JEDEC standard JESD625-A Requirements for Handling Electrostatic Discharge Sensitive (ESDS) Devices.

## 13.5. Reflow

The modules are compatible with lead free soldering processes as defined in **IPC/JEDEC J-STD-020**. The reflow profile must not exceed the profile given **IPC/JEDEC J-STD-020** Table 5-2, "Classification Reflow Profiles". Although **IPC/JEDEC J-STD-020** allows for three reflows, the assembly process for the module uses one of those profiles, therefore the module is limited to two reflows.

When re-flowing a dual-sided SMT board, it is important to reflow the side containing the module last. This prevents heavier components within the module from becoming dislodged if the solder reaches liquidus temperature while the module is inverted.

**Note:** JEDEC standards are available free from the JEDEC website <http://www.jedec.org>.

## 13.6. Assembly Considerations

During board assembly and singulation process steps, pay careful attention to unwanted vibrations, resonances and mechanical shocks introduced by the board router.

## 13.7. Washing Considerations

The module can be washed using standard PCB cleaning procedures after assembly. The shield does not provide a water seal to the internal components of the module, so it is important that the module be thoroughly dried prior to use by blowing excess water and then baking the module to drive residual moisture out. Depending upon the board cleaning equipment, the drying cycle may not be sufficient to thoroughly dry the module, so additional steps may need to be taken. Exact process details will need to be determined by the type of washing equipment as well as other components on the board to which the module is attached. The module itself can withstand standard JEDEC baking procedures.

## 13.8. Safety

Improper handling and use of this module can cause permanent damage to it. There is also the possible risk of personal injury from mechanical trauma or choking hazard.

See **Section 17 Safety Recommendations** for safety information.

## 13.9. Disposal

We recommend that this product should not be treated as household waste. For more detailed information about recycling this product, please contact your local waste management authority or the reseller from whom you purchased the product.

## 14. ENVIRONMENTAL REQUIREMENTS

### 14.1. Operating Environmental Limits

Environmental Limits - Operating	
Temperature	-40°C to +85°C
Temperature Rate of Change	±1°C / minute maximum
Humidity	Up to 95% non-condensing or wet bulb temperature of +35°C, whichever is less
Altitude	-500 m to 18,000 m (Software / ITAR restriction)
Maximum Vehicle Dynamics	514 m/s (acquisition and navigation) 2 G acceleration (Software / ITAR restriction)

**Table 14-1 Operating Environmental Limits**

### 14.2. Storage Environmental Limits

Environmental Limits - Storage	
Temperature	-40°C to +85°C
Humidity	Up to 95% non-condensing or wet bulb temperature of +35°C, whichever is less
Altitude	-500 m to 18,000 m (Software / ITAR restriction)
Shock	18G peak, 5 millisecond duration
Shock (in shipping container)	10 drops from 75 cm onto concrete floor

**Table 14-2 Storage Environmental Limits**

## 15. COMPLIANCES

The module complies with the following:

- Directive 2011/65/EU art. 16 on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS)
- Manufactured in an ISO 9000: 2008 accredited facility
- Manufactured to TS 16949 2009 requirement (upon request)

### 15.1. EU RED Certification

The Telit SL876Q5-A modules are certified compliant with the EU RED Directives.

### 15.2. eCall Compliance

The modules comply with eCall requirements.

### 15.3. GOST R-55534 Certification

For this certification, the 1 Hz update rate must be used.

## 15.5. EU Declaration of Conformity (RED)



### EU DECLARATION OF CONFORMITY [20488DOC00004A]

- 1 SL876Q5-A (product name)
- 2 Telit Communications SpA- Via Stazione di Prosecco, 5/B-34010 Sgonico TRIESTE, ITALY (manufacturer)
- 3 This declaration of conformity is issued under the sole responsibility of the manufacturer
- 4 Standalone GNSS receiver module  
SW Version(s) V25\_0.0.1\_FW5\_7.10-P2.1\_N96\_LG





Operating frequency bands and related max radio-frequency power transmitted:  
1573.42-1605.89 MHz - Receiver only

- 5 The object of the declaration described above is in conformity with the relevant Community harmonization:  
European Directive 2014/53/EU(RED)
- 6 The conformity with the essential requirements set out in Art.3 of the 2014/53/EU has been demonstrated against the following harmonized standards:

Harmonized Standard reference	Article of Directive 2014/53/EU
EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 + A2:2013	3.1 (a): Health and Safety of the User
Draft ETSI EN 301 489-1 V2.2.0, Draft ETSI EN 301 489-19 V2.1.0	3.1 (b): Electromagnetic Compatibility
Final Draft ETSI EN 303 413 V1.1.0	3.2: Effective use of spectrum allocated

- 7 The conformity assessment procedure referred to in Article 17 and detailed in Annex III of Directive 2014/53/EU has been followed with the involvement of the following Notified Body:  
Compatible electronics, Inc., 114 Olinda Drive - Brea, California 92823 - United States, Notified Body No: 1925  
Thus, is placed on the product
- 8 The product can be considered compliant to the essential requirements set out in Art.3 of 2014/53/EU only in combination with the above-mentioned SW version(s).
- 9 The Technical Documentation (TD) relevant to the product described above and which supports this Declaration of Conformity, is held at: Telit Communications S.p.A., Via Stazione di Prosecco, 5/b - 34010 Sgonico – TRIESTE – ITALY

Trieste, 2017-06-08

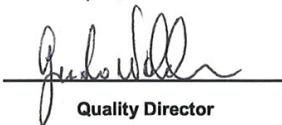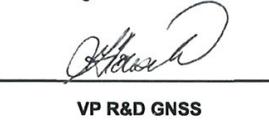Quality Director  
Guido Walcher

VP R&D GNSS  
Georgia Frousiakis

EU-Type Examination Certificate No. T70531C09

Technical Documentation: 30488TCF00070A

[www.Telit.com/RED](http://www.Telit.com/RED)

Telit Communications S.p.A.  
Via Stazione di Prosecco n. 5/B  
34010 Sgonico (TS) - ITALY  
Phone +39 040 4192 111  
Fax +39 040 4192 333

Cap. Soc. € 3.000.000  
Partita IVA 0371600266  
Cod.Fisc. 03711600266  
Nr. R.E.A. TS-120027

Società soggetta all'attività  
di direzione e coordinamento  
da parte di Telit Communications PLC  
con sede in Londra (art.2497 bis C.C.)

Società con socio unico  
(Telit Communications PLC)

Mod 243 2017-02 Rev.1- This declaration is issued according to 768/2008/EC

**Figure 15-1 EU (RED) Declaration of Conformity - SL876Q5-A**

## 16. GLOSSARY AND ACRONYMS

AGPS	<p><b>Assisted (or Aided) GPS</b>            AGPS provides ephemeris data to the receiver to allow faster cold start times than would be possible using only broadcast data.            This extended ephemeris data could be either server-generated or locally-generated.            See Local Ephemeris prediction data and Server-based Ephemeris prediction data</p>
Almanac	A reduced-precision set of orbital parameters for the entire GPS constellation that allows calculation of approximate satellite positions and velocities. The almanac may be used by a receiver to determine satellite visibility as an aid during acquisition of satellite signals. The almanac is updated weekly by the Master Control Station. See Ephemeris.
BeiDou (BDS) formerly COMPASS	The Chinese GNSS, currently being expanded towards full operational capability.
Cold Start	A cold start occurs when a receiver begins operation with unknown position, time, and ephemeris data, typically when it is powered up after a period of inactivity. Almanac information may be used to identify previously visible satellites and their approximate positions. See Restart.
Cold Start Acquisition Sensitivity	The lowest signal level at which a GNSS receiver is able to reliably acquire satellite signals and calculate a navigation solution from a Cold Start. Cold start acquisition sensitivity is limited by the data decoding threshold of the satellite messages.
EGNOS	European Geostationary Navigation Overlay Service The European SBAS system.
Ephemeris (plural ephemerides)	A set of precise orbital parameters that is used by a GNSS receiver to calculate satellite position and velocity. The satellite position is then used to calculate the navigation solution. Ephemeris data is updated frequently (normally every 2 hours for GPS) to maintain the accuracy of the position calculation. See Almanac.
ESD:	<p><b>Electro-Static Discharge</b>            Large, momentary, unwanted electrical currents that can cause damage to electronic equipment.</p>
GAGAN	The Indian SBAS system.
Galileo	The European GNSS currently being built by the European Union (EU) and European Space Agency (ESA).
GDOP	<p><b>Geometric Dilution of Precision</b>            A factor used to describe the effect of satellite geometry on the accuracy of the time and position solution of a GNSS receiver. A lower value of GDOP indicates a smaller error in the solution. Related factors include PDOP, HDOP, VDOP and TDOP.</p>

GLONASS	ГЛОбальная НАвигационная Спутниковая Система GLObal'naya NAVigatsionnaya Sputnikovaya Sistema (Global Navigation Satellite System) The Russian GNSS, which is operated by the Russian Aerospace Defense Forces
GNSS	Global Navigation Satellite System Generic term for a satellite-based navigation system with global coverage. The current or planned systems are: GPS, GLONASS, BDS, and Galileo.
GPS	Global Positioning System The U.S. GNSS, a satellite-based positioning system that provides accurate position, velocity, and time data. GPS is operated by the US Department of Defense.
Hot Start	A hot start occurs when a receiver begins operation with known time, position, and ephemeris data, typically after being sent a restart command. See Restart.
LCC	Leadless Chip Carrier A module design without pins. In place of the pins are pads of bare gold-plated copper that are soldered to the printed circuit board.
LNA	Low Noise Amplifier An electronic amplifier used for very weak signals which is especially designed to add very little noise to the amplified signal.
Local Ephemeris prediction data	Extended Ephemeris (i.e. predicted) data, calculated by the receiver from broadcast data received from satellites, which is stored in memory. It is usually useful for up to three days. See AGPS.
MSAS	MTSAT Satellite Augmentation System The Japanese SBAS system.
MSD	Moisture sensitive device.
MTSAT	Multifunctional Transport Satellites The Japanese system of geosynchronous satellites used for weather and aviation control.
Navigation Sensitivity	The lowest signal level at which a GNSS receiver is able to reliably maintain navigation after the satellite signals have been acquired.
NMEA	National Marine Electronics Association
QZSS	Quasi-Zenith Satellite System The Japanese regional system.
Reacquisition	A receiver, while in normal operation, loses RF signal (perhaps due to the antenna cable being disconnected or a vehicle entering a tunnel), and re-establishes a valid fix after the signal is restored. Contrast with Reset and Restart.
Restart	A receiver beginning operation after being sent a restart command, generally used for testing rather than normal operation. A restart can also result from a power-up. See Cold Start, Warm Start, and Hot Start. Contrast with Reset and Reacquisition.

Reset	A receiver beginning operation after a (hardware) reset signal on a pin, generally used for testing rather than normal operation. Contrast with Restart and Reacquisition.
RoHS	The Restriction of Hazardous Substances Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment, was adopted in February 2003 by the European Union.
RTC	Real Time Clock An electronic device (chip) that maintains time continuously while powered up.
SAW	Surface Acoustic Wave filter Electromechanical device used in radio frequency applications. SAW filters are useful at frequencies up to 3 GHz.
SBAS	Satellite Based Augmentation System A system that uses a network of ground stations and geostationary satellites to provide differential corrections to GNSS receivers. These corrections are transmitted on the same frequency as navigation signals, so the receiver can use the same front-end design to process them. Current examples are WAAS, EGNOS, MSAS, and GAGAN.
Server-based Ephemeris prediction data	Extended Ephemeris (i.e. predicted) data, calculated by a server and provided to the receiver over a network. It is usually useful for up to 14 days. See AGPS.
TCXO	Temperature-Compensated Crystal Oscillator
Tracking Sensitivity	The lowest signal level at which a GNSS receiver is able to maintain tracking of a satellite signal after acquisition is complete.
TTFF	Time to First Fix The elapsed time required by a receiver to achieve a valid position solution from a specified starting condition. This value will vary with the operating state of the receiver, the length of time since the last position fix, the location of the last fix, and the specific receiver design. A standard reference level of -130 dBm is used for testing.
UART	Universal Asynchronous Receiver/Transmitter An integrated circuit (or part thereof) which provides a serial communication port for a computer or peripheral device.
WAAS	Wide Area Augmentation System The North American SBAS system developed by the US FAA (Federal Aviation Administration).
Warm Start	A warm start occurs when a receiver begins operation with known (at least approximately) time and position, but unknown ephemeris data, typically after being sent a restart command. See Restart.

## 17. SAFETY RECOMMENDATIONS

### 17.1. READ CAREFULLY



Be sure that the use of this product is allowed in the country and in the environment required.  
The use of this product may be dangerous and must be avoided in the following areas:

- Where it can interfere with other electronic devices in environments such as hospitals, airports, aircraft, etc.
- Where there is risk of explosion such as gasoline stations, oil refineries, etc. It is the responsibility of the user to enforce the country regulations and specific environmental regulations.

Do not disassemble the product. Evidence of tampering will invalidate the warranty.

Telit recommends following the instructions in product user guides for correct installation of the product. The product must be supplied with a stabilized voltage source and all wiring must conform to security and fire prevention regulations. The product must be handled with care, avoiding any contact with the pins because electrostatic discharges may damage the product itself.

The system integrator is responsible for the functioning of the final product; therefore, care must be taken with components external to the module, as well as for any project or installation issue. Should there be any doubt, please refer to the technical documentation and the regulations in force. Non-antenna modules must be equipped with a proper antenna with specific characteristics.

The European Community provides directives for electronic equipment introduced in the market. Relevant information is available on the European Community website:

<http://ec.europa.eu/enterprise/sectors/rtte/documents/>

The text of the Directive 99/05 regarding telecommunication equipment is available, while the applicable Directives (Low Voltage and EMC) are available at:

<http://ec.europa.eu/enterprise/sectors/electrical/>

The power supply used shall comply the clause 2.5 (Limited power sources) of the standard EN 60950-1 and shall be mounted on a PCB which complies with V-0 flammability class.

Since the module must be built-in to a system, it is intended only for installation in a RESTRICTED ACCESS LOCATION. Therefore, the system integrator must provide an enclosure which protects against fire, electrical shock, and mechanical shock in accordance with relevant standards.

<http://ec.europa.eu/enterprise/sectors/electrical/>

## 17.2. Electrical and Fire Safety

This device is intended for built-in designs and must be installed by users that have taken adequate precautions and have sufficient knowledge to avoid electrical, mechanical and fire hazards.

The module shall be mounted on a PCB which complies with V-0 flammability class.

The device must be supplied with a limited power source that meets clause 2.5 of the EN 60950-1 standard. These requirements are:

- For power supplies without overcurrent protection device:  
Short circuit current < 8 A. Apparent power < 100 VA
- 
- For power supplies with overcurrent protection device (rated current of overcurrent device shall be < 5 A):  
Short circuit current < 333 A. Apparent power < 250 VA.
- 
- Furthermore, the device must be installed within an enclosure that meets HB class or pass the 550° glowing fire test of EN 60695-2-11 and mounted on a V1 flammability class material or better.

## 18. DOCUMENT HISTORY

Revision	Date	Changes
0	2017-03-02	Initial issue
1	2017-06-21	Added ground plane information Minor text revisions and additions
2	2017-06-27	Removed "Preliminary" watermark
3	2017-08-17	Added line to GPIO2 to the block diagram Added descriptive text for connection of INT/EXT input signal to GPIO2 Changed V18 range to 1.71 - 1.89 V Added EU RED Declarations of Conformance
4	2018-08-09	Added Galileo support Changed QZSS default to enabled. Added 10 Hz reporting Changed default to Full Power mode. Added default I <sup>2</sup> C addresses Added eCall and ERA/GLONASS compliance Minor text revisions
5	2018-08-29	Update power consumption numbers

# SUPPORT INQUIRIES

Link to [www.telit.com](http://www.telit.com) and contact our technical support team for any questions related to technical issues.

[www.telit.com](http://www.telit.com)



---

Telit Communications S.p.A.  
Via Stazione di Prosecco, 5/B  
I-34010 Sgonico (Trieste), Italy

Telit IoT Platforms LLC  
5300 Broken Sound Blvd, Suite 150  
Boca Raton, FL 33487, USA

Telit Wireless Solutions Inc.  
3131 RDU Center Drive, Suite 135  
Morrisville, NC 27560, USA

Telit Wireless Solutions Co., Ltd.  
8th Fl., Shinyoung Securities Bld.  
6, Gukjegeumyung-ro 8-gil, Yeongdeungpo-gu  
Seoul, 150-884, Korea

Telit Wireless Solutions Ltd.  
10 Habarzel St.  
Tel Aviv 69710, Israel

Telit Wireless Solutions  
Technologia e Servicos Ltda  
Avenida Paulista, 1776, Room 10.C  
01310-921 São Paulo, Brazil

---

Telit reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights. The information contained herein is provided "as is". No warranty of any kind, either express or implied, is made in relation to the accuracy, reliability, fitness for a particular purpose or content of this document. This document may be revised by Telit at any time. For most recent documents, please visit [www.telit.com](http://www.telit.com)

Copyright © 2016, Telit