

WebRail Installation & Safety Manual

US Patent No. 11,753,836

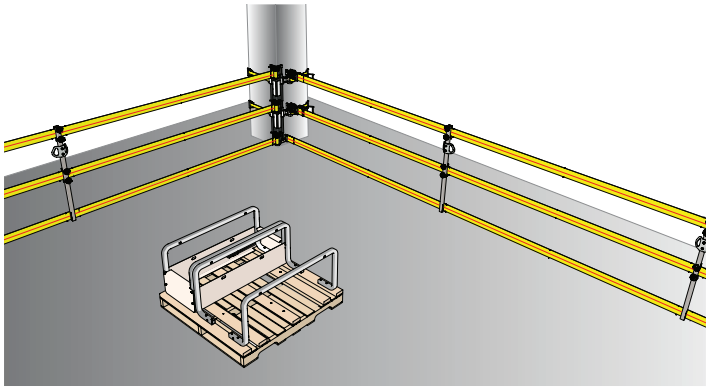


186 ft. Pallet Kit Part ID: 72893
360 ft. Pallet Kit Part ID: 73073

The WebRail meets all OSHA guardrail requirements. The Top Web, Mid Web, and Toe Web are OSHA compliant. The 4 in. web straps are rated at 20,000 lbs. Two WebRail kits offer 186 ft. or 360 ft. linear feet of protection. Each storage cart is stackable and includes 7 column upright attachments and 12 or 30 mid span web/fall arrest supports. The mid span supports allow up to 4 workers to be attached in fall arrest between 31 ft. or 60 ft.. The WebRail system can fit on round and square columns with a diameter of up to 30". Tension Spring Bracket allows for easy visual inspection of proper installation.

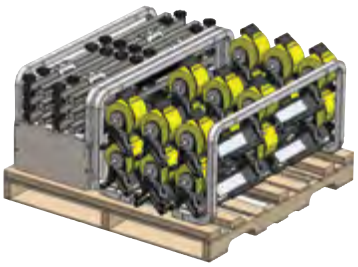

186 ft. WebRail Pallet
(31 ft. Post)
Part ID: 72893

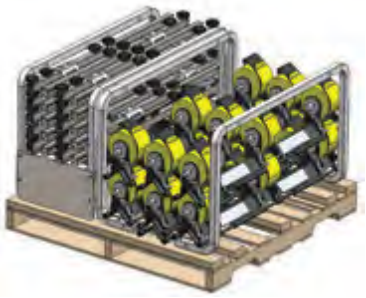

360 ft. WebRail Pallet
(60 ft. Post)
Part ID: 73073

Online Manual

Declaration of Conformity

MADE IN THE USA
WITH GLOBAL MATERIALS

Tools & Equipment Required:

- 1" socket and a socket winch with at least a 24" handle
- Cordless drill
- Standard safety equipment including Fall protection for all installers

⚠ WARNING ⚠

Serious injury or death may occur if this equipment is used for purposes other than intended. Tie Down provides the following instructions for the use and care of this equipment. It is the responsibility of the user to understand and convey proper instructions to any and all individuals who use this product. WebRail complies with the requirements set forth by the Federal Occupational Safety and Health Administration (OSHA) when used according to the manufacturers' instructions.

⚠ **WARNING:** This product can expose you to chemicals including Nickel, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov

Instruction #08432 (E1943 - Rev. 10/15/24)

(888) 949-3199 | WWW.ATI-CONSTRUCTIONPRODUCTS.COM

SALES@ATI-CONSTRUCTIONPRODUCTS.COM

WebRail Portable Fall Arrest and Tensioned Guardrail

WebRail is a portable tensioned guardrail system designed for temporary use on construction & industrial projects.

Table of Contents:

WebRail pallet contents	3
31 ft WebRail Post Set up and Placement	4
60 ft WebRail Post Set up and Placement	6
Terminating Post installation	8
WebRail Post installation	9
WebRail Strap rail installation	10
Strap Tensioning	12
WebRail Mid Rail Set Up	13
Fall Arrest Set Up	14
Non Standard Set Up Options	15
Short Distance Pass Through Options	17
No Fall Arrest Zones	18
Fall Event/Rescue	19
Operational Lock Out Option	20
Out of Service Lock Out	21
WebRail Dismantle	22
Replacement Parts	23
Safety Labels	24
Warranty	25
Declaration of Conformity	26
Installed WebRail Daily Inspection	27

These installation instructions are essential for the successful and safe operation of the WebRail. The operating instructions contain important information. Your attention is required to maintain that the WebRail is safe, operated properly, and is economically used. Your attention helps avoid dangers and ensures reliability and lifetime of the WebRail.

The WebRail instructions must always be available, read, and applied to any person while:

- Operating the Equipment.
- Assisting in the Use of Equipment.
- Storage of Equipment.
- Troubleshooting the Equipment.
- Assembly of Equipment.
- Maintenance, care, repair, and/or any operations tasked for the WebRail.

WebRail Portable Fall Arrest and Tensioned Guardrail

WebRail Pallet Contents


Each WebRail shipping pallet contains everything needed to complete one 186 ft. or 360 ft. section of a construction work site. Multi-able WebRail transport pallets can be combined to cover any distance needed for a safe work zone.

The WebRail 186 ft. Transport Stack Pallet (Part ID: 72893) contains:


6	31 ft. Main Upright Assembly	Part ID 72888
1	Terminating Post	Part ID 72891
12	Middle Rail Assembly	Part ID 72889
6	Spring Tensioner Assembly	Part ID 72892
14	Self Retracting Ratchet Binder	Part ID 72890
1	Stack Pallet	Part ID 72898

The WebRail 360 ft. Transport Stack Pallet (Part ID: 73073) contains:


6	60 ft. Main Upright Assembly	Part ID 73071
1	Terminating Post	Part ID 72891
30	Middle Rail Assembly	Part ID 72889
6	Spring Tensioner Assembly	Part ID 72892
14	Self Retracting Ratchet Binder	Part ID 72890
1	Stack Pallet	Part ID 73072

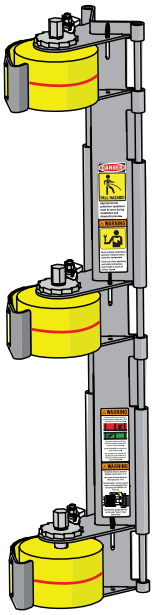


Main Upright Assembly




Terminating Post




Middle Rail Assembly

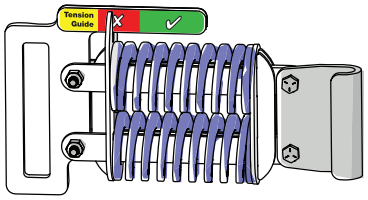

Spring Tensioner Assembly

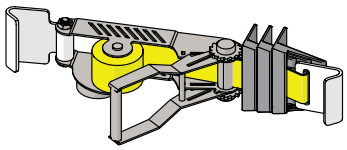


WebRail Self Retracting Ratchet Binder

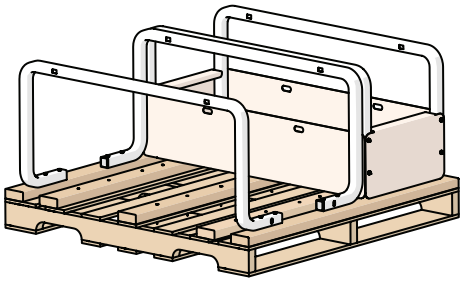

WebRail Stack Pallet

31 ft. WebRail Set Up Placement

The WebRail 186 ft. Transport Stack Pallet (Part ID: 72893) is designed 31 feet maximum distance between support structures. Middle rail post are positioned between column supports no more than the 10 ft. between any post.

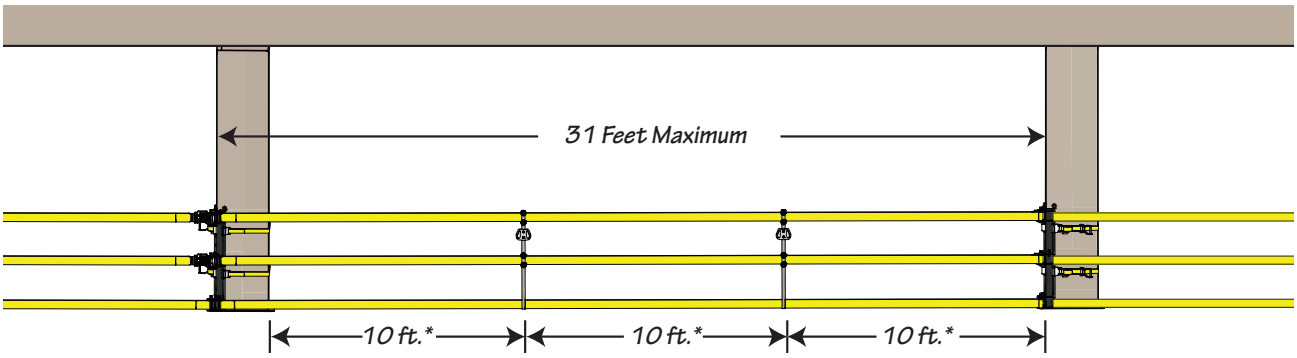

Maximum distance between WebRail and mid rail post approximately 10 feet .
*(*No more than 7 feet apart for EM385-1-1 Compliance)*

⚠ DANGER ⚠

ALL WORKERS MUST WEAR FALL PROTECTION DURING WEBRAIL INSTALLATION

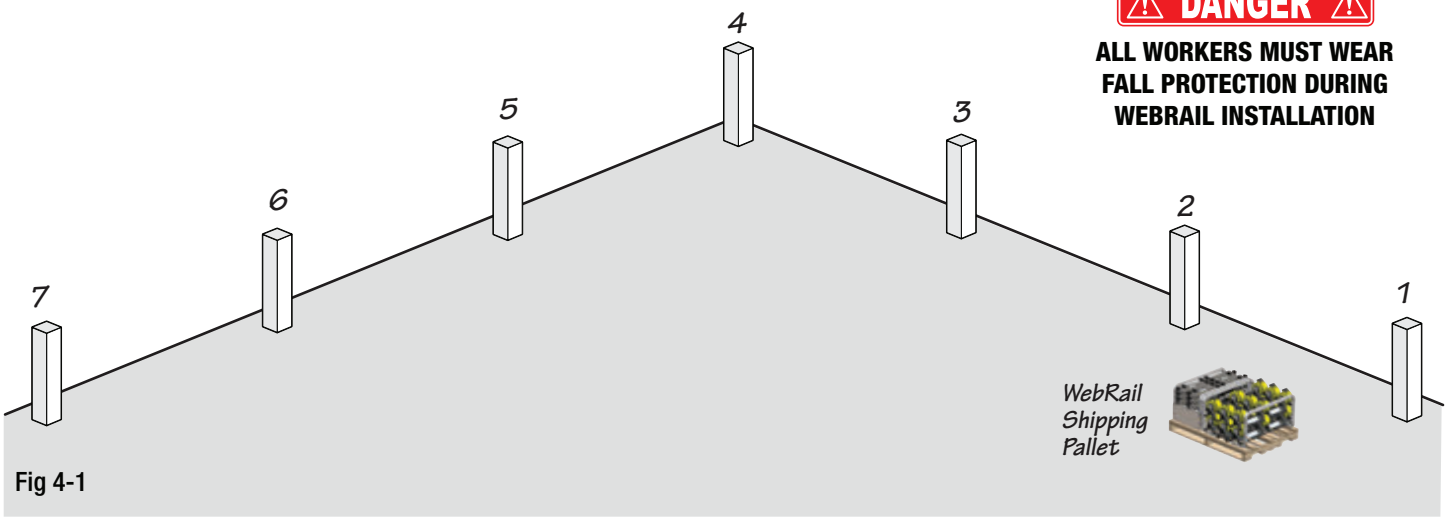


Fig 4-1

STEP 1 Place WebRail hardware at each Installation point

The WebRail System can be combined with multi-able WebRail's to cover distances greater then the original 186'.

Begin unloading the WebRail Shipping pallet at installation point #1.
Remove from the shipping pallet, placing the hardware near the column.

Each column set consist of:

- 1 WebRail post
- 2 ratchet binders
- 1 tension gauge
- 2 mid rail posts

Moving the shipping pallet to each installation point, unload one column set for the remaining columns, working in order 2, 3, 4, etc.

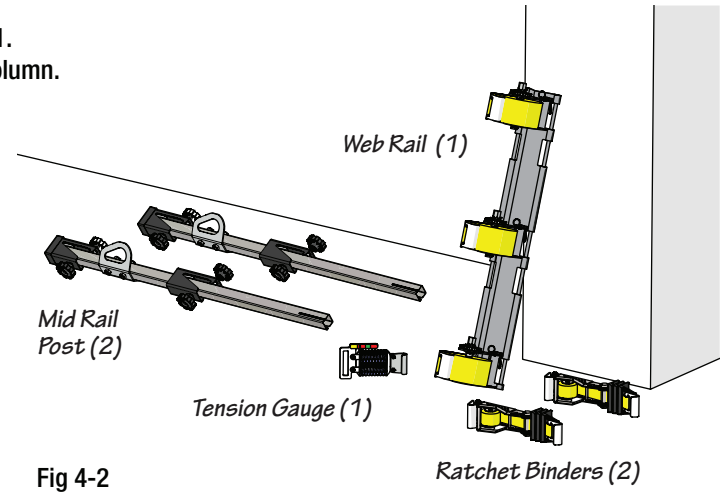


Fig 4-2

ATI
ATI-PRODUCTS & SERVICES
www.ati-constructionproducts.com
(888) 949-3199
sales@ati-constructionproducts.com

31 ft. WebRail Set Up Placement

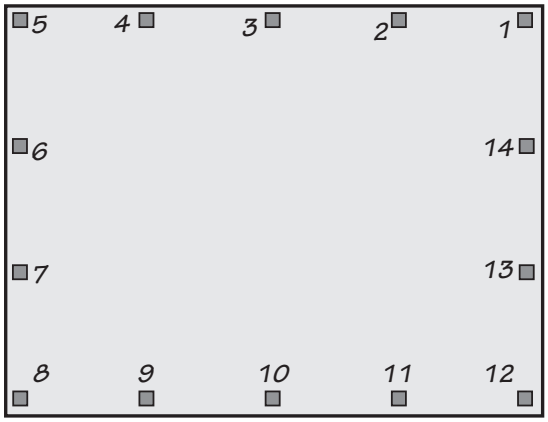


Fig 5-1

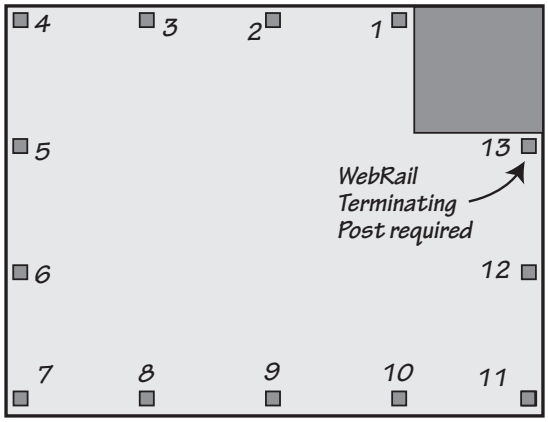


Fig 5-2

STEP 2 Install WebRail Terminating Post if needed

If the worksite has a continuous work flow as shown in Fig. 5-1, no end rail is required. In most installations, the worksite will have some work flow restrictions as show in Fig. 5-4. When the worksite installation is restricted, a Webrail Terminating Post is required.

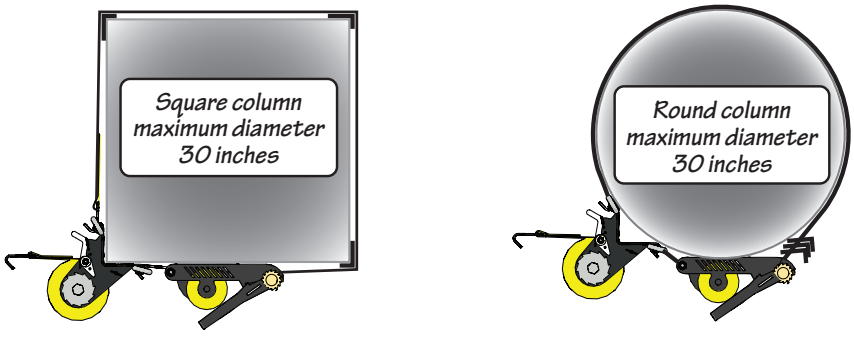


Fig 5-3

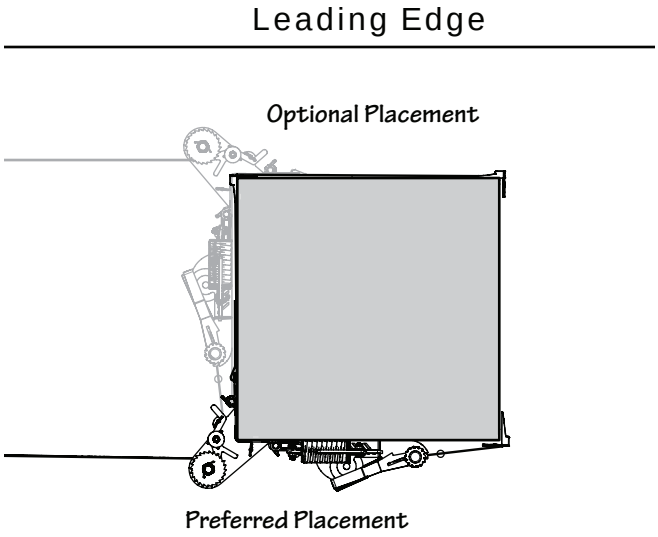



Fig 5-4

WebRail Post installation options:

The WebRail post may be mounted on the inside or outside of column as shown in Fig. 5-3. It is highly recommended for safer assembly purposes to mount the WebRail post on the inside column as shown left.

60 ft. WebRail Set Up Placement

The WebRail 360 ft. Transport Stack Pallet (Part ID: 73073) is designed 60 feet maximum distance. Middle rail post are positioned between column supports no more than the 10 ft. between any post (No more than 7 ft. for EM385-1-1 Compliance).

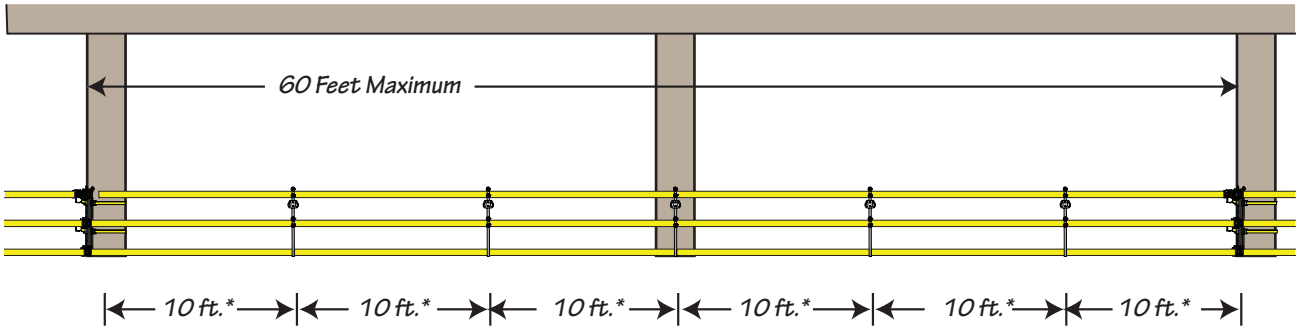

Maximum distance between WebRail and mid rail post approximately 10 feet .
*(*No more than 7 feet apart for EM385-1-1 Compliance)*

Fig 6-1

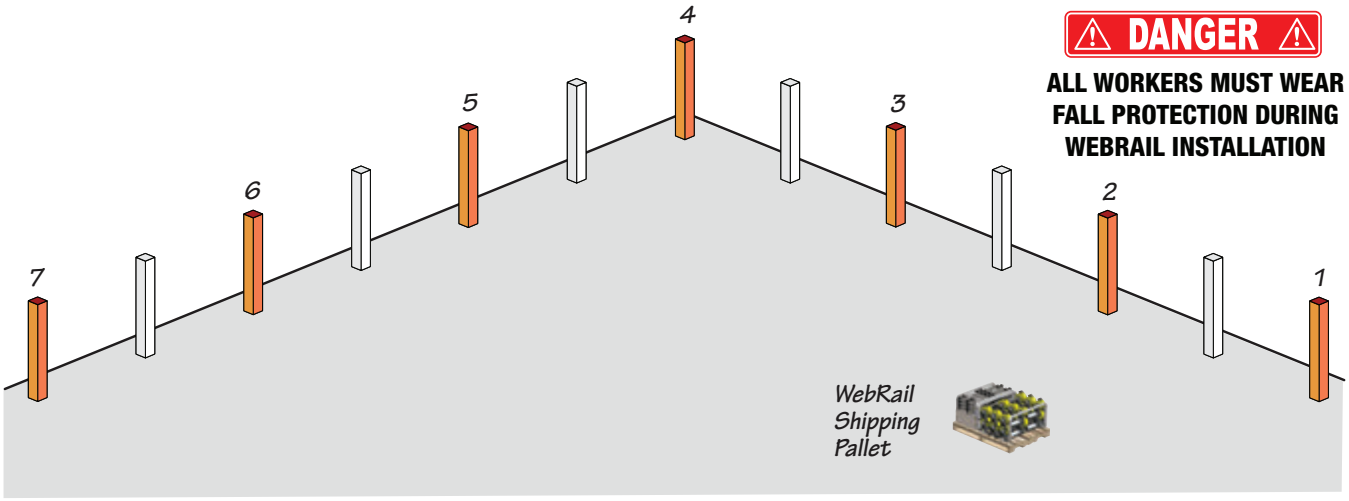


Fig 6-2

Place WebRail hardware at each Installation point
The WebRail System can be combined with multi-able WebRail's to cover distances greater then the original 360'.

Begin unloading the WebRail Shipping pallet at installation point #1.
Remove from the shipping pallet, placing the hardware near the column.

Each column set consist of:

- 1 WebRail post
- 2 ratchet binders
- 1 tension gauge
- 5 mid rail posts

Moving the shipping pallet to each installation point, unload one column set for the remaining columns, working in order 2, 3, 4, etc.

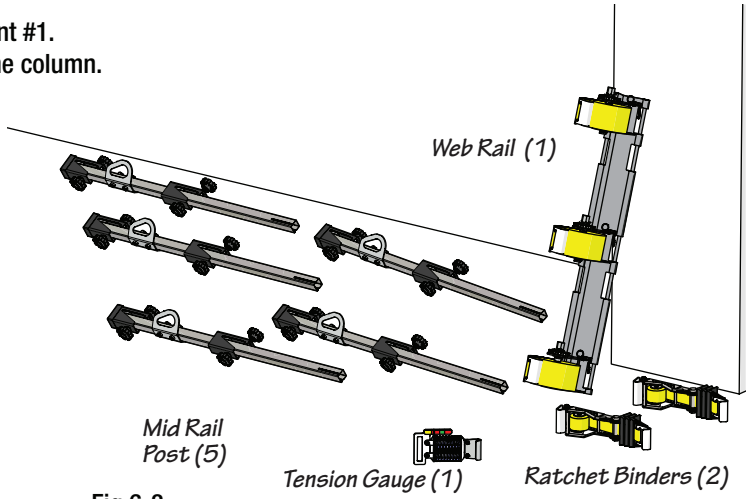


Fig 6-3

ATI
ATI PRODUCTS & SERVICES
www.ati-constructionproducts.com
(888) 949-3199
sales@ati-constructionproducts.com

60 ft. WebRail Set Up Placement

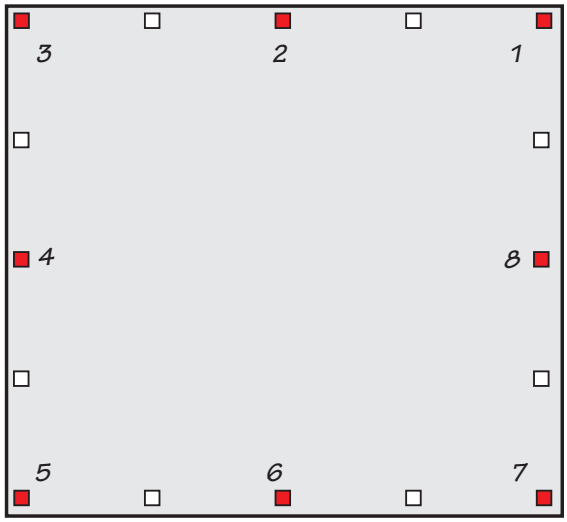
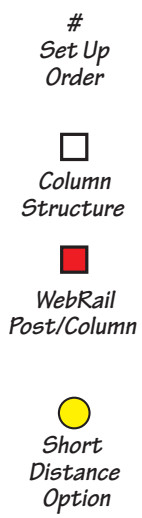


Fig 7-1



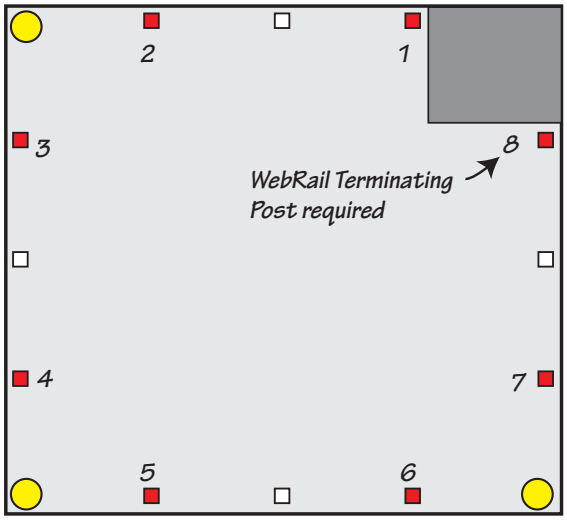


Fig 7-2

Position WebRail Terminating Post if needed

If the worksite has a continuous work flow as shown in Fig. 7-1, no end rail is required. In most installations, the worksite will have some work flow restrictions as show in Fig. 7-2. When the worksite installation is restricted, a Webrail Terminating Post is required.

WebRail Short Distance Installation Option

In the event column/structures are less than standard spacing, a terminating post may be added and used as a "Pass Though" post. Follow the directions for "Short Distance Pass Through Option" on page 17.

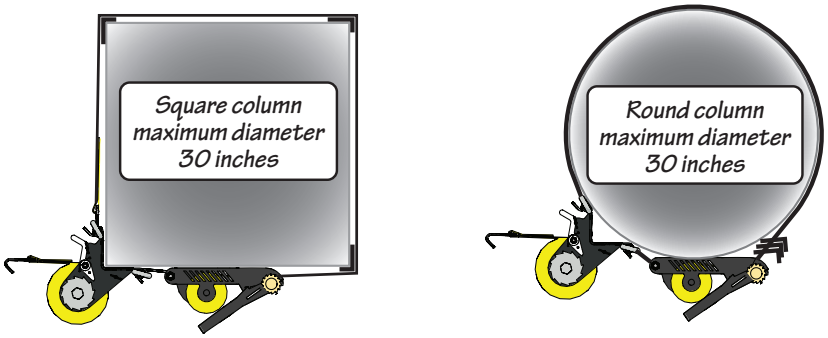


Fig 7-3

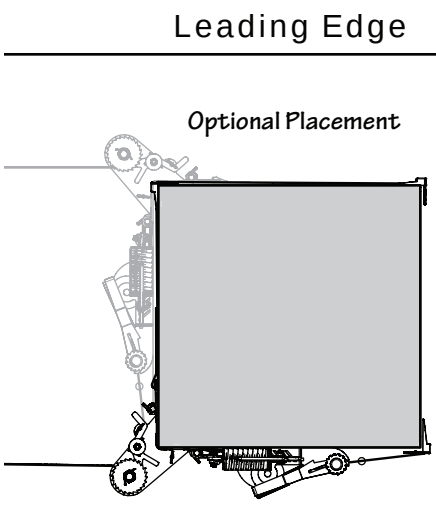


Fig 7-4

WebRail Post installation options:

The WebRail post may be mounted on the inside or outside of column as shown in Fig. 7-4. It is highly recommended for safer assembly purposes to mount the WebRail post on the inside column as shown left.

WebRail Terminating Post Installation

⚠ DANGER ⚠

ALL WORKERS MUST WEAR FALL PROTECTION DURING WEBRAIL INSTALLATION

If the worksite has a continuous work flow as shown in Fig. 4-3, WebRail End Post is not required. Proceed to the next page - "WebRail Post Installation"

STEP 1
Wrap WebRail binder strap around column for the WebRail Terminating Post. (2 workers required)

Place the WebRail Terminating Post on the right inside corner as shown in Fig 8-1. Position installers on both sides of the last column. Unwind about 5' - 6' of strap from the self retracting ratchet binder. While both installers are secured with fall protection, the first installer hands off the strap hook end to the second installer on the opposite side of the building column. It may be necessary to "Sling" strap hook end around the building column.

STEP 2
The ratchet binder WebRail column as shown in Fig. 8-2. The second ratchet binder will clip into the 4th connection slot as shown in Fig. 8-2. Connect the strap clip onto the opposite side connection slot on the WebRail End Post. Carefully spread out the 3 corner strap guards and position on each corner (#2, 3, 4) as shown in Fig. 8-3.

STEP 3 "SQUARE" COLUMN INSTALLATION
If installing on square columns, fully tension both ratchet binders at this time. Proceed to the next page - "WebRail Post Installation"

STEP 3 "ROUND" COLUMN INSTALLATION
If installing on round columns, do not tighten ratchet binders. Proceed to the next WebRail column setup. Once the next column is loosely installed return to the previous WebRail column and unwind the three strap spools to the next WebRail column.

Slide the strap hooks through the main WebRail housing as shown in Fig. 10-2 through Fig. 10-5.

Once all three strap hooks are secured to the WebRail post, fully tighten both ratchet binders.
NOTE: The corner protectors on round columns will flatten with fully tensioned strap. Once removed they will return to there normal shape.

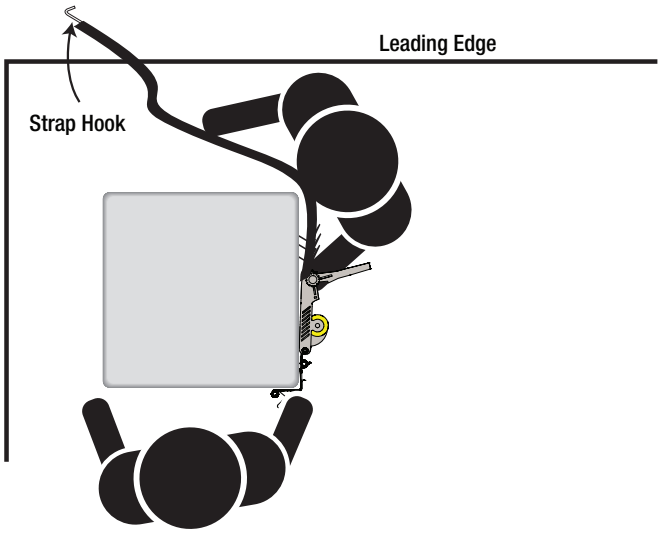


Fig. 8-1

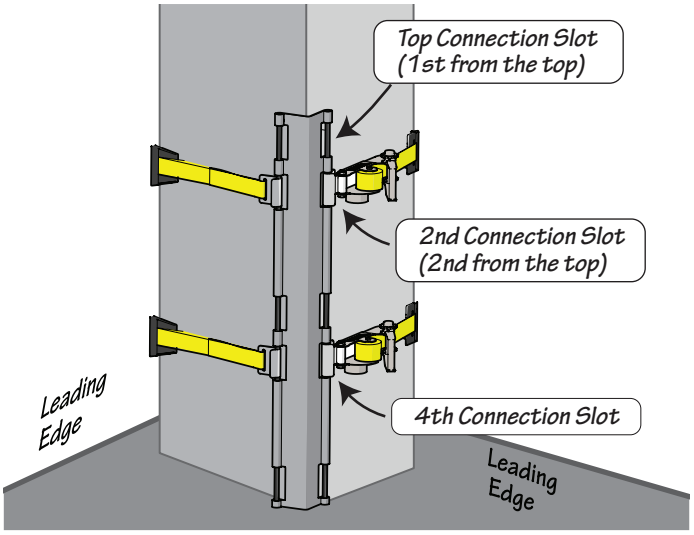


Fig. 8-2

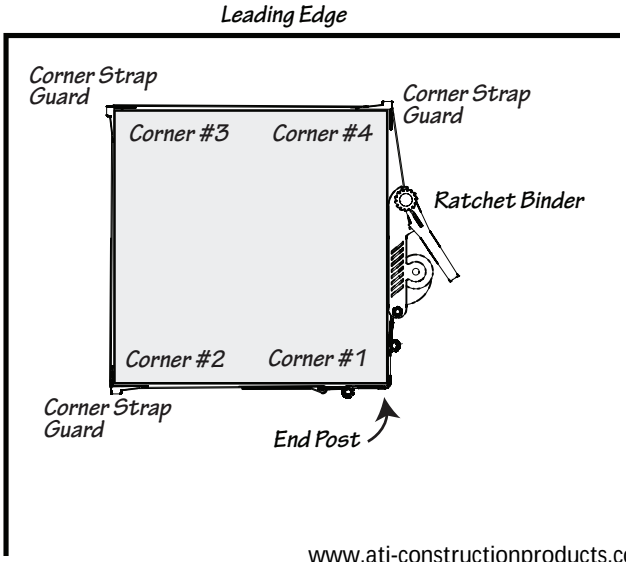


Fig. 8-3

ATI
ATI PRODUCTS & SERVICES
www.ati-constructionproducts.com
(888) 949-3199
sales@ati-constructionproducts.com

WebRail Post Installation

⚠ DANGER ⚠

ALL WORKERS MUST WEAR FALL PROTECTION DURING WEBRAIL ASSEMBLY

Moving on from the end post (if needed), proceed with the WebRail installation in reverse order (7, 6, 5 etc.).

STEP 1
Wrap WebRail binder strap around column (2 workers required)
Place the WebRail on the left inside corner as shown in Fig 9-1. Position installers on both sides of the column. Unwind about 5' - 6' of strap from the self retracting ratchet binder. While both installers are secured with fall protection, the first installer hands off the strap hook end to the second installer on the opposite side of the building column. It may be necessary to "Sling" strap hook end around the building column.

Pull out the strap around the column while allowing corner guards to spread out along the strap.

STEP 2
The ratchet binder clip will attach to the second connection slot on the WebRail column as shown in Fig. 9-2. The second ratchet binder will clip into the 4th connection slot. Connect the strap clip onto the opposite side connection slot on the WebRail End Post. Carefully spread out the 3 corner strap guards and position on each corner (#2, 3, 4) as shown in Fig. 9-3.

STEP 3 "SQUARE" COLUMN INSTALLATION
If installing on square columns, fully tension both ratchet binders at this time. Move on to STEP 4

STEP 3 "ROUND" COLUMN INSTALLATION
If installing on round columns, do not tighten ratchet binders. Proceed to the next WebRail column setup. Once the next column is loosely installed return to the previous WebRail column and unwind the three strap spools to the next WebRail column.

Slide the strap hooks through the main WebRail housing as shown in Fig. 10-2 through Fig. 10-5.

Once all three strap hooks are secured to the WebRail post, fully tighten both ratchet binders.
NOTE: The corner protectors on round columns will flatten with fully tensioned strap. Once removed they will return to there normal shape.

STEP 4
Repeat Steps 1-3 for the remaining columns.
Continue installation in reverse order finishing at the original starting point #1. At this time all columns should have WebRail post installed with ratchet binders fully tensioned.

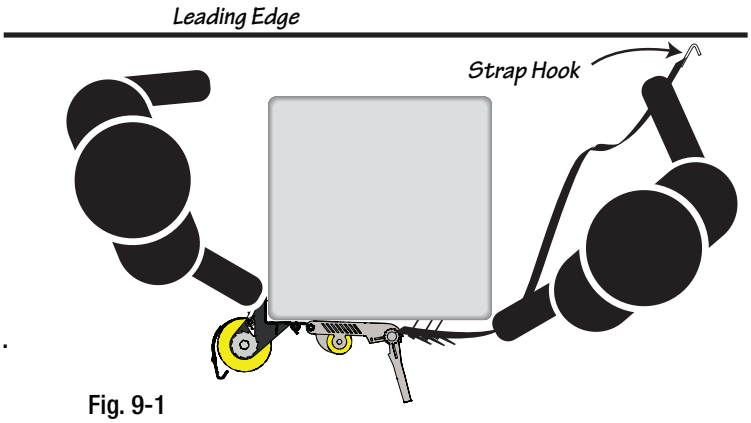


Fig. 9-1

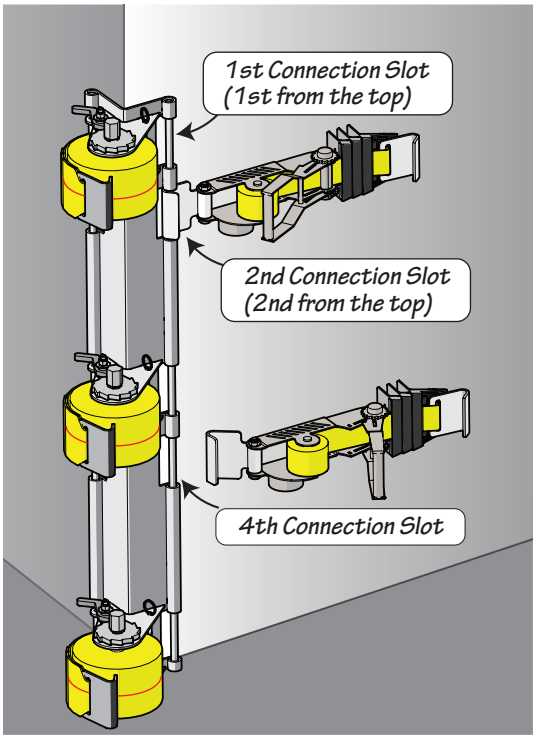


Fig. 9-2

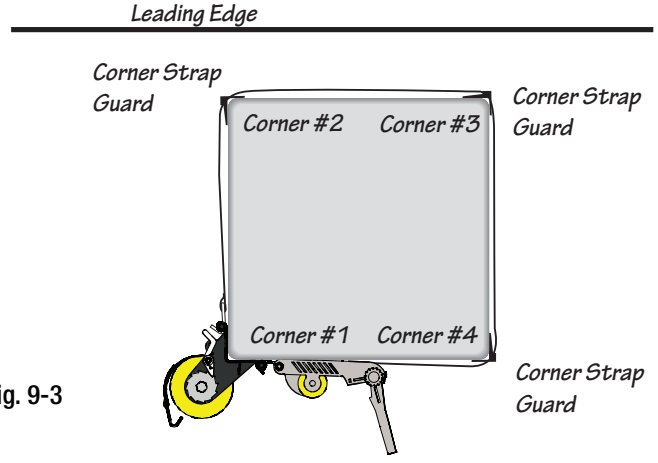


Fig. 9-3

WebRail Strap Rail Installation

At this point, your installation will resume at the original starting position #1. Proceed with the installation in order, position 2, 3, 4, etc.

STEP 1
Starting at the top strap spool, rotate the ratchet pawl on WebRail column (A) and move the detent pin (B) to position pawl so that it does not engage the spool gear as shown in Fig. 10-1. Repeat for the mid & toe rail spools.

Walk the webbing (C) out for each of the three spools to the next column, working in installation order 1, 2, 3, etc. .

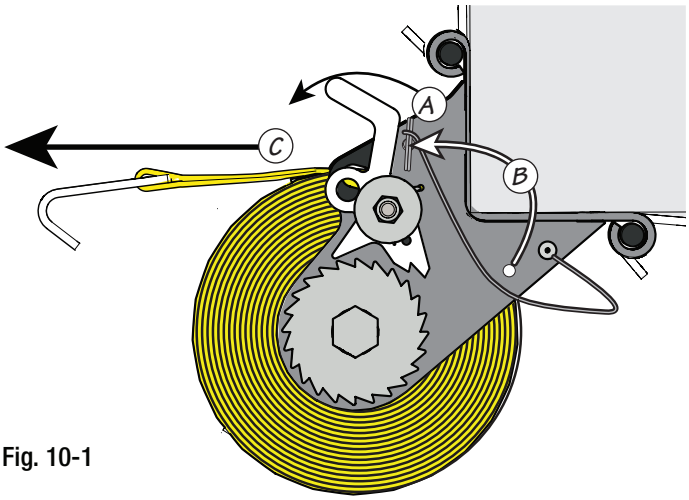
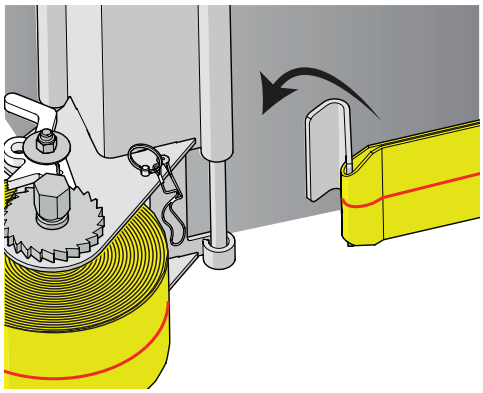
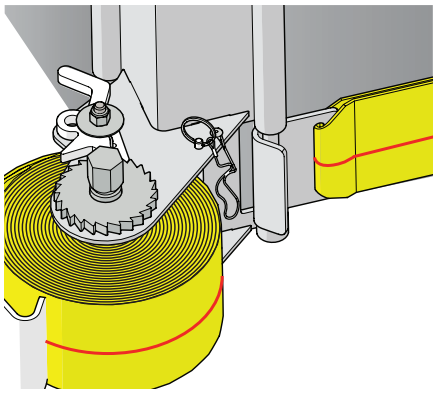


Fig. 10-1

STEP 2
Hook the ends of the mid and toe straps into the matching slots on the WebRail column as shown above in Fig. 10-2. Once mid and toe straps have been connected to the WebRail column return the detent pin to its original location (as shown in Fig. 10-1 “B”) so the ratchet pawl will engage the spool sprocket.


Fig. 10-2


Fig. 10-3

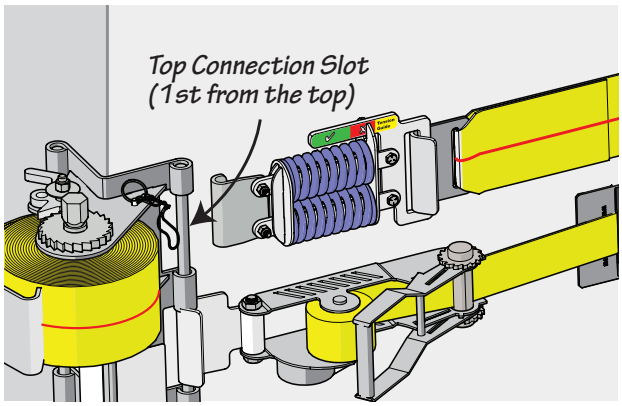
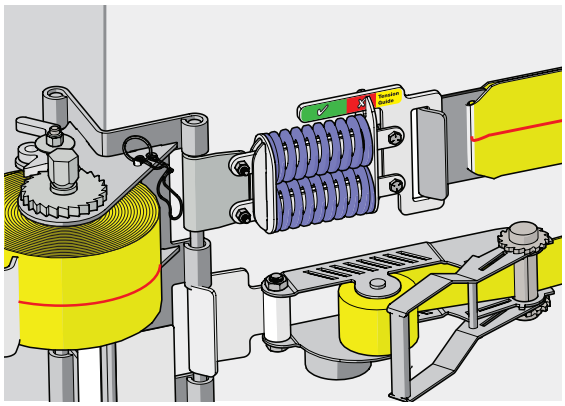


Fig. 10-4


Fig. 10-5

STEP 3
Position the tension gauge with the colored guide on top. Insert the WebRail hook into the slot on the right side of the tension guide. Insert the left side tension gauge hook into the top slot of the WebRail (1st slot from the top as shown in Fig. 10-4 & 10-5). Once the top rail strap has been connected to the WebRail column, return the detent pin to its original location (as shown in Fig. 10-1 “B”) so the ratchet pawl will engage the spool sprocket.

ATI
ATI-PRODUCTS & SERVICES
www.ati-constructionproducts.com
(888) 949-3199
sales@ati-constructionproducts.com

WebRail Strap Rail Installation

The following step will prevent strain on the worker tensioning the webbing.

When using webrail on spans shorter than max length of webbing:

- Completely unwind all the webbing.
- Pull extra webbing through the slot as shown right in Fig. 11-1.
- Once the slack has been removed, begin tension webbing.
- After the rail has been fully tensioned, roll up remaining webbing and zip tie any loose material

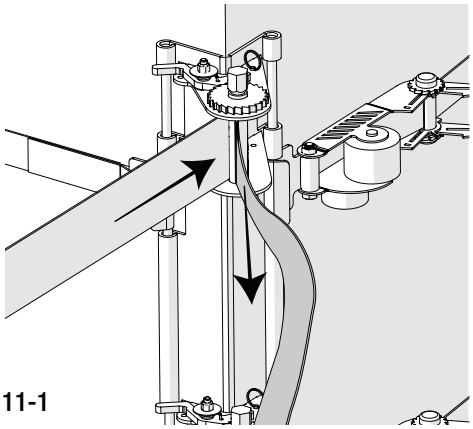


Fig. 11-1

The WebRail 186 ft. Transport Stack Pallet (Part ID: 72893) is designed 31 feet maximum distance between support structures.

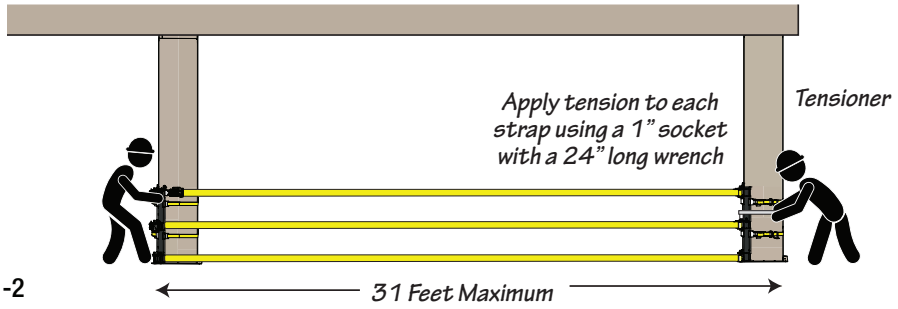


Fig. 11-2

STEP 4A

Position two workers at opposite ends of the WebRail section as shown in Fig. 11-2. Apply tension to the **mid rail then toe rail** strap using a 1" socket wrench with at least a 24" handle. Apply heavy/tight tension to the mid rail then apply moderate/light tension to the toe rail.

The WebRail 360 ft. Transport Stack Pallet (Part ID: 73073) is designed 60 feet maximum distance.

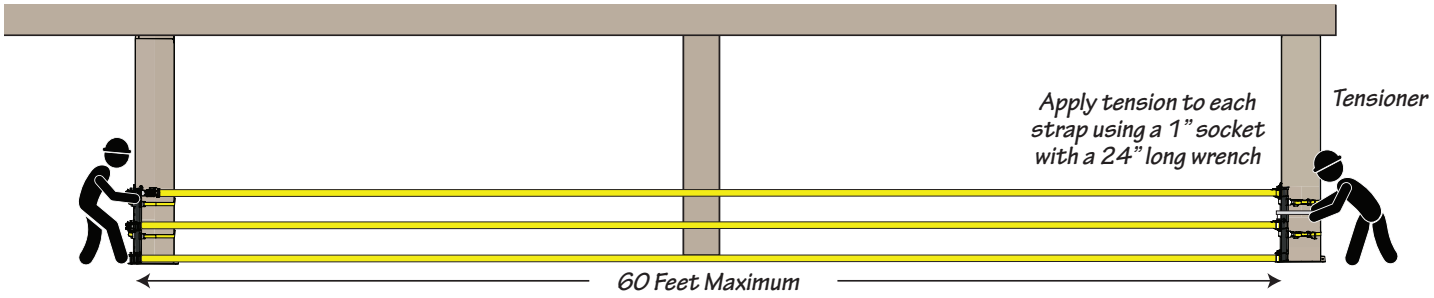


Fig. 11-3

STEP 4B

Position two workers at opposite ends of the WebRail section as shown in Fig. 11-3. Apply tension to the **mid rail then toe rail** strap using a 1" socket wrench with at least a 24" handle. Apply heavy/tight tension to the mid rail then apply moderate/light tension to the toe rail.

WebRail Strap Tensioning

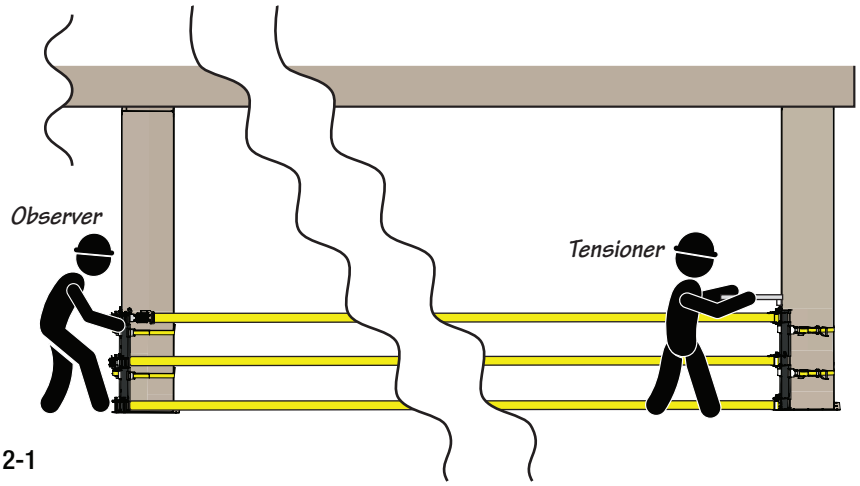


Fig. 12-1

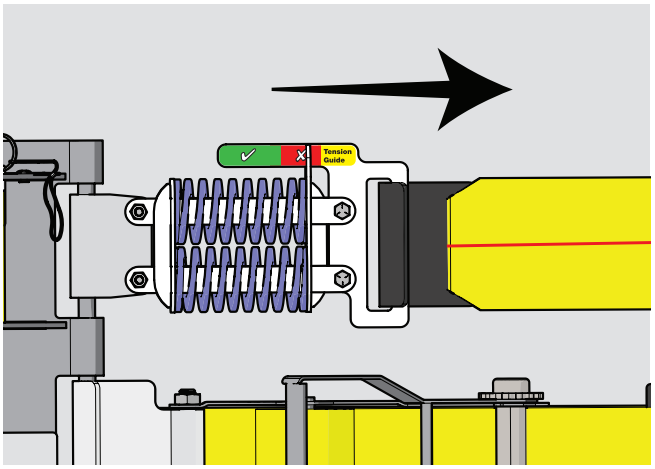


Fig. 12-2

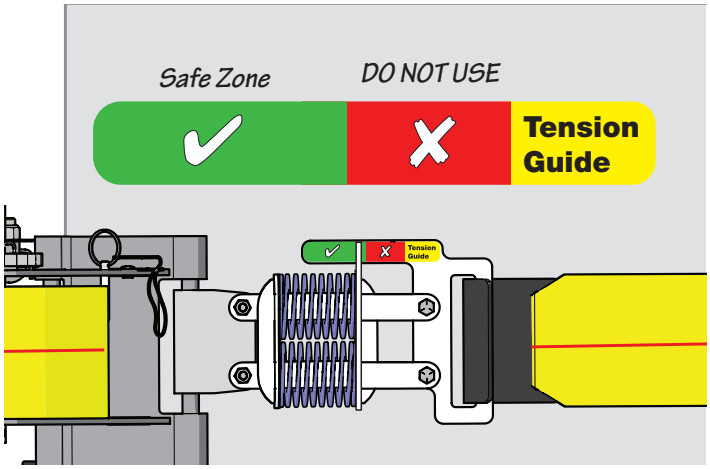


Fig. 12-3

STEP 5
Position two workers at opposite ends of the WebRail section as shown in Fig. 12-1. Apply tension to the top rail using a 1" socket wrench. As tension is applied to the top rail the tension guide/needle will move closer to the green "Safe Zone" shown in Fig. 12-2 & 12-3. Continue tensioning until the "Observer" worker notifies the "Tensioner" that the tension has reached the green "Safe Zone". Once the guide is in the "Safe Zone" stop tensioning and remove the socket wrench.

STEP 6
Fully tighten the Mid Strap, removing any slack.
Lightly tighten the Toe Strap, DO NOT OVER TIGHTEN
Over-tightening the Toe Strap may cause
the strap to rise above the work surface.



Fig. 12-4

STEP 7
Once the Toe, Mid, and Top straps have been properly tensioned,
it is safe to move on to the next WebRail section.
Repeat Strap Rail installation Steps 1-6 moving in order,
positions/sections 2-3, 3-4, 4-5, etc. ending at the WebRail terminating post.

ATI
ATI-PRODUCTS & SERVICES
www.ati-constructionproducts.com
(888) 949-3199
sales@ati-constructionproducts.com

WebRail Mid Rail Post

Position the WebRail mid rail post between each column post no more than 10 ft apart.
WARNING: Place the WebRail mid rail post with the fall arrest connection points toward the leading edge as shown in Fig 13-4.

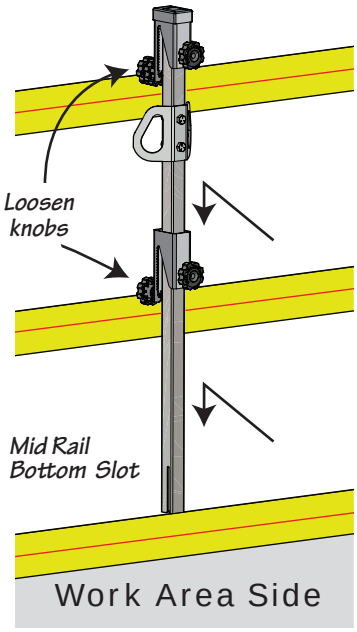


Fig. 13-1

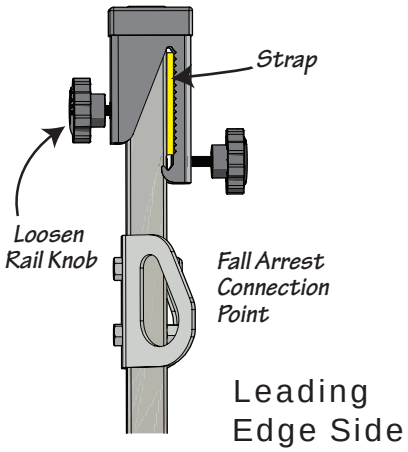


Fig. 13-2

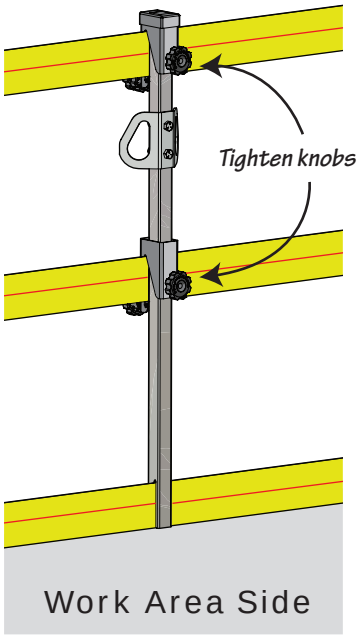


Fig. 13-3

Loosen the top knobs from each connection point as shown in Fig. 13-1. Align the mid rail post perpendicular to the strap. Lower the mid rail down over the top and mid strap and slide bottom of the mid rail over the toe rail and webbing

Slide the strap rail in between the clamp and post. The strap rail must the flat against the rail posts without and folding or binding as shown in Fig. 13-2

Position the mid rail's equally between the WebRail post columns no more than 10 ft* between each as shown in Fig. 13-5. Tighten all knobs once in final position (*No more that 7 ft. apart for EM385-1-1 Compliance).

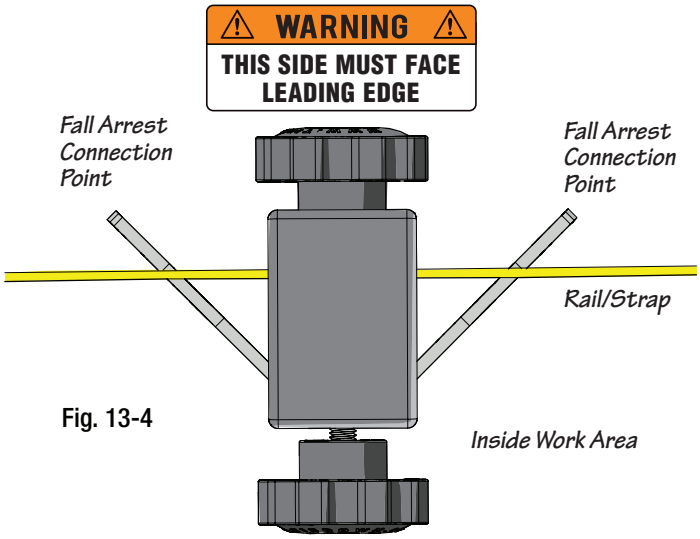


Fig. 13-4

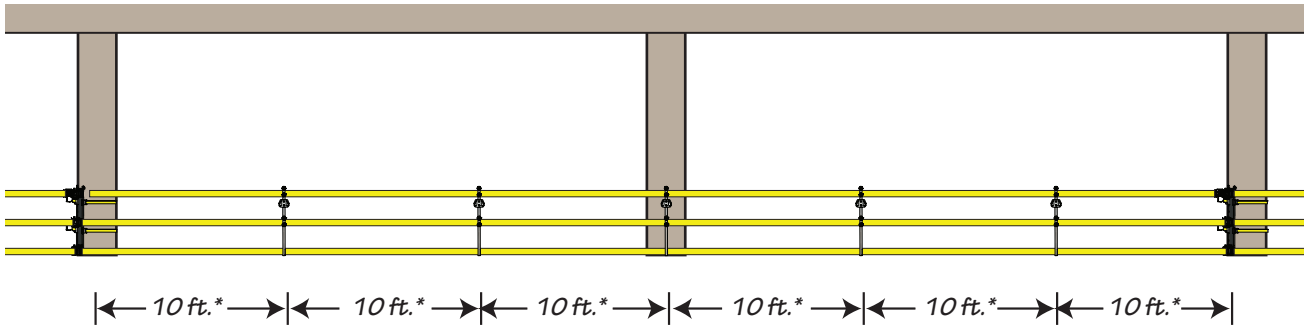


Fig. 13-5

Maximum distance between WebRail and mid rail post approximately 10 feet .
*(*No more than 7 feet apart for EM385-1-1 Compliance)*

Fall Arrest Set Up

WebRail may be used to support a MAXIMUM 4 workers (per each WebRail post 31 ft. or 60 ft. post) for use in Fall Arrest applications.
Maximum free fall is 6', or up to 12' if used in combination with equipment explicitly certified for such use. Prior to use as a Fall Arrest System, careful inspections regarding the Fall Arrest set up should be giving additional attention. All connection hardware must be selected and deemed compatible with WebRail by a Competent Person. Read and understand all instructions provided with accessories to be used in combination with WebRail.

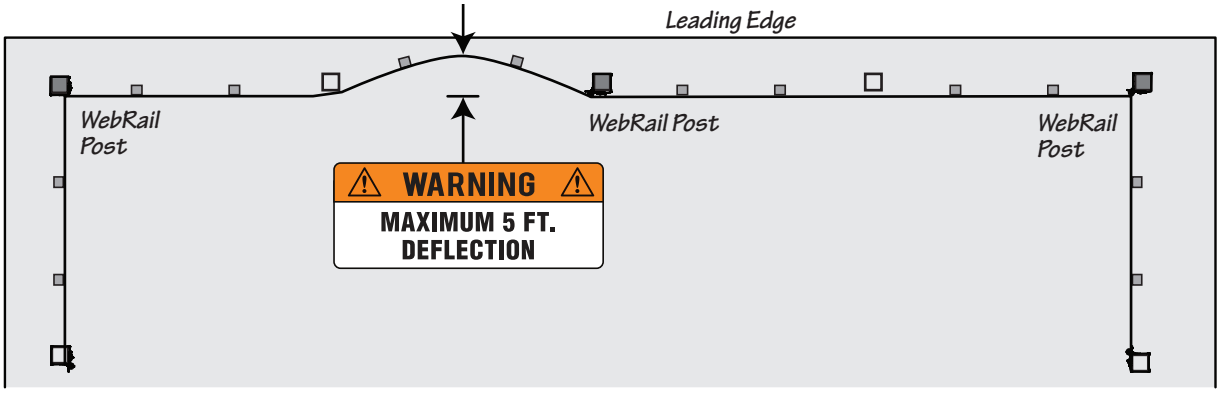


Fig. 14-1

Prior to connection any fall arrest hardware, full job site inspection must take place.

WARNING

MAXIMUM WEBRAIL STRAP DEFLECTION IS 5 FT.
In the event any deflection extends too close to the leading edge, the job site Safety Officer must determine the acceptable use of any fall arrest system.

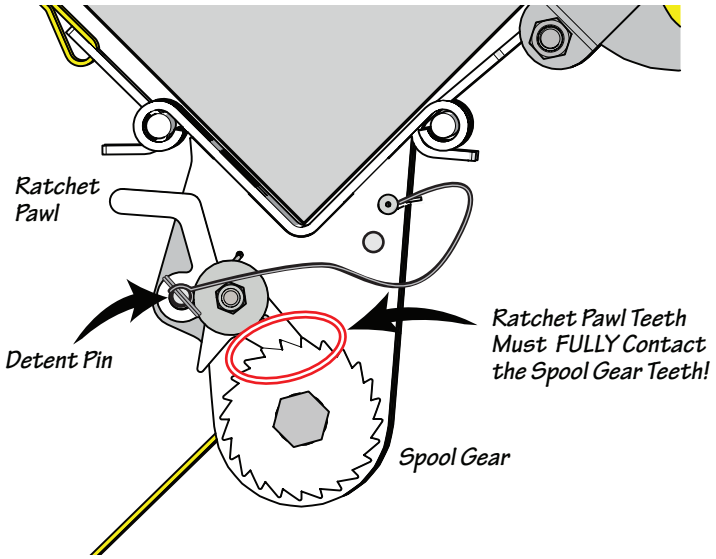


Fig. 14-2

Prior to connecting any fall arrest, inspect each WebRail spool gears (top, mid and toe). Fully tensioned strap must have the ratchet pawl teeth seated/engaged with the main spool gear. The detent pin must be secured through the ratchet pawl and WebRail frame as shown in Fig 14-2.

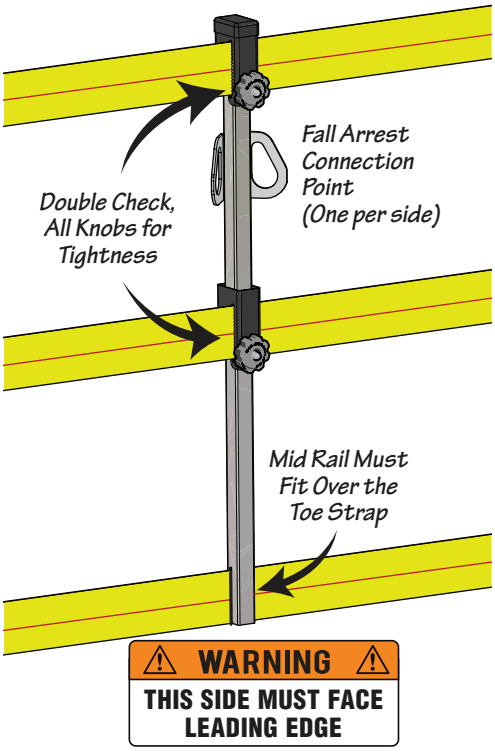


Fig. 14-3

www.ati-constructionproducts.com
(888) 949-3199
sales@ati-constructionproducts.com

Non Standard Installation Options

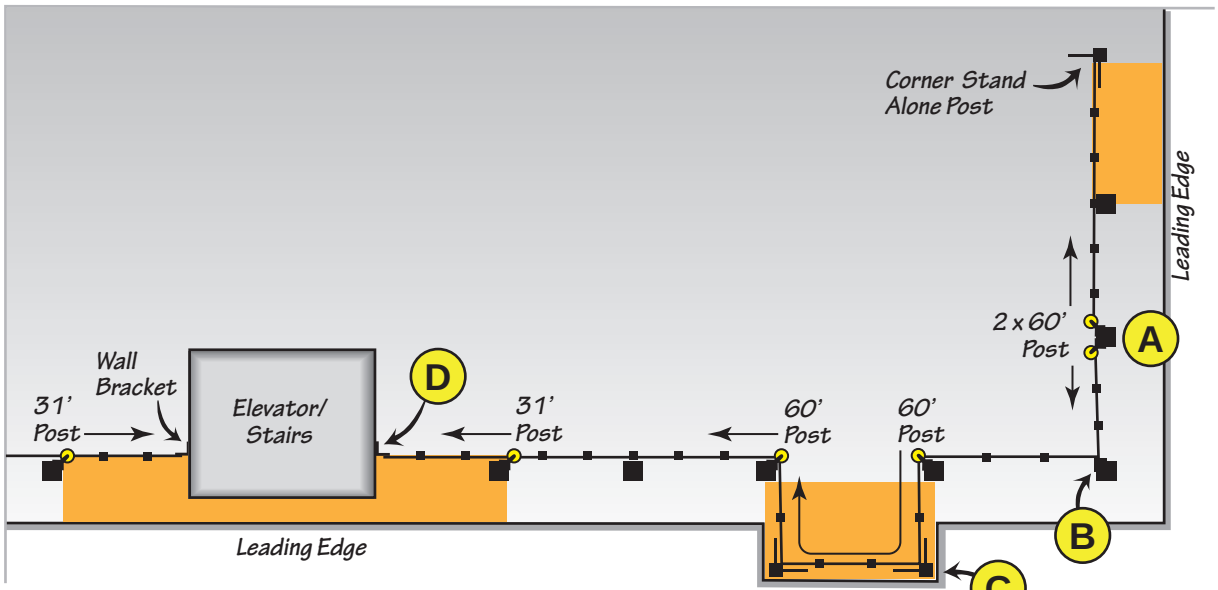


Fig. 15-1

NO FALL ARREST ZONES
Fall arrest brackets must be removed from mid rail post.

Sometimes the standard WebRail column to column post installation can be interrupted by building structures and other architectural designs. The WebRail system can be modified for non standard installations, in some occasions additional hardware may be required. The options shown are brief descriptions detailing minor modifications to current installation or the use of addition mounting hardware.

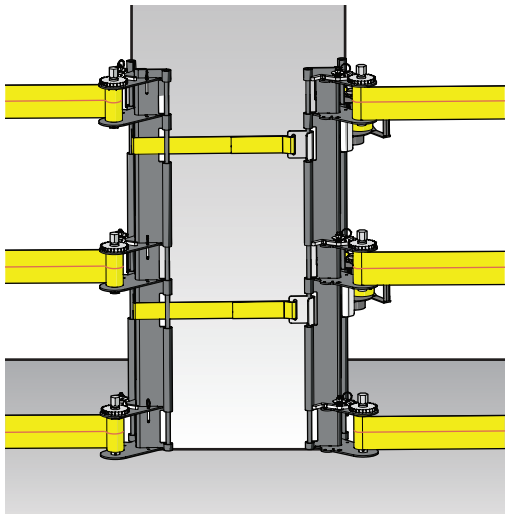


Fig. 15-2

A

Back to Back WebRail Option
Occasionally during the initial setup/layout a continuous WebRail "Run" may be altered by installing two WebRail's on one column.

Two WebRail's may be installed on one column by positioning them back to back as shown left in Fig. 15-2. The back to back WebRail's must be secured with two ratchet binders. The ratchet binder straps/hooks must be passed through both WebRail post.

Non Standard Installation Options

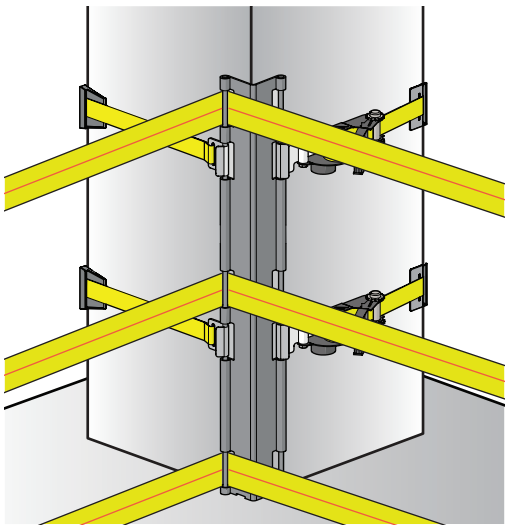


Fig. 16-1

B

Short Distance Pass Through Option
When the route of the WebRail encounters a short distance between columns a terminating post may be used as a "Pass Through" WebRail post. Passing the WebRail strap through the terminating post reduces the need for a full WebRail post and extends the overall distance of the WebRail run.

Follow the standard terminating post installation on page 8. Then simply pass the strap/hook through one side of the terminating post, as detailed on page 17, continue pulling the strap through to the next WebRail post. Once the three straps have been connected to the next WebRail continue standard installation as show on page 9.

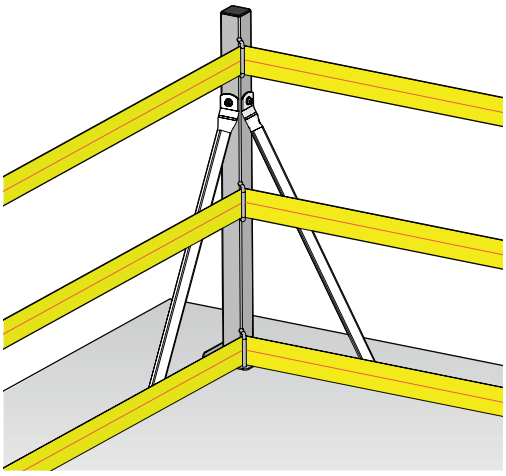


Fig. 16-2

C

Corner Post/End Run Option
When the route of the WebRail encounters areas without any column supports the optional WebRail Corner Post may be installed. Areas without any column supports include ledges, balcony's, runs that end against a end wall or other building structure. The corner post is purchased separately, one post per kit.

NOTE: The use of the Corner Post restricts the full WebRail run (WebRail to Webrail Post) as a "No Fall Arrest Zone" as described on page 18.

The WebRail Corner Post is mounted to the concrete floor using concrete anchors or other specialty ground anchors. Follow installation instructions included with the WebRail Corner Post kit.

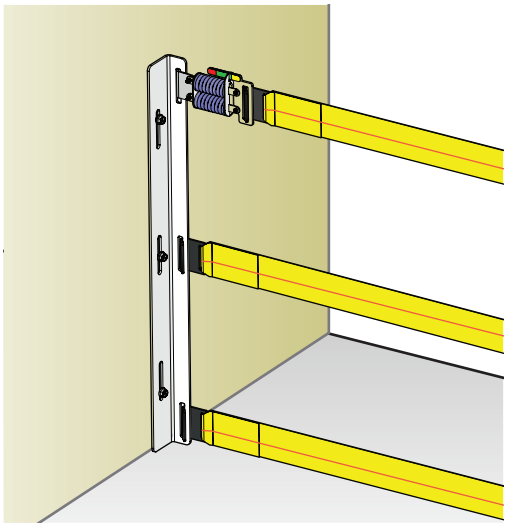


Fig. 16-3

D

Wall Mount Option
When the route of the WebRail ends into a building structure or end wall, the WebRail Wall Mount can used in place of a WebRail post or terminating post. The WebRail Wall Mount is purchased separately, one post per kit.

NOTE: The use of the Wall Mount restricts the full WebRail run (WebRail to Webrail Post) as a "No Fall Arrest Zone" as described on page 18.

The WebRail Wall Mount is attached to the wall using concrete anchors or other specialty anchors. Follow installation instructions included with the WebRail Wall Mount kit.

ATI
ATI-PRODUCTS & SERVICES
www.ati-constructionproducts.com
(888) 949-3199
sales@ati-constructionproducts.com

Short Distance Pass Through Option

In the event column/structures are less than standard spacing, a terminating post may be added and used as a “Pass Thought” post.

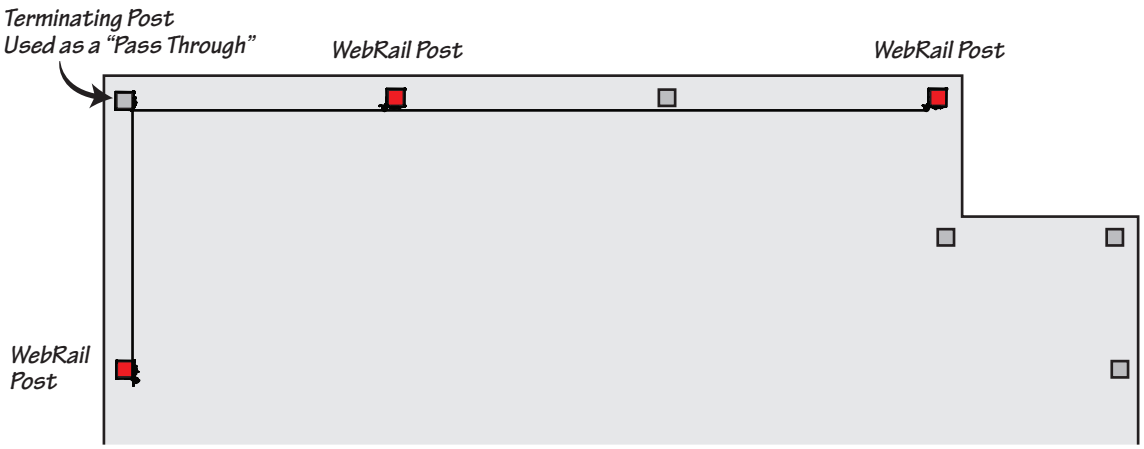


Fig. 17-1

STEP 1
Install the terminating post by following the standard installation instructions for “WebRail Terminating Post Installation” on page 8.

STEP 2
Insert the strap hook through the top strap connection slot on top of the terminating post as shown in Fig. 17-2.

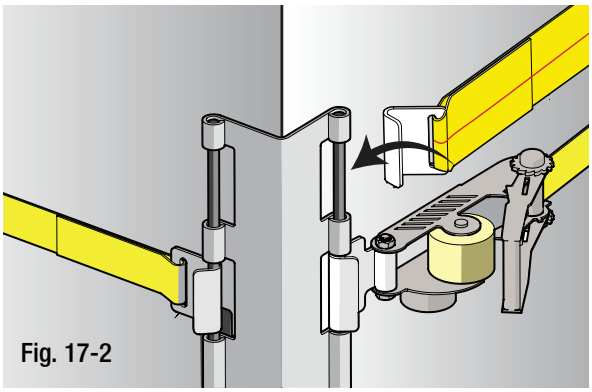


Fig. 17-2

STEP 3
Pull the strap through the post by hand advancing the strap through the terminating post as shown in Fig. 17-3. Continue pulling the strap until the strap hook connects to the next WebRail post.

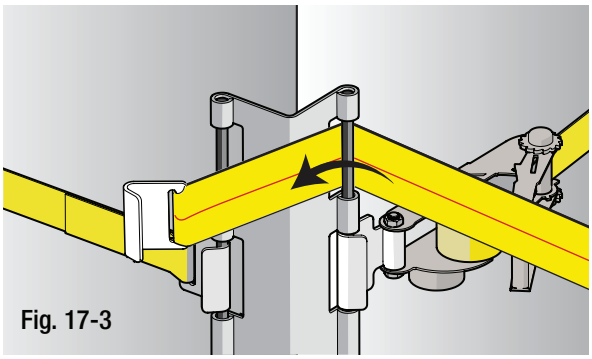


Fig. 17-3

STEP 4
Repeat Steps 1-3 for the mid rail and toe rail straps.

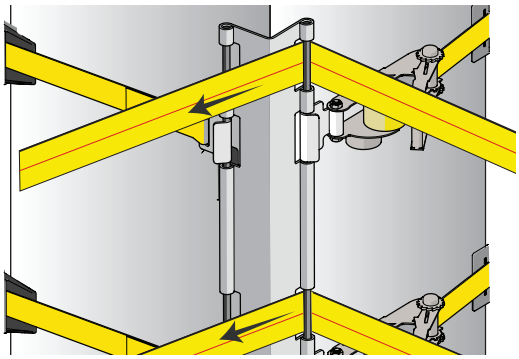


Fig. 17-4

No Fall Arrest Zones

Installing the WebRail system in some non standard installations, will prevent the use of any fall arrest. These occasions are described as “NO FALL ARREST ZONES” and include the use of the corner post and/or wall mounts. **“No Fall Arrest Zones” includes the full WebRail run (WebRail to Webrail Post).** The On-Site safety supervisor must review all WebRail installation points and determine any areas that are too hazardous for fall arrest.

Any WebRail installation within a “NO FALL ARREST ZONE” must have fall the arrest connection brackets on the mid rail post removed.

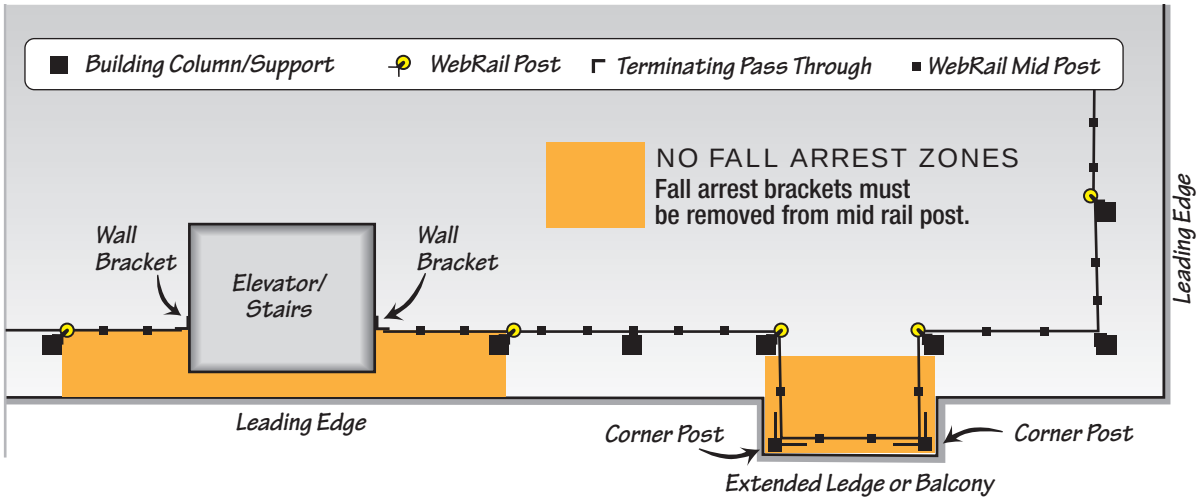


Fig. 18-1

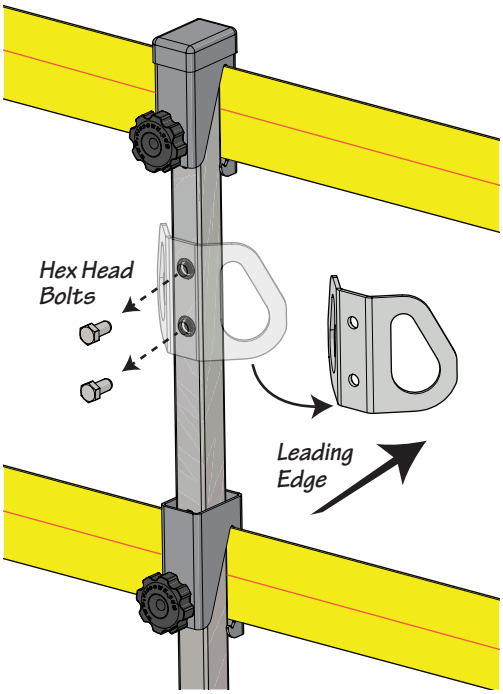


Fig. 18-2

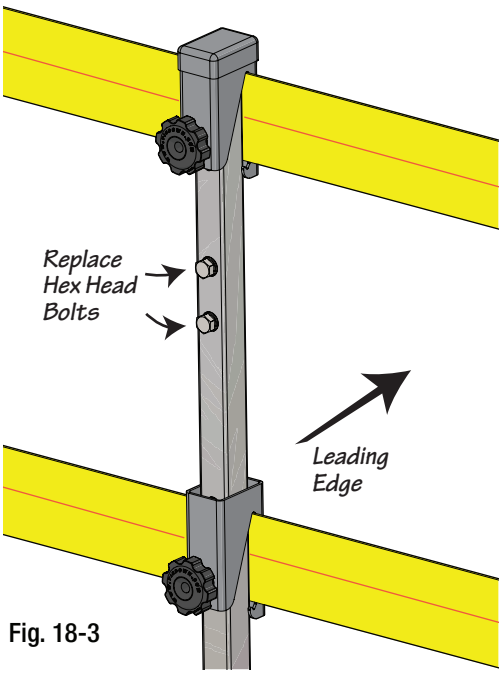


Fig. 18-3

STEP 1
Once the WebRail strap is fully tensioned and the mid rails are fully installed. Proceed to any NO FALL ARREST ZONES. Remove the 2 hex head bolts from the mid rail post as shown in Fig. 18-2. Remove the fall arrest connection bracket. Carefully store the connection bracket in a safe location preferably the WebRail shipping pallet.

STEP 2
Replace the two hex head bolts into the top of the mid rail post as shown above in Fig. 18-3.

ATI
ATI-PRODUCTS & SERVICES
www.ati-constructionproducts.com
(888) 949-3199
sales@ati-constructionproducts.com

Fall Event - Rescue

Even when all steps are taken to prevent them, falls can still occur. If a worker falls, you should call 911 immediately, but because time is sensitive when a worker is hanging in a harness susceptible to suspension trauma, it is crucial to be prepared by having a detailed rescue plan. OSHA mandates that an employer provide for prompt rescue of employees or ensure that employees are able to rescue themselves. If a worker is not injured after a fall, self-rescue through devices with descent capability may be the best option. However, because some rescue situations are more complicated and injuries preventing self-rescue do occur, it is important for employers to ensure availability of trained rescue personnel and ladders, lifts, or other rescue equipment. Once the worker is moved to a safe area, a certified individual should perform normal first aid procedures. Even if you are able to rescue the worker and they don't seem injured, they should be examined by a medical professional.

Before rescuing a fallen employee....
It is recommended to call 911 before making rescue attempt

DO NOT ATTEMPT TO RESCUE THE WORKER UNLESS YOU ARE PROPERLY TIED OFF TO AN APPROPRIATE ANCHORAGE CONNECTION (TO BE DETERMINED BY SITE SAFETY OFFICER).
ATTEMPTING TO RESCUE A WORKER WHEN NOT BEING PROPERLY CONNECTED TO AN APPROVE ANCHORAGE CONNECTION CAN RESULT IN SERIOUS INJURY INCLUDING DEATH.


Workers must be properly trained in the event of a fall rescue. Do not use the Tie Down WebRail System unless you are trained by a competent person and that training must be documented to have been conducted prior to use. Failure to properly train on the safe use of the Tie Down WebRail System could result in serious injury including death.

WARNING


IN THE EVENT OF A FALL, THE AFFECTED SECTION OF THE WEBRAIL SYSTEM MUST BE PERMANENTLY REMOVED FROM SERVICE. INCLUDING: THE MAIN UPRIGHT ASSEMBLY, MID-RAIL POST, STRAP TENSIONER, AND RATCHET BINDERS MUST ALL BE PERMANENTLY REMOVED FROM SERVICE.

Before the WebRail can be returned to service, the entire WebRail perimeter must be thoroughly inspected (Daily Checklist) for any signs of damage or weakness.


NOTE: If using the 60 ft. WebRail, only the involved Mid Rail Post should be removed. The remaining post used in the affected section must be throughly inspected.

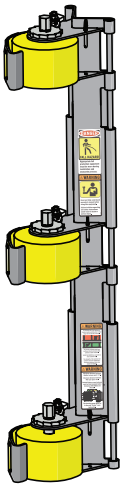


WebRail Main Upright (1)



Strap Tensioner (1)



Ratchet Binder (4)



Mid Rail Post (see note)

WebRail Operational Lock Out

Once the entire WebRail system as been fully installed, the Safety Officer has the option to apply the safety lock out. The lock out can be left in effect until the construction is complete.

Lockout/tagout (LOTO) devices (not included) as a safety option to reduce the risk of injuries. Lockout padlocks prevent the lockout device from being removed accidentally. Tagout tags install on the padlock to indicate the equipment is locked out and identify the lock owner.

Each of the three strap spools has a lock out hole on the ratchet pawl. Once the strap has been properly tensioned, the ratchet pawl lock out hole should align with the matching hole on the WebRail frame as shown in Fig. 20-1.

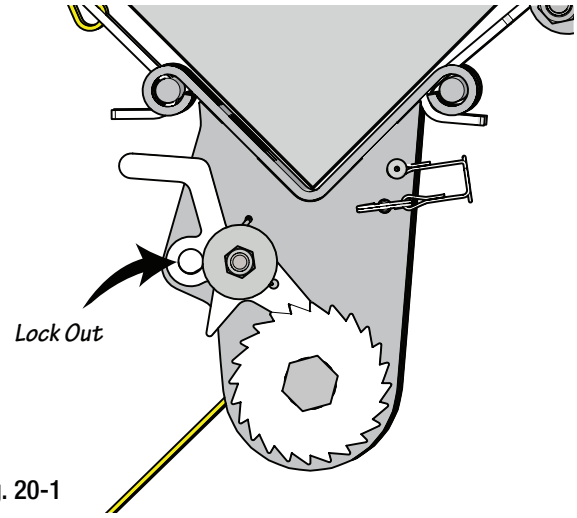
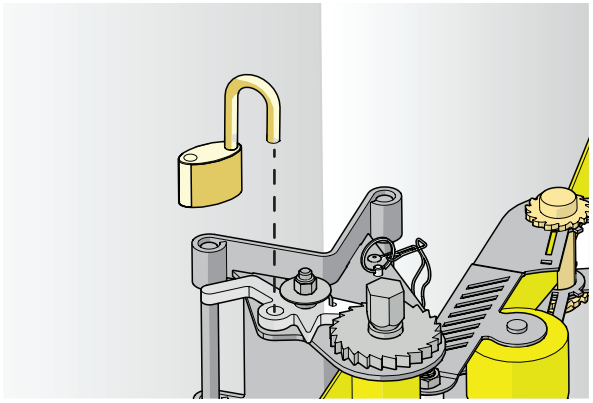


Fig. 20-1

While each strap spool has the lock out option, it is recommended that only one strap spool be locked out. When lock outs are required, all WebRail column assemblies should have lock outs and lock out tags attached as shown in Fig. 20-3.

In addition to locking out the WebRail, the ratchet binders can be temporary locked out. Make sure the ratchet binder is full tensioned. Pull the release handle outward and rotate the handle to the left side/ closed position as shown in Fig 20-4. Make sure the tension release handle is fully locked with the ratchet spool. Wrap a stainless steel strap tie around the tension release and the welded rod as shown in Fig 20-5.


Fig. 20-2

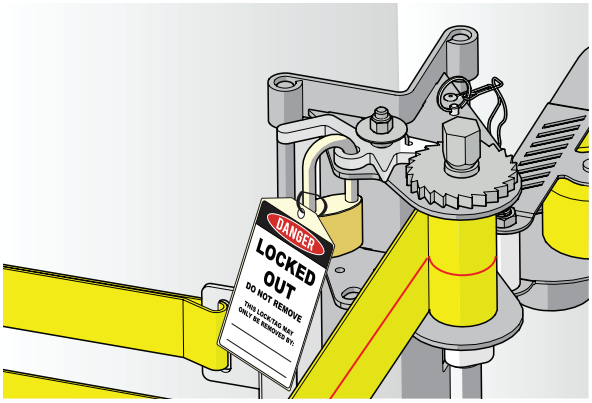
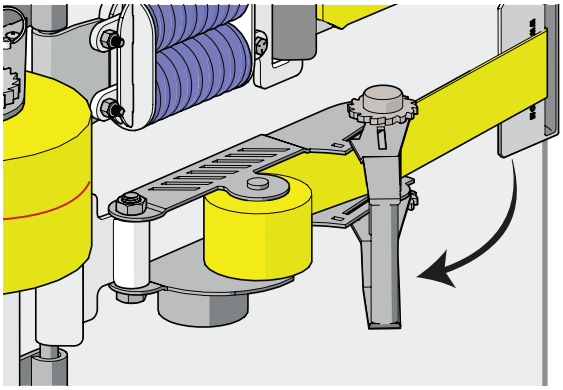


Fig. 20-3


Fig. 20-4

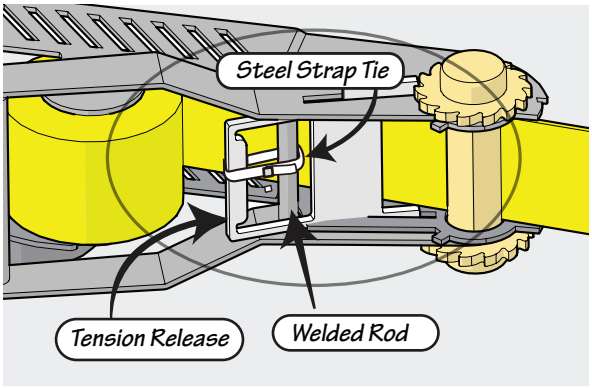


Fig. 20-5

ATI
ATI-PRODUCTS & SERVICES
www.ati-constructionproducts.com
(888) 949-3199
sales@ati-constructionproducts.com

Out Of Service Lock Out

If this equipment fails inspection or damaged during use, it must be remove from service.

Damage or deficiencies include, but are not limited to, cut/torn strap, deformation, corrosion, burrs, cracking, rust, pits, alteration, damaged parts, and missing or unreadable labels.

If a individual WebRail post is out of service on a job site, it must have lock out installed preventing anyone from using that WebRail post.

Each of the three strap spools has a lock out hole on the ratchet pawl. The ratchet pawl lock out hole should align with the matching hole on the WebRail frame.

While each strap spool has the lock out option, it is recommended that only one strap spool be locked out.

Secure the lock with the ratchet pawl/WebRail frame. Attach “DO NOT OPERATE” lockout tag to the lock as shown in Fig. 21-2.

The inspector/operator must sign the tag.

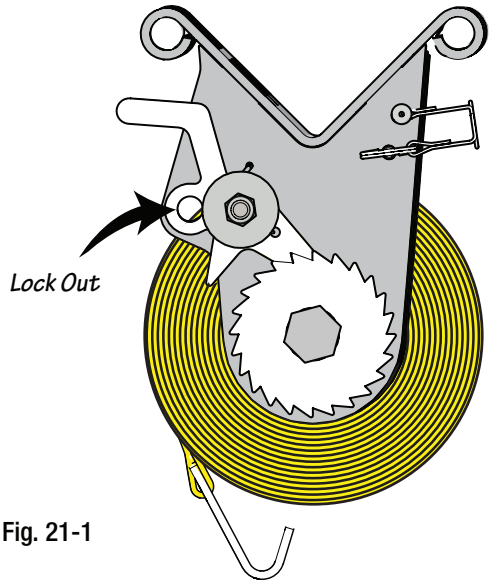


Fig. 21-1

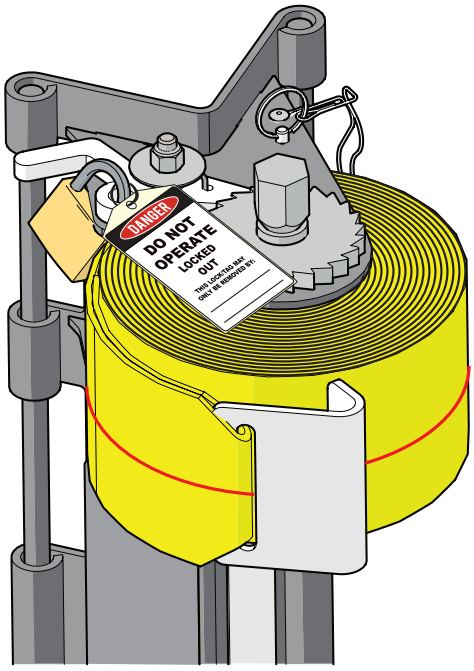


Fig. 21-2

WebRail Dismantle

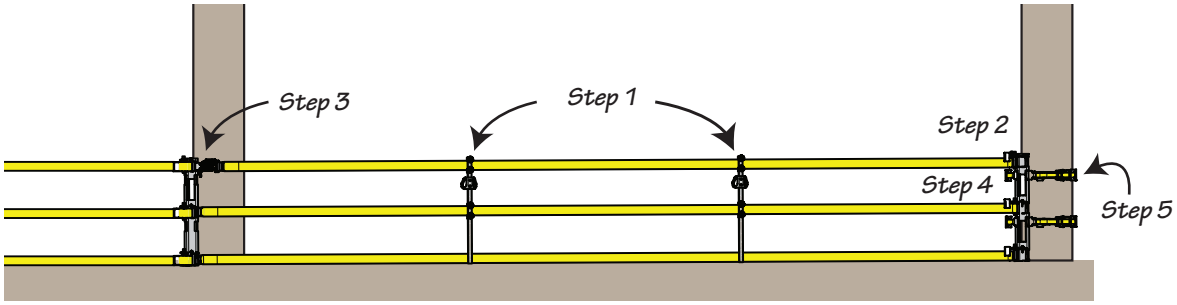


Fig. 22-1

Begin the WebRail dismantling by starting at either end of the full assembly. Dismantle the WebRail working on one section at a time.

Step 1
Remove the mid rail posts. Loosen the top knobs, and rotate the post slightly removing the strap. Tighten the knobs, and set aside.

Step 2
Working from the WebRail post, place a 1" socket wrench over the top rail spool tension spool socket. Apply tension by turning the spool clockwise (A).

WARNING: RETAIN FULL TENSION ON THE WRENCH.
Rotate the ratchet pawl on WebRail column outward releasing from the tension spool (B), slowly allowing the wrench to rotate back several spool "Clicks". Release the ratchet pawl locking the spool in place.
WARNING: RETAIN FULL TENSION ON THE WRENCH.

Once again, rotate the ratchet pawl on WebRail column outward releasing from the tension spool (B), allowing the wrench to rotate back several spool "Clicks". Once all tension is released, move the detent pin (C) to position pawl so that it does not engage the spool gear.

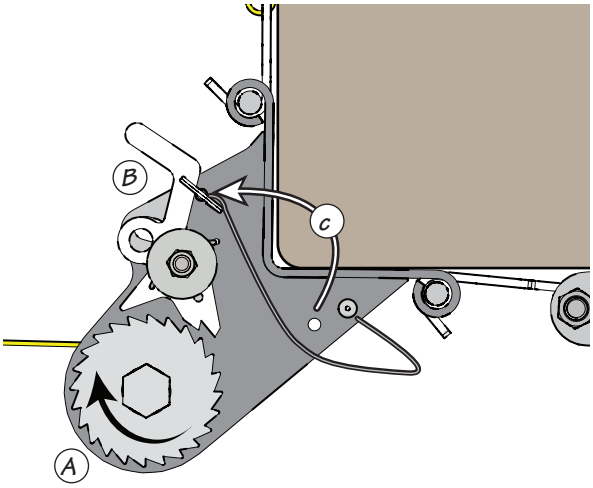


Fig. 22-2

Step 3
Working from the opposite end of the WebRail section, remove hook from the tension gauge, and set the gauge on the ground. Remove the strap hooks from the mid and toe rails.

Step 4
Beginning with the top strap then mid and toe rail, re-spool each strap. Holding the strap in one hand while applying tension, re-spool the strap with the aid of a 1" socket and a cordless drill.

Step 5
Remove the ratchet bands by pulling back the tension lock (Fig 22-3) on the ratchet lever, releasing the strap tension. Unhook both ratchet hooks from the WebRail post. The ratchet binder strap is self-retracting. Set the ratchet binder down, and repeat for the bottom ratchet binder.

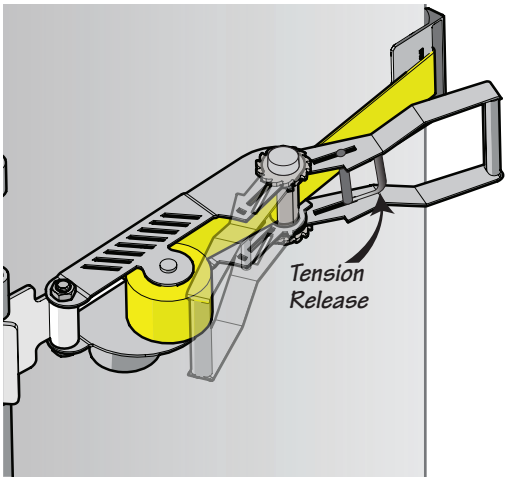



Fig. 22-3

Step 6
Working in placement order, collect each WebRail components, and store in the WebRail shipping pallet.

www.ati-constructionproducts.com
(888) 949-3199
sales@ati-constructionproducts.com


WebRail Replacement Parts

In the event any component part becomes lost or damaged, contact Tie Down for replacements: 404-344-0000.

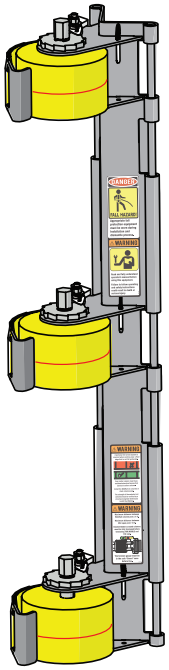


31 ft.
Main Upright Assembly
Part ID: 72888


60 ft.
Main Upright Assembly
Part ID: 72071




Terminating
Post
Part ID: 72891




Middle Rail Assem
Part ID: 72889

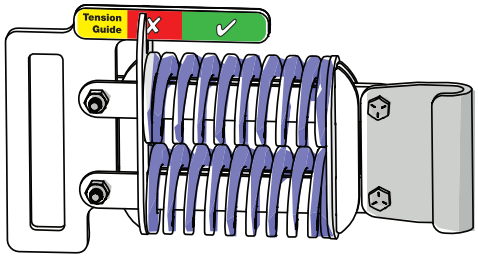


Spring Tensioner Assembly
Part ID: 72892

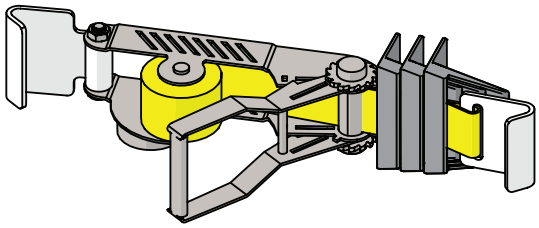


Ratchet Binder
Part ID: 72890

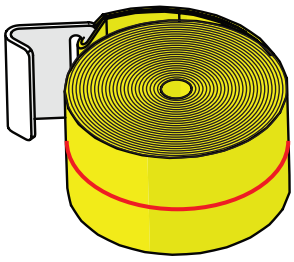

60 ft. Strap with Hook
Part ID: TBD

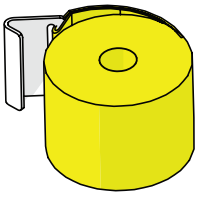

31 ft. Strap with Hook
Part ID: 14419

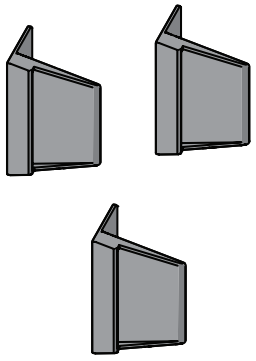

Corner Guard
Part ID: 14561

WebRail Safety/Warning Labels

In the event any warning or safety labels become damaged or unreadable, contact Tie Down for replacements: 404-344-0000.




WebRail/Tie Down
Part #18410

#16493 (Left)





#16492 (Right)

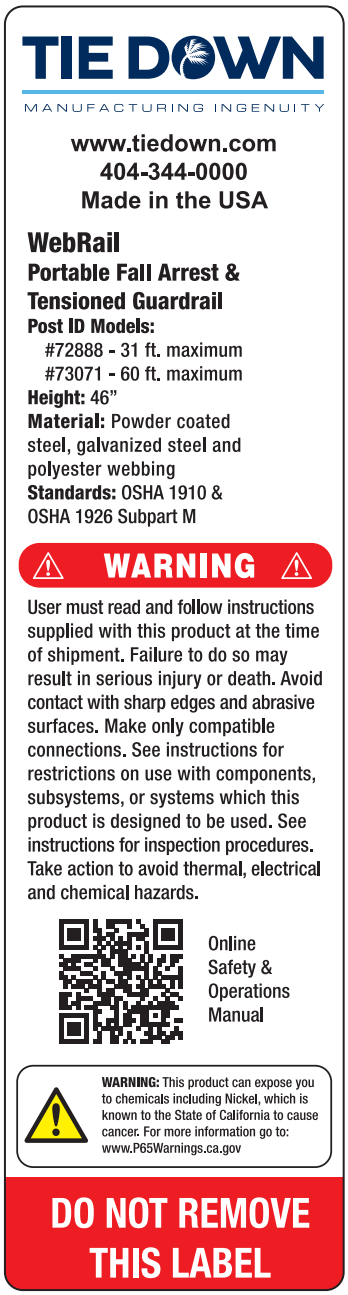

Warning
Part #18411



Safety
Part #16175



Instruction
Part #16176



Mid Post
Part #18435

ATI
ATI-PRODUCTS & SERVICES
www.ati-constructionproducts.com
(888) 949-3199
sales@ati-constructionproducts.com

WebRail Warranty

WEBRAIL LIMITED WARRANTY

Tie Down (TIE DOWN, Inc.), here after referred to as “TIE DOWN”. TIE DOWN will repair or replace, free of charge, any part, or parts of the WebRail that are defective in material or workmanship or both for 1 year from date of purchase. Return the defective unit to the dealer, or contact TIE DOWN direct at 404-344-0000.

This warranty does not apply to damage or loss caused by any or all of the following circumstances or conditions:

- Damage caused during assembly or installation.
- Parts, accessories, materials, or components used with or replacing any WebRail part not obtained from or approved in writing by TIE DOWN.
- Misapplication, misuse, and failure to follow the directions or observe cautions and warnings on installation, operation, application, inspection, or maintenance specified in any TIE DOWN quotation, acknowledgment, sales literature, specification sheet, or installation instruction and service manual ("applicable literature").

If requested by TIE DOWN, purchaser shall return the alleged defective product to TIE DOWN for examination at purchasers expense. TIE DOWN will not pay for expenses incurred in returning a product to TIE DOWN without TIE DOWN's prior written authority. TIE DOWN shall not be liable for any other expenses purchaser incurs to remedy any defect. Purchasers waive subrogation on all claims under any insurance.

To Obtain Technical Assistance: To enable TIE DOWN to respond to a request for assistance or evaluation of customer or user operating difficulty, please provide at a minimum the following information by calling 404-344-0000:

- Model number, serial number, and all other data on the specific component which appears to be involved in the difficulty.
- The date and from whom you purchased your WebRail.
- State your difficulty, being sure to mention the following: Application and Environment.

THIS WARRANTY DOES NOT COVER NOR EXTEND TO INCIDENTAL OR CONSEQUENTIAL DAMAGE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

No representative has authority to make any representation, promise, or agreement except as stated in this Limited Warranty. TIE DOWN reserves the right to make design and other changes upon its products without any obligation to install the same on any previously sold or delivered products.

THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THOSE DESCRIBED ABOVE. EFFECTIVE MAY 2023 THIS WARRANTY SUPERSEDES ALL PRIOR WARRANTIES, WRITTEN OR IMPLIED.

DECLARATION OF CONFORMITY

Declaration Date: 10/24/2023
Internal Reference **Document: ITR-72888,72889,72890,72892,72893,73071,73073,73075_R4**
Rev. 4

DECLARATION NO.	**ETR-72888,72889,72890,72892,72893,73071,73073,73075_R4**
PART NUMBER:	**72893,73073,73075**
PART DESCRIPTION:	**WEB RAIL FALL ARREST AND GUARDRAIL SYSTEM**
TEST SPECIFICATION(S):	**OSHA 1910.29** **OSHA 1926 Subpart M** **OSHA 1926.502(b)** **EM385-1-1**

ADDITIONAL INFORMATION REGARDING THIS DOCUMENT OR STANDARD(S) EVALUATED:

- **Web Rail system is properly set-up according to provided instructions**
- **Top rail is fully tensioned to required 800lbf**
- **System performs adequately affixed to structural columns**
- **Passes EM 385-1-1 when mid-posts are positioned every 7ft**

TIE DOWN ENGINEERING DECLARES THAT THE PRODUCT(S) LISTED ABOVE IS IN CONFORMITY WITH THE REQUIREMENTS OF THE FOLLOWING PERFORMANCE STANDARDS.

STANDARD(S):
• **OSHA 1910 Personal Fall Protection Systems** • **OSHA 1926 Fall Protection Criteria**

AUTHORIZED BY:

NAME	TITLE	DATE
Lynea Rivera	ENGINEER	10/24/2023

Declaration of Conformity
Complete Version

This Certificate is a guarantee that the above standard(s) was met by the requirements of such standard. Testing was performed under normal operation mode. The results of testing apply only to the particular sample tested and to the specific test carried out. This Certificate is only issued for products which have passed the testing requirements of listed standard(s).

Installed WebRail Daily Checklist

ATTENTION

INSPECT WEBBING DURING INSTALLATION AND CHECK FOR ANY TEARS ONCE FULLY ASSEMBLED

Remove From Service *if any* longitudinal tears appear.

Remove From Service *if any* vertical tear exceeds 1/2" for 4" webbing.

Remove From Service *if any* vertical tear appears on the 2" strap wrapped around the column!

In the event any WebRail component is removed from service, follow the instructions as described in the "Out Of Service Lock Out"procedure.

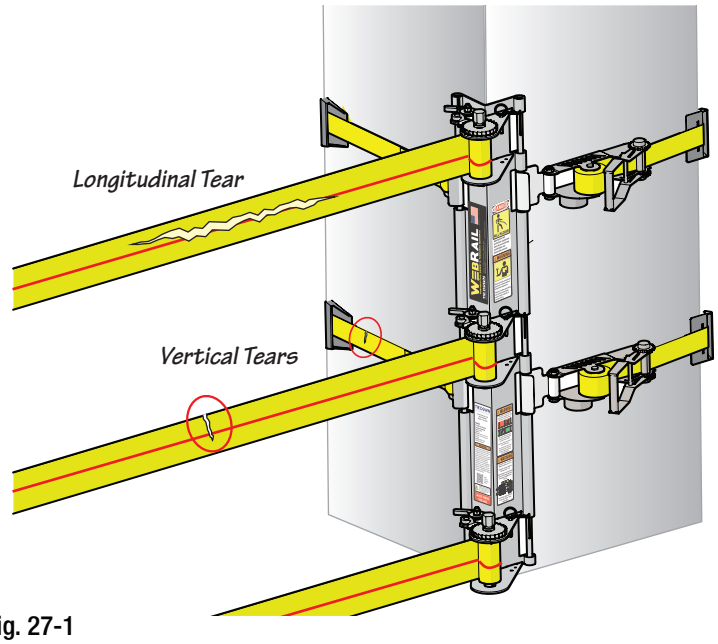


Fig. 27-1

Strap tension must be routinely inspected during use.

Over time and humidity strap tension may loosen. Verify the tension guide in positioned in the "Green Safe Zone".
If needed, reapply tension to the opposite WebRail Post.
In the event the tension is reapplied be sure to double check the mid and toe straps as well.

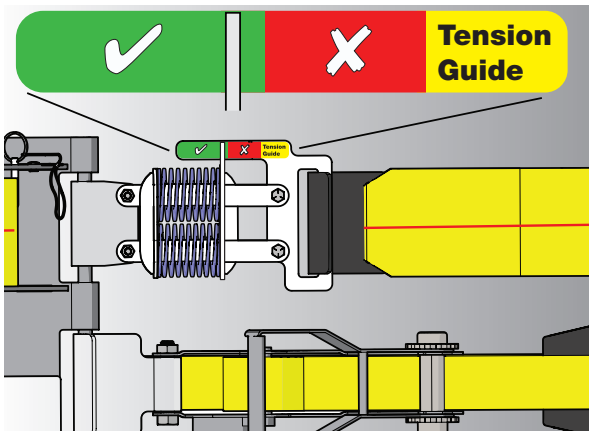


Fig. 27-2

WebRail Post must be routinely inspected during use.

- Inspect the gear teeth for both the ratchet pawl and spool gear. Remove from service if damaged or missing teeth.
- Is the Detent Pin attached and it good working order?
- Make sure the ratchet pawl freely springs back and forth and doesn't stay in the open position.
- Repeat inspection for ALL three spool gear assemblies.

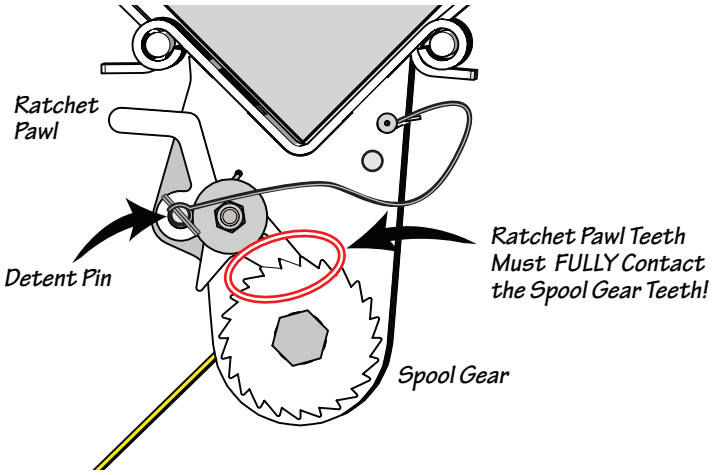


Fig. 27-3

Installed WebRail Daily Checklist

Assembled WebRail Post Inspection:	**Pass**	**Fail**
Binding 2” straps are in a straight line without any binding or tears.	❑	❑
Remove from service if failed inspection (see Fig. 27-1).		
WebRail 4” straps are in a straight line without any binding or tears.	❑	❑
Remove from service if failed inspection (see Fig. 27-1)		
All corners are covered with a corner protectors and show no signs of splitting or cracking.	❑	❑
Each WebRail is tension with three straps: Top, Middle and Toe rails.	❑	❑
The top rail is fully tensioned as shown on the tension guide. (see Fig. 12-1 & 2)	❑	❑
All straps are not bearing directly against any sharp edges.	❑	❑
WebRail Post to opposite WebRail Post does not exceed 60 ft.	❑	❑
Assembled Mid Post Inspection:		
WebRail Mid Post are positioned approximately 10 ft. apart. (see Fig. 13-5)	❑	❑
WebRail Mid Post are positioned with the fall arrest connection points facing the leading edge as shown in Fig. 13-4.	❑	❑
The bottom of the Mid Post over laps the toe rail.	❑	❑
All hand knobs on the Mid Post are fully tightened.	❑	❑
Remove from service if any hand knobs are missing.	❑	❑
Assembled Terminating Post Inspection:		
Binding 2” straps are in a straight line without any binding or tears.	❑	❑
Remove from service if failed inspection.		
All corners are covered with a corner protectors and show no signs of splitting or cracking.	❑	❑
Each WebRail is tension with three straps: Top, Middle and Toe rails.	❑	❑
The top rail is fully tensioned as shown on the tension guide. (see Fig. 12- 1 & 2)	❑	❑

Notify site safety supervisor in the event any WebRail component fails inspection.

ATI

(888) 949-3199 | WWW.ATI-CONSTRUCTIONPRODUCTS.COM

SALES@ATI-CONSTRUCTIONPRODUCTS.COM