

DEM內插補充說明

26.02版本

Project1 - Delft3D FM Suite 2026.02 1D2D

文件 Home View Tools Map Spatial Operations Grid Config DIMR

North Arrow Legend Scale Bar Decorations

Zoom Previous Zoom Next Query Features Query Time Series

Map Coordinate System Export As Image

Add dutch layers Background... Edit Grid Profile RR Regi...

Show Profile Link

1D Network 2D Area 2D Region 1D2D Links

Generate Add link Embedded 1-to-1

Project FM_model x

Project1 FM_model General 1D 2D 1D2D Links Output

Properties

Messages

During writing the initial field file the following infos were reported:
- Writing initial field data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\initialFields.ini 2026-
Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla 2026-
Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla 2026-
Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Sewer.ini 2026-
Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Main.ini. 2026-
Writing boundary conditions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\FlowFM_struct 2026-
Writing structure definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\structures.ini. 2026-
Writing locations to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsloc.ini. 2026-
Writing cross section definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsdef.ini. 2026-

Messages Time Navigator

Map

Use focused layer

Map

FM_model

1D

2D

Area

Unstructured Grid

Boundary Conditions

Boundaries

Laterals

Bed Level

Initial Water Level

Roughness

Viscosity

Diffusivity

Infiltration

Sources and Sinks

1D/2D Links

Estimated Grid-snapped

Output

Chart Regi... Map Ope... Tool...

開啟bedlevel圖層後，可看見此處DEM出現明顯錯誤需要修正

GIS Project1 - Delft3D FM Suite 2026.02 1D2D

Map 1 Spatial Operations Grid Config DIMR

Layer Bed Level 2

Tools Polygon Line Points Merge Operations Import Set Value Interpolate Copy to samples Copy to spatial data Add rasterfile samples 3 Merge spatial data

Decor... Edit Add Spatial Operations

Project FM_model x

Project1 FM_model General 1D 2D 1D2D Links Output

Properties

Map

Map FM_model 1D 2D Area Unstructured Grid Boundary Conditions Boundaries Laterals Bed Level Initial Water Level Roughness Viscosity Diffusivity Infiltration Sources and Sinks 1D/2D Links Estimated Grid-snapped Output

Messages

During writing the initial field file the following infos were reported:
- Writing initial field data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\initialFields.ini 2026-
Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla 2026-
Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla 2026-
Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Sewer.ini 2026-
Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Main.ini. 2026-
Writing boundary conditions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\FlowFM_struct 2026-
Writing structure definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\structures.ini. 2026-
Writing locations to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsloc.ini. 2026-
Writing cross section definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsdef.ini. 2026-

Messages Time Navigator

Chart Regi... Map Ope... Tool...

依序點選以在bedlevel圖層中匯入高程資料(tif)

Project1 - Delft3D FM Suite 2026.02 1D2D

GIS Config DIMR

Map Spatial Operations Grid

Layer Bed Level

Decor... Edit Add

Project

FM_model

Operations

Refresh

Bed Level

Bed Level

set

Interpolate

Apply coordinate transformation on d...

Import without transformation (as-is)

Transform from: TWD97 / TM2 zone 121

to: TWD97 / TM2 zone 121

OK Cancel

Messages

During writing the initial field file the following infos were reported:

- Writing initial field data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\initialFields.ini
- Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla
- Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla
- Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Sewer.ini
- Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Main.ini
- Writing boundary conditions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\FlowFM_struct
- Writing structure definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\structures.ini
- Writing locations to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsloc.ini
- Writing cross section definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsdef.ini

Messages Time Navigator

Chart Regi... Map Ope... Tool...

點選後選擇是否轉換資料來源的座標系統

Project1 - Delft3D FM Suite 2026.02 1D2D

GIS | Config | Project1 - Delft3D FM Suite 2026.02 1D2D

Map | Spatial Operations | Grid | DIMR

Interpolate -
Interpolate selected set
Interpolate multiple sets

Copy to samples
Copy to spatial data
Merge spatial data
Add rasterfile samples

Layer: Bed Level

Legend

Decor... Edit Add

Project

FM_model x

Operations

Refresh

Bed Level
Bed Level
set
Interpolate
set 1
Import Samples 1

Properties

Sample points import property

General
Name Import Samples 1
Enabled True

Input
Input file merged_nodata_cro
Source coord TWD97 / TM2 zone

Output
Target coord TWD97 / TM2 zone

Input file
File from which the sample set is read.

Messages

During writing the initial field file the following infos were reported:
- Writing initial field data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\initialFields.ini 2026-
Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla 2026-
Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla 2026-
Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Sewer.ini 2026-
Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Main.ini. 2026-
Writing boundary conditions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\FlowFM_struct 2026-
Writing structure definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\structures.ini. 2026-
Writing locations to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsloc.ini. 2026-
Writing cross section definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsdef.ini. 2026-

Messages Time Navigator

Chart Regi... Map Ope... Tool...

確認資料匯入範圍正確後
依序點選以將資料內插進計算網格

GIS Config Project1 - Delft3D FM Suite 2026.02 1D2D

Map Spatial Operations Grid DIMR

Layer Bed Level

Polygon Line Points Merge Operations

Import Set Value Interpolate Copy to samples Copy to spatial data Add rasterfile samples

Crop Contour Smoothing Merge spatial data

Delete Gradient Overwrite Value

Decor... Edit Add Spatial Operations

Project FM_model x

Project1

- FM_model
- General
- 1D
- 2D
- 1D2D Links
- Output

Operations

- Bed Level
- set
- Interpolate
- set 1
- Import Samples 1

Properties

Sample points import property

General

Name Import Samples 1

Enabled True

Input

Input file merged_nodata_cro

Source coord TWD97 / TM2 zone

Output

Target coord TWD97 / TM2 zone

Input file

File from which the sample set is read.

Messages

During writing the initial field file the following infos were reported:

- Writing initial field data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\initialFields.ini
- Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla
- Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla
- Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Sewer.ini
- Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Main.ini
- Writing boundary conditions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\FlowFM_struct
- Writing structure definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\structures.ini
- Writing locations to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsloc.ini
- Writing cross section definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsdef.ini

Interpolation operation

Please specify the operation parameters

Pointwise operation Overwrite

Interpolation method Triangulation

Spatial Projection Type 2D

OK Cancel

務必選擇Overwrite以取代網格內已有之資料

km 2 4 6 8

Chart Regi... Map Ope... Tool...

Project1 - Delft3D FM Suite 2026.02 1D2D

GIS Spatial Operations Grid Config DIMR

Map Merge Operations

Import Set Value Interpolate Copy to samples Copy to spatial data Add rasterfile samples Merge spatial data

Layer Bed Level

Polygon Line Points

Decor... Edit Add

Project

FM_model

Project1

FM_model

General

1D

2D

1D2D Links

Output

Properties

Interpolation operation

General

Name Interpolate 1

Enabled True

Sample set

Operation parameters

Pointwise or Overwrite

Interpolation Triangulation

Grid cell ave ClosestPoint

Minimum ca 1

Sample set

Point set that being interpolated to the grid

Messages

During writing the initial field file the following infos were reported:

- Writing initial field data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\initialFields.ini

Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla

Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla

Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Sewer.ini

Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Main.ini

Writing boundary conditions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\FlowFM_structu

Writing structure definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\structures.ini

Writing locations to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsloc.ini

Writing cross section definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsdef.ini

Operations

Refresh

Bed Level

Bed Level

set


Interpolate


set 1

Interpolate 1

Chart Regi... Map Ope... Tool...

此處可見原本異常高程已被取代完成
點選merge將高程圖層進行合併

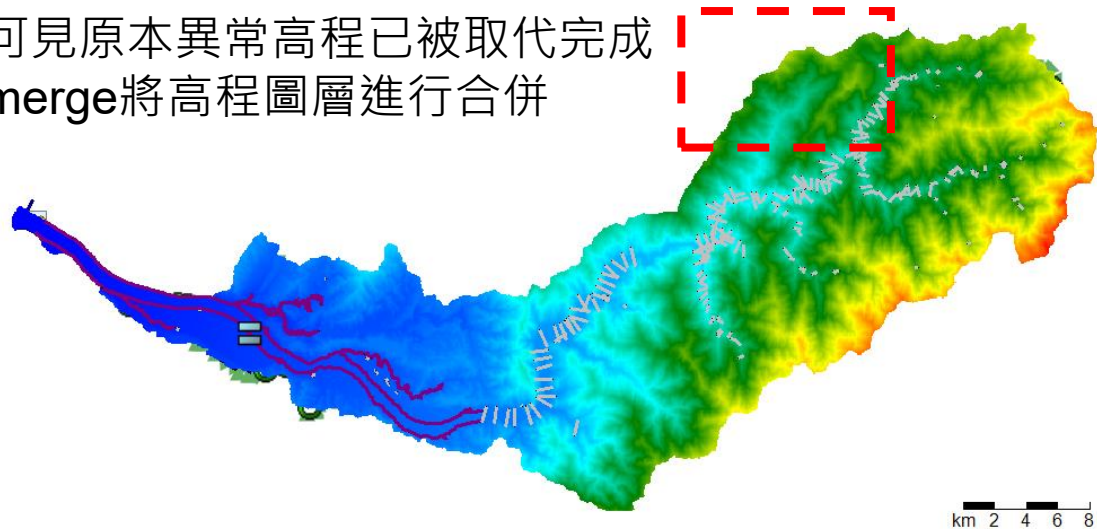

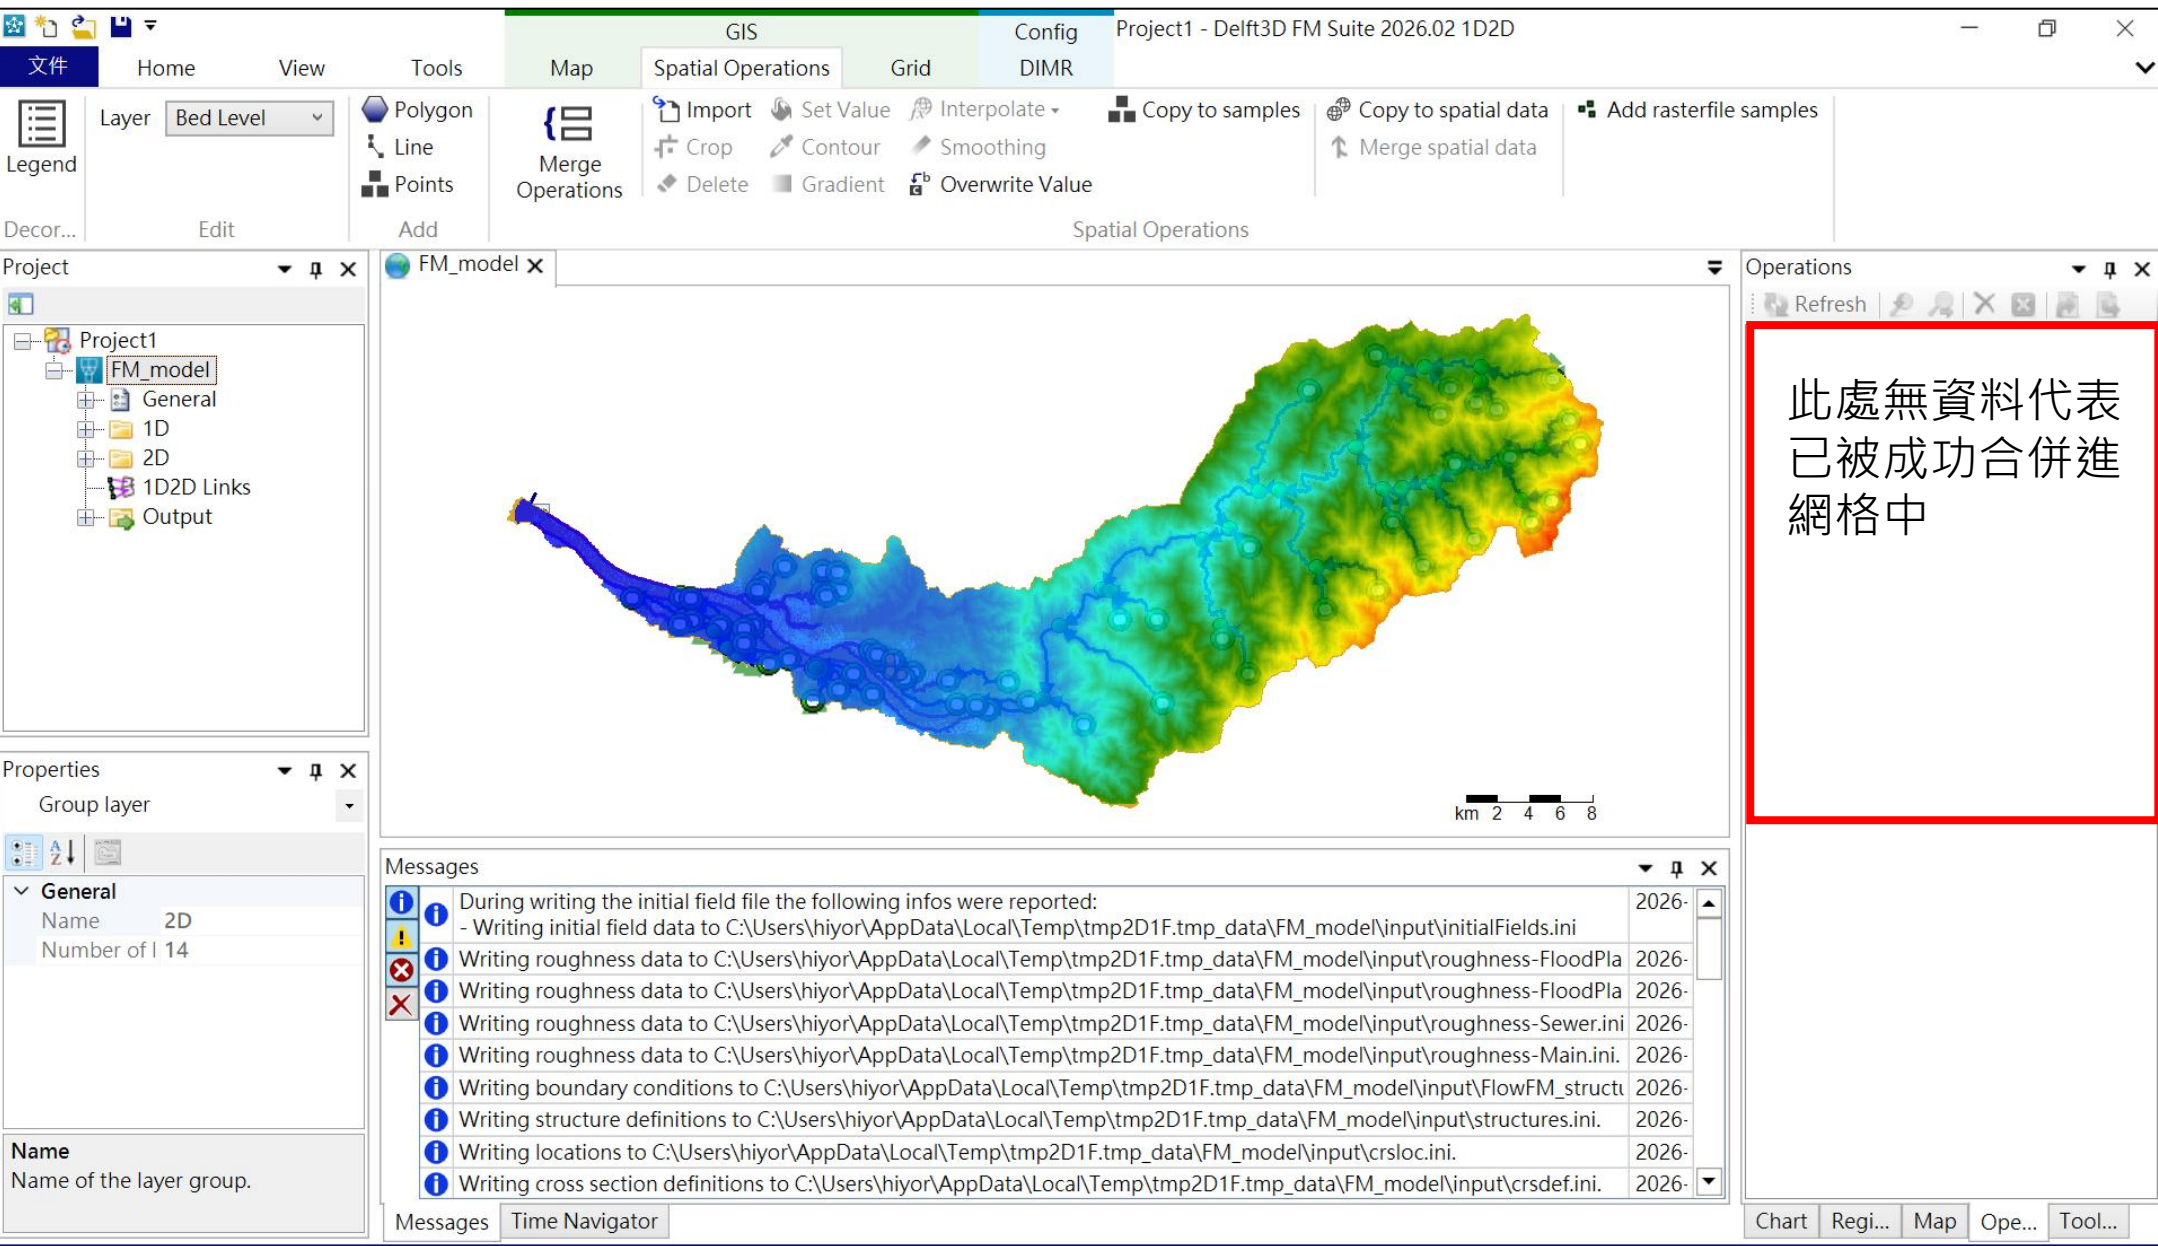

此處無資料代表
已被成功合併進
網格中

Project1 - Delft3D FM Suite 2026.02 1D2D

File Home View Tools Map Spatial Operations Grid Config DIMR

Clipboard: Cut, Copy, Paste, Delete, New Model, Import, Export, Run All, Run Current, Run Script, Find, Open Manual, Start Screen, Show Log, License, About, Help

Project: Project1 (1) FM_model (1)

DIMR configuration (2)

General: Flow Flexible Mesh model, Partition exporter

Properties: WaterFlowFMModel

Run mode: Validate before run: True, Show model: False, Use RPC: True, Validate before run

Messages: During writing the initial field file the following infos were reported: - Writing initial field data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\initialFields.ini, Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla, Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-FloodPla, Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Sewer.ini, Writing roughness data to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\roughness-Main.ini, Writing boundary conditions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\FlowFM_struct, Writing structure definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\structures.ini, Writing locations to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsloc.ini, Writing cross section definitions to C:\Users\hiyor\AppData\Local\Temp\tmp2D1F.tmp_data\FM_model\input\crsdef.ini

Operations: Refresh

Chart Regi... Map Ope... Tool...

將完成高程修正的模式以DIMR設定輸出

dflofm

← → ↑ ↻ 本機 > Desk (D:) > testpool > model > 5m > daandem > test > dflofm 搜尋 dflofm

新增 剪貼 複製 貼上 刪除 排序 檢視 ... 詳細資料

文件 圖片 音樂 影片 2026_03 pic Google Drive (G:) layout areashp Desk (D:) 文件

本機 OS (C:) Desk (D:) Google Drive (G:) 網路

BANKLINE_DA_fxw.pliz
branches.gui
crsdef.ini
crsloc.ini
DA_TIDELINE.pli
FlowFM_net.nc
FlowFM_structures.bc
FM_model.mdu
FM_model_bnd.ext
inf80m.xyz
initialFields.ini
InitialWaterLevel.ini
Maxima.fou
n80m.xyz
nodeFile.ini
roughness-Channels.ini
roughness-FloodPlain1.ini
roughness-FloodPlain2.ini
roughness-Main.ini
roughness-Sewer.ini
routes.gui
structures.ini
WaterLevel.bc

dflofm (23 個項目)


選取單一檔案以取得詳細資訊並共用您的雲端內容。

由2026.02版輸出的模式不會在輸出bedlevel.xyz


```
D:\testpool\model\5m\daandem\test\dflofm\initialFields.ini - Notepad++
檔案(F) 編輯(E) 搜尋(S) 檢視(V) 編碼(N) 語言(L) 設定(T) 工具(O) 巨集(M) 執行(R) 外掛(P) 視窗(W) ?
initialFields.ini x



1 [General]
2   fileVersion      = 3.00
3   fileType         = iniField
4
5 [Initial]
6   quantity         = initialwaterlevel
7   dataFile         = InitialWaterLevel.ini
8   dataFileType     = 1dField
9
10 [Initial]
11  quantity         = infiltrationcapacity
12  dataFile         = inf80m.xyz
13  dataFileType     = sample
14  interpolationMethod = averaging
15  operand          = 0
16  averagingType     = nearestNb
17  averagingRelSize  = 1.0000000e+000
18  averagingNumMin   = 1
19  averagingPercentile = 0.0000000e+000
20  locationType     = 2d
21
22 [Parameter]
23  quantity         = frictioncoefficient
24  dataFile         = n80m.xyz
25  dataFileType     = sample
26  interpolationMethod = averaging
27  operand          = 0
28  averagingType     = nearestNb
29  averagingRelSize  = 1.0000000e+000
30  averagingNumMin   = 1
31  averagingPercentile = 0.0000000e+000
32  locationType     = 2d
33
34
```

在initialFields.ini中也不用設定bedlevel參數

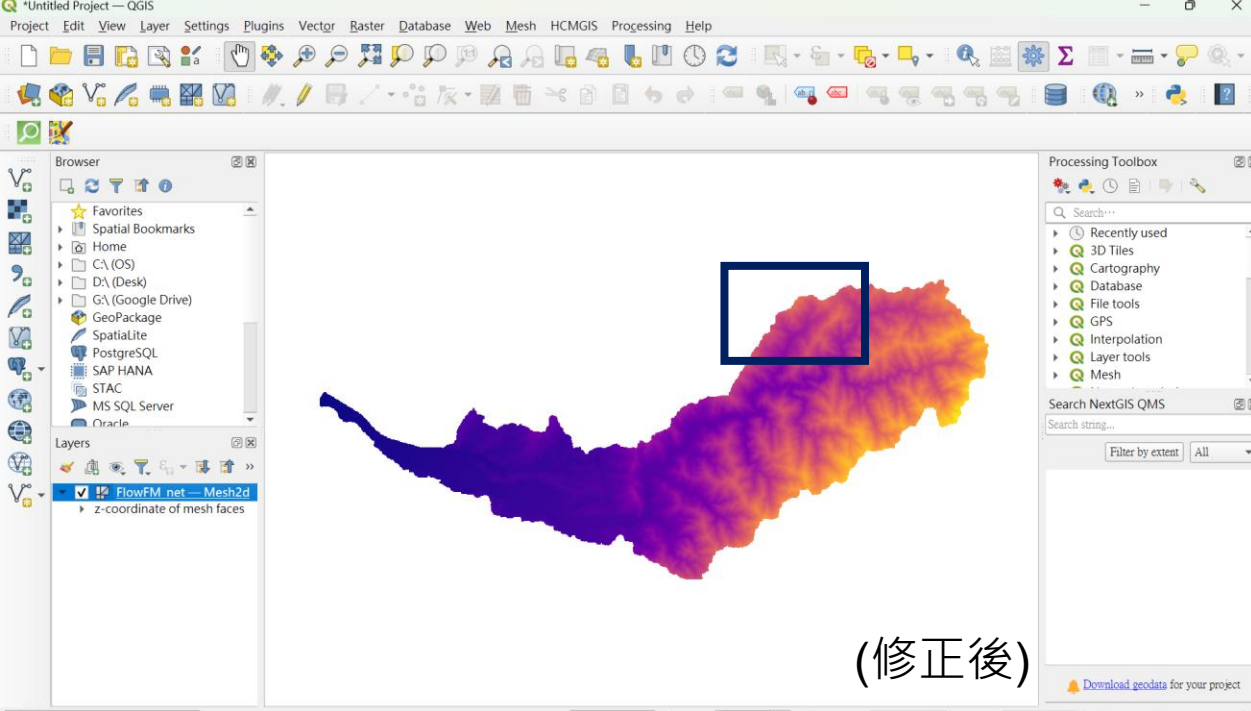

若檢查修正前後的計算網格(FlowFM_net.nc)
會發現高程已被記錄在_net.nc檔案中

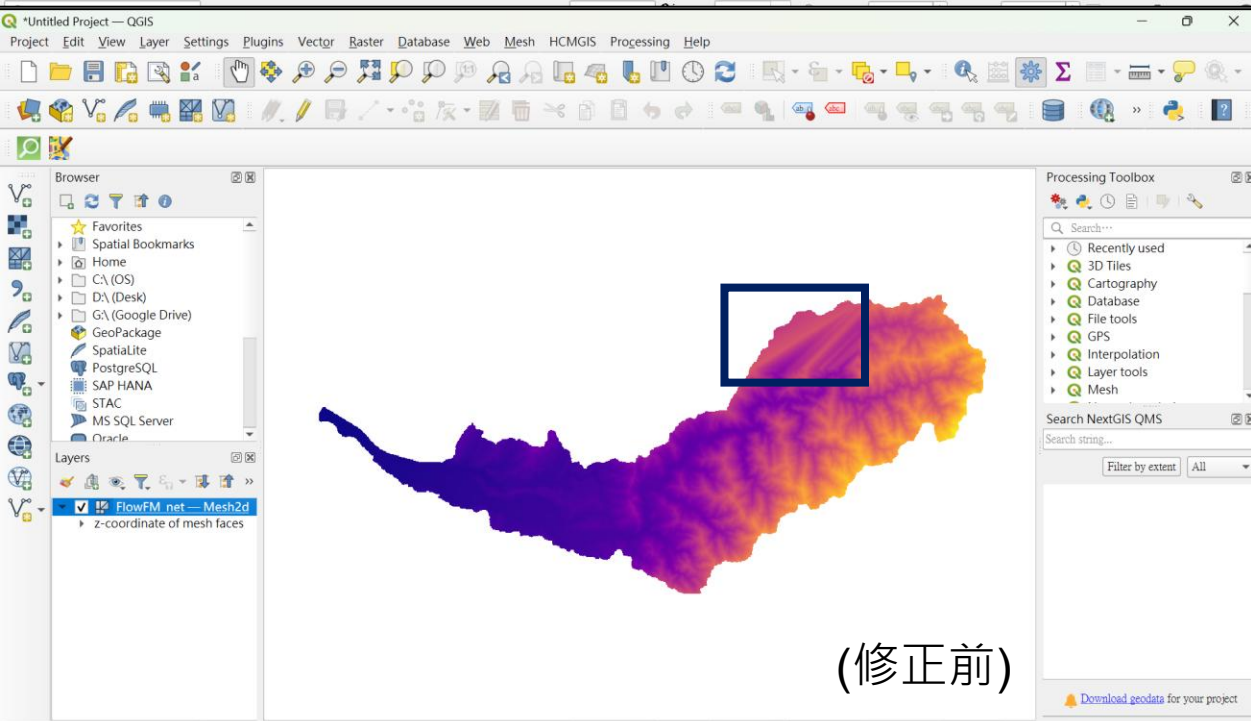

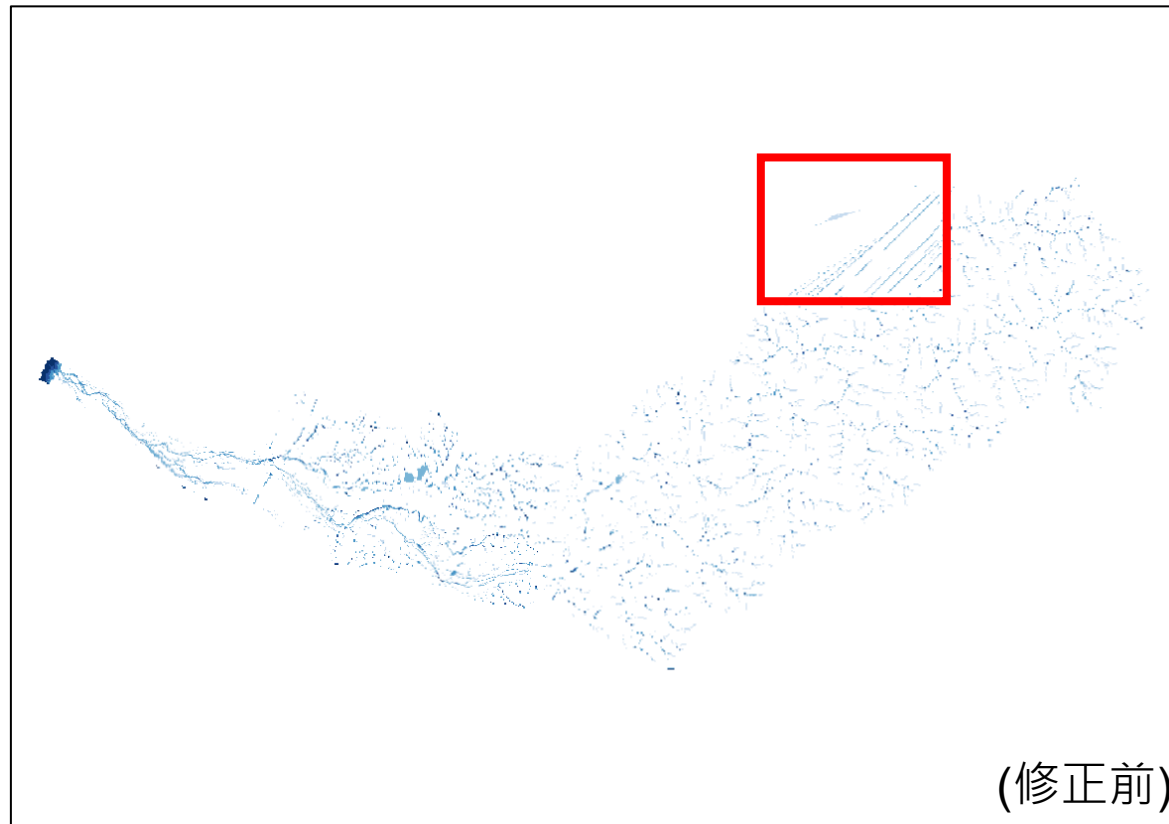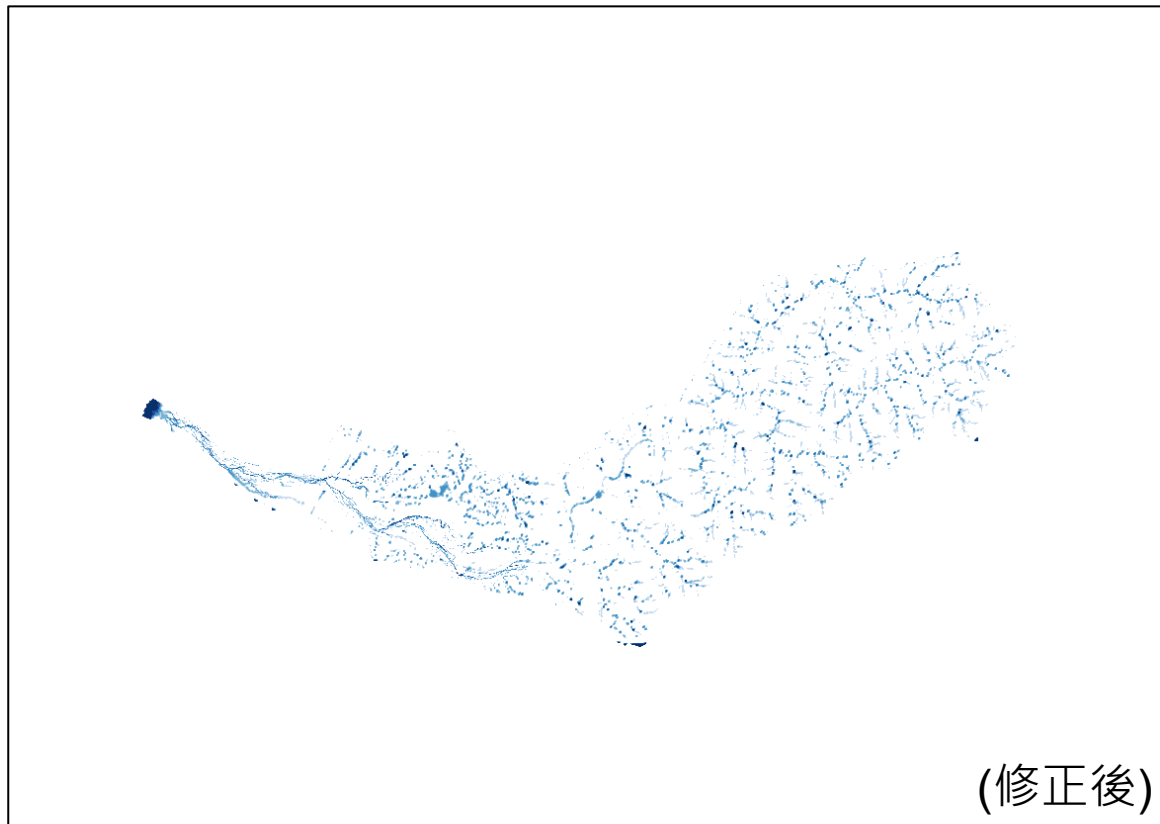

從模擬結果也可看出高程已被修正