

MOTOROLA RAZR V3i MANUAL



Quick Links

[Settings Menu](#)

[Sim Card](#)

[Turn It on & off](#)

[Memory Card](#)

Table of Contents

[Table of Contents](#)

[settings menu](#)

[about this guide](#)

[SIM card](#)

[battery](#)

[battery installation](#)

[battery charging](#)

[turn it on & off](#)

[make a call](#)

[answer a call](#)

[store a phone number in the phonebook](#)

[call a stored phone number](#)

[search the phonebook](#)

[your phone number](#)

[airplane mode](#)

[iTunes](#)

[transfer music to your phone](#)

[create a playlist](#)

[transfer music](#)

[play songs](#)

[memory card](#)

[move files from the phone to the memory card](#)

[connect the memory card to a computer](#)

[voice commands](#)

[open applications](#)

[photos](#)

[camera settings](#)

[video clips](#)

play a video clip
multimedia messages
receive a multimedia message
Bluetooth™ wireless
copy files to another device
receive files from another device
advanced bluetooth features
display
text entry
volume
navigation key
smart key
external display
handsfree speaker
codes & passwords
lock & unlock phone
ring style
time & date
wallpaper
screen saver
themes
display appearance
answer options
turn off a call alert
recent calls
redial
return a call
notepad
hold or mute a call
call waiting

caller ID

emergency calls

international calls

1-touch dial

voicemail

advanced calling

phonebook

messages

personalize

call times & costs

handsfree

data & fax calls

network

personal organizer

security

fun & games

hearing aids

other medical devices

driving precautions

operational warnings

potentially explosive atmospheres

batteries and chargers

choking hazards


glass parts

repetitive motion


who is covered

what will motorola do

Other ManualsLib Projects



MOTOMANUAL




HELLOMOTO

Introducing your new Motorola RAZR V3i GSM wireless phone.

Camera Key

Volume Keys

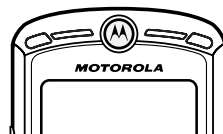

Voice Key

Right Soft Key

Charge indicator Light


Camera Lens

Volume Keys


Bluetooth® Indicator Light

Adjust camera zoom when camera is


active and flip is closed.

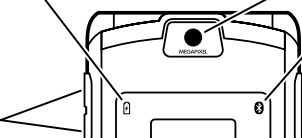

Home Screen

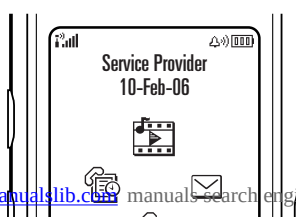

Main Menu

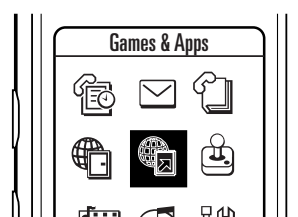

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196
www.hellomoto.com
1-800-331-6456 (United States)

at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc.

trademark of Apple Computer, Inc., registered in the U.S. and other countries. All rights reserved.

© Motorola, Inc., 2006.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 6809500A20-0

contents

menu map	8	main attractions	19	codes & passwords . . .	55
use and care.	10	airplane mode	19	lock & unlock phone . .	55
recycling information . .	11	iTunes™	19	customize.	57
essentials	12	memory card	26	ring style	57

call waiting	64
caller ID	65
emergency calls	65
international calls	66
1-touch dial	66
voicemail	66
other features	68
advanced calling	68

Safety Information	96
Warranty	102
Hearing Aid	
Compatibility	108
WHO Information	110
Product Registration	110
Export Law	

menu map

main menu



Recent Calls

- Received Calls
- Dialed Calls
- Notepad



Phonebook



Internet



Rogers Mall

Get Ringtone



Multimedia/Sounds

- Themes
- Camera
- Pictures
- Sounds
- Videos

settings menu



Personalize

- Home Screen
- Main Menu
- Voice Dial Setup
- Skin
- Greeting
- Wallpaper
- Screen Saver



Ring Styles

- [Style Detail](#)



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- TTY Setup *
- Scroll
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



Security

- Phone Lock
- Lock Application
- Fixed Dial

Use and Care

To care for your Motorola phone, please keep it away from:



liquids of any kind



dust and dirt

Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose the product with household waste.

essentials

CAUTION: Before using the phone for the first time, read the

Important Safety and Legal

the menu, scroll to and select  **Recent Calls**, then scroll to and select **Dialed Calls**.


Press the *navigation key*  to scroll to and highlight the *factory reset* button. Press the

SIM card

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries.

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

- 2 Hold the SIM card with the notch in the lower left corner and the gold plate facing down. Slide the SIM card under the metal clip and into the card slot as shown.



- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.



TM



- New batteries or batteries stored for a long time may take more time to

- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



Contact your local recycling center for proper battery disposal.

battery installation

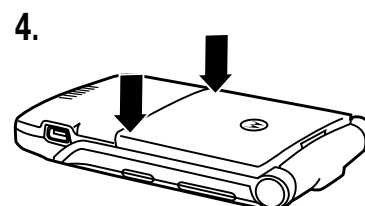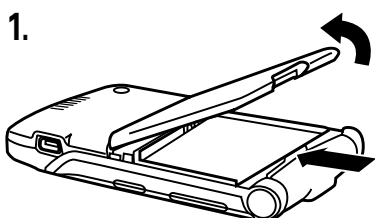

is charging. The display shows **Charge Complete** when finished.


Tip: Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.

Note: You can charge your battery by connecting a cable from your



incorrect PIN code three times in a row, your SIM card is disabled and your display shows **SIM Blocked**. Contact your service provider.

To turn on your phone, press and hold  for a few seconds or until the display turns on. If prompted, enter your

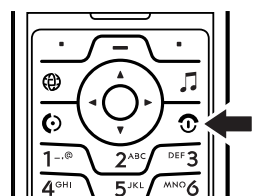

Note: Closing the flip doesn't end a call when the handsfree speaker is turned on (for more information about the handsfree speaker, see page 54).

answer a call

Note: You can store a phonebook entry in phone memory or on your SIM card. You can't set a picture ID, ringer ID, or voice name for entries stored on the SIM card.

1 Enter a phone number in the home screen.

2 Press the **Store** key.

call a stored phone number

Find it:  >  Phonebook

- 1 Scroll to the contact.
- 2 Press  to call the contact.

your phone number

From the home screen, press   to see your number.

Tip: Want to see your phone number while you're on a call? Press  > **My Tel. Numbers**.

To store or edit your name and phone



main attractions

You can do much more with your phone than make and receive calls!

Find it: Press  >  **Settings** > **Airplane Mode** > **Prompt at Startup** > **On** or **Off**

install iTunes on your computer

Before you can download songs to your phone, you must install the iTunes desktop application on your computer.

Requirements: You must have iTunes desktop application version 6.0.1 or later installed to work with your phone. The iTunes

- 4 When installation is complete, double-click the iTunes icon  on your desktop to open iTunes.

For more information about the iTunes desktop application software, see www.itunes.com.

use the iTunes Music Store

- 2** Click the Sign In button and follow the instructions to set up an account, or enter your existing Apple account information.
- 3** When logged in to your account, browse and buy music.

Tip: When you buy a song, the display shows its name in the Purchased Music

- 1** Open the iTunes desktop application on the computer.
- 2** Click the Add button (+) in the lower-left corner of the iTunes desktop application.
- 3** Enter a name for the playlist.
- 4** Drag songs from your music library to the playlist

- 1 Open the iTunes desktop application on your computer.
- 2 Use the USB cable to connect the phone to the computer, and wait for the Phone icon to appear in the Source List in the iTunes desktop application

Note: If your memory card has been used with another iTunes library, all songs will be deleted and overwritten.

- 1 Install a memory card in your phone (see page 26).
- 2 Set the memory card as the default USB connection on your phone. Press

- 5 When the Phone icon appears in the Source List in the iTunes desktop application, drag and drop individual song files or a playlist onto your phone.

Note: It may take up to one minute for the Phone icon to appear in the Source list.


An average song file may take 45 seconds

Note: You can't transfer iTunes recognizable music over a Bluetooth™ wireless connection.

play songs

Note: To play songs using iTunes on your phone, you must install a memory card in the phone (see page 26), and store the songs on

Press  to see the iTunes main screen.

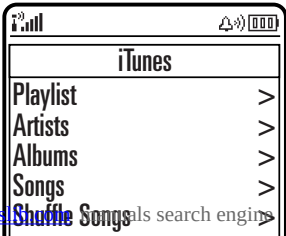

iTunes controls

features
start iTunes Press  to open iTunes.
select a menu option Press  up/down to scroll to a menu

features

start a song over

Press the Back button (⏮ left).

play the previous song

Press the Back button (⏮ left) twice.

fast forward

features

hide iTunes

To hide the iTunes application while playing music:

Press  > **Hide**.

Your phone shows iTunes commands on

add artwork to your songs

You can add album cover art or pictures to your iTunes songs.


Open the iTunes desktop application on your computer. If necessary, click the View Artwork button in the lower-left corner of the iTunes desktop application to open the

<http://www.itunes.com/mobile/motorola> or <http://www.hellomoto.com>.

memory card

You can use a removable TransFlash memory card with your phone to store and retrieve multimedia content (such as songs and

- 1 Press in the battery door release latch and remove the battery door.

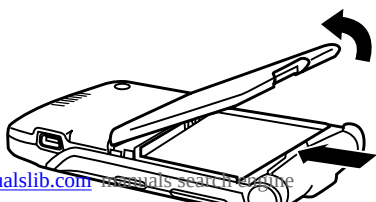

see and change memory card information

Find it: Press  >  **Settings** > **Phone Status** > **Storage Devices**

- 1 Press  to scroll to the memory card.
- 2 Press the **Details** key to see memory card

reformat the memory card

You can reformat your memory card to erase files stored on the card.

Note: Use this procedure if your phone doesn't recognize the memory card, or if the iTunes desktop application on your computer doesn't recognize the phone as a valid iTunes

move files from the phone to the memory card

You can move files (such as pictures and photos, video clips, and sound files) from your phone to the memory card to free up phone memory.

Note: Moving a file to the memory card

Note: When your phone is connected to a computer, you can access the memory card only through the computer.

On your phone:

Press  >  **Settings** > **Connection** > **USB Settings**
> **Default Connection** > **Memory Card**.

- 2** Double-click the Removable Disk icon to access the files on your phone's memory card.
- 3** To store the desired files onto the memory card, drag and drop them as follows: **MP3 files:** > mobile > audio
screen savers: > mobile > picture
wallpapers: > mobile > picture

- 5 Select USB Mass Storage Device, then OK.

On your phone:

To return to **Data Fax** as your USB default connection, press  >  **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Data/Fax Connection**

To activate downloaded copyrighted files:

Find it: Press  > **Activation List** > *file type* > *file*

You can show the copyrighted file's **Status**, **Type**, **Activation**, and **Counts Remaining**.

voice commands

open applications

To open the **Camera** or **Voicemail** applications, **Redial** (dialed calls list), or **Received Calls** list:

- 1 Press and release the voice key.
Your phone prompts you to say a command.

Tip: Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.

- 1 Press and release the voice key.
Your phone prompts you to say a command.

- If the phone doesn't recognize the name or number, the display shows a list of names/numbers, asks, "Did you say ...," and highlights the first item in the list. Say "Yes" to call the highlighted number, or "No" to go to the next list item.

photos

take a photo

Press  >  **Multimedia** > **Camera** to see the camera viewfinder.

Tip: High-resolution images can be stored only on your memory card. To change picture resolution, press  > **Pictures Setup** > **Resolution** from the camera viewfinder.

- 1 Point the camera lens at the photo subject.

Shortcut: After taking a photo, press the center key  to quickly store it and return to the camera viewfinder.

Note: You can't assign a photo to a phonebook entry stored on the SIM card.


self portrait

options	
View Photo Album	See stored pictures and photos. Press  to perform various operations (such as Delete , Rename , or Move) on a picture.
Go To Video Mode	Switch to the video camera.

options	
View Free Space	See how much memory remains for storing pictures.

video clips


record a video clip

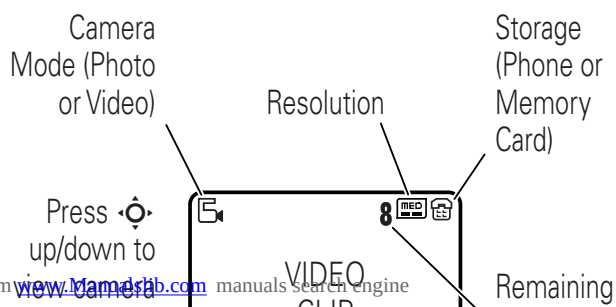

- 1** Point the camera lens at the video subject.
- 2** Press the **Capture** key to begin video recording.
- 3** Press the **Stop** key to stop video recording.
- 4** Press the **Options** key to select a storage option: **Send in Message** or **Store Only**

options	
Go To Videos	See stored video clips. Press  to perform various operations (such as Delete , Rename , or Move) on a video clip.
Go To Photo Mode	Switch to the picture camera.

The display shows the video clip in the playback screen.

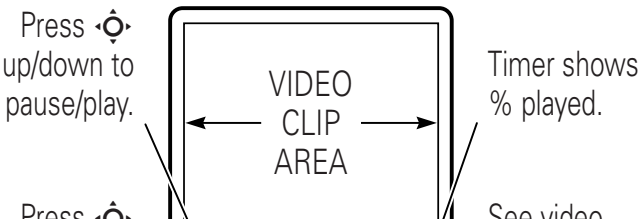

From the stored video clips list, press  to open the **Videos Menu** to select the following options:

options	
Send	Insert a video clip in a new message.
Switch	Choose to store and see video

options	
Copy	Copy video clip(s) to another device, leave original(s) on phone.
Mark/ Unmark	Mark one or more video clips that you want to delete, move, copy, or assign to a category.

options	
View	See how much memory
Free Space	remains for storing video clips.

multimedia messages

For more messaging features, see page 77.

- 1 Press keypad keys to enter text on the page (for more information about text entry, see page 48).

To insert a **picture**, **sound**, **video clip**, **voice record**, **quick note**, or **contact info** on the page, press  > **Add Media**. Select the file type and the file.

To set message **priority**, or request a message **delivery report** or **read report**, scroll to the option and press the center key .

- 3 When you finish setting message options, press the **Done** key.

- 4 Press the **Send To** key to select one or more

To **cancel or save** the message as a **Draft**, press .

receive a multimedia message

When you receive a multimedia message or letter, your phone plays an alert and the display shows **New Message** with a message indicator (such as )



scroll to the file indicator/filename and press the **View** key (image), **Play** key (sound), or **Open** key (phonebook vCard, datebook vCalendar entry, or unknown file type).

laws and regulations on the use of these products.

Note: Your phone's Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Bluetooth features in France unless you are indoors.

back to **On** and pair your phone with the device again.

use a headset or handsfree car kit

Before you try to pair your phone with a handsfree device, make sure the device is

3 If necessary, enter the device passkey (such as **0000**) and press the **OK** key.

When your phone is paired, the Bluetooth indicator  shows in the home screen and the external Bluetooth indicator light flashes.

Note: When Bluetooth power is on, your phone can automatically pair with a handsfree

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press , then select:
 - **Copy** for a photo, picture, video clip, or sound file.
 - **Share Phonebook Entry** for a phonebook

receive files from another device

Before you try to receive a file from another device, make sure your phone's Bluetooth power is **on** (see page 40).

Have the other device send the file to your phone

send files to a printer

You can send a photo, picture, message, phonebook entry, or datebook event from your phone to a printer that supports Bluetooth connections.

Note: You can print A4 or US Letter size pages. To print another size, copy the object

- 3 Select a recognized printer name listed in the **Printers** menu, or **[Look For Devices]** to search for an unrecognized printer where you want to send the object.

advanced Bluetooth features

features

features

switch back to phone during call



To switch from a headset or car kit to your phone during a call:

 > **Use Handset**

move multimedia object to device



basics


See page 1 for a basic phone diagram.

display

Note: Your home screen may look different, depending on your service provider.

To dial a number from the home screen, press number keys and .

Status indicators can show at the top of the home screen:

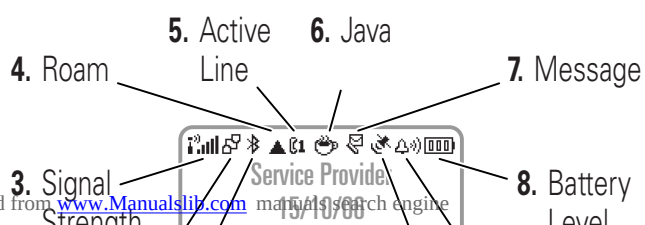

 = secure data transfer

 = secure connection

 = secure *Circuit Switch Data* (CSD) call

 = unsecure data transfer

 = unsecure connection

 = unsecure *Circuit Switch Data* (CSD) call

- 4 Roam Indicator** – The roam indicator  shows when your phone is seeking or using a network outside your home network. Other indicators can include:

 = 2G home

 = 2G roam

 = 2.5G home

 = 2.5G roam



- 6** The Java™ indicator  shows when a Java application is active.

- 7 Message Indicator** – Shows when you receive a new message. Indicators can include:



 = text message  = voicemail message

 = vibrate

 = vibrate and ring

 = vibrate then ring

 = silent


10 Location Indicator – Shows when your phone can send location



text entry

Some features let you enter text.

For indicator descriptions, see following section.




entry modes	
 or 1	Your Primary text entry mode can be set to any iTAP®  or tap 1 mode.
 or 2	Your Secondary text entry mode can be set to any iTAP  or tap 2 mode, or set to None if you don't

capital (**Abc** with , , **1↑**, or **2↑**), or all capitals (**ABC** with , , **1↑**, or **2↑**).

iTAP® mode

Press  in a text entry screen to switch to iTAP mode. If you don't see  or , press  > **Entry Setup** to set iTAP mode as your primary or secondary text entry mode.

For example, if you press **7 7 6 4**,
your display shows:

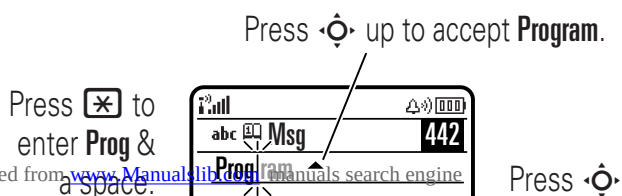

- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.
- Press **1** to enter punctuation or other characters

For example, if you press **7** one time, your display shows:


After two seconds, character is accepted & cursor moves to next position.

Character displays at



word. For example, if you enter **Prog** your display might show:

Press **→** right to accept **Program**.
Press ***** to

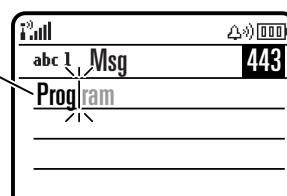


To enter a different word (such as **Progress**), press keys

- If you don't want to save your text or text edits, press  to exit without saving.
- *Tap extended* mode cycles through additional special characters and symbols as you repeatedly press a keypad key.

volume


Press the volume keys to:

- turn off an incoming call alert

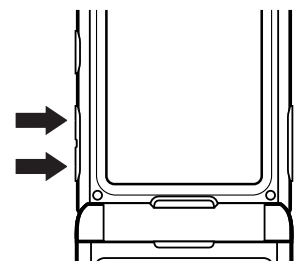

navigation key

Press the navigation key  up, down, left, or right to scroll and highlight menu items. When you highlight something,

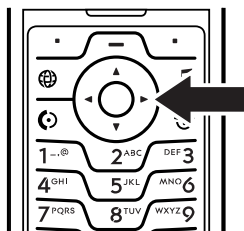

key ). To change what the smart key does in the home screen, see page 81.

external display

When your phone is closed, the external display shows the time and indicates phone status, incoming calls, and other events. For a

return unanswered call in external display

Your phone keeps a record of your unanswered calls, and the external display shows **X Missed Calls**.

Tip: Since the microphone and earpiece are hidden when the phone is closed



- 2 Press the volume keys to scroll to an unanswered call.
 - To call the number with a headset connected to your phone, press and hold the smart key.
 - To exit without calling, press the smart key briefly.

Notes:

- Closing the flip doesn't end a call when the handsfree speaker is turned on.
- The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your six-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service

Note: You can make emergency calls on a locked phone (for more information, see page 65). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer.**

customize

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and

Find it: Press  >  **Settings** > **Ring Styles** > **Style** > *style name*

Shortcut: When an option has a list of vibrations, press the vibration icon (a small bell icon) to select a vibration.

Note: You can't use iTunes for alerts or ring tones on your phone.

Note: You can't set an alert for the **Silent** ring style profile.

Find it: Press  >  **Settings** > **Ring Styles**
> *style name* **Detail**

To **synchronize** the time and date with the network: Press  >  **Settings**
> **Initial Setup** > **Time and Date** > **Autoupdate**
> **On**.



To **manually** set the time and date, turn off **Autoupdate**, then: Press  >  **Settings**
> **Initial Setup** > **Time and Date** > **Time and Date**.

options	
Picture	Press  up or down to select a picture for your wallpaper image, or None for no wallpaper.
Layout	Select Center to center the image in the display, Tile to repeat the image across the display, or

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

Find it: Press  >  **Settings** > **Personalize** > **Screen Saver**

options	
Picture	Press  up or down to select a picture for your wallpaper image, or None for no wallpaper.
Layout	Select Center to center the image in the display, Tile to repeat the image across the display, or

ring tone. Your phone may come with some themes, and you can download more.

To **apply** a theme: Press  >  **Multimedia** > **Themes** > *theme*.

To **download** a theme, see page 90.

Caution: You can delete the themes stored on your phone. After you delete a theme, you

To set your display **brightness**: Press  >  **Settings** > **Initial Setup** > **Brightness**.

To save battery life, the **backlight** can turn off when you're not using your phone. The backlight turns back on when you press any key. To set how long your phone waits before the backlight turns off:

answer options

You can use additional, alternative methods to answer an incoming call. To activate or deactivate an answer option:

Find it: Press  >  **Settings** > **In-Call Setup**
> **Answer Options**

calls

To make and answer calls, see page 16.

turn off a call alert

Shortcut: In a numbered list (like the dialed calls and received calls lists), press a number key to highlight a listing.

Find it: Press  >  **Recent Calls**

options	
Delete	Delete one entry in the list.
Delete All	Delete all entries in the list.
Hide ID	Hide your caller ID for the next call.
Show ID	Show your caller ID for the next

- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal** and you see **Call Failed, Number Busy**, press  or the **Retry** key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.



notepad

The last set of digits entered on the keypad are stored in *notepad* memory. This can be the last phone number you called, or a number that you “jot down” during a call for later use. To see the number stored in the notepad.

To put all active calls on mute, press  > **Mute**.

call waiting

When you're on a call, you'll hear an alert if you receive a second call.



caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your



emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country.

international calls

If your phone service includes international dialing, press and hold   to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone

number.

To add a new phonebook entry, see page 17.

To edit the speed dial number for a phonebook entry, press  >  **Phonebook**, scroll to the entry, then press  > **Edit**.

voicemail

Your network stores the voicemail



Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider

Note: You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it

other features

advanced calling

features

features
attach a phone number
Dial an area code or prefix for a



features	
call forwarding	
Set up or cancel call forwarding:	
 >  Settings > Call Forward	
call barring	
Restrict outgoing or incoming calls:	

features	
change phone line	
If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number.	
 >  Settings > Phone Status > Active Line	

features

fixed dial



When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.

Note: You must enter your SIM PIN2 code to turn fixed dialing on or off. If you forget

features

quick dial



Dial preprogrammed phone numbers stored by your service provider:

 >  **Tools > Dialing Services > Quick Dial**

Edit the quick dial list:

phonebook

features
add new entry Note: You can store a phonebook entry in phone memory or on your SIM card. You can't set a picture ID or voice name for

features
dial number Call a number stored in the phonebook:  >  Phonebook , scroll to the phonebook entry, press  Shortcut: In the phonebook, press a

features

search for entry

To set the phonebook search method:

-  >  **Phonebook**
-  > **Setup** > **Search Method** > **Jump To** or **Find**

To search for a phonebook entry, press the

features

record a voice name

When creating a phonebook entry, scroll to **Voice Name** and press the **Record** key. Press and release the voice key and say the entry's name (within two seconds). When prompted, press and release the voice key

features

voice dial number

Voice dial a number stored in the phonebook:

Press and release the voice key, and say the entry's voice name (within two seconds).

features

set ringer ID for entry

Assign a distinctive ring alert (ringer ID) to an entry:

 >  **Phonebook** > *entry*

 > **Edit** > **Ringer ID** > *ringer name*

features

set picture ID for entry

Assign a photo or picture to show in the display when you receive a call from an entry:

 >  **Phonebook** > *entry*
 > **Edit** > **Picture** > *picture name*

features

set category for entry

a>  **Phonebook** > *entry*  > **Edit** > **Category**
> *category name*

Note: The **Category** option isn't available for entries stored on the SIM card.

features

set category ringer ID

Set a distinctive ring alert (ringer ID) to sound when you receive calls from entries in a specific category:

Press  >  **Phonebook**,
press  > **Categories**, scroll to the category

features

set primary number or address

Set the primary number for an entry with multiple numbers:

 >  **Phonebook**, scroll to the entry, press
 > **Set Primary** > *number or address*

features

sort phonebook list

Set the order in which entries are listed:

 >  **Phonebook**

 > **Setup** > **Sort by** > *sort order*

You can sort the phonebook list by **Name**,

features

copy multiple entries

Copy multiple phonebook entries between the phone and SIM card:

 >  **Phonebook**, scroll to one entry,

press  > **Copy** > **Entries**, press the

Change key, scroll to another entry, press the

features
print phonebook entry Send a phonebook entry to a printer that supports Bluetooth™ connections:  >  Phonebook , scroll to the entry, press  > Print .

features
send email  >  Messages > Create Message > New Email
send quick note Send a short, prewritten quick note:



features

read new message or email



When your display shows **New Message**, press the **Read** key to read the message you received.

read old messages



features

store message objects



Go to a multimedia message page, or scroll to an object in a letter, then:

 > **Store**

browser messages



features

print message



Send a message to a printer that supports Bluetooth™ connections:

 >  **Messages**

Open your **Inbox**, **Email Msgs**, **Browser Msgs**, or

features

set up email accounts



You can set up and use multiple email accounts on your phone:

 >  **Messages**

 > **Email Msg Setup** > **Account Settings**

> **[New Entry]**

features

scroll

Set the highlight bar to stop or wrap around in menu lists:

 >  **Settings** > **Initial Setup** > **Scroll**

ringer IDs

features

keypad volume

 >  **Settings** > **Ring Styles** > *style* **Detail**
> **Key Volume**

reminders

Set reminder alerts for messages that you

features

menu view

Show the main menu as graphic icons or as a text-based list:

 >  **Settings** > **Personalize** > **Main Menu**
> **View**

features

change feature icons & home keys

Change feature icons, soft key labels, and smart key function in the home screen:

 >  **Settings** > **Personalize** > **Home Screen**
> **Home Keys**

features

master clear

Caution: Master clear **erases all information you have entered** (including phonebook and datebook entries) **and content you have downloaded** (including photos and sounds) stored in your phone's

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time

features

in-call timer



Show time or cost information during a call:

 >  **Settings** > **In-Call Setup** > **In-Call Timer**

features

speakerphone



Activate a connected external speakerphone during a call:

Press the **Speaker** key (if available), or

 > **Spkrphone On**.

data & fax calls

features

send data or fax

Connect your phone to the device, then place the call through the device application.

features

auto handsfree (car kit)

Automatically route calls to a car kit when connected:

 >  **Settings** > **Car Settings** > **Auto Handsfree**

power-off delay (car kit)

features

use sync



You can call an Internet server and synchronize your phonebook and datebook entries with the server.

To set up an Internet sync partner, press



network

features

network settings



See network information and adjust network settings:



personal organizer

features
set alarm  >  Settings >  Tools > Alarm Clock
turn off alarm

features
see datebook event See or edit event details:  >  Settings >  Tools > Datebook , scroll to the day, press the center key  , press the View key.
delete datebook event

features

send datebook event to another device

Send a datebook event to another phone or computer that supports Bluetooth™ connections:

 >  **Settings** >  **Tools** > **Datebook**, scroll to the day, press the center key  scroll

features

create voice record

Press and hold the voice key, speak into the phone, release voice key.

Note: Recording of phone calls is subject to varying State and Federal laws regarding privacy and recording of phone

features

currency converter

 >  Settings >  Tools > Calculator
 > Exchange Rate

Enter exchange rate, press the **OK** key, enter amount, and select **\$** at the bottom of the display.

features

lock feature

 >  Settings > Security > Lock Application

manage certificates



Enable or disable Internet access certificates stored on your phone:

fun & games

features

manage pictures

>

Multimedia > Pictures

Press to perform various operations (such as Rotate, Panama, or Move) on a photo

features

manage sounds

>

Multimedia > Sounds

Press to perform various operations

Downloaded from www.Manualslib.com manuals search engine

features

download objects from web page



Download a picture, sound, or phone theme from a Web page:

Scroll to the file, press the center key , press the **Store** key.

features

create ring tones



Create ring tones that you can use with your phone:

 >  **Multimedia** > **Sounds** > **[New iMelody]**

service and repairs

If you have questions or need assistance,
we're here to help.

Go to

www.motrola.com/consumer/support,

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for

value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>



MOTOROLA

Safety and General Information

This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.*

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

Product Operation

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our website at www.motorola.com.

RF Energy Interference/Compatibility

Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

pacemaker when the mobile device is turned ON.

- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the mobile device immediately if

Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road.

Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

Damaged Products

If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance

hazard to small children. Keep your mobile device and its accessories away from small children.

Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If

games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break

Motorola Limited Warranty for the United States and Canada

What Does this Warranty

consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software

Products Covered	Length of Coverage
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and

that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456 Pagers
-----	--

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable)

LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR

and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Try out the phone with your

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

Information from the World Health Organization

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using hands-free

devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information:

Thank you for choosing a Motorola product.

Export Law Assurances

This product is controlled under the export regulations of the United States of America and

re-exportation of this product to certain destinations. For further information contact the U.S. Department

in for a new one, please remember that the phone, the charger, and many of its accessories can be recycled. It's easy. To learn more about CTIA's Recycling Program for Used Wireless Devices, please visit us at <http://promo.motorola.com/recycle/phones/whyrecycle.html>

Smart Practices While Driving

Drive Safe, Call SmartSM

Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The

help you to place your call without taking your attention off the road.

- **When available, use a handsfree device.** If possible, add an additional layer of

sleet, snow, ice, and even heavy traffic can be hazardous.

- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.

the case of fire, traffic accident, or medical emergencies.*

- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.*

index

A

accessories 12, 40, 83

accessory connector port 2

active line indicator 47

battery 15

battery charge indicator light
2, 15

battery indicator 47

call

answer 17, 61

end 16, 17

make 16, 18, 71

contrast 60
copyrighted files 30
customer support 91

D

data call 84
data indicator 46
date 58

drafts folder 39
DTMF tones 70

E

earpiece volume 52
email 77, 78, 79
email address 17, 71
emergency number 65

forward calls 69

G

GPRS indicator 46
group mailing list 75

H

home 1

J

Java indicator 47

K

keypad 61, 80

L

master clear 82

master reset 81

memory card 26

menu 3, 80, 81

menu icons 45, 81

menu indicator 45

menu key 1, 12, 45

message

N

name dial 30

navigation key 1, 12, 53

network settings 85

notepad 64

number. See phone number

numeric entry mode 52

storing 17, 71
your number 18, 69
phonebook
add entry 17, 71
dial entry 18, 66, 68, 71
picture ID 33, 65
print 77
search 18

quick note 38, 77

R

received calls 62
recent calls 62
recycling 111
redial 63
reminders 30

safety tips 113
screen saver 59
security code 55
send key 1, 16, 17
service dial 70
shortcuts 81
signal strength indicator 46
silent mode 52, 53, 57

symbol entry mode 52
sync 85

T

tap text entry mode 50
technical support 91

telephone number. See
phone number

phone 16, 55
SIM card 88
unlock code 55

V

vibrate mode 52, 53, 57
video clip 34, 89
voice commands 20

W

wallpaper 58
warranty 102
WHO information 110

Y

your phone number 18

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages