


AI interpretation channels **into** Bosch systems

For AV technicians who know DICENTIS / Integrus well. No coding needed.

SIM.AI replaces the **booth microphones**, not the Bosch system. Seven AI language channels enter the Bosch system **exactly where interpreter channels normally enter**. Receivers, radiators and seats work as usual. The Bosch system cannot tell there is no human in the booth.

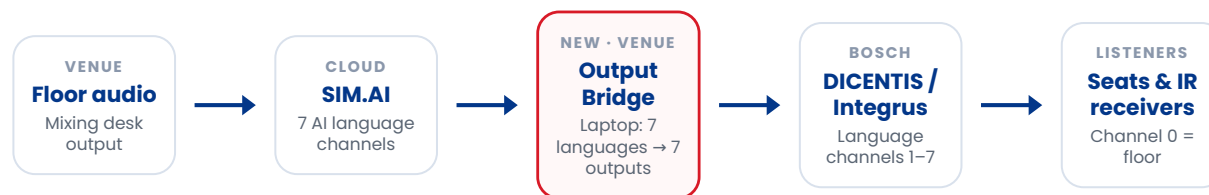

SIM.AI provides

- The AI interpretation (cloud) for up to 7 languages
- Ingest laptop + USB interface for the floor feed
- **Output Bridge** laptop with the SIM.AI Output Bridge app
- For Route A: Dante Virtual Soundcard licence. For Route B: 8-output USB interface + cables

The venue / AV provider provides

- The Bosch system and its operator
- A floor mix output (line level) for the ingest laptop
- Route A: a port on the Dante/OMNEO network + 7 free language channels
- Route B: 7 free audio inputs on the Integrus transmitter
- Internet for both laptops (wired preferred)

Key terms

Output Bridge · SIM.AI app on a venue laptop that turns the 7 AI languages into 7 audio outputs

Channel map · which language goes to which output / Bosch channel

Dante flow · one network audio stream between two Dante devices

Language channel · one AI language (e.g. French), like one interpreter booth

Channel 0 · the floor (original speaker), always from the venue desk

DCNM-LDANTE · DICENTIS licence for one Dante language stream

Which route? Ask the venue for the exact model

VENUE RUNS DICENTIS, OR AN OMNEO / DANTE NETWORK

→ Route A · Dante (digital) · page 2

One Ethernet cable from the bridge laptop. No analog wiring, clean levels. Needs one DCNM-LDANTE licence per language stream.

VENUE RUNS INTEGRUS WITH AN INT-TX TRANSMITTER

→ Route B · Analog inputs · page 3

USB interface with 8+ line outputs, one cable per language into the transmitter's audio inputs. Works with standalone and older installations.

INTEGRUS INT-TXO (OMNEO TRANSMITTER) WITHOUT DICENTIS


Route A without the DICENTIS step is possible only with firmware that accepts third-party Dante streams (Bosch "Phase 2"). Confirm firmware with the venue, otherwise use DICENTIS or Route B.

Questions before quoting

- Exact Bosch system and model (DICENTIS, DCN, Integrus INT-TX / INT-TXO)?
- How many free language channels / audio inputs, digital or analog?
- Expected input level? Free channel numbers for 7 languages?
- Can we test the connection the day before?

ROUTE A DICENTIS / OMNEO / Dante (digital)

The bridge laptop becomes a Dante device on the venue network. Its 7 transmit channels are routed to DICENTIS language streams, which DICENTIS distributes to seats and, through INT-TXO, to Integrus infrared.

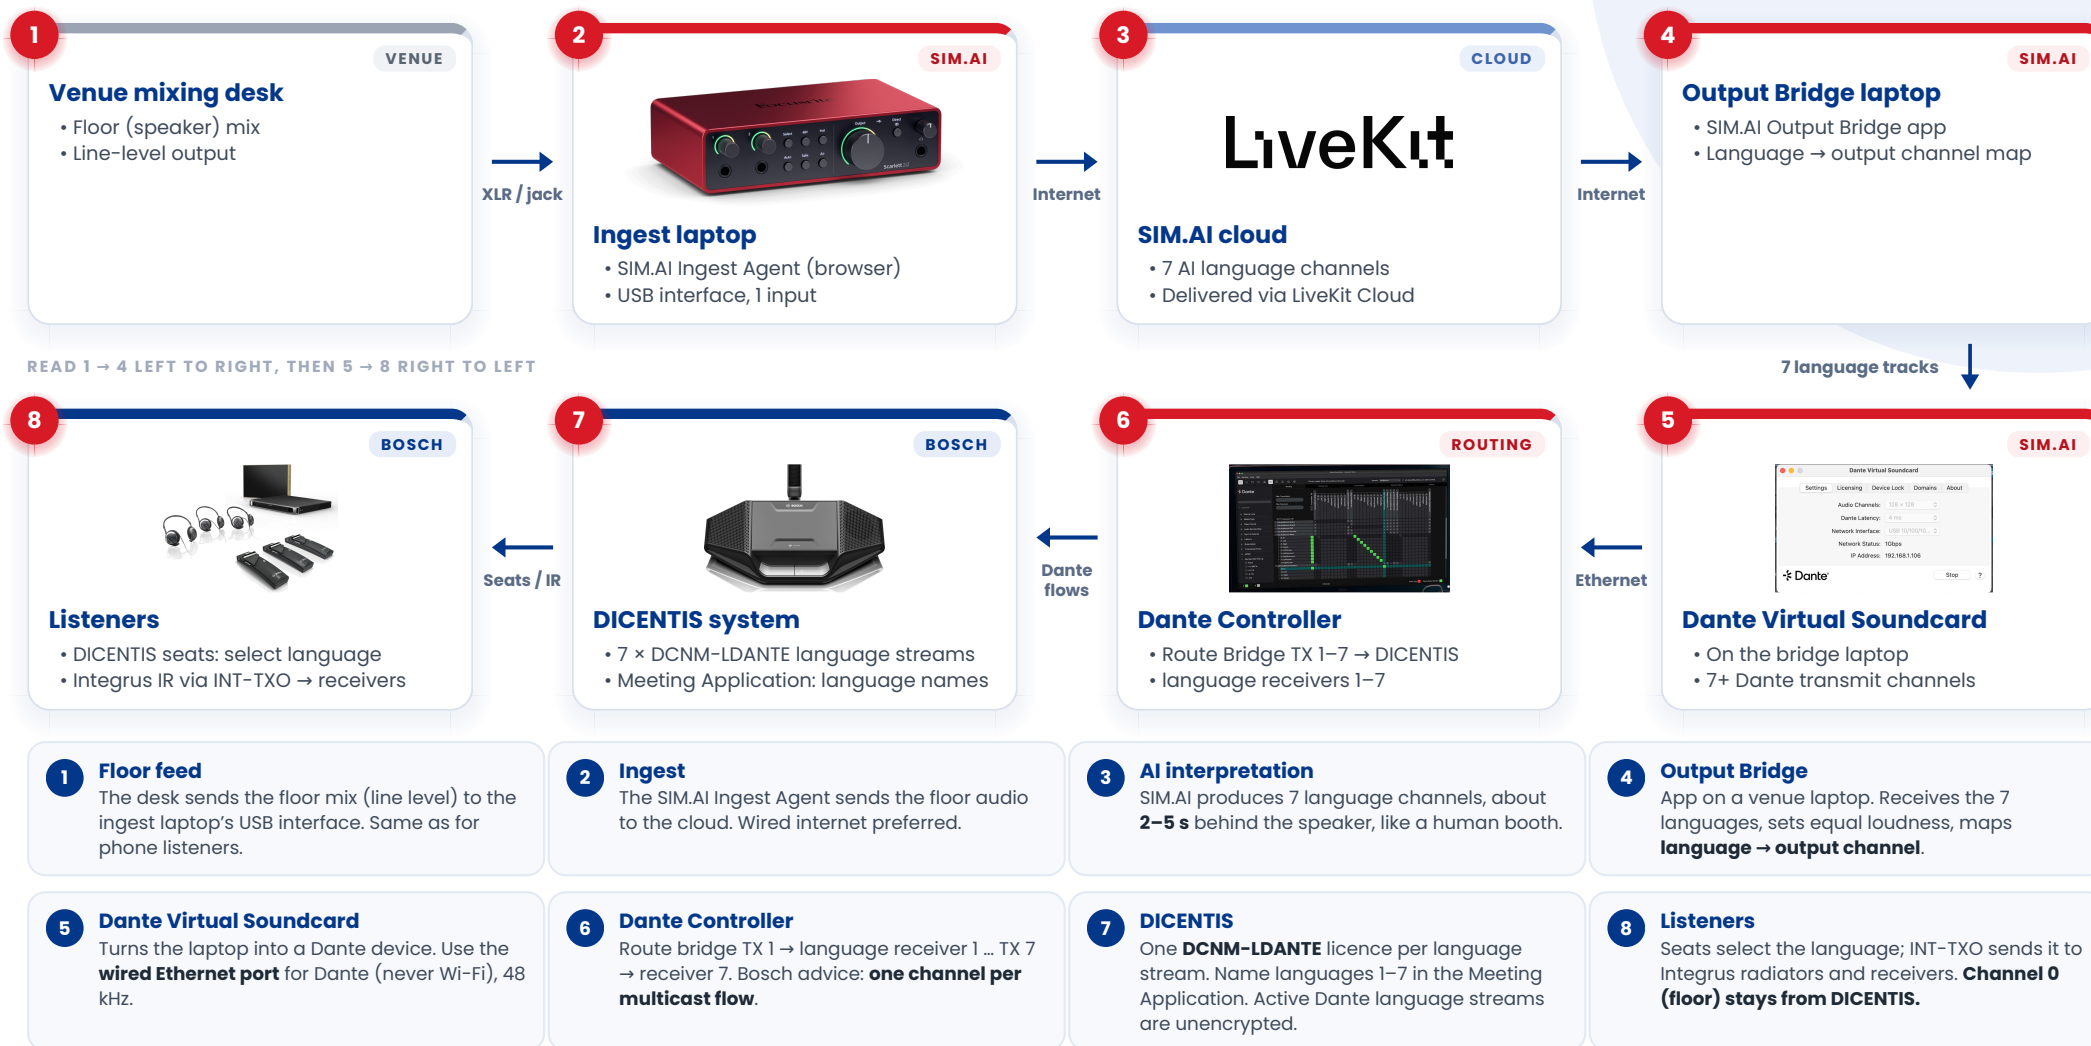

! Check before the event

The DICENTIS server already runs its own Dante device: the bridge must be a **separate laptop**. Keep the bridge on the same subnet as DICENTIS. Test tone on every channel with a real receiver.

ROUTE B Integrus infrared · analog inputs

The bridge laptop drives a multichannel USB interface. Each line output feeds one audio input of the Integrus transmitter, which sends it on its own infrared channel.



READ 1 → 4 LEFT TO RIGHT, THEN 5 → 8 RIGHT TO LEFT

5 Interface outputs

Use an interface with **8 or more line outputs**. In the bridge app map language 1 → output 1 ... language 7 → output 7.

7 Transmitter

Menu 4D: assign input n → channel n (mono). Adjust input sensitivity (–6 to +6 dB). Floor: desk → aux XLR input as usual.

6 Cabling

Interface outs are balanced (TRS); INT-TX audio inputs are **unbalanced cinch**. Use TRS → cinch cables; add ground-loop isolators if you hear hum.

8 Radiators & receivers

No change to radiators. Receivers must have **at least 8 channels** (floor + 7). Print a channel card for guests.

Levels: start with interface outputs low (consumer –10 dBV if switchable), raise until the transmitter meters peak normally. The bridge keeps all 7 languages at the same loudness, so guests don't re-adjust volume when switching. **Steps 1–4** are identical to Route A (page 2).

Bridge	INT-TX	IR	Language (example)
—	Aux XLR	Channel 0	Floor (from desk)
Output 1	Input 1	Channel 1	English
Output 2	Input 2	Channel 2	French
Output 3	Input 3	Channel 3	German
Output 4	Input 4	Channel 4	Spanish
Output 5	Input 5	Channel 5	Russian
Output 6	Input 6	Channel 6	Chinese
Output 7	Input 7	Channel 7	Urdu

Spare: second bridge laptop pre-configured

Test: tone on each channel, check on a receiver

Delay: 2–5 s behind the speaker