



PROCESSOR UPDATE GUIDE

Beta fix now available

For phones running Acurast
Processor Core on Android.

We have an update on the issue that has been affecting part of the community over the past week. A **beta fix** is now rolling out, and you can opt in from the Acurast Hub in about two minutes — four steps, four switches.

Advanced Mode



Beta updates



Beta channel



Update

The four steps

All four are in your browser at hub.acurast.com — you select phones, sign an update message, and they pick the new build up on their own. About two minutes end to end.

1

Enable Advanced Mode

PAGE 3

One toggle at the top of the Phones page. It reveals the beta option.

2

Enable Beta Processor Updates

PAGE 3

Opts your account in to seeing pre-release builds in the update dialog.

3

Select the beta update channel

PAGE 4

In the Processor Update dialog, switch the channel from stable to the latest beta.

4

Run the update

PAGE 4

Exactly as you would any normal processor update. Select, sign, done.

WHAT YOU ARE ACTUALLY HELPING WITH

The beta is how the fix gets validated before it reaches everyone. Every phone that opts in tells us whether the issue is genuinely resolved under real conditions rather than in testing. **If you run the beta, you are the test.** Thank you for that.

Turn on beta updates

Both switches live on the **Phones** page of the Acurast Hub. Advanced Mode has to go on first — it is what makes the beta option appear at all.

1

Enable Advanced Mode

Go to the **Phones** page on the Acurast Hub and switch on **Advanced**, top right of the header.




The **Phones** page header. The **Advanced** toggle sits at the far right — lime and filled means it is on.


2

Enable Beta Processor Updates

With Advanced Mode on, a **Beta Processor Updates** card appears further down the page. Switch it from **Disabled** to **Enabled**.

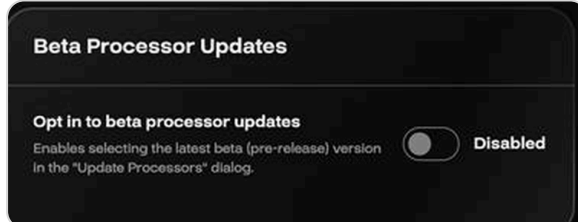

Before — the toggle reads Disabled.

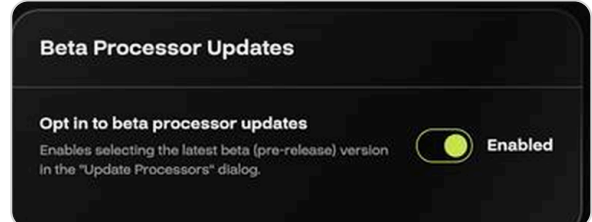

After — lime, and reading Enabled.

IF THE CARD IS NOT THERE

Your browser is probably serving a cached copy of the page. Do a **hard refresh**: hold **Shift** while clicking the Refresh / Reload button. Once the page reloads, the Beta Processor Updates card should appear.

ONE THING TO LEAVE ALONE

Advanced Mode also reveals a **Management Endpoint** card beside the beta one. It is unrelated to this fix — **leave it set to Default** and carry on to step 3.


Pick the beta build, then update

Back on the Phones page, open **Update Processors**. The dialog is the same one you already use — the only thing that changes is the channel at the top.

3

Select the beta update channel

Open the **Update Processors** dialog and change **Update channel** from the stable default to the release-candidate build — listed as **Latest beta**.

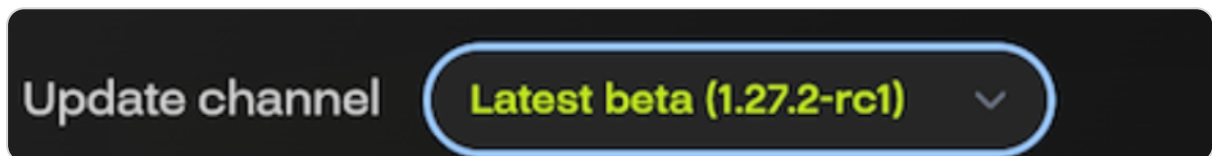


The channel selector, set to the beta build. **The version number will not always read 1.27.2-rc1** — newer release candidates ship over time, so take whichever Latest beta entry is offered.

4

Run the update

Proceed exactly as you would with any normal processor update: **select the phones** you want to update, **sign the update message**, and leave the rest alone. Your phones check for a pending update and apply it automatically on their next check.

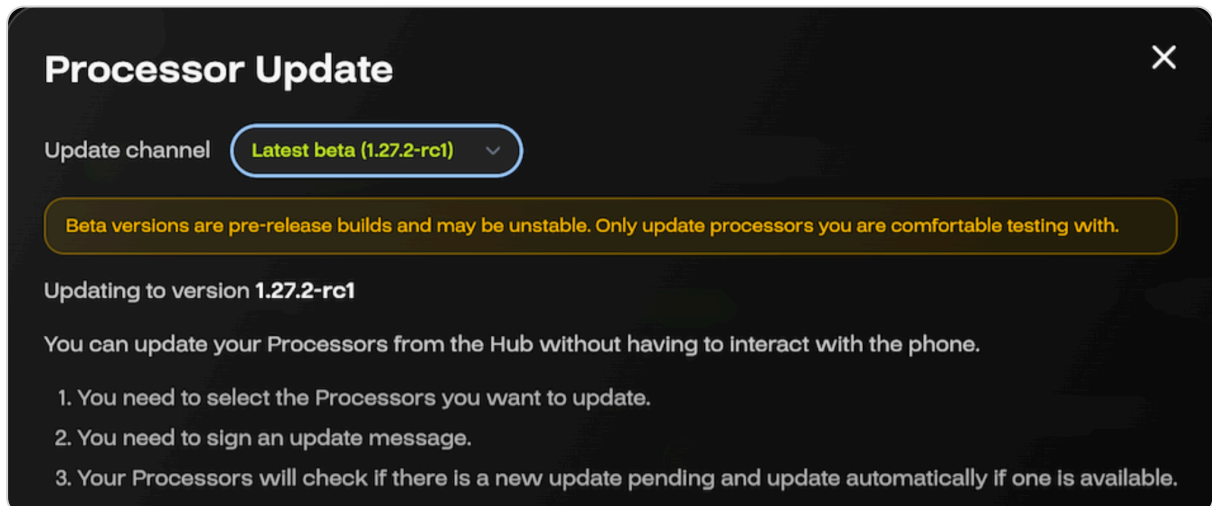

The full **Processor Update** dialog. It confirms the version you are moving to and restates the three things that happen next.

THE WARNING IN THE DIALOG, VERBATIM

"Beta versions are pre-release builds and may be unstable. Only update processors you are comfortable testing with."

THAT IS IT

You are on the beta fix

Nothing else is required from you. Four things are worth keeping in mind from here.

● It applies itself

Once the update is signed, your phones check for a pending update and take it automatically. **You do not need to touch the phone** or be at a desk when it lands.

● Watch for the issue returning

The point of the beta is to find out whether the fix holds. **Keep an eye on the behaviour you were seeing before** and note whether it comes back.

● Stepping back out

Turn **Beta Processor Updates** back off and the Processor Update dialog stops offering pre-release builds — it goes back to stable versions only.

● Tell us how it went

Working or not working are both useful results. **A quick report in Discord** is worth more to us than silence from a phone that is quietly fine.

Thank you for **testing**

Thank you for your patience over the past week, and for helping validate this update. We will keep monitoring the results and share more as we make progress.

hub.acurast.com

[Discord](#)

[Processor docs](#)