Update Alert: Firmware updates are posted to the web on a regular basis. We recommend that you check for firmware and/or install guide updates prior to installing this product.

Installation Guide



Doorlock and key Interface for many late Audi, Volkswagen, Seat and Skoda vehicles. Features include, door locks, door trigger sensing, hood pin, trunk/hatch, ignition and tach output.

One universal transponder bypass module and one factory programmed key is required to install a remote starter.

Index

Vehicle Application Guide 02
Immobilizer Interface 03

Installation - Wiring Diagram
Type 1 - PTS & Automatic Transmission 04
Type 1 - PTS & Manual Transmission 05
Wiring Reference Chart Type 1 06
Type 2 - Regular Key & Automatic Transmission 07
Type 2 - Regular Key & Manual Transmission 08
Wiring Reference Chart Type 2 09
Type 3 - Regular Key & Automatic Transmission 10
Type 3 - Regular Key & Manual Transmission 11
Wiring Reference Chart Type 3 12
Type 4 - PTS & Automatic Transmission 13
Type 4 - PTS & Manual Transmission 14
Type 5 - Regular Key & Automatic Transmission 15
Type 5 - Regular Key & Manual Transmission 16

Programming
Module Programming 17
Module Reset 19
Feature & Option List 20
Feature Programming 20

LED Diagnostics and Troubleshooting 21

Warranty 22

† Audi, Seat, Skoda and Volkswagen are registered trademarks and property of their respective

© 2022 Directed. All rights reserved.

Vehicle Application Guide

The table below lists the vehicles and features which are compatible with this product. Refer to the following pages for more information on installation wiring, programming and troubleshooting for these vehicles.

Vehicle Years & Installation Type	2021	2020	2019	2018	DL- Door Lock Control	DL- Door Unlock	DL- Arm/Disarm Factory Security	FOB- Control of aftermarked alarm with OEM remote	SS- Entry Status Drivers Door Pin	SS- Entry Status ALL Door Pins	SS- Entry Status Hood Pin	SS- Entry Status Trunk/Hatch Pin	RS- Tach/RPM Output	RS- Ignition Status	RS- Brake Status	RS - Handbrake Status
SEAT																
Arona (KJ) (Smart Key)	1	1	1	1	•	•	•	D	D	•	D	•	•	•	•	•
Ibiza (KJ) (Smart Key)	1	1	1	1	•	•	•	D	D	•	D	•	•	•	•	•
Toledo (NH) (Smart Key)	4	4	4		•	•	•	D	D	•	D	•	•	•	•	•
Toledo (NH)	5	5	5		•	•	•	D	D	•	D	•	•	•	•	•
SKODA																
Kamiq (NW) (Smart Key)	1	1			•	•	•	D	D	•	D	•	•	•	•	•
Rapid (NH) (Smart Key)	4	4	4		•	•	•	D	D	•	D	•	•	•	•	•
Rapid (NH)	5	5	5		•	•	•	D	D	•	D	•	•	•	•	•
Fabia (NJ)	5	5	5		•	•	•	D	D	•	D	•	•	•	•	•
Scala (NW) PTS	1	1	1		•	•	•	D	D	•	D	•	•	•	•	•
VOLSKWAGEN																
T-Cross (C1) (Smart Key)	1	1	1		•	•	•	D	D	•	D	•	•	•	•	•
T-Cross (C1)	3	3	3		•	•	•	D	D	•	D	•	•	•	•	•
Polo (AW) (Smart Key)	1	1	1	1	•	•	•	D	D	•	D	•	•	•	•	•
Polo (AW)	2	2	2	2	•	•	•	D	D	•	D	•	•	•	•	•

VIN description: VWVXXX<u>AW</u>123456789

<u>Legend:</u> D: Data-to-Data (D2D) only
•: D2D and Wire-to-Wire (W2W)
DL: OE Door Lock & Alarm Controls
RS: Engine Start & Status
FOB: Sync CAN Interface w/ FOB Remote
SS: Entry Point Status-Security


© 2022 Directed. All rights reserved.

Immobilizer interface

For vehicles with PTS (Push to Start) vehicles you must remove battery from OEM


1. Standard immobilizer interface with TBXKEY

TBXKEY are sold SEPARATELY. Request an order from Directed using the part numbers listed below.
UPC: **093207 062445**

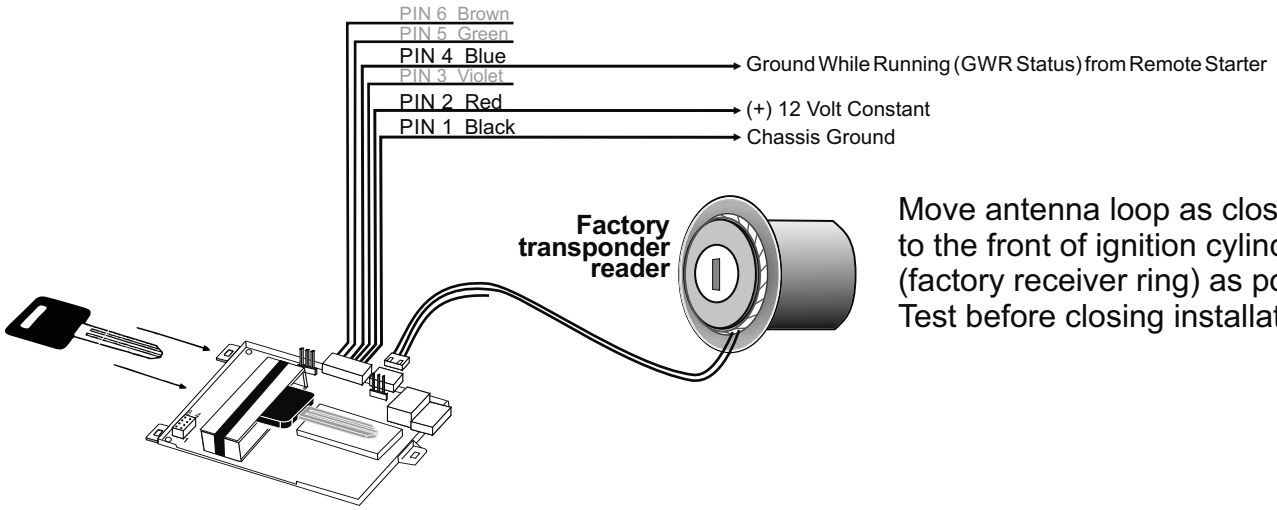

IMPORTANT!: *Not all OEM remotes can be inserted in TBXKEY because of their size. Make sure that the key can be disassembled, otherwise it is recomanded to use* ***Loop Immobilizer*** *installation.*

2. Loop immobilizer

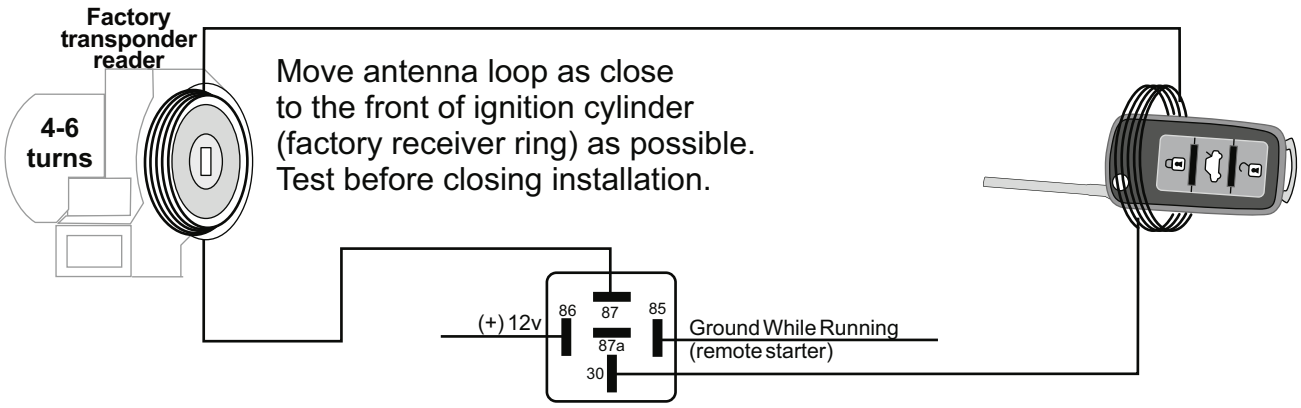


- Make 4-6 loops and place them as close to the front of ignition cylinder (factory receiver ring) as possible.
- Make 4-6 loops and place them around the front of the plastic body of the vehicle's coded key as shown above.
- Test and secure mounted loops before reassembling the vehicle.

NOTE: Your OEM remote may differ from the model shown in the illustrations.

© 2022 Directed. All rights reserved.

Wiring Diagram Type 1 - Push-to-Start (PTS) & Automatic Transmission

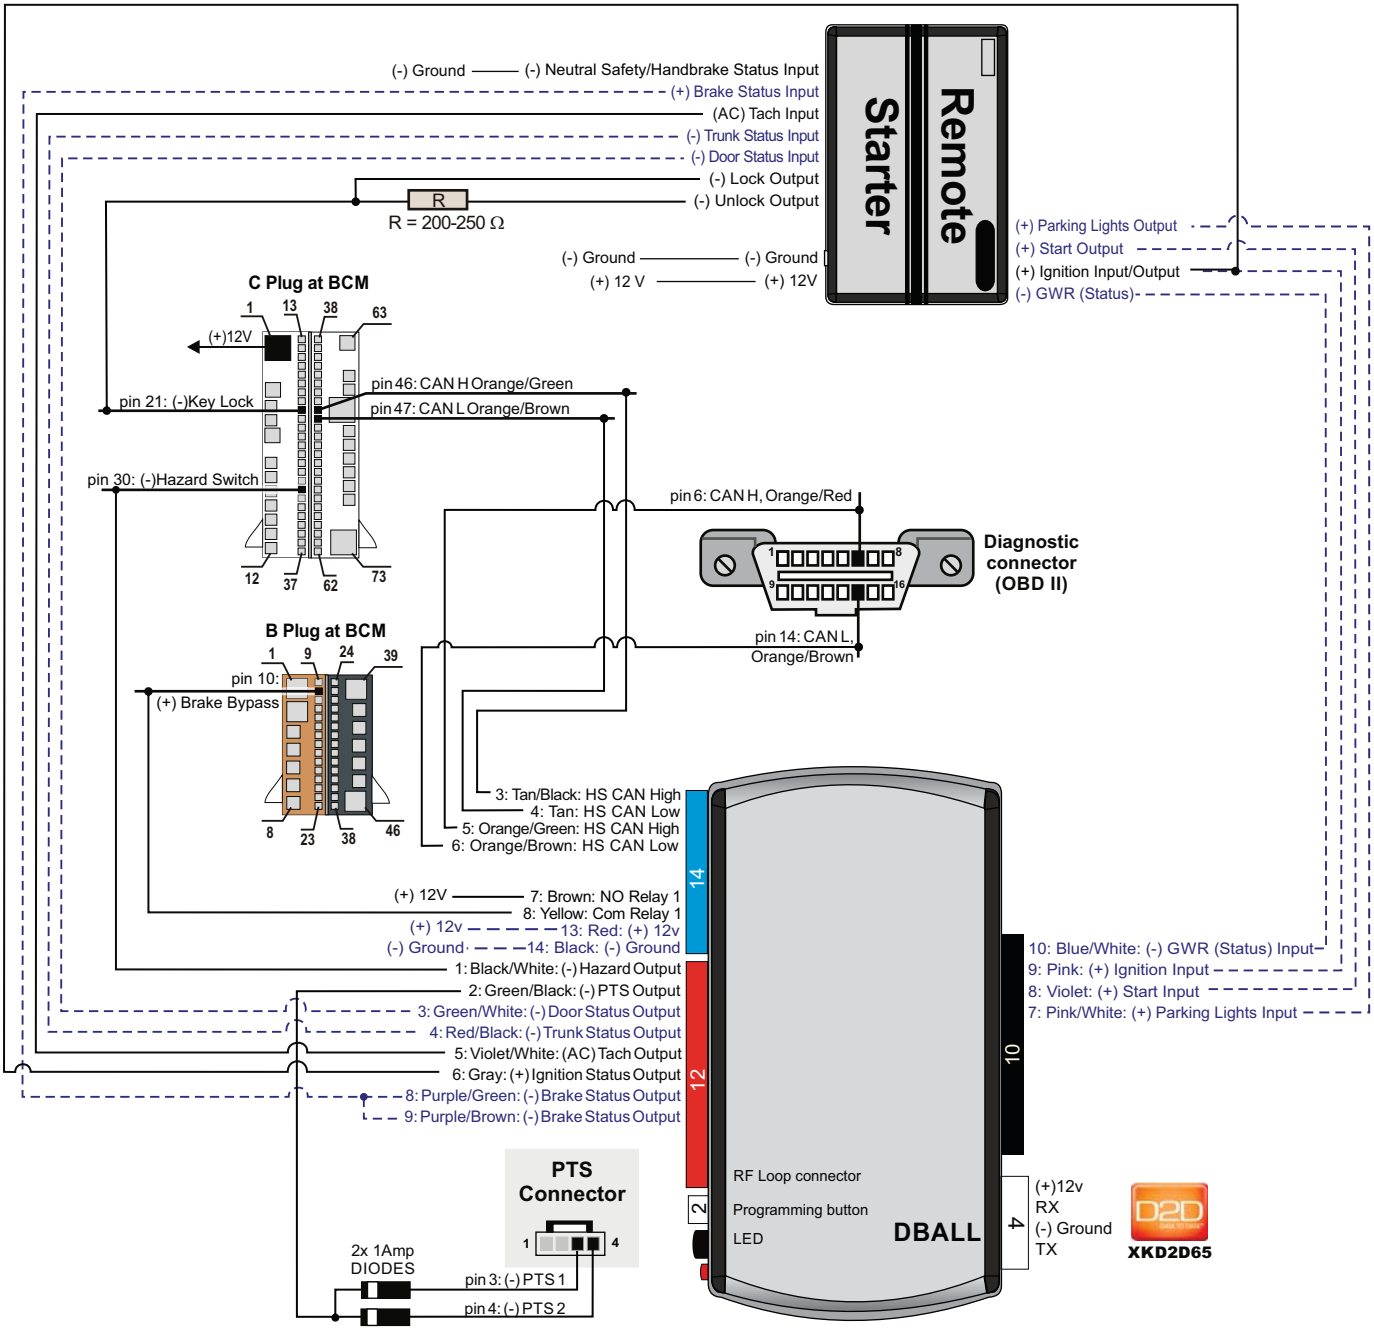


Remote Starter menu feature "Diesel Start Delay" must be set to Wait to Start with minimum 5 seconds to be remote started successfully.
This feature must be set ***for both gas or diesel*** *vehicles.*
To run lights during remote engine start, lights output from Remote Starter must be set to pulse output type.

Not required in D2D mode.

Wires are listed by pin numbers. This display is not representative of connector pin layouts, which are often stacked.
With the exception of the OBII Diagnostic plug, all connectors are displayed from the wire side.

© 2022 Directed. All rights reserved.

Wiring Diagram Type 1 - Push-to-Start (PTS) & Manual Transmission

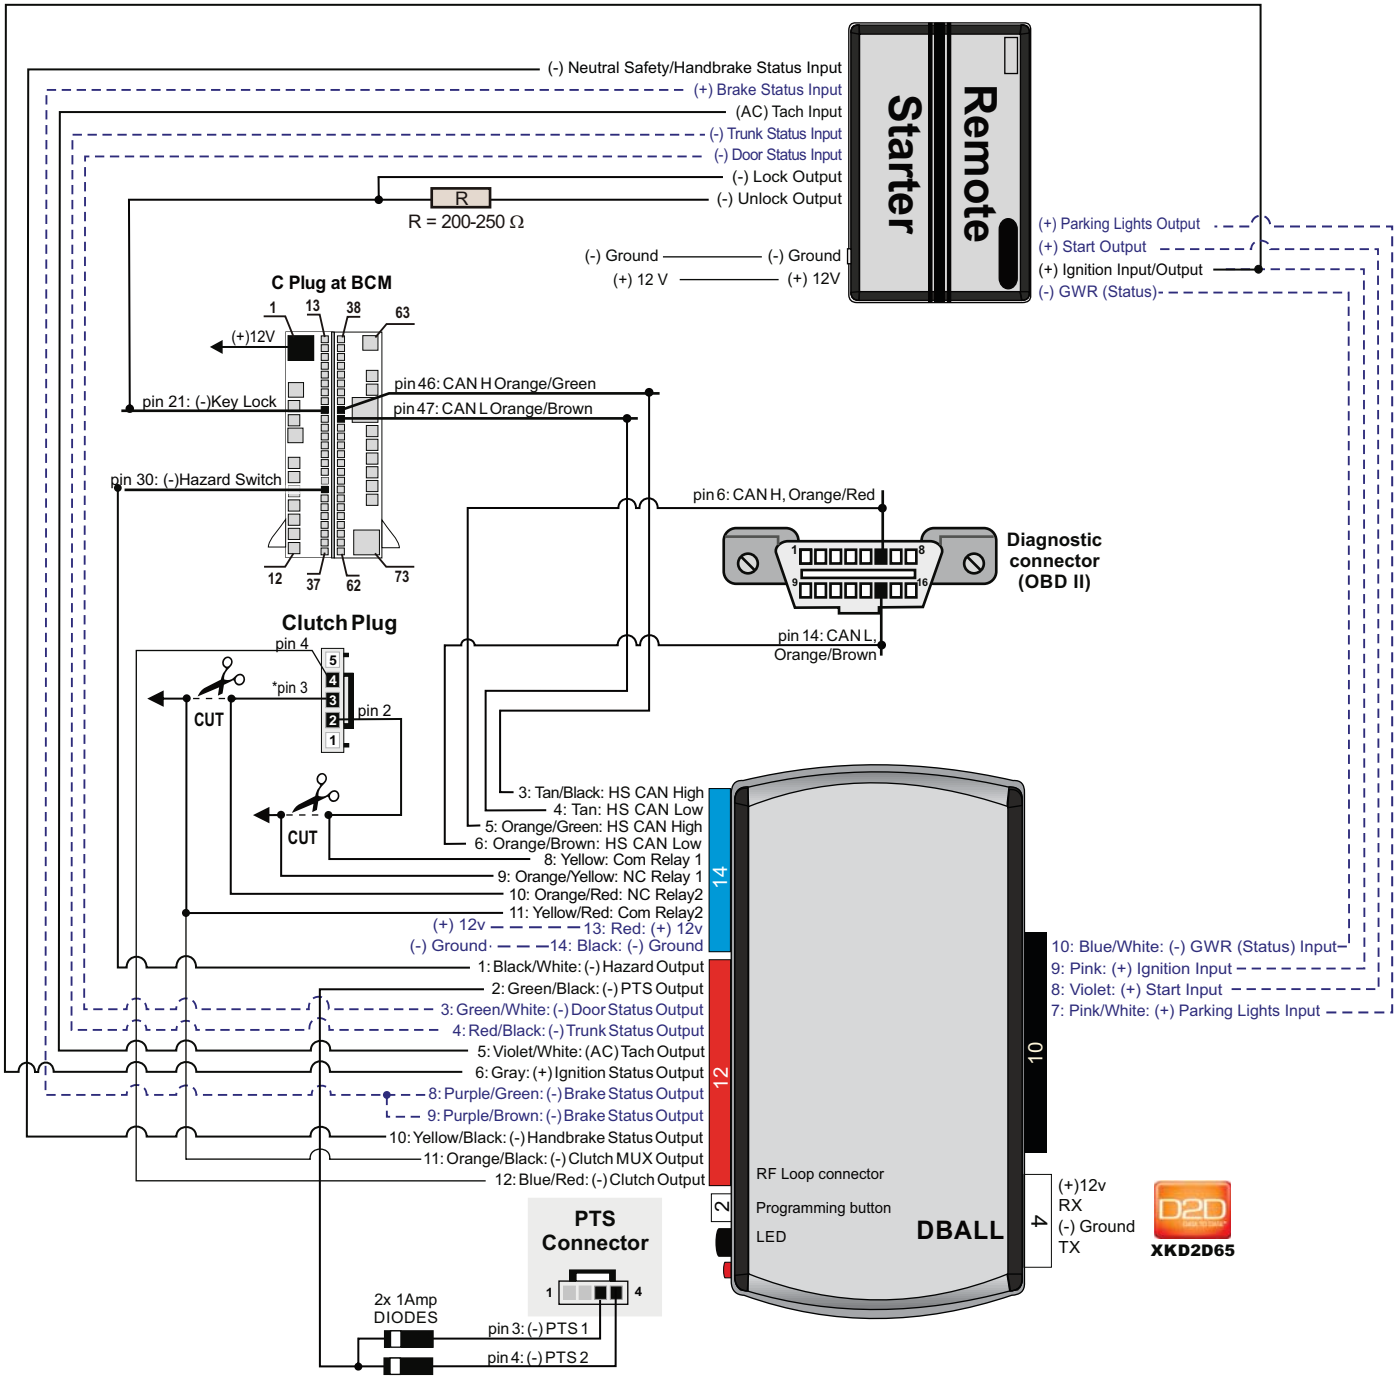

Remote Starter menu feature "Diesel Start Delay" must be set to Wait to Start with minimum 5 seconds to be remote started successfully.
This feature must be set ***for both gas or diesel*** *vehicles.*
To run lights during remote engine start, lights output from Remote Starter must be set to pulse output type.

Not required in D2D mode.

Wires are listed by pin numbers. This display is not representative of connector pin layouts, which are often stacked.
With the exception of the OBII Diagnotistic plug, all connectors are displayed from the wire side.

© 2022 Directed. All rights reserved.

Wiring Reference Chart for Type 1

VEHICLES	**(-) CL Lock** at C plug from BCM	**(-) Hazard** at C plug from BCM	**(+) Brake** at B plug from BCM	**(-) Clutch Switch** at Clutch Pedal			**(-) PTS Button** at PTS Connector	
	pin 21	pin 30	pin 10	pin 2 (-)	**pin 3* (MUX)**	pin 4 (-)	pin 3 (PTS 1)	pin 4 (PTS 2)
Seat								
Arona (Smart Key)	Yellow	Whitw/Green	Black/Red	White/Red	White/Green	White/Violet	Violet	Violet/Blue
Ibiza (Smart Key)		Whitw/Green	Black/Red	White/Red	White/Green	White/Violet	Violet	Violet/Blue
Skoda								
Kamiq (Smart Key)	Blue	Brown/Red	Black	White/Red	Black/Blue	White/Violet	Violet	Violet/Yellow
Scala(Smart Key)	Blue	Brown/Red	Black	White/Red	Black/Blue	White/Violet	Violet	Violet/Blue
VOLSKWAGEN								
T-Cross (Smart Key)	Blue	Brown/Red	Black	White/Red	Black/Blue	White/Violet	Violet	Violet/Blue
Polo (Smart Key)	Blue	Brown/Red	Black	White/Red	Black/Blue	White/Violet	Violet	Violet/Blue


*** pin 3 (clutch) - if the pin is empty this connection is not necessary.**

Locating Components

BCM - Driver side under dashboard



BCM

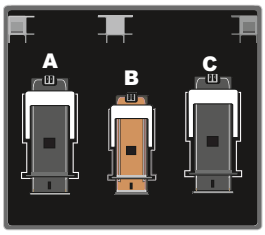

PTS Connector at Steering Column or at center console



PTS Connector



Clutch Connector behind battery support




remove connector by slightly pushing up with the finger



© 2022 Directed. All rights reserved.

Wiring Diagram Type 2 - Regular Key & Automatic Transmission

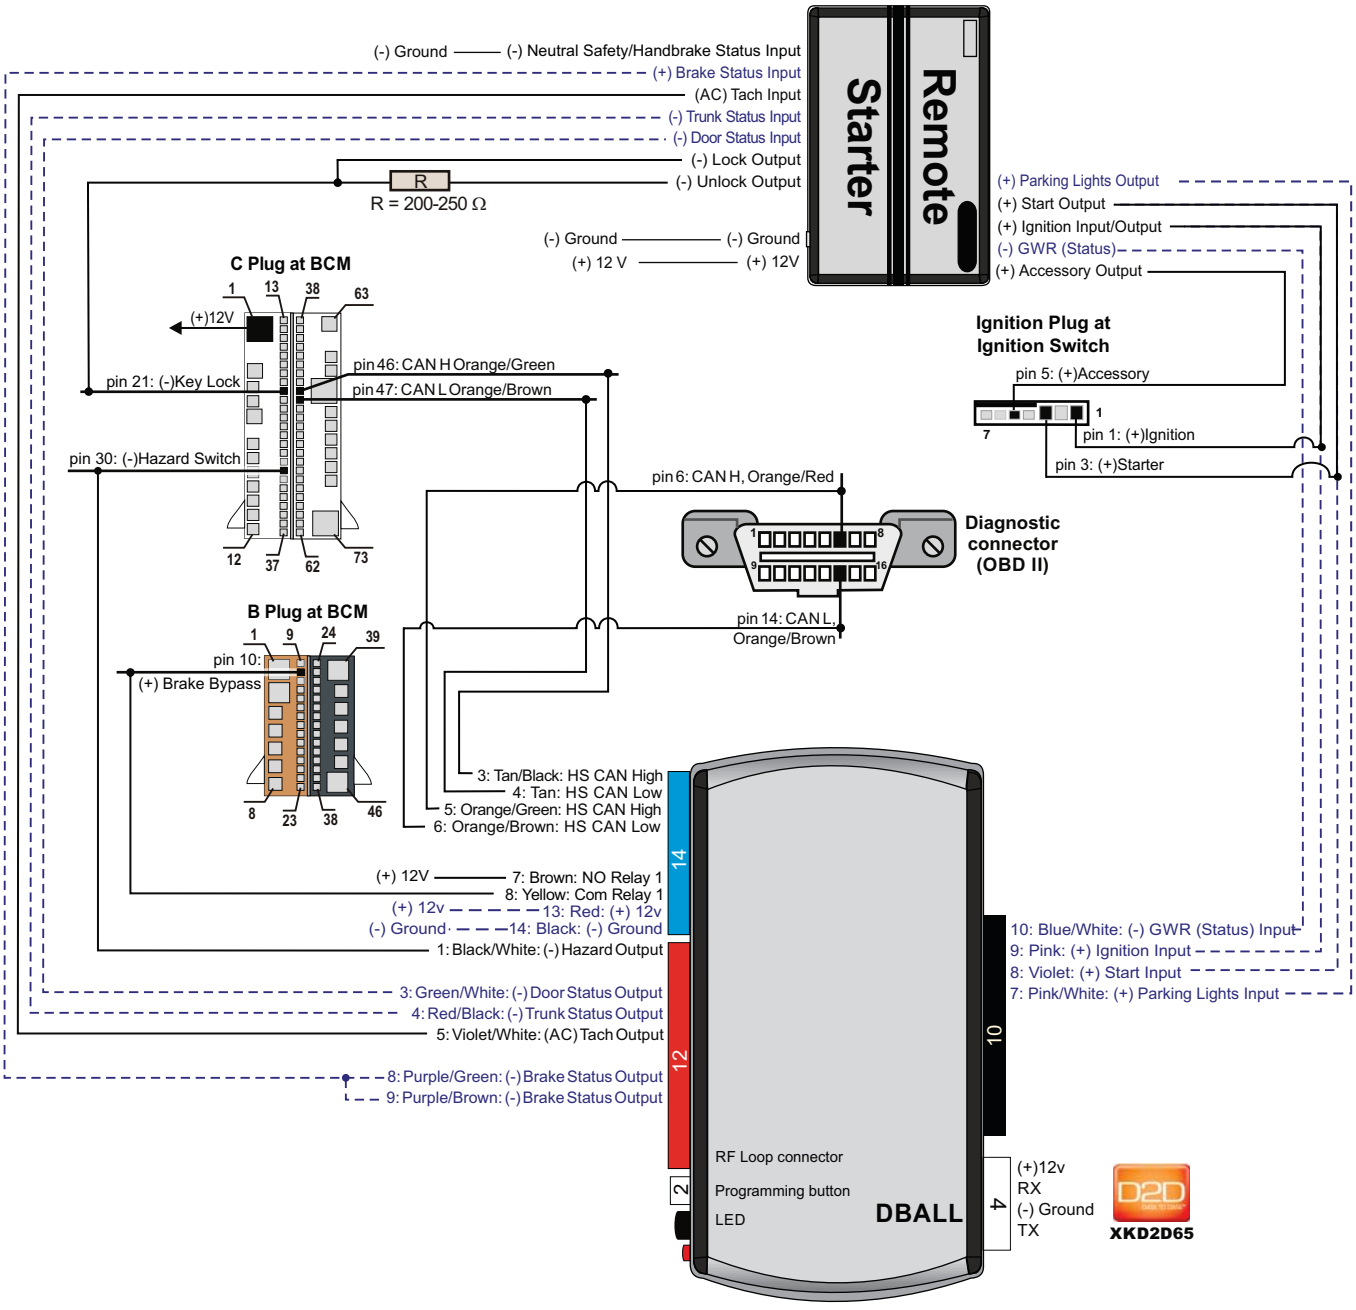


To run lights during remote engine start, lights output from Remote Starter must be set to pulse output type.

Not required in D2D mode.

Wires are listed by pin numbers. This display is not representative of connector pin layouts, which are often stacked.
With the exception of the OBII Diagnotistic plug, all connectors are displayed from the wire side.

© 2022 Directed. All rights reserved.

Wiring Diagram Type 2 - Regular Key & Manual Transmission

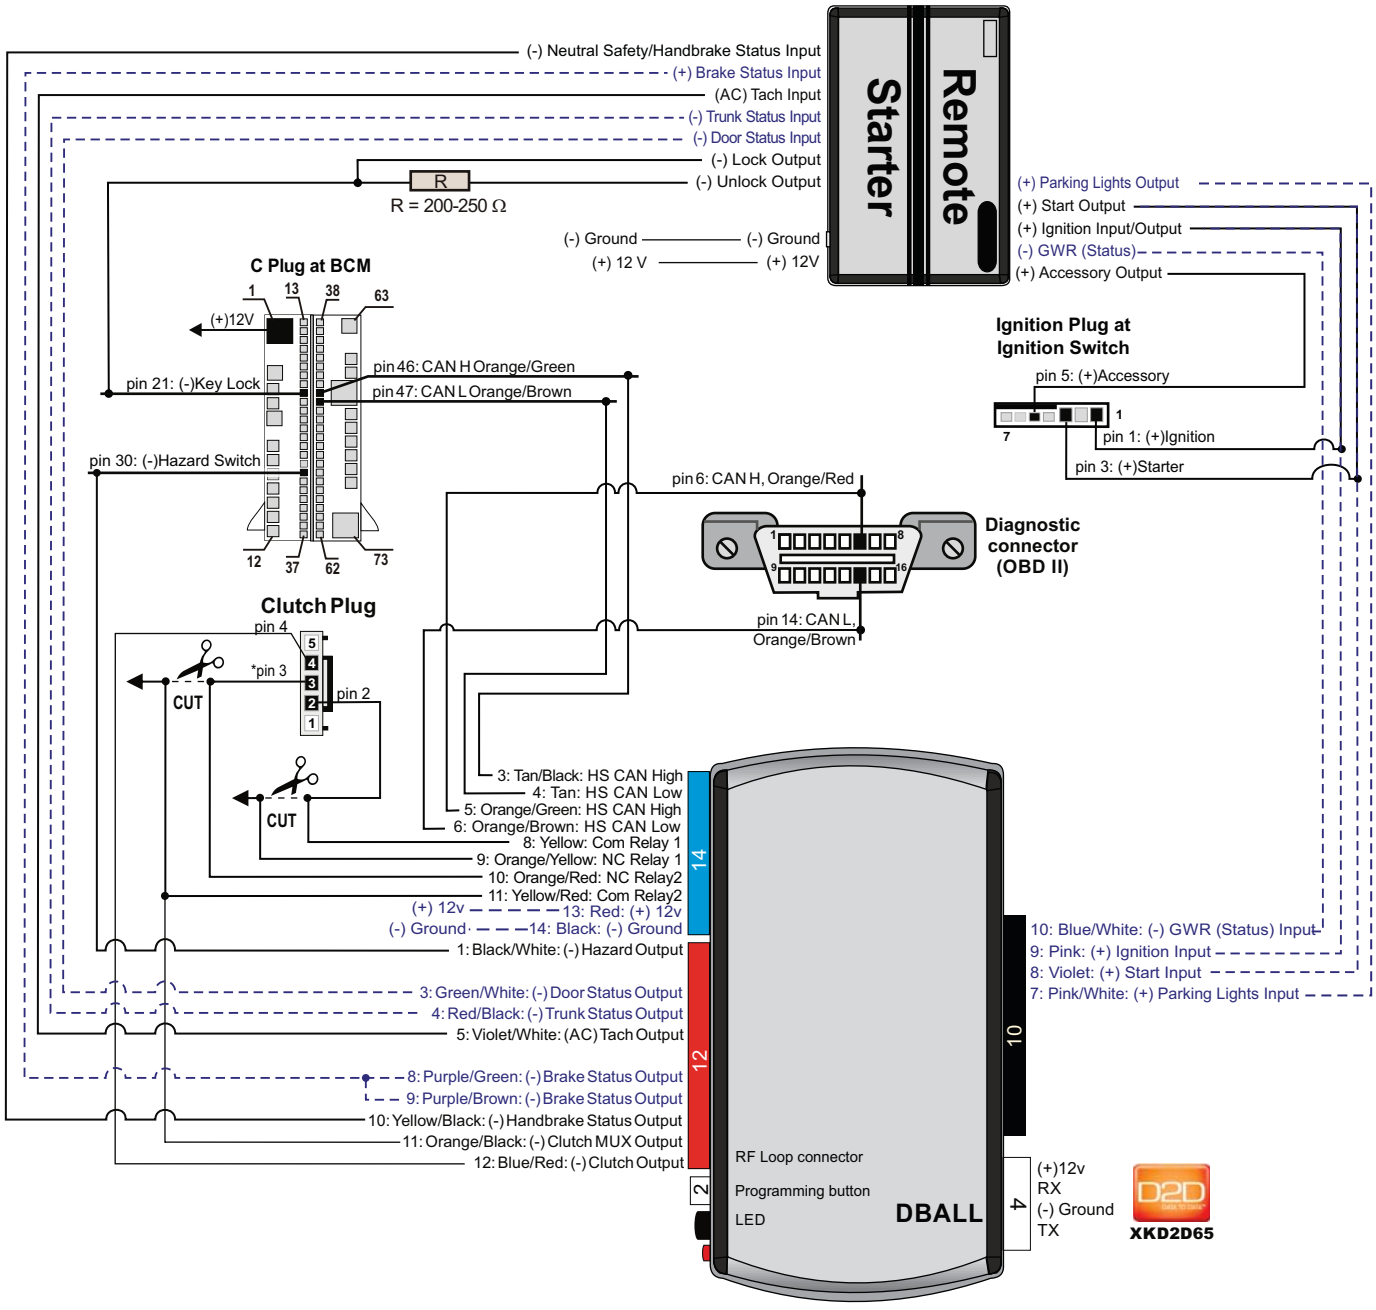

To run lights during remote engine start, lights output from Remote Starter must be set to pulse output type.

Not required in D2D mode.

Wires are listed by pin numbers. This display is not representative of connector pin layouts, which are often stacked.
With the exception of the OBII Diagnotistic plug, all connectors are displayed from the wire side.

© 2022 Directed. All rights reserved.

Wiring Reference Chart for Type 2

VEHICLES	**(-) CL Lock** at C plug from BCM	**(-) Hazard** at C plug from BCM	**(+) Brake** at B plug from BCM	**(-) Clutch Switch** at Clutch Pedal			**Ignition Wires** at Electronic steering column lock control unit		
	pin 21	pin 30	pin 10	pin 2 (-)	**pin 3* (MUX)**	pin 4 (-)	pin 1 (IGN 1)	pin 3 (Starter)	pin 5 (ACC)
VOLSKWAGEN									
Polo	Blue	Brown/Red	Black	White/Red	Black/Blue	White/Violet	Black/Blue	Red/Blue	White/Yellow


*** pin 3 (clutch) - if the pin is empty this connection is not necessary.**

Locating Components

BCM - Driver side under dashboard



BCM

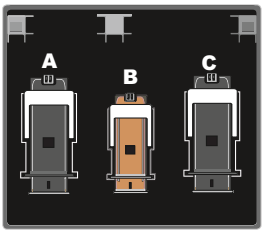

Clutch Connector behind battery support




remove connector by slightly pushing up with the finger



© 2022 Directed. All rights reserved.

Wiring Diagram Type 3 - Regular Key & Automatic Transmission

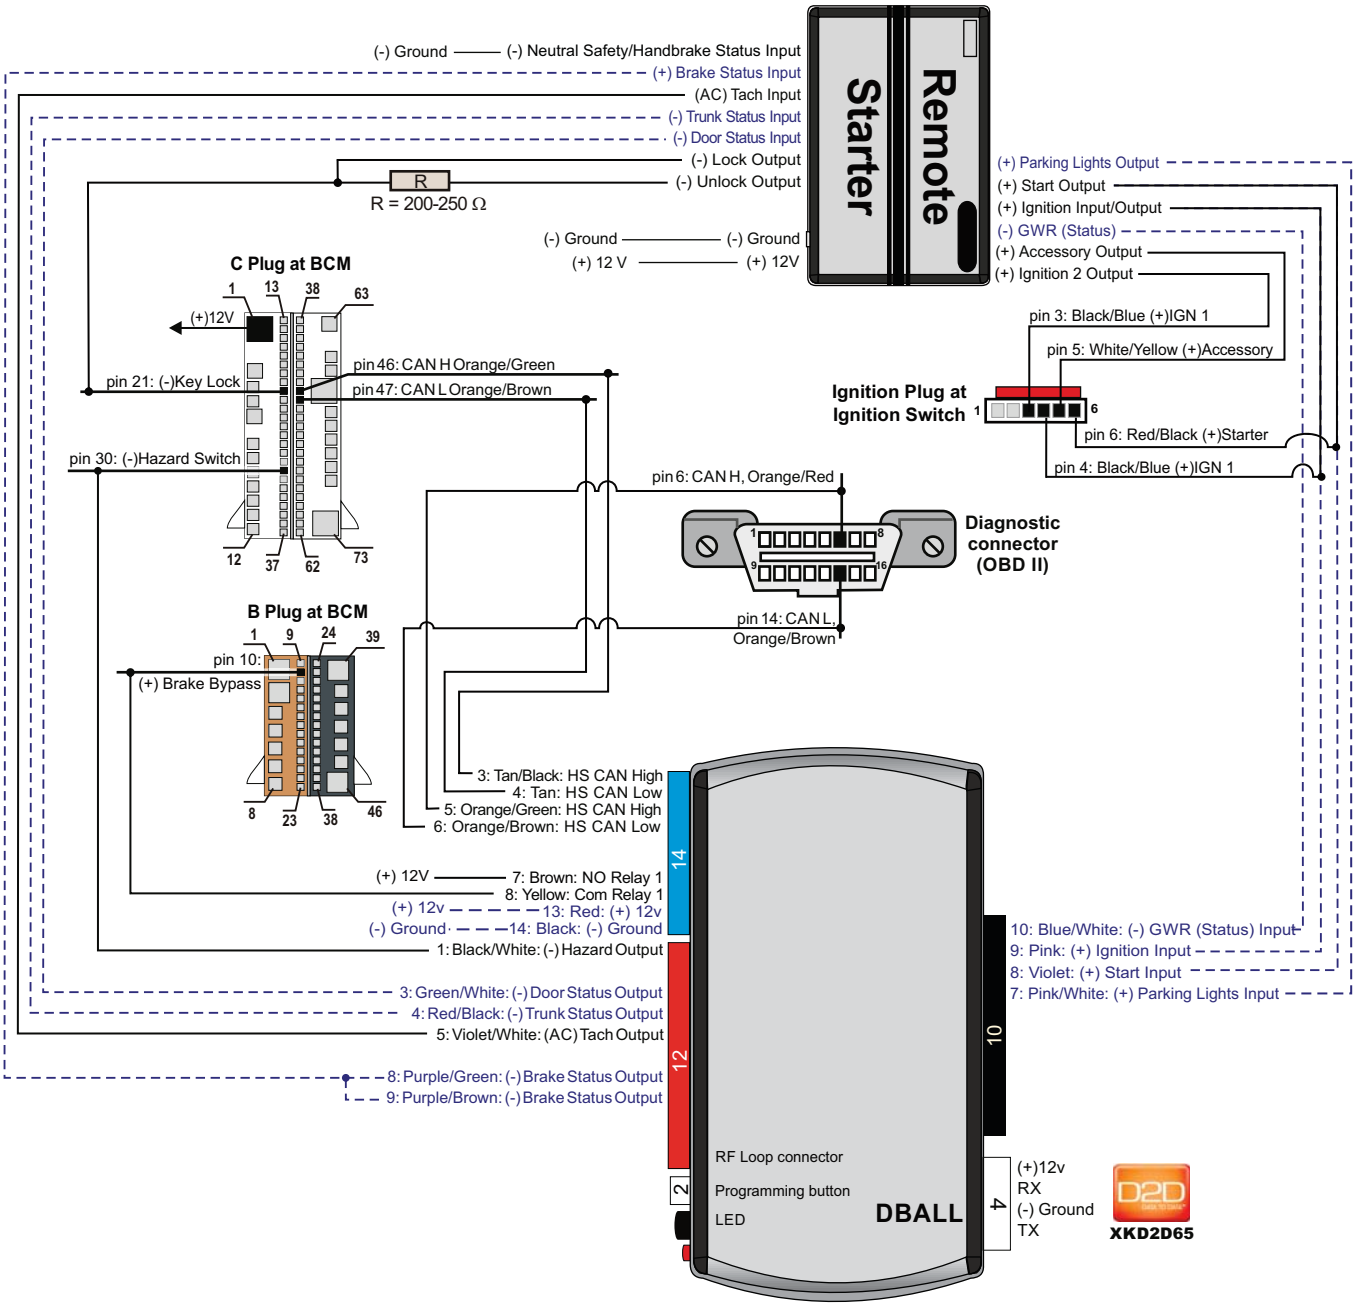


To run lights during remote engine start, lights output from Remote Starter must be set to pulse output type.

Not required in D2D mode.

Wires are listed by pin numbers. This display is not representative of connector pin layouts, which are often stacked.
With the exception of the OBII Diagnostic plug, all connectors are displayed from the wire side.

© 2022 Directed. All rights reserved.

Wiring Diagram Type 3 - Regular Key & Manual Transmission

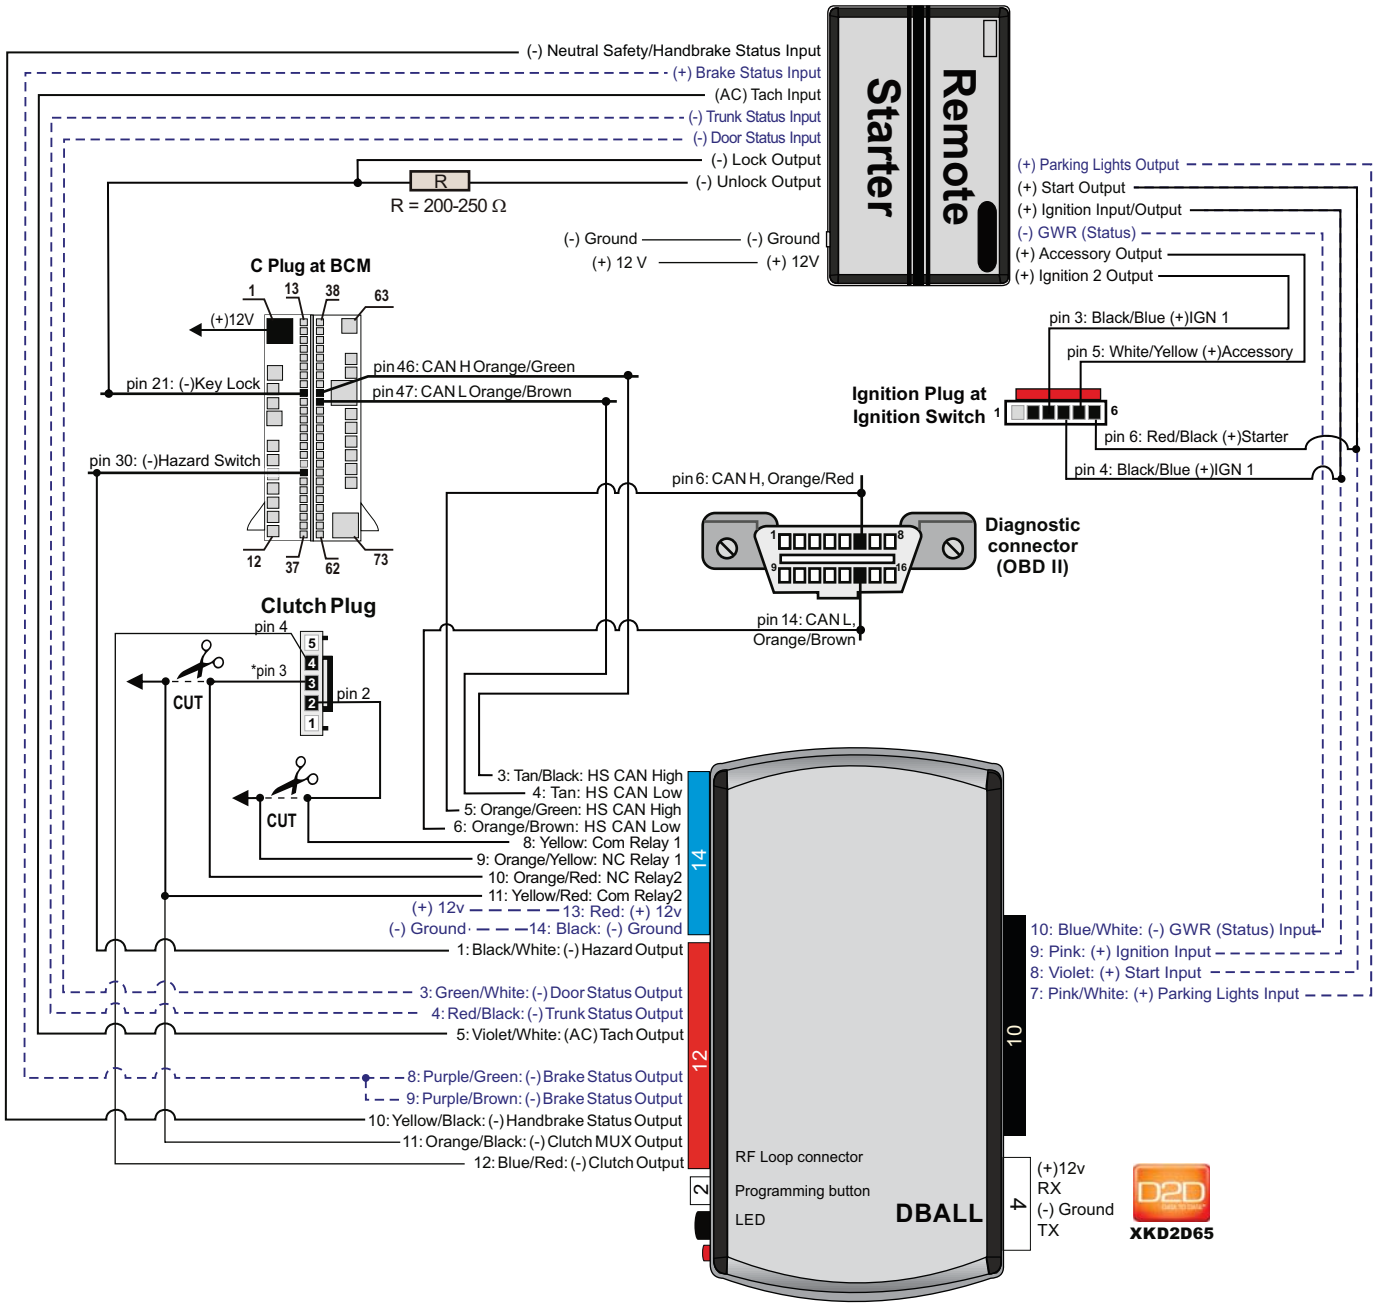

To run lights during remote engine start, lights output from Remote Starter must be set to pulse output type.

Not required in D2D mode.

Wires are listed by pin numbers. This display is not representative of connector pin layouts, which are often stacked.
With the exception of the OBII Diagnotistic plug, all connectors are displayed from the wire side.

© 2022 Directed. All rights reserved.

Wiring Reference Chart for Type 3

VEHICLES	**(-) CL Lock** at C plug from BCM	**(-) Hazard** at C plug from BCM	**(+) Brake** at B plug from BCM	**(-) Clutch Switch** at Clutch Pedal			**Ignition Wires** at Electronic steering column lock control unit			
	pin 21	pin 30	pin 10	pin 2 (-)	**pin 3* (MUX)**	pin 4 (-)	pin 3 (IGN 2)	pin 4 (IGN 1)	pin 5 (ACC)	pin 6 (Starter)
VOLSKWAGEN										
T-Cross	Blue	Brown/Red	Black	White/Red	Black/Blue	White/Violet	Black/Blue	Black/Blue	White/Yellow	Red/Black


*** pin 3 (clutch) - if the pin is empty this connection is not necessary.**

Locating Components

BCM - Driver side under dashboard



BCM

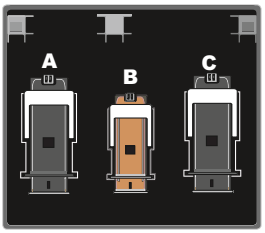

Clutch Connector behind battery support




remove connector by slightly pushing up with the finger



© 2022 Directed. All rights reserved.

Wiring Diagram Type 4 - Push-to-Start (PTS) & Automatic Transmission

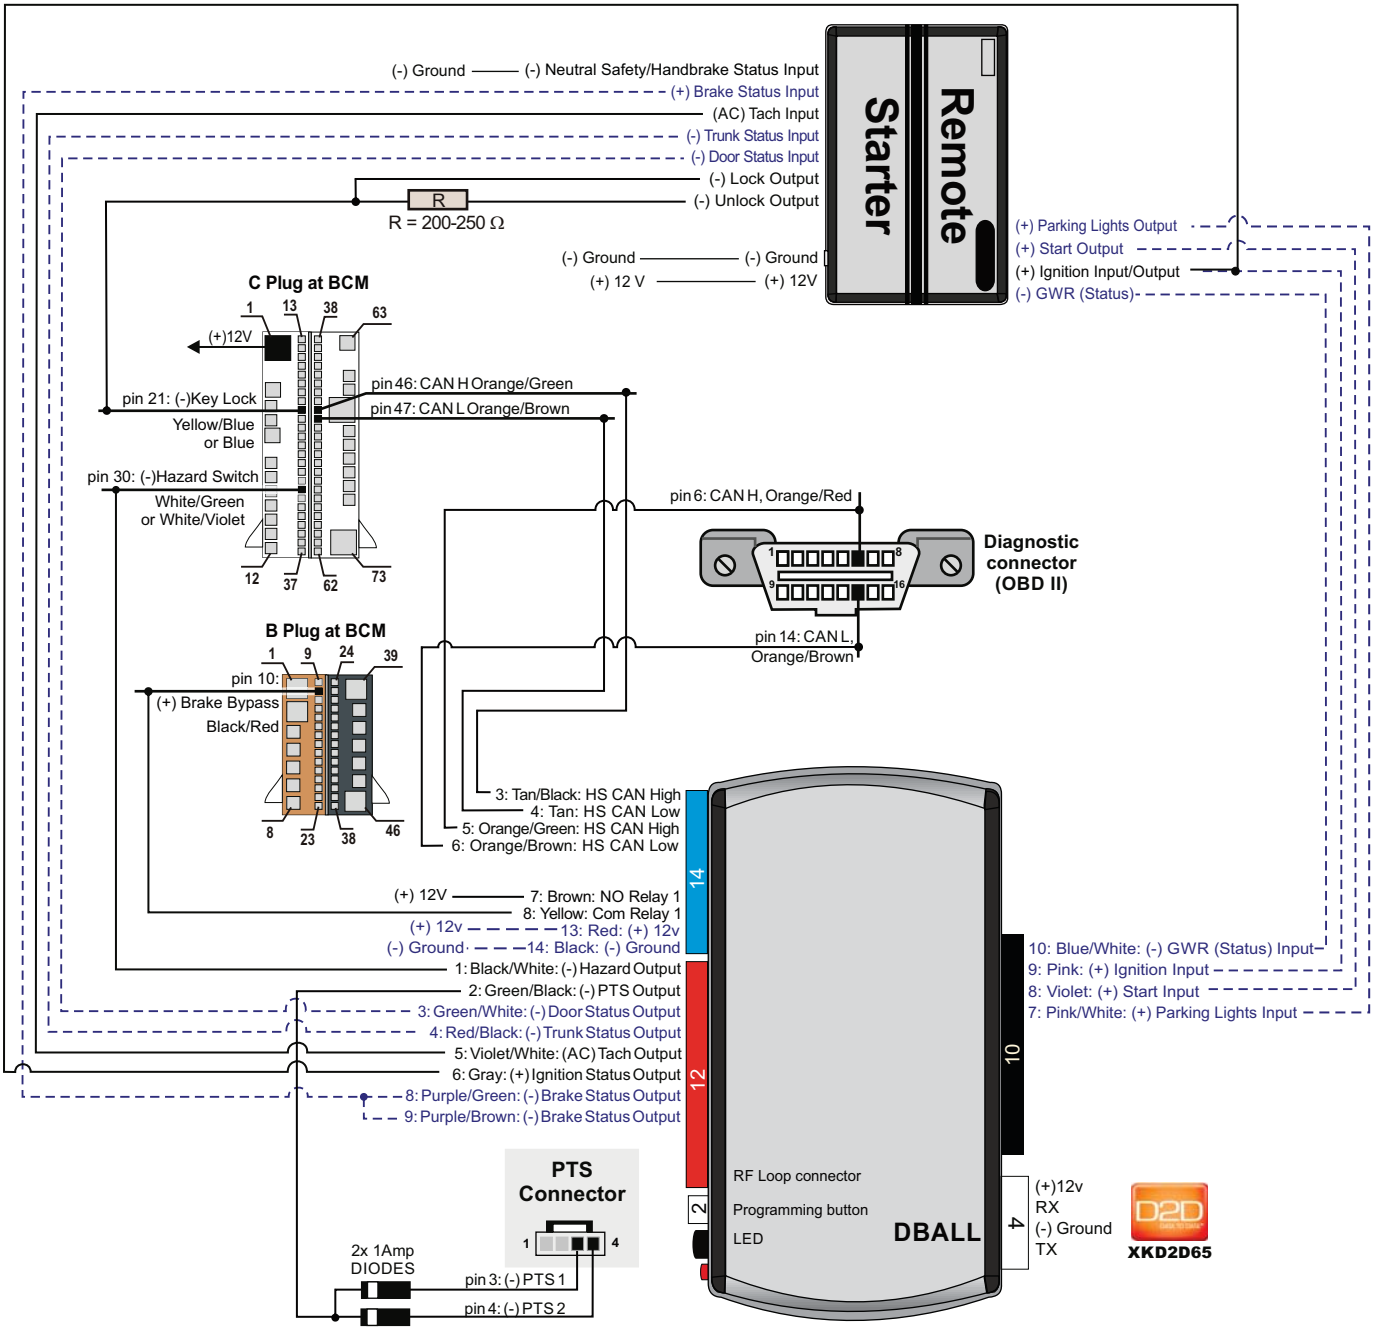


Remote Starter menu feature "Diesel Start Delay" must be set to Wait to Start with minimum 5 seconds to be remote started successfully.
This feature must be set ***for both gas or diesel*** *vehicles.*
To run lights during remote engine start, lights output from Remote Starter must be set to pulse output type.

– – – – Not required in D2D mode.

Wires are listed by pin numbers. This display is not representative of connector pin layouts, which are often stacked.
With the exception of the OBII Diagnostic plug, all connectors are displayed from the wire side.

© 2022 Directed. All rights reserved.

Wiring Diagram Type 4 - Push-to-Start (PTS) & Manual Transmission

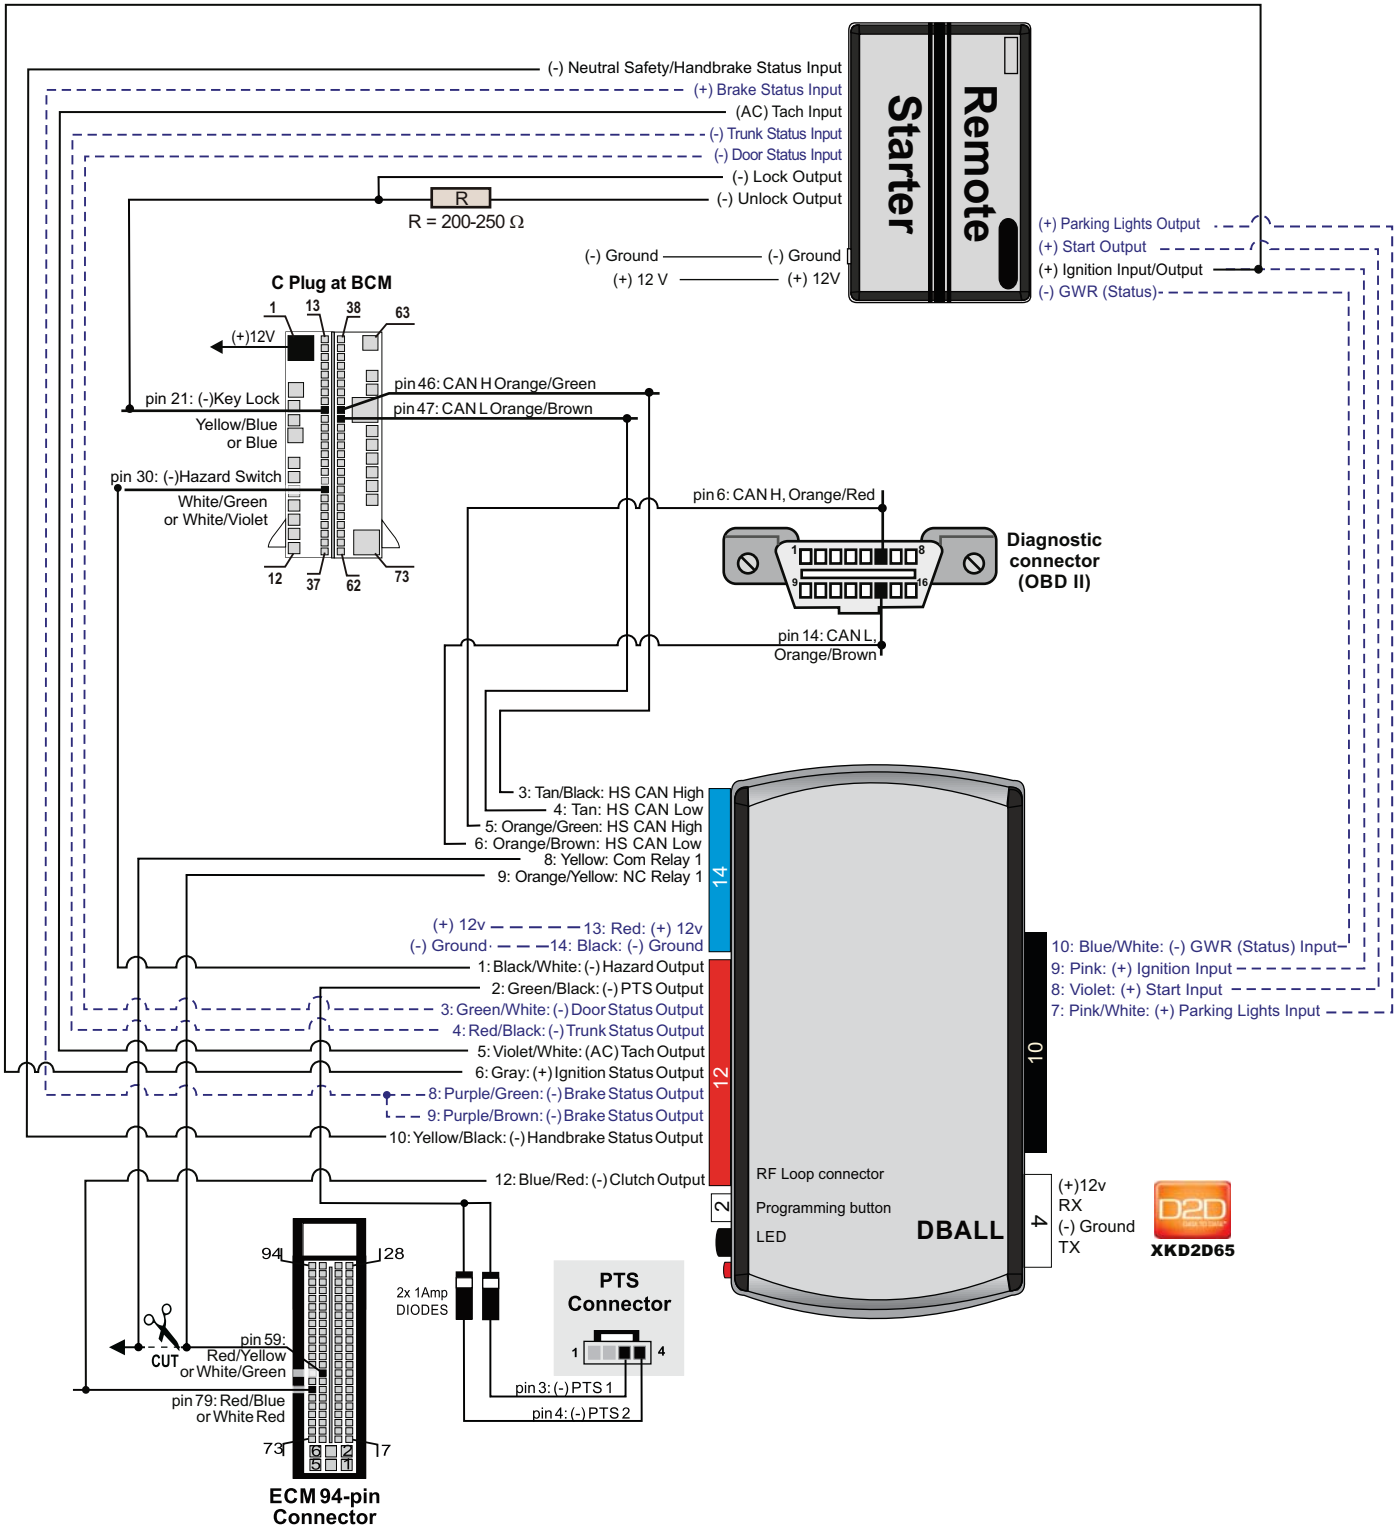


Remote Starter menu feature "Diesel Start Delay" must be set to Wait to Start with minimum 5 seconds to be remote started successfully.
This feature must be set ***for both gas or diesel*** *vehicles.*
To run lights during remote engine start, lights output from Remote Starter must be set to pulse output type.

– – – – Not required in D2D mode.

Wires are listed by pin numbers. This display is not representative of connector pin layouts, which are often stacked.
With the exception of the OBII Diagnostistic plug, all connectors are displayed from the wire side.

© 2022 Directed. All rights reserved.

Wiring Diagram Type 5 - Regular Key & Automatic Transmission

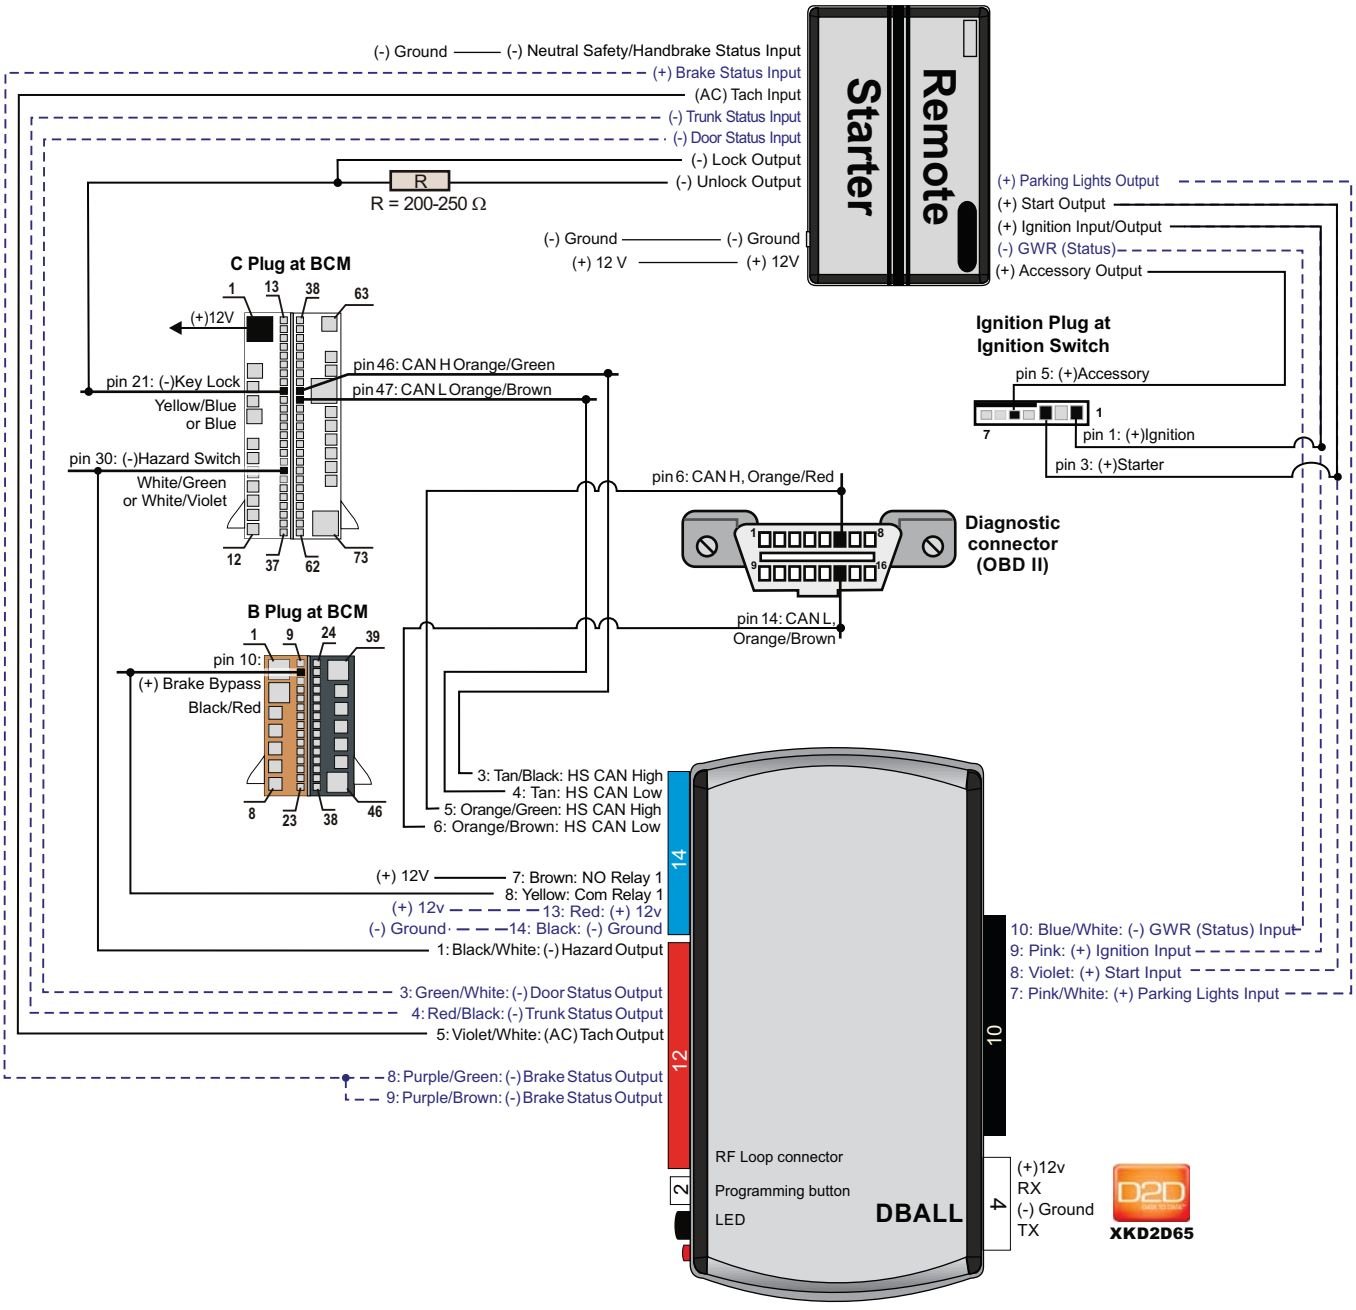


To run lights during remote engine start, lights output from Remote Starter must be set to pulse output type.

Not required in D2D mode.

Wires are listed by pin numbers. This display is not representative of connector pin layouts, which are often stacked.
With the exception of the OBII Diagnotistic plug, all connectors are displayed from the wire side.

© 2022 Directed. All rights reserved.

Wiring Diagram Type 5 - Regular Key & Manual Transmission

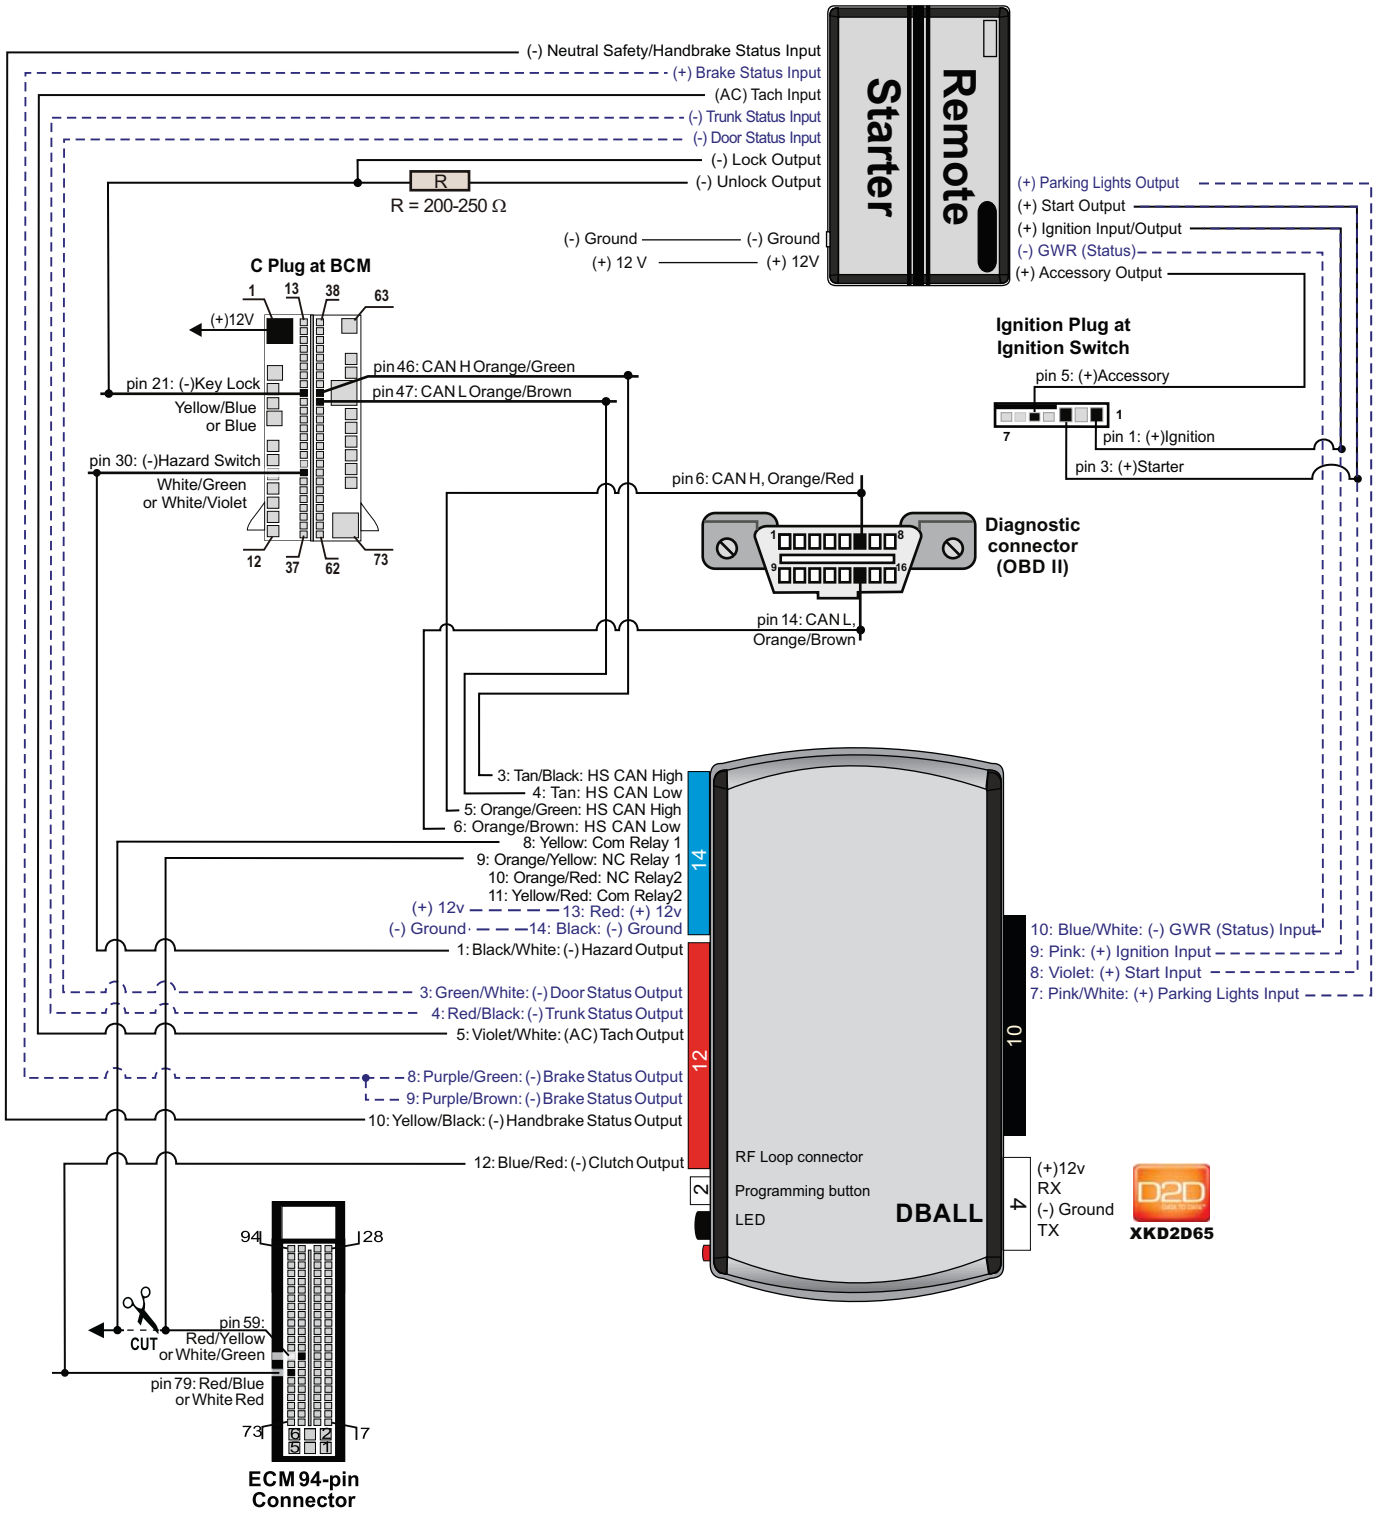

To run lights during remote engine start, lights output from Remote Starter must be set to pulse output type.

Not required in D2D mode.

Wires are listed by pin numbers. This display is not representative of connector pin layouts, which are often stacked.
With the exception of the OBII Diagnotistic plug, all connectors are displayed from the wire side.

© 2022 Directed. All rights reserved.

Module Programming

⚠ Refer to the LED Diagnostics section of this guide for more information and for troubleshooting purposes.

Important

Make all the required connections to the vehicle, as described in the wiring diagram(s) found in this guide, and double check to ensure everything is correct prior to moving onto the next step.

⚠ **Warning!** To take advantage of advanced features, you must use XpressVIP 4.5 or higher. Using version 2.9 or 3.1 will limit available functions and features.


1. Connect the interface module to your computer using the **XKLoader2**.
2. Open an Internet Explorer browser (version 6 or higher), and go to www.xpresskit.com. The detail of the platform and firmware that is currently saved on the interface module will be indicated in the top left corner of the page.
3. Select the **year**, **make** and **model** of the vehicle; the page will refresh to display the compatible firmware.
4. In the search result page, select one of the available install options (config for RSR, RXT or Standard install), and follow the instructions provided on the screen.
5. Once you have configured your options, click on the **FLASH** button to upload the firmware onto the interface module.
6. The following message will be displayed when the upload is completed:
   "The flashing is successfully completed. You may now unplug the kit."
   You can now proceed with the programming instructions below.

For vehicles with Regular Keys

1

D2D Installation


If required for your installation, connect the 10-pin, 12-pin and 14-pin harnesses to the module, then connect the 4-pin D2D harness.

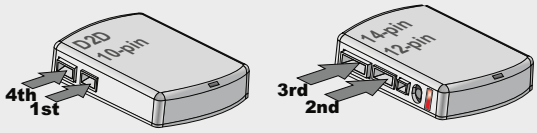

OR

W2W Installation


If required for your installation, connect the 10-pin and 12-pin harnesses to the module, then connect the 14-pin harness to the module.

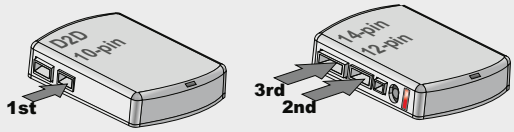

2 Wait until the LED turns ON solid red and press the Unlock button on the OEM remote.




3 Turn the ignition ON.

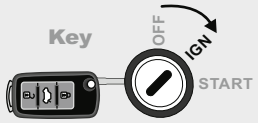

4 The green LED turns ON for 3 seconds and shuts off.



5 Turn the ignition OFF.



Go to the next page to make the module programming for vehicles with PTS. ➡


© 2022 Directed. All rights reserved.

For vehicles with PTS

1

D2D Installation


If required for your installation, connect the 10-pin, 12-pin and 14-pin harnesses to the module, then connect the 4-pin D2D harness.

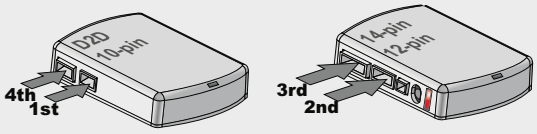

OR

W2W Installation

If required for your installation, connect the 10-pin and 12-pin harnesses to the module, then connect the 14-pin harness to the module.

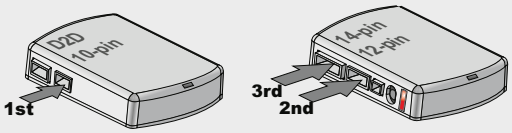

2 Wait until the LED turns ON solid red and press the Unlock button on the OEM remote.



3 For vehicles with PTS, make sure the key is inside the vehicle.




4 **Important:** Do NOT press the brake pedal.
Press the Push-to-Start (PTS) button once to turn the ignition ON.



5 The green LED turns ON for 3 seconds and shuts off.



6 Press the Push-to-Start (PTS) button once more to turn the ignition OFF.



© 2022 Directed. All rights reserved.


Module Reset

A module reset will erase the module programming **only** (bypass, convenience and vehicle detection). All the settings configured on the module using the web config tool will remain untouched.

1

D2D Installation


If required for your installation, connect the 10-pin, 12-pin & 14-pin harnesses to the module. Press and hold the programming button, then connect the 4-pin D2D harness.

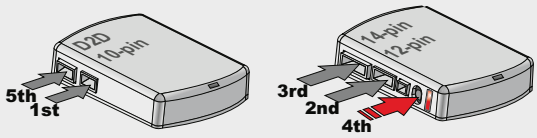

OR

W2W Installation

If required for your installation, connect the 10-pin & 12-pin harnesses to the module. Press and hold the programming button, then connect the 14-pin harness to the module.

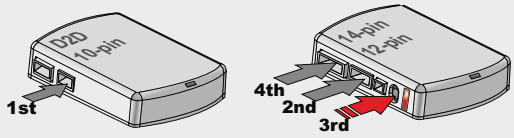

2 Wait 3 seconds until the LED turns ON solid orange then release the programming button. The LED then turns ON solid red.




Hard Reset

Warning Against Executing a Hard Reset!
A hard reset will erase all the data stored in the DBALL and will change all the settings configured on the module to its default values. After a hard reset, you may have to reconfigure your DBALL if your installation requires specific options, not part of the default configuration. See the **Feature & Option List** section of this guide.

1

D2D Installation


If required for your installation, connect the 10-pin, 12-pin & 14-pin harnesses to the module. Press and hold the programming button, then connect the 4-pin D2D harness.

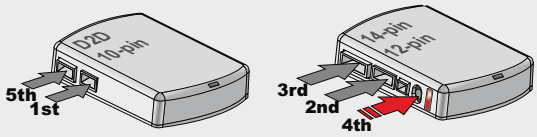


OR

W2W Installation

If required for your installation, connect the 10-pin & 12-pin harnesses to the module. Press and hold the programming button, then connect the 14-pin harness to the module.

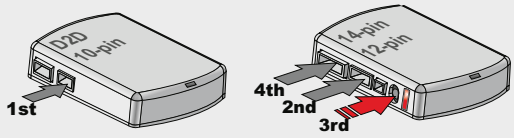

2 Wait 3 seconds until the LED turns ON solid orange, and wait 10 more seconds until the LED starts to flash orange and red.

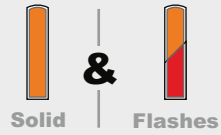

3 Release the programming button. The LED turns ON solid red.



© 2022 Directed. All rights reserved.


Feature & Option List

It is recommended to configure all the features and options listed below using the configuration tool found on the module flashing page on www.xpresskit.com. The web offers more options; however, a manual configuration of the features is possible using the information on this page.

Feat.	Operation	Flashes/Options	Description
1	RFTD Output Type	**1. No RF Output***	Module is connected to a remote starter using a standard installation.
		2. RFTD Output	Module is connected to an XL202 using an RSR or RXT installation (when available).
		3. SmartStart	Module is connected to SmartStart using an RSR or RXT installation (when available).
2	Takeover	1. Disabled	Engine shutdown when door opens.
		2. Enabled only by OEM remote	Takeover is activated for 45 seconds after pressing unlock button on OEM remote
		3. Enabled by OEM and aftermarket remote*	Takeover is activated for 45 seconds after pressing unlock button on OEM or aftermarket remote
		4. OFF	Takeover controlled only by remote starte

* **default option**

Feature Programming



To enter feature programming routine

Turn the ignition ON, then OFF.
Within 5 seconds, press and HOLD the programming button until the LED turns ON orange (after 3 seconds). Release the Programming button.
The LED will flash green once slowly to indicate the feature number is 1. After a short delay, the LED flashes red rapidly to indicate the current option of feature 1 (i.e. 1x green followed by 1x red indicates feature 1 is set to option 1). The flashing sequence will repeat until a new command is entered.

Changing feature options

Press the lock/arm or unlock/disarm button on aftermarket transmitter to change the option of the selected feature.
The LED flashes red rapidly the number of times equal to the current option number. After a short delay, the LED flashes green slowly the number of times to indicate the current feature. The flashing sequence will repeat until a new command is entered.

Accessing another feature

Press and release the programming button a number of times to advance from the current feature to the next desired feature.
The LED flashes green slowly the number of times equal to the feature number. After a short delay, the LED flashes red rapidly to indicate the current option of the current feature. The flashing sequence will repeat until a new command is entered.

When the maximum number of features or options is reached, the LED will start flashing again from the first feature or option.

Once a feature is programmed

Other features can be programmed.
The feature programming can be exited.

Exiting feature programming

No activity for 30 seconds; after 30 seconds, the LED will turn ON orange for 2 seconds to confirm the end of the programming sequence.
OR
Press and HOLD the programming button for 3 seconds. After 3 seconds, the LED will turn ON orange for 2 seconds to confirm the end of the programming sequence.

© 2022 Directed. All rights reserved.

LED Diagnostics & Troubleshooting

LED	Status	Description	Troubleshooting
Module Programming			
	Off	Module has no power.	Check the power connections.
	Solid red	Module is powered. Waiting for programming to begin.	Check if the ignition input is properly connected.
	Flashing green slowly	Module has detected IGN ON. Detection in progess.	The CAN wires may be incorrectly connected. Refer to the wiring diagram to make the right connections.
	Solid green for 3 seconds	Module was successfully programmed	Normal operation.
Module Programming - Error codes			
	Flashes red x 2	HS CAN not detected	The CAN wires may be incorrectly connected. Refer to the wiring diagram to make the right connections.
	Flashes red x 9	Ignition not detected	The CAN bus was detected but the ignition on CAN message is not detected. Check if the firmware from unit is correct.
	Flashes red x 11	Internal Error	Report issue to technical support.
Active Ground While Running			
	Flashes green	GROUND OUT ON (GWR) command received	Otherwise, the Ground While Running (status) signal was lost or was never received by the module. Commands can come from RF, D2d or W2W
	Flashes red and orange	IGNITION ON command received	Othewise, the ignition signal was not received by the module. In a W2W install, it will shou only if the ignition input wire is used.
	Flashes green quickly	START ON command received	Otherwise, the start signal was not received by the module. In a W2W install, it will show only if the ignition input wire is used.
D2D and W2W Commands			
	Flashes orange x 1	LOCK command received.	Normal operation.
	Flashes orange x 2	UNLOCK command received.	
	Flashes orange x 3	TRUNK command received.	

© 2022 Directed. All rights reserved.

Limited One Year Consumer Warranty

For a period of ONE YEAR from the date of purchase of a Directed Electronics remote start or security product, Directed Electronics. ("DIRECTED") promises to the original purchaser, to repair or replace with a comparable reconditioned piece, the security or remote start accessory piece (hereinafter the "Part"), which proves to be defective in workmanship or material under normal use, provided the following conditions are met: the Part was purchased from an authorized DIRECTED dealer; and the Part is returned to DIRECTED, postage prepaid, along with a clear, legible copy of the receipt or bill of sale bearing the following information: consumer's name, address, telephone number, the authorized licensed dealer's name and complete product and Part description.

This warranty is nontransferable and is automatically void if the Part has been modified or used in a manner contrary to its intended purpose or the Part has been damaged by accident, unreasonable use, neglect, improper service, installation or other causes not arising out of defect in materials or construction.

TO THE MAXIMUM EXTENT ALLOWED BY LAW, EXCEPT AS STATED ABOVE, ALL WARRANTIES, INCLUDING BUT NOT LIMITED TO EXPRESS WARRANTY, IMPLIED WARRANTY, WARRANTY OF MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSE AND WARRANTY OF NONINFRINGEMENT OF INTELLECTUAL PROPERTY, ARE EXPRESSLY EXCLUDED; AND DIRECTED NEITHER ASSUMES NOR AUTHORIZES ANY PERSON OR ENTITY TO ASSUME FOR IT ANY DUTY, OBLIGATION OR LIABILITY IN CONNECTION WITH ITS PRODUCTS. DIRECTED HEREBY DISCLAIMS AND HAS ABSOLUTELY NO LIABILITY FOR ANY AND ALL ACTS OF THIRD PARTIES INCLUDING DEALERS OR INSTALLERS. IN THE EVENT OF A CLAIM OR A DISPUTE INVOLVING DIRECTED OR ITS SUBSIDIARY, THE PROPER VENUE SHALL BE SAN DIEGO COUNTY IN THE STATE OF CALIFORNIA. CALIFORNIA STATE LAWS AND APPLICABLE FEDERAL LAWS SHALL APPLY AND GOVERN THE DISPUTE. THE MAXIMUM RECOVERY UNDER ANY CLAIM AGAINST DIRECTED SHALL BE STRICTLY LIMITED TO THE AUTHORIZED DIRECTED DEALER'S PURCHASE PRICE OF THE PART. DIRECTED SHALL NOT BE RESPONSIBLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR THE LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE. NOTWITHSTANDING THE ABOVE, THE MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR
REPAIR AT DIRECTED'S OPTION THE PART AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights and you may also have other rights that vary from State to State. DIRECTED does not and has not authorized any person or entity to create for it any other obligation, promise, duty or obligation in connection with this Part.

920-0007 2009-09

This Interface kit / Data Bus Interface part has been tested on the listed vehicles. Other vehicles will be added to the select vehicle list upon completion of compatibility testing. Visit website for latest vehicle application guide. DISCLAIMER: Under no circumstances shall the manufacturer or the distributors of the bypass kit / data bus interface part(s) be held liable for any consequential damages sustained in connection with the part(s) installation. The manufacturer and it's distributors will not, nor will they authorize any representative or any other individual to assume obligation or liability in relation to the interface kit / data bus interface part(s) other than its replacement. N.B.: Under no circumstances shall the manufacturer and distributors of this product be liable for consequential damages sustained in connection with this product and neither assumes nor authorizes any representative or other person to assume for it any obligation or liability other than the replacement of this product only.

Protected by U.S. Patents: 5,719,551; 6,011,460 B1 *; 6,243,004 B1; 6,249,216 B1; 6,275,147 B1; 6,297,731 B1; 6,346,876 B1; 6,392,534 B1; 6,529,124 B2; 6,696,927 B2; 6,756,885 B1; 6,756,886 B2; 6,771,167 B1; 6,812,829 B1; 6,924,750 B1; 7,010,402 B1; 7,015,830 B1; 7,031,826 B1; 7,046,126 B1; 7,061,137 B1; 7,068,153 B1; 7,205,679 B1; Cdn. Patent: 2,320,248; 2,414,991; 2,415,011; 2,415,023; 2,415,027; 2,415,038; 2,415,041; 2,420,947; 2,426,670; 2,454,089; European

© 2022 Directed. All rights reserved.