

Motor Starter

Instructions

The Advantage motor starter is used to activate devices that draw more current than our standard control relay's rating.

Motor starter can also be used to convert 120VAC signal to a dry contact.


Specifications:


• Input 120VAC

Output 0-120VAC

• Current 25AMP max

Single phase motors

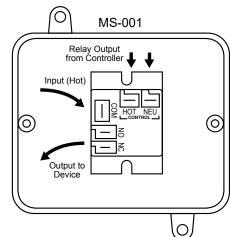

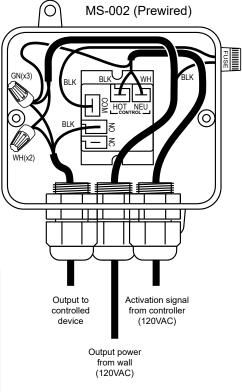

Models:

MS-001 Box & 25 amp relay only - no liquid

tight or prewired connections

MS-002 Prewired 25 amp relay, fused,


2 male, 1 female, 13 amp cords


MS-003 Prewired 25 amp relay

120 input with 2-wire dry contact output

MS-003-001 Mounts a MS-003 on a poly panel with

seperately ordered NANO-F2

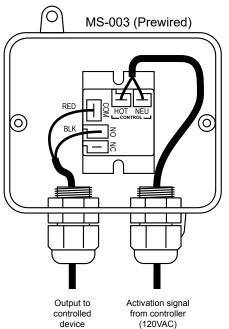



1-800-743-7431 phone • 1-888-686-6212 fax www.advantagecontrols.com

