

Contents

Rak documentation.....	1
Flashing image into the SD card.....	1
Extracting firmware	3
Flashing image using BalenaEtcher.....	5
Configuring gateway	8
Configuring wifi.....	9
Setup RAK gateway channel plan.....	12

Rak documentation


Flashing image into the SD card

- Download the firmware to flash it to your computer([How to Set Up WisGate Developer Gateway Firmware - RAKwireless Learn](#))
- Select Raspberry pi Zero W


Welcome to the Developer Gateway's firmware settings. Download the latest firmware on your chosen device and proceed to the [Flashing an Image](#) section to burn it.

Model	Raspberry Board	Firmware Version	Source
RAK2245 Pi HAT WisLink LPWAN Concentrator	Raspberry Pi 3B+/4	4.2.6_20210108	Download
RAK2245 Stamp WisLink LPWAN Concentrator	Raspberry Pi 3B+/4	4.2.6_20210108	Download
RAK7243 WisGate Developer D3	Raspberry Pi 3/3B+	4.2.6_20210108	Download
RAK7243C WisGate Developer D3+	Raspberry Pi 3/3B+	4.2.6_20210108	Download
RAK7244 WisGate Developer D4	Raspberry Pi 4	4.2.6_20210108	Download
RAK7244C WisGate Developer D4+	Raspberry Pi 4	4.2.6_20210108	Download
RAK7246G WisGate Developer D0	Raspberry Pi Zero W	4.2.5_20200909	Download
RAK7248 WisGate Developer D4H	Raspberry Pi 4	4.2.7_20210121	Download
RAK7248C WisGate Developer D4H	Raspberry Pi 4	4.2.7_20210121	Download



Select LoRa

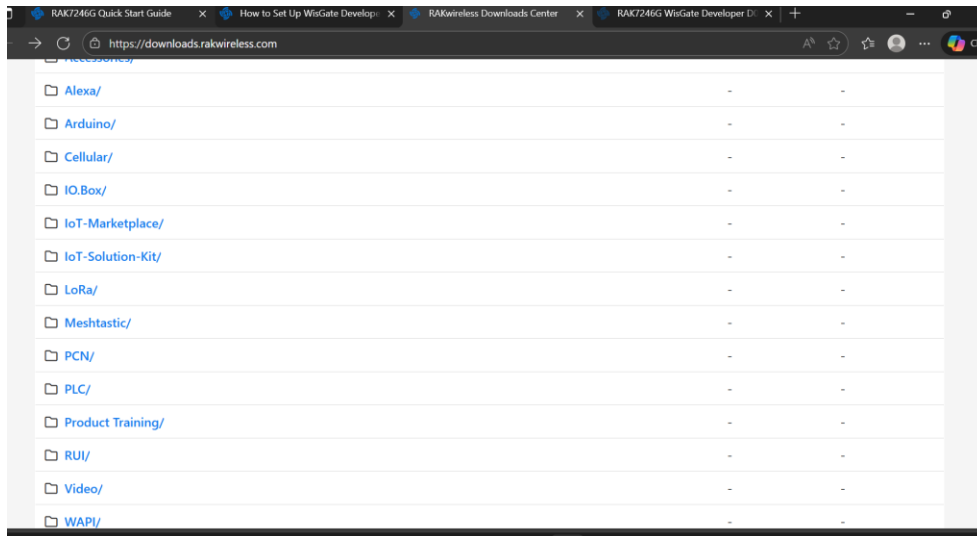

go to neo pi

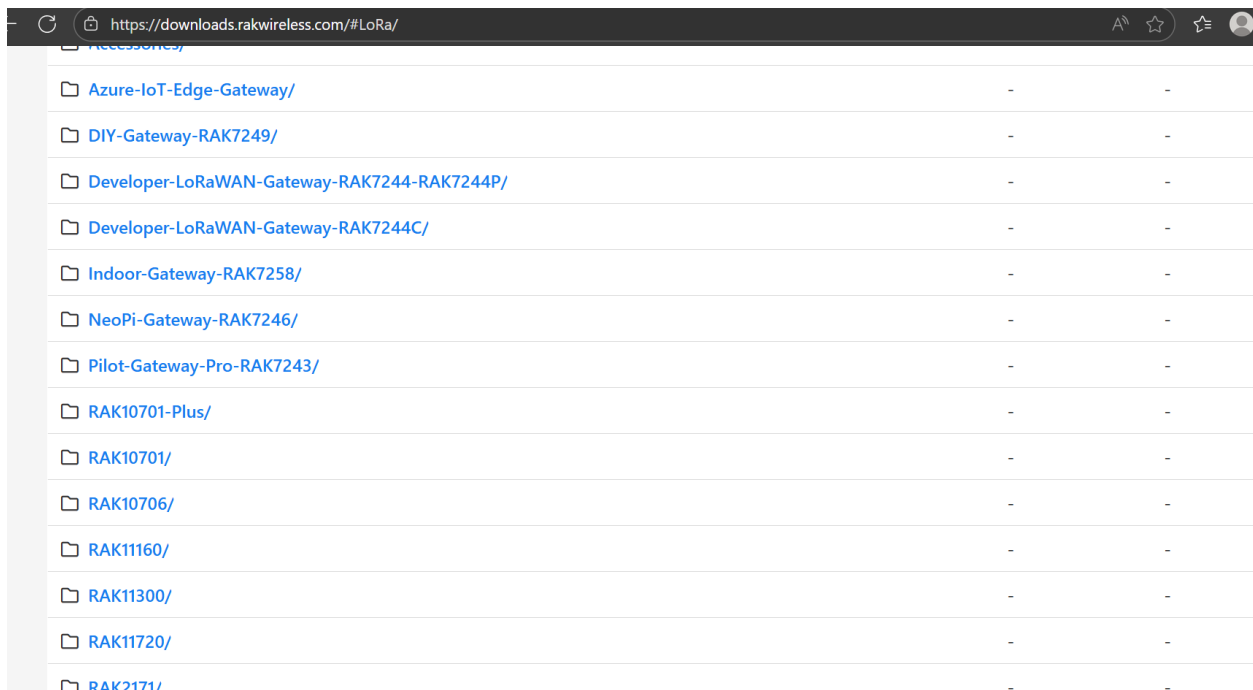


Select firm ware and download latest_firmware.zip

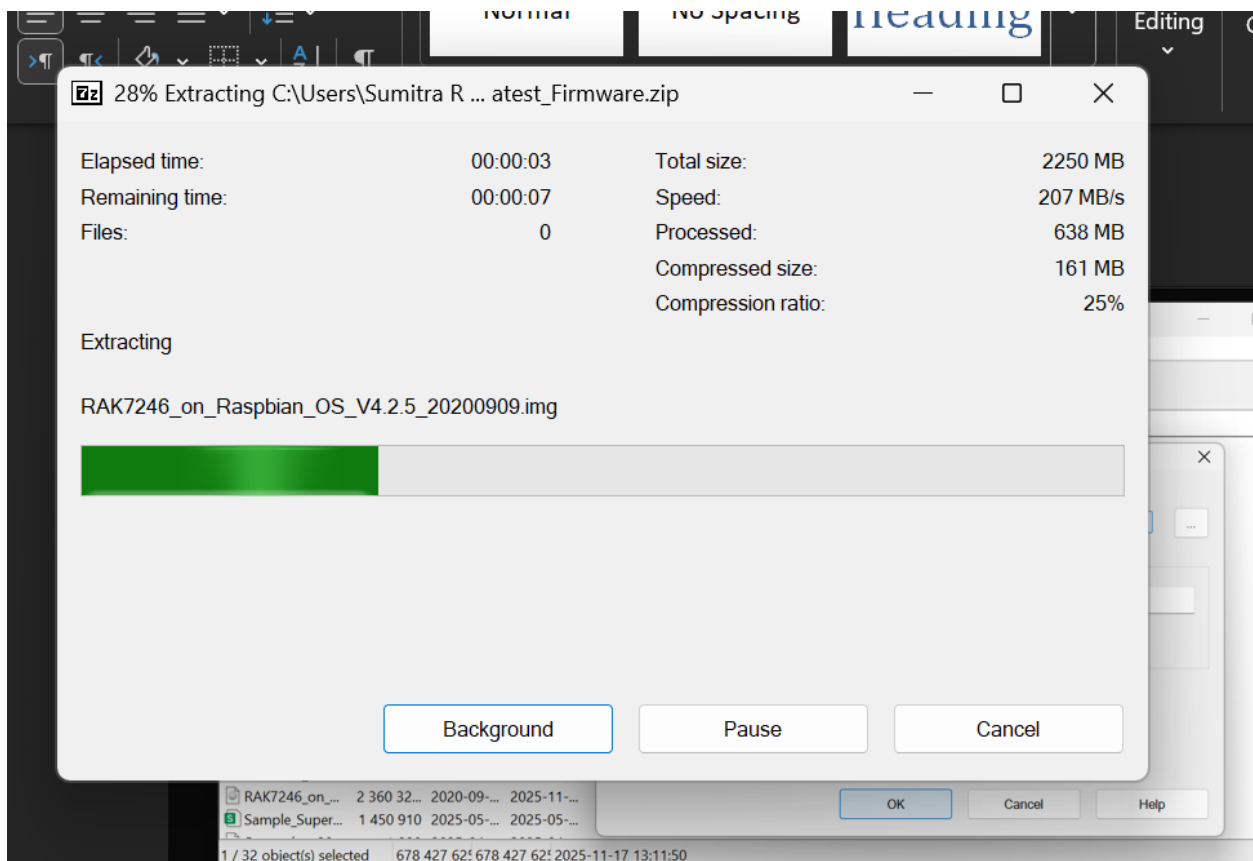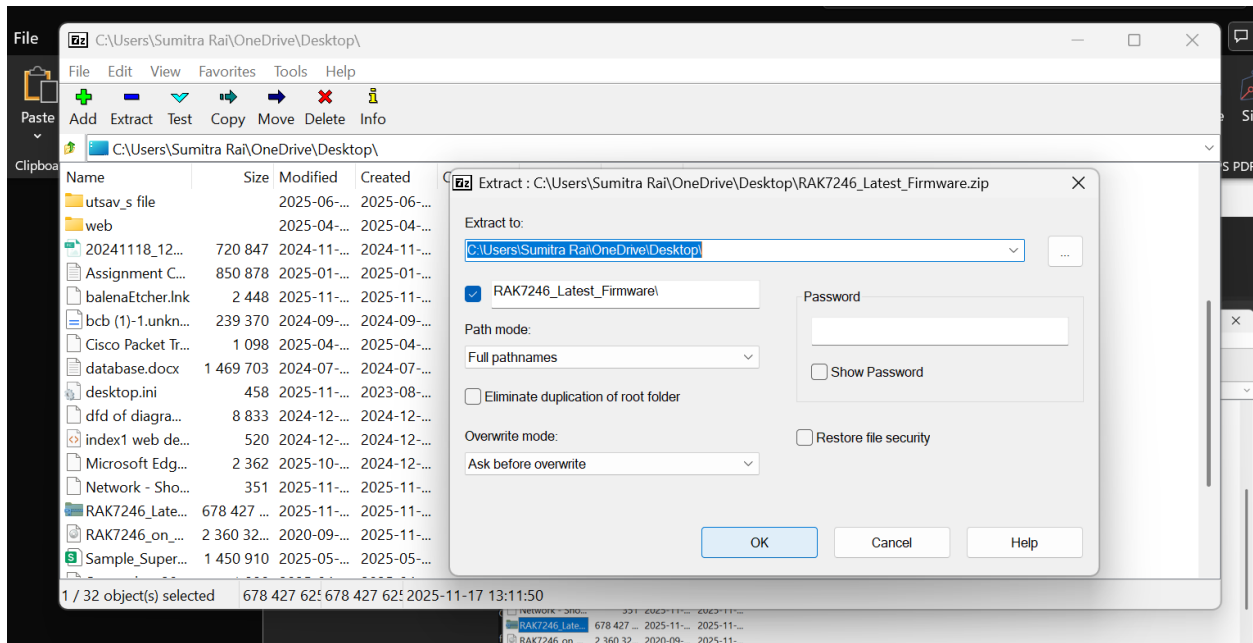


Flashing image using BalenaEtcher


After extracting the firmware insert the SD card in the in your computer and flash the image using balena etcher

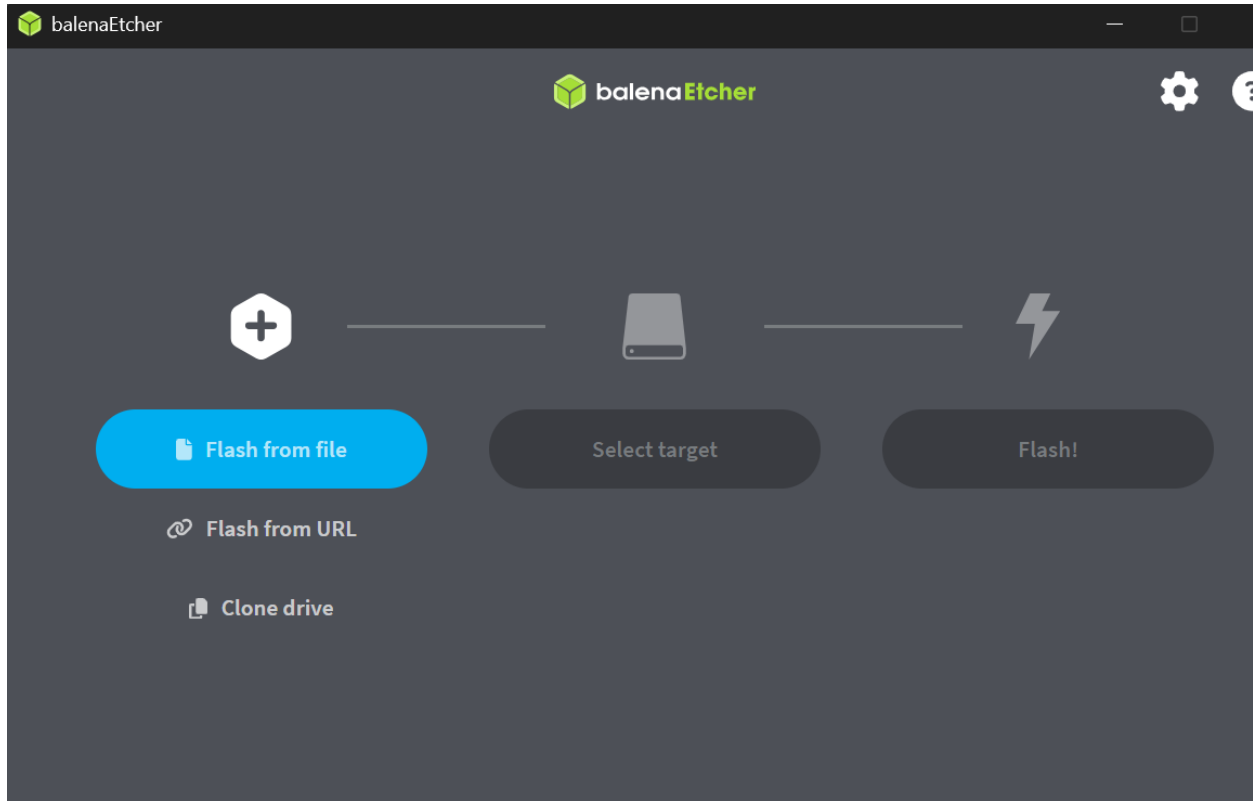


Click on flash from file and select the firmware extracted before

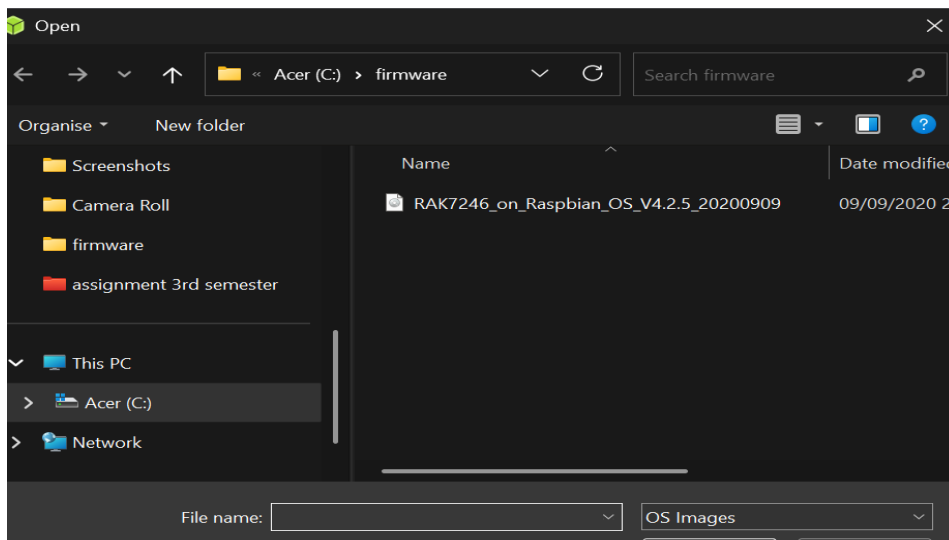


Select the SD card and

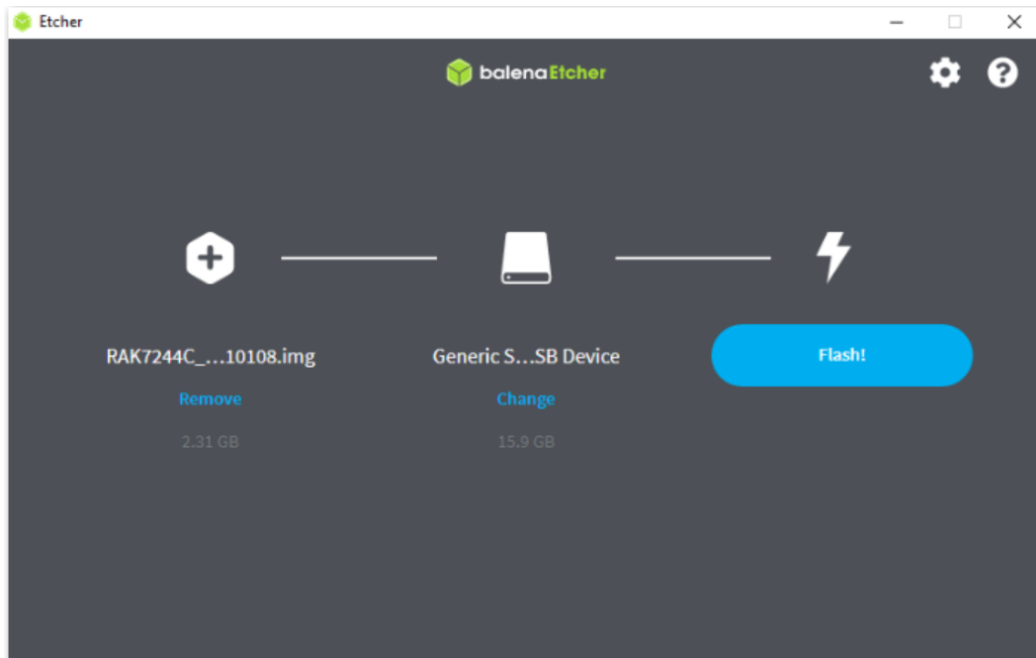

Click Flash

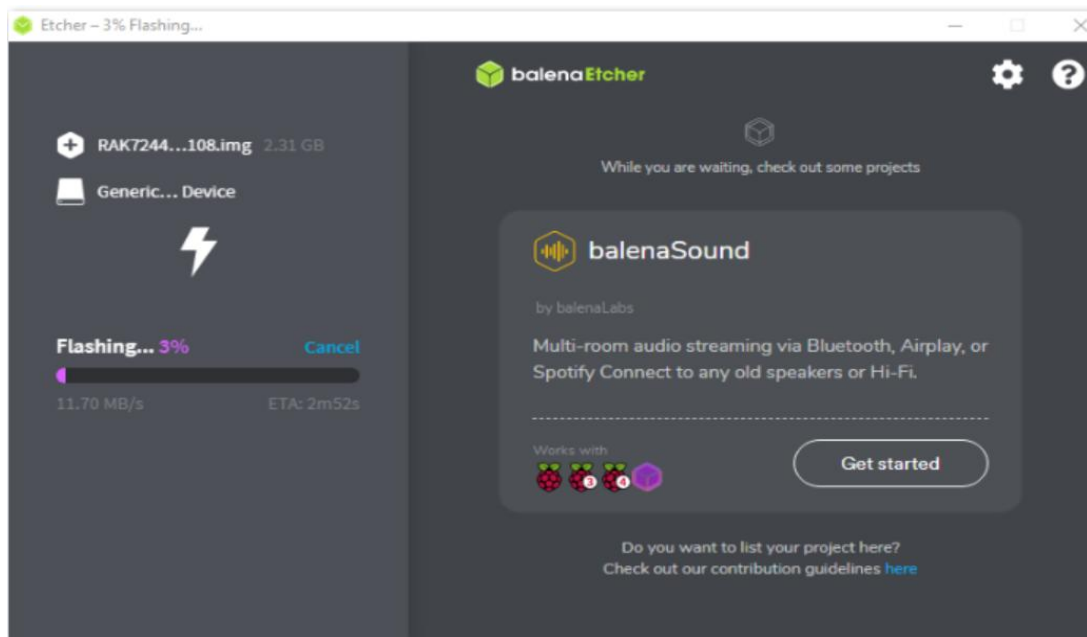

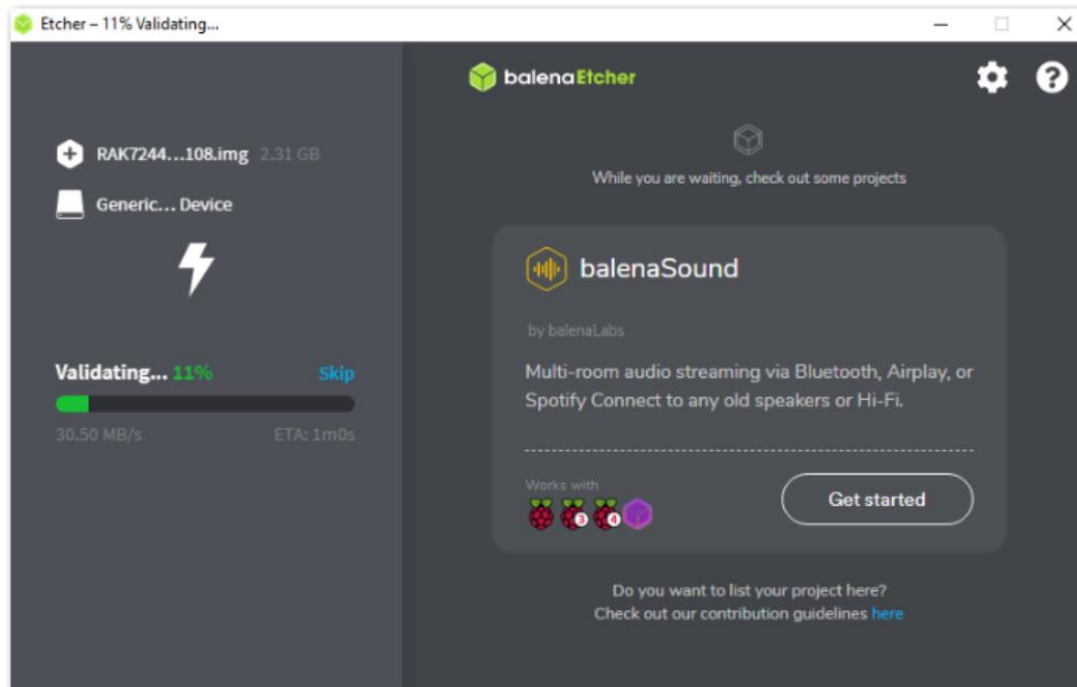


After burning the firmware image onto the SD Card put the sd card into the RAK gateway. After which, you can now safely power on the gateway.

Warning

Before powering the Raspberry Pi 4, you should connect the LoRa and GPS antennas. Not doing so might damage the boards.

Configuring gateway


You can use putty to access the gateway

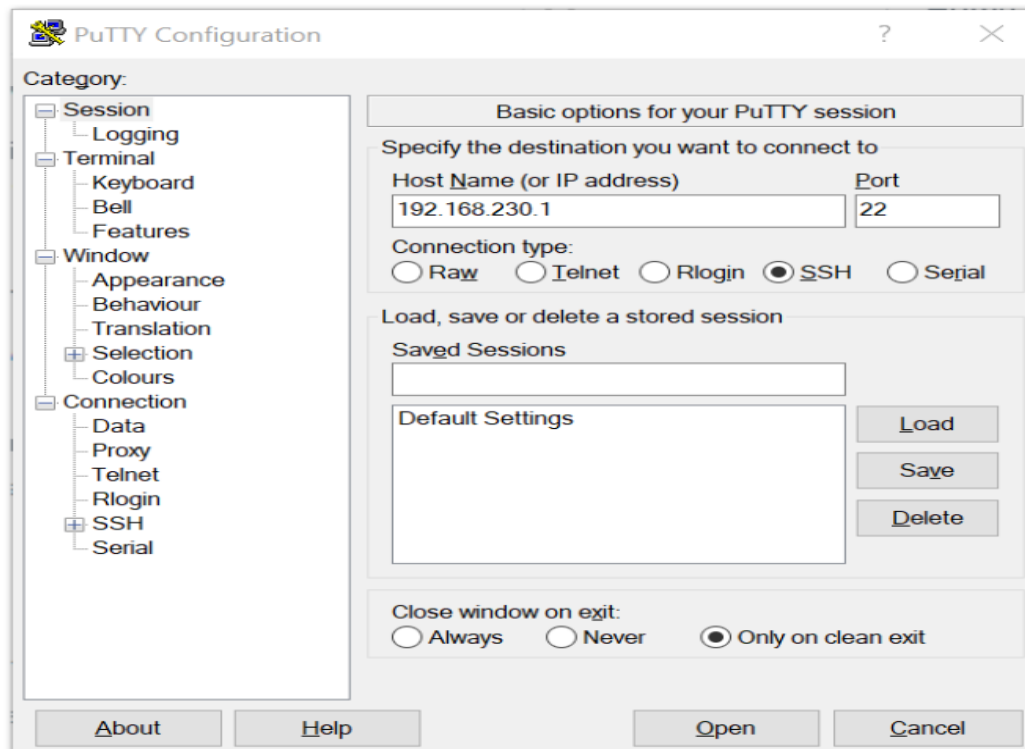

After you click open it will ask you the username and password. The default login is

Username: pi

Password: raspberry pi

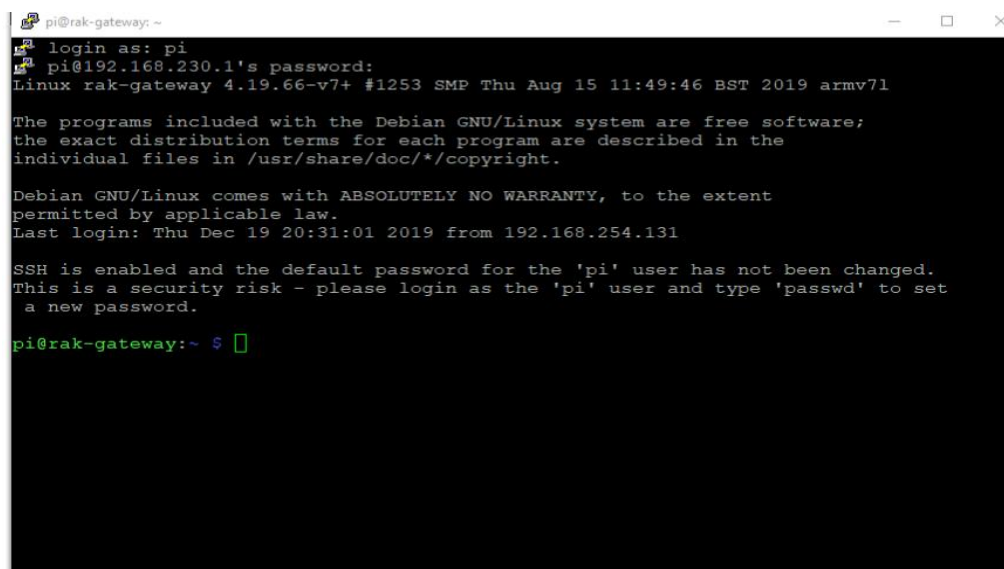


Configuring wifi


Type the following command in the command line:

```
sudo gateway-config
```

you will go to configuration option

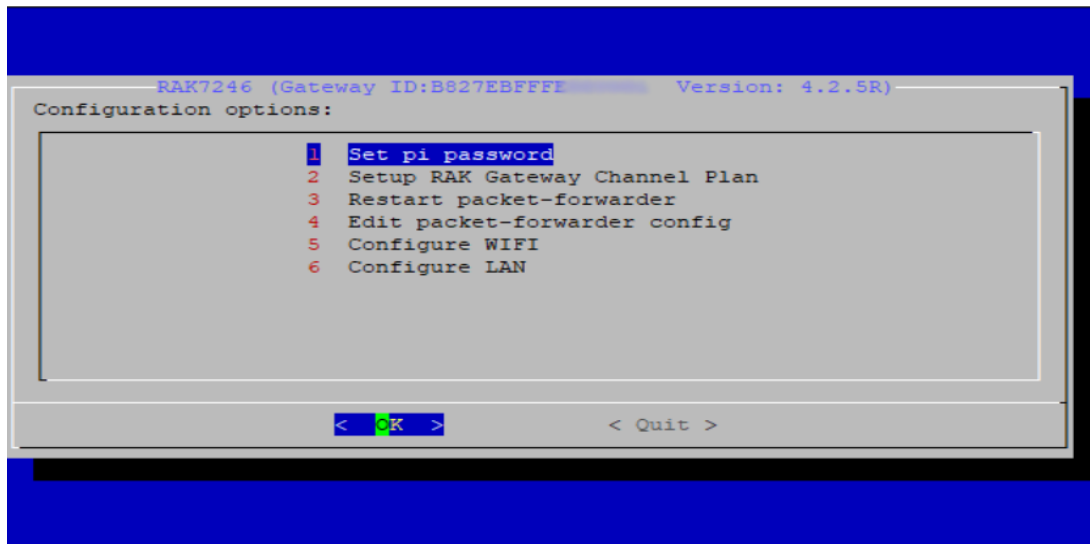

Select 5. Configure WIFI. For the gateway to connect to the router, it must work in Wi-Fi Client Mode.

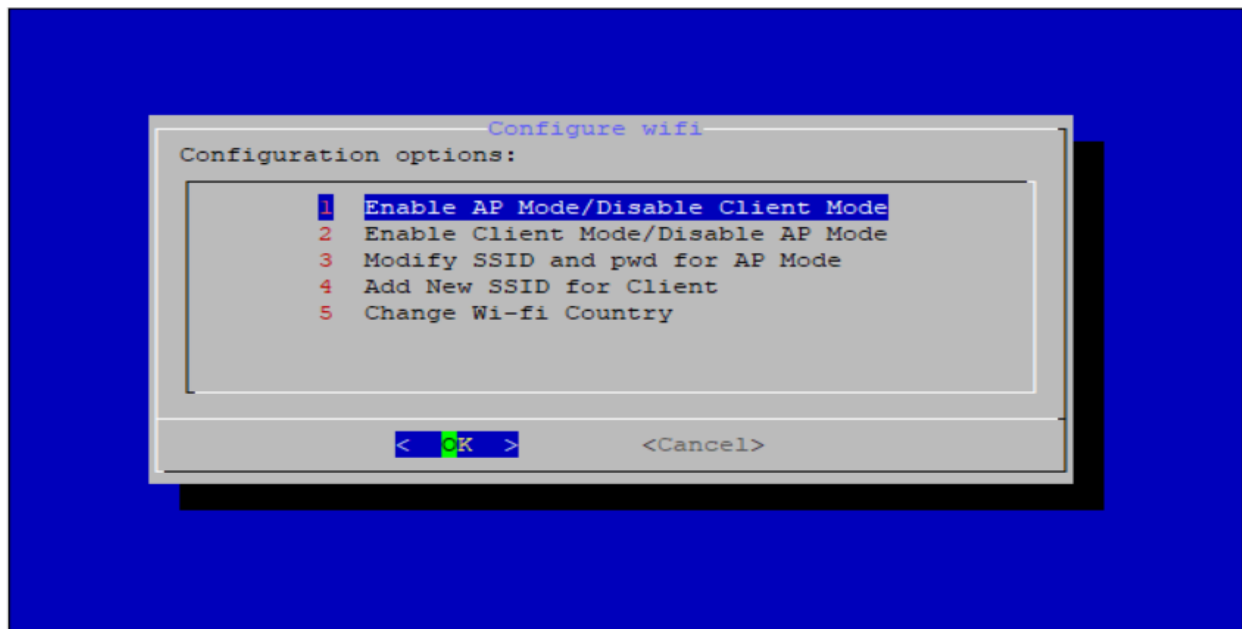

There are 5 options to choose from in the Wi-Fi configuration menu:


1. **Enable AP Mode/Disable Client Mode** - the gateway will work in Wi-Fi Access Point Mode after rebooting while the Wi-Fi Client Mode will be disabled (this is the default mode).
2. **Enable Client Mode/Disable AP Mode** - the gateway will work in Wi-Fi Client mode after rebooting, while Wi-Fi AP Mode will be disabled.
3. **Modify SSID and pwd for AP Mode** - used to modify the SSID and password of the Wi-Fi AP. Only works if the Wi-Fi AP Mode is enabled.
4. **Add New SSID for Client** - used if you want to connect to a new Wi-Fi Network. Only works in Wi-Fi Client mode.
5. **Change Wi-Fi Country** - used to modify the resident country to match Wi-Fi standards.

warning


To enable Wi-Fi Client Mode, you must disable first the AP Mode.

Once Wi-Fi AP Mode has been disabled by choosing **2 Enable Client Mode/Disable AP Mode**, you can now then connect to a new Wi-Fi Network by choosing **4 Add New SSID for Client**.


Select 4 Add New SSID for Client

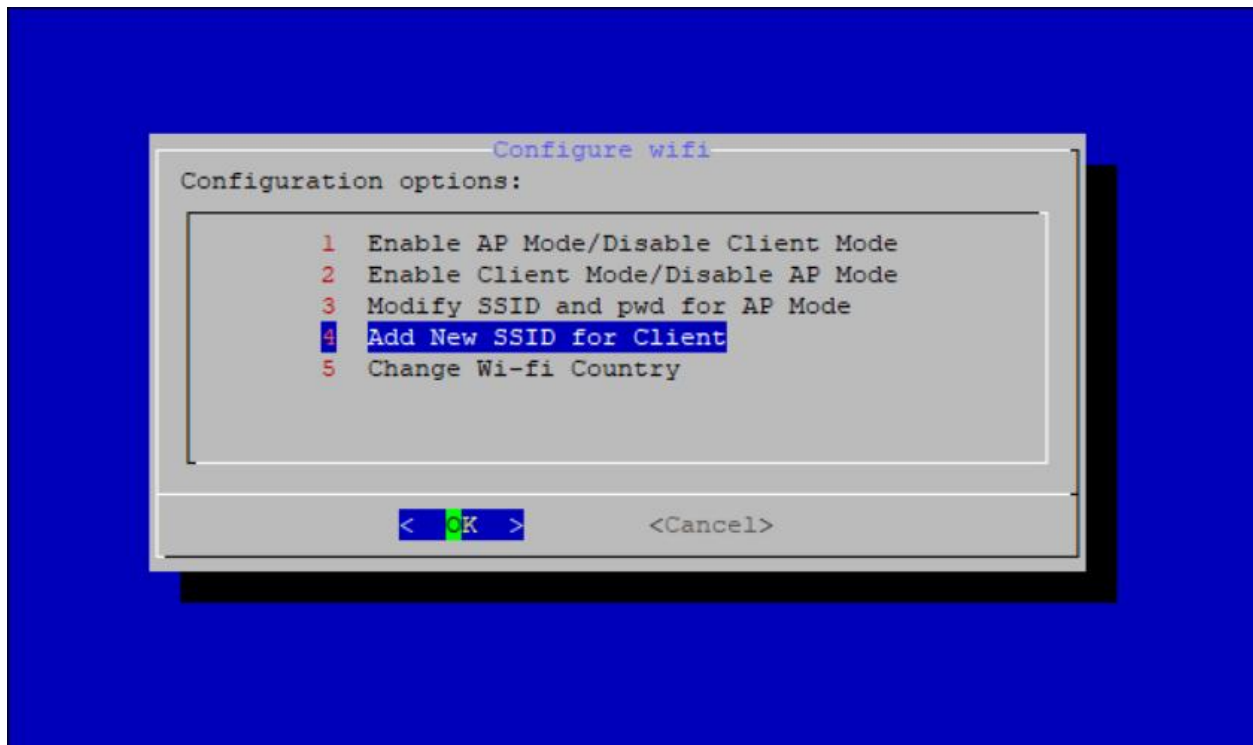


Select country

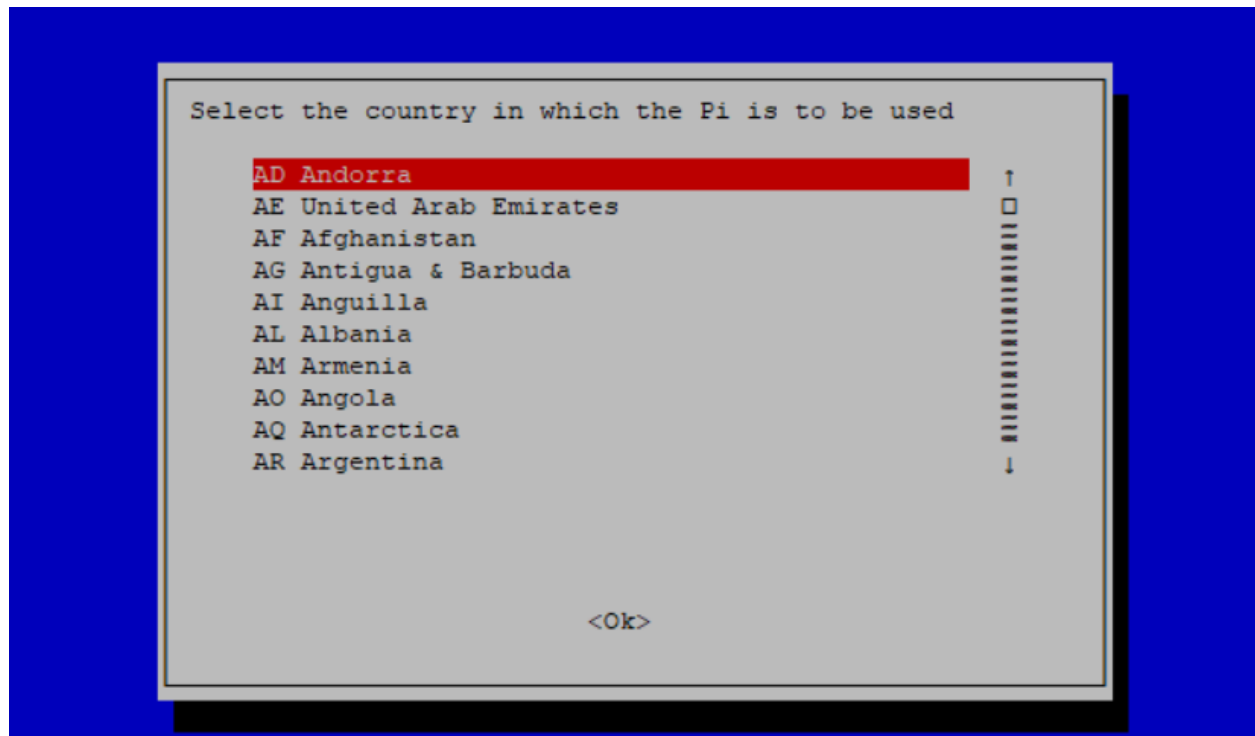

Enter correct SSID

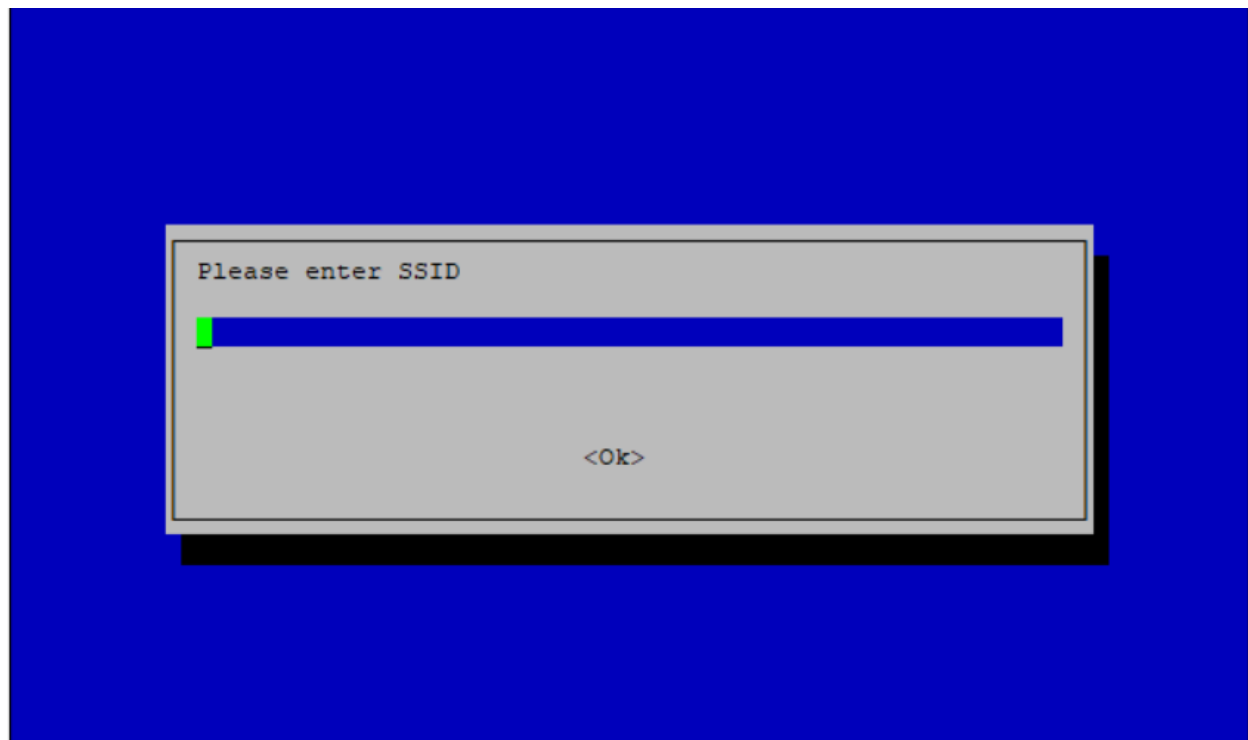


Enter your password

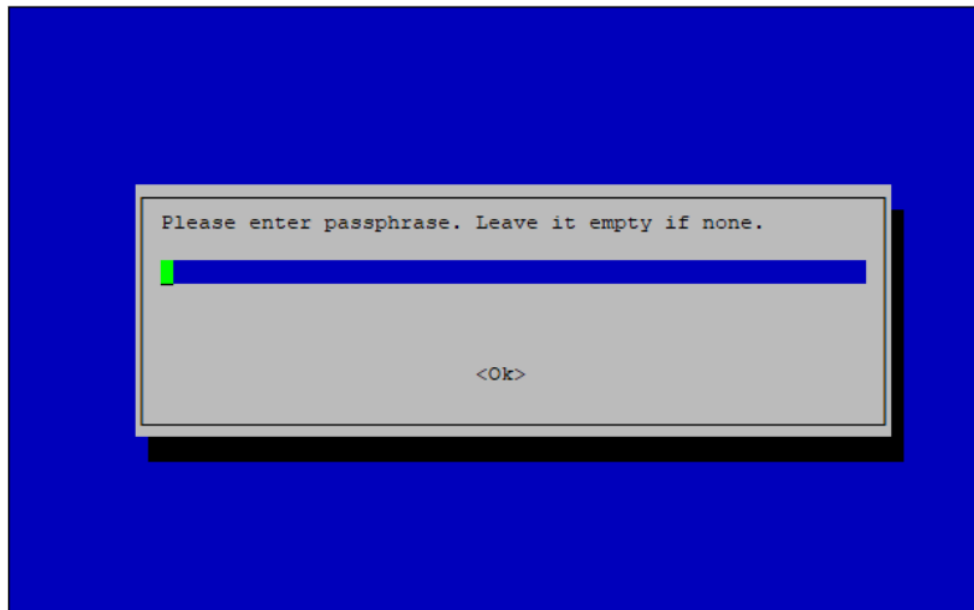


After it is connected you can exit from the configuration menu

Setup RAK gateway channel plan


Go to the configuration menu and select 2 Setup RAK Gateway channel plan

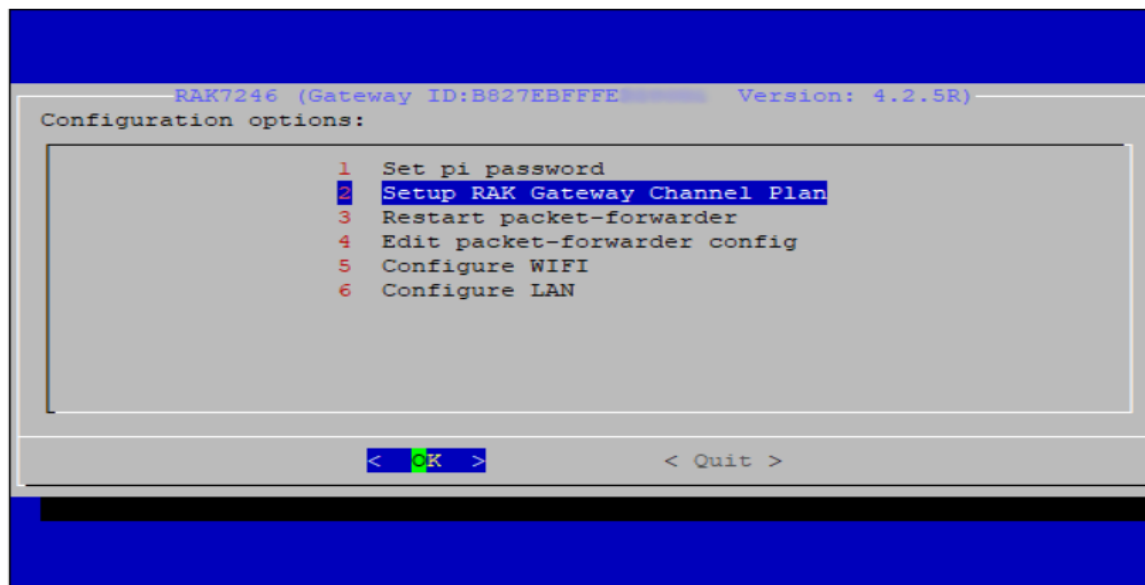

Select 1 Server is TTN

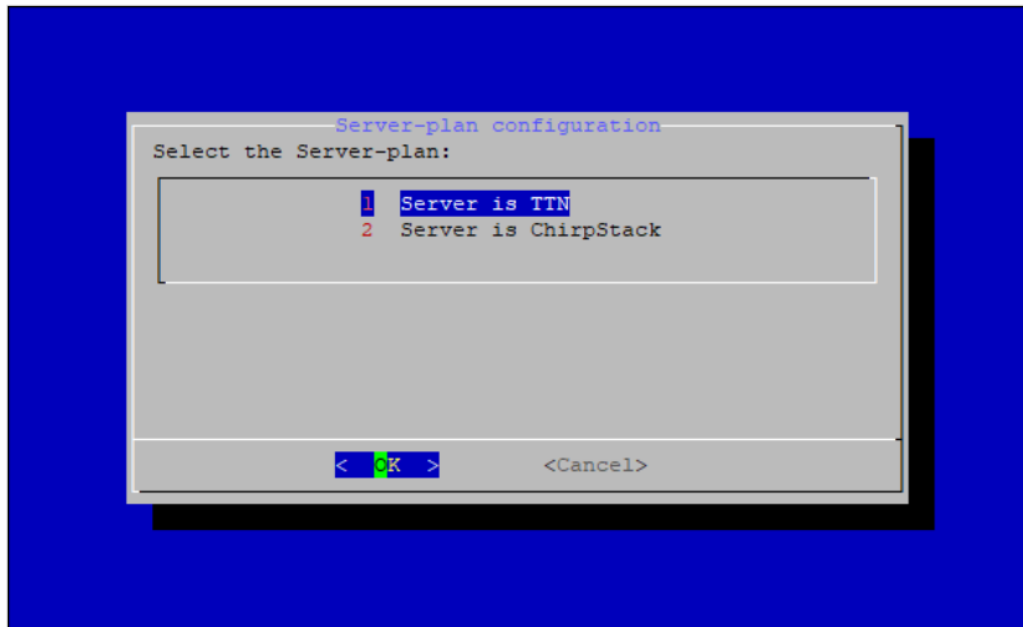

Select the correct channel plan EU 863-870

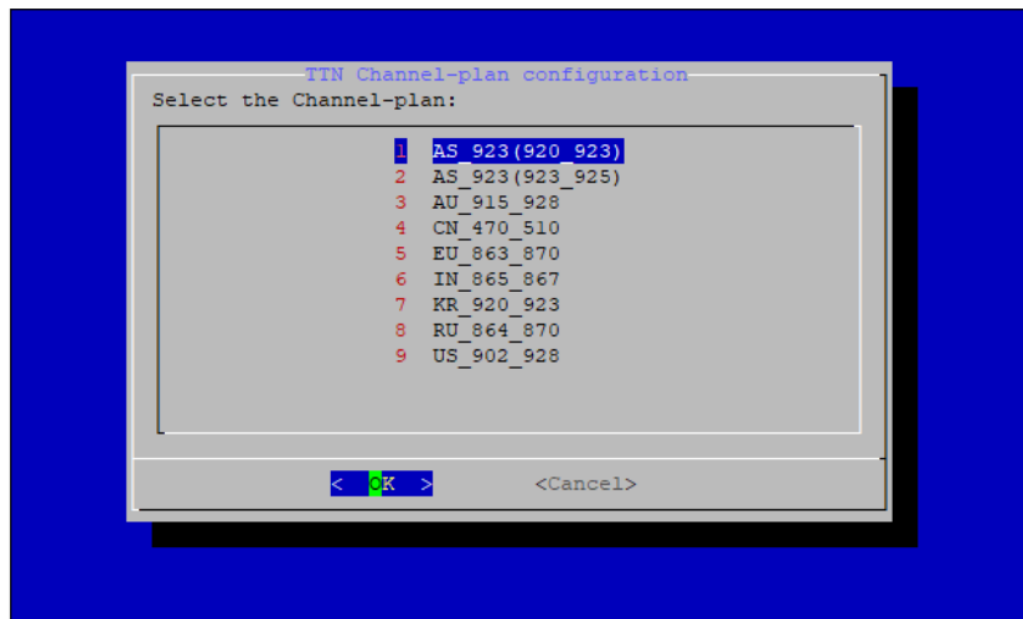

After choosing the correct channel plan a success message will appear as shown below

