


1 Start Menu Inst32

The terminal software is installed on a local hard drive of the terminal or a shop floor PC. After booting the terminal, the following selection menu appears:

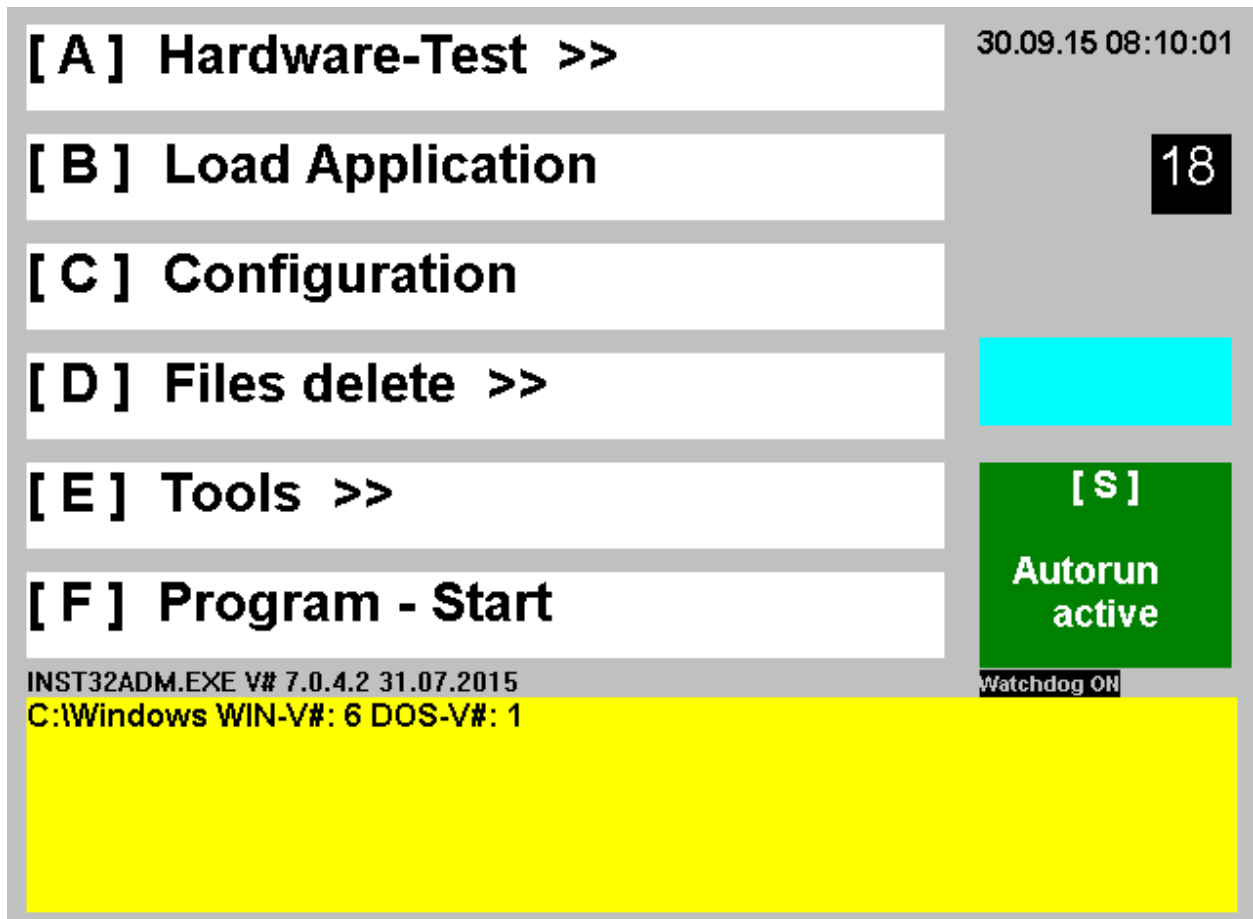

The following selection options are available in the selection menu (start by key or clicking)

[A] Hardware Test >>

Submenu for different hardware tests

[B] Load Application

After an update from the HYDRA server, the application programs can be easily updated.

[C] Configuration

[D] Delete Files >>

Submenu for deleting different files (data directories, queues, logs, application)

[E] Tools >>

Submenu for opening or installing different tools

[F] Program – Start

Opening the application program. If nothing is entered, it will be started automatically after 20 seconds.



The <D> and <E> buttons are only used for service purposes.

If no button is pressed, the AIP2 application starts automatically after 20 seconds. Once the application has started, a few notes are displayed indicating the version number, hardware configuration and other service information. If everything (configuration and terminal) is in order, the display switches to the basic dialogs described in more detail in the sections that follow. If the terminal detects hardware or configuration errors, it alerts the user by sending messages in plain text.

Submenu for opening or installing further [A] Hardware Tests >>**[1] MSS Test**

(Hardware test for the machine interface / MSS)

[2] Reader Test

(Hardware test for different reader connections / BAR, LEGIC, PLG, ...)

[3] LAN Test


(Hardware test of the network connection)

[4] Test Apps >>


(Test applications of any kind)

[ESC] Main Menu

Back to the main menu

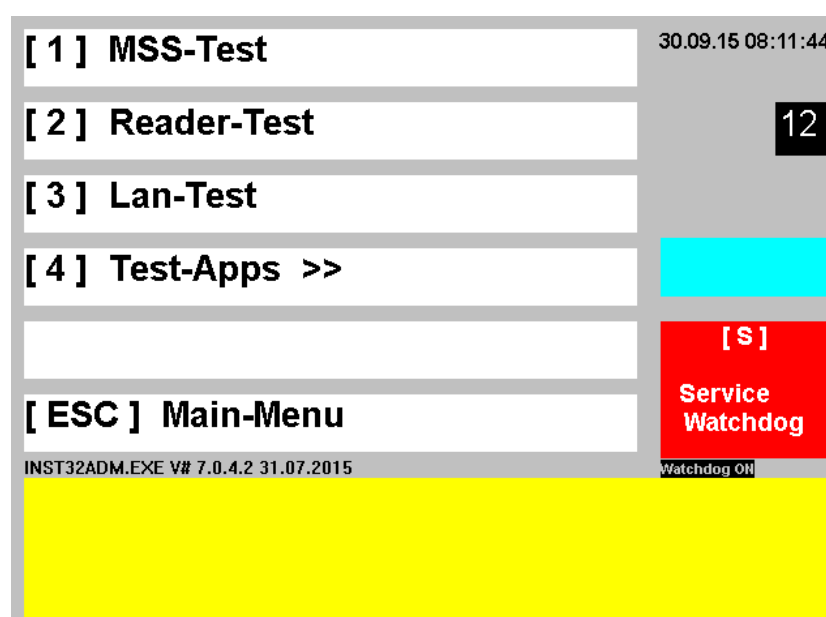

Starting the function “Test Apps“ by the menu item ”[4] Test Apps >>“

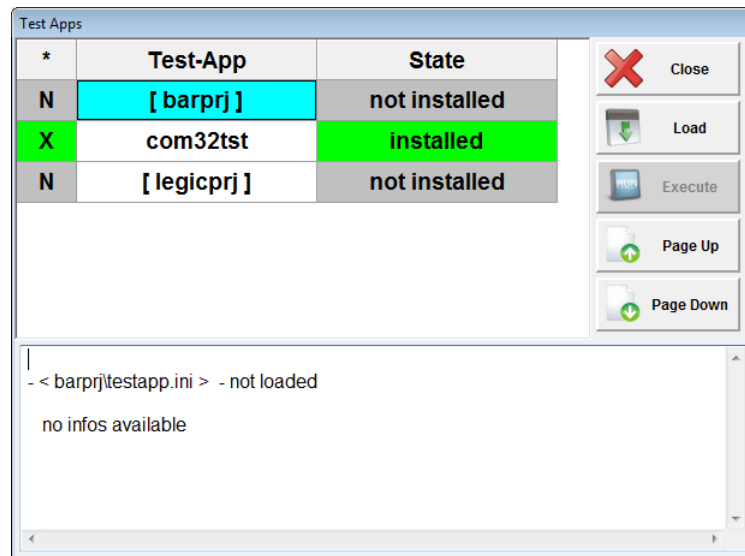

When starting the function “test apps“, a directory list of the HYDRA server directory “./ctnet/win/testapps/“ is loaded.

The function creates an entry for each directory in the list that includes a file “testapp.ini“. If this file already exists locally, i.e. it has already been loaded earlier, the entry will be highlighted in green (e.g. X com32tst installed).

The selected “Testapp“ can be reloaded or updated by the function key ”Load“.

The selected “Testapp“ is started by the function key “Execute“.

The list can be browsed by using the function keys “Page Up” and “Page Down“. The function is exited by using the key “Close“.

The configuration file “testapp.ini“ is structured as follows.

```
[APP]
name=com32tst
exe=com32tst.exe
param=...           ; optional parameter to transfer call data
[COMMENT]


    MSS Test Program


[/COMMENT] [APP]
```

Submenu deleting or restarting/closing files using [D] Delete files

- [1] **Delete spool directory**
(deleting the ./spool directory of the terminal)
- [2] **Delete queues**
(deleting the queue in the ./spool directory of the terminal)
- [3] **Delete logs**
(deleting the log files in the ./spool directory of the terminal)
- [4] **Delete application**
(deleting the configured application)
- [ESC] **Main menu**
back to the main menu

[1] Spool-Directory delete	24.11.15 15:31:43
[2] Queues delete	[0] CTAIP
[3] Logs delete	Reboot / Shutdown 18
[4] Application delete	
[ESC] Main-Menu	[S] Service Watchdog
INST32USR.EXE V# 7.0.4.3 19.11.2015	Watchdog OFF

The application / Windows can be exited or restarted in the following selection dialog after entering the password "mos6950" and clicking the button .

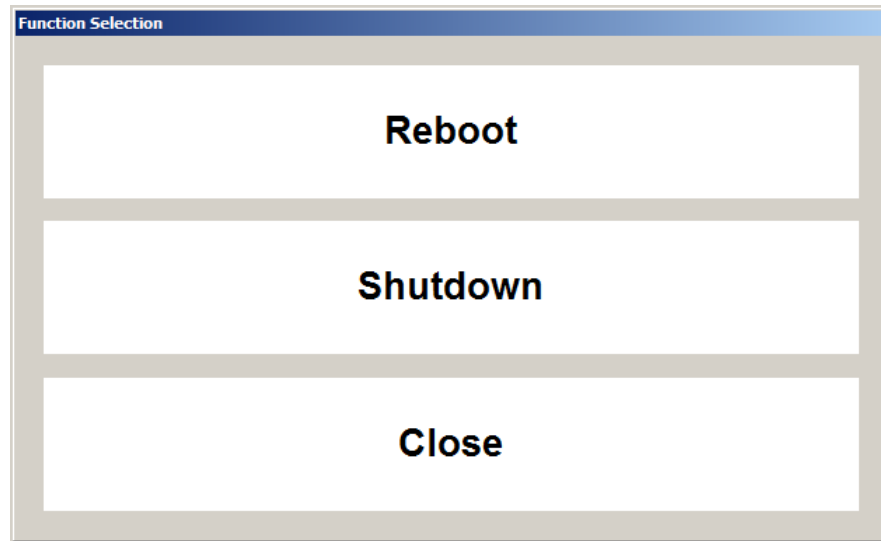

Submenu for opening or installing further “[E] tools >>“

- [1] MSS-Loader install
- [2] MSS-Loader start
- [3] VNC install
- [4] HYDRA Fonts install
(loading and starting the installation package for Font Installation)
- [5] more Tools >>
(Backup, Restore, Terminal Upload, Install 3rdParty)
- [ESC] Main Menu
Back to main menu

Submenu by starting “[5] more tools”

- [1] Backup
- [2] Restore
- [3] Installation 3rd Party

- [ESC] Main Menu
Back to the main menu

Menu item "[1] Backup"

The server uses the file **<hydradir>\ctnet\win\aip2backup.txt**
or a terminal-specific file **<hydradir>\ctnet\win\aip2backup2xxx.txt**
(xxx is terminal number) for the backup. At first the system attempts to load a terminal-specific file.

If no terminal-specific file exists, the system will then attempt to load the file **aip2backup.txt**. This file contains all of the files or registry entries that need to be backed up.

\aip2*.ini

\aip2*.cfi

\aip2*.cfg

HKEY_LOCAL_MACHINE\SOFTWARE\MPDV

A Zip file is created in the terminal and it is stored in the server.

The file is located in the server at:

The backup Zip file is given the name: **aip2backup2xxx.zip** ->xxx = terminal number (terminal-specific for Hydra user 2xxx)

This backup file is then stored in the server under

<hydradir>\custom\backup\aip2\aip2backup2xxx.zip .


Menu item "[2] Restore"

There will first be a query asking whether you would like to run a restore. "Restore" attempts to load a backup file located in the server and then automatically restores all of the backed up files and any backed up registry entries.

As already described in the backup section, a backup file is filed in the server directory:

<hydradir>\custom\backup\aip2\aip2backup2xxx.zip

Menu item “[3] Installation 3rd Party“

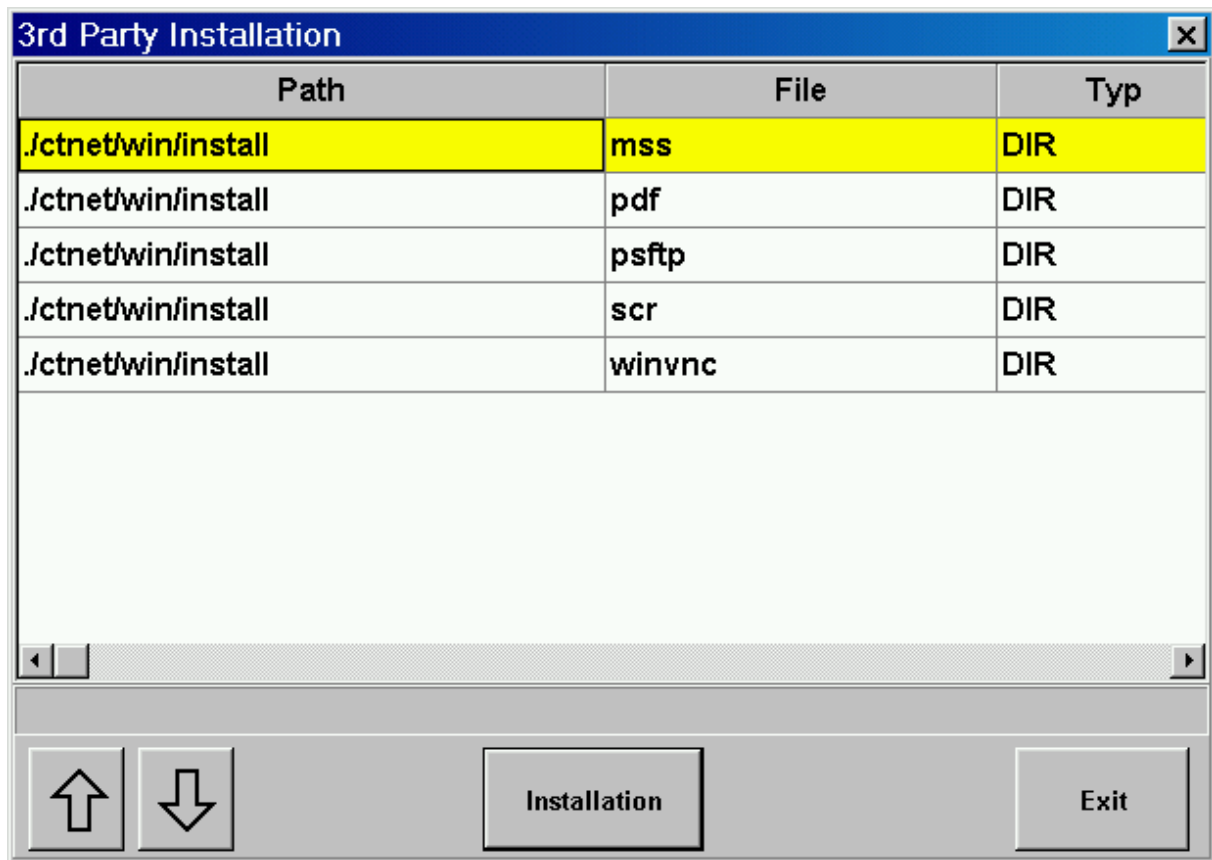

"Installation" button:

A list with all directories starting with the **<hydradir>\ctnet\win\install** directory is displayed. The directories found will be offered for selection in a dialog. By confirming a directory, this directory is downloaded and its contents are shown.

The **<hydradir>\ctnet\win\install** directory can therefore be expanded to include additional directories.

Content of a directory selected beforehand

3rd Party Installation		
Path	File	Typ
.lctnet\win\install\mss\archiv	c14_1_2.NSU	FILE
.lctnet\win\install\mss\archiv	fp1_c14.nsu	FILE
.lctnet\win\install\mss\archiv	fp1_c14z.nsu	FILE
.lctnet\win\install\mss\archiv	fp1_c14zykl.nsu	FILE
.lctnet\win\install\mss\archiv	fp1_c24.nsu	FILE
.lctnet\win\install\mss\archiv	fp1_c56.nsu	FILE
.lctnet\win\install\mss	mssinst.exe	FILE
.lctnet\win\install\mss	mssinst.old	FILE
.lctnet\win\install\mss	mssinst_050405.exe	FILE
Copy File Copy all Files Execute Return		

Having clicked one of the buttons **"copy file"** or **"copy all files"**, a selection screen opens where a directory may be chosen. The selected file or all files displayed are copied into this directory. In order to copy a single file, first it needs to be selected in the list.

3rd Party Installation		
Path	File	Typ
.lctnet\win\install\mss\archiv	c14_1_2.NSU	FILE
.lctnet\win\install\mss\archiv	fp1_c14.nsu	FILE
.lctnet\win\install\mss\archiv	fp1_c14z.nsu	FILE
.lctnet\win\install\mss\archiv	fp1_c14zykl.nsu	FILE
.lctnet\win\install\mss\archiv	fp1_c24.nsu	FILE
.lctnet\win\install\mss\archiv	fp1_c56.nsu	FILE
.lctnet\win\install\mss	mssinst.exe	FILE
.lctnet\win\install\mss	mssinst.old	FILE
.lctnet\win\install\mss	mssinst_050405.exe	FILE
  Copy File Copy all Files Execute Return		

Execute button: A file from the list may be executed by clicking this button. The execution program defined in Windows is used to display or execute the selected file.

1.1 Using the functions in Windows 7

Availability or feasibility of individual functions of the "INST32" installation function using Windows 7 depends on the user type:

User Type	Local User Member of the "administrators" group	Local administrator	Local User, Member of the "users" group
INST32 Function			
Updating INST32 from the HYDRA server	Yes	Yes	Yes
Installation of fonts	Yes	Yes	No
Loading the application (download)	Yes	Yes	Yes
Changing configuration settings	Yes	Yes	Yes
Installation MSS Loader	Yes	Yes	No
Installation VNC	Yes	Yes	No
Backup	Yes	Yes	Yes
Restore	Yes	Yes	Yes
Installation 3rd party components	Yes	Yes	No

User Type	Local User Member of the “administrators” group	Local administrator	Local User, Member of the “users” group
INST32 Function			
Deleting files	Yes	Yes	Yes
Starting MSS Loader	Yes	Yes	No
Starting hardware test	Yes	Yes	No
Starting reader test	Yes	Yes	No
Starting LAN test	Yes	Yes	Yes

1.2 Installation of font types in Windows 7


If the "Windows 7" operating system is used the required font types can no longer be installed by the application itself.

The required fonts have to be installed once using the above-mentioned installation program "INST32", menu item "HYDRA Fonts install". This is required to make sure the information is properly displayed on the terminal.

1.3 Date/time synchronization at the terminal

The HYDRA terminal software automatically synchronizes the time of the local terminal PC with the time of the HYDRA server. Usually, different Windows versions require administrative rights to be able to set the time locally.

The message below is displayed once, every time the program is started if the respective Windows user does not have the required rights.

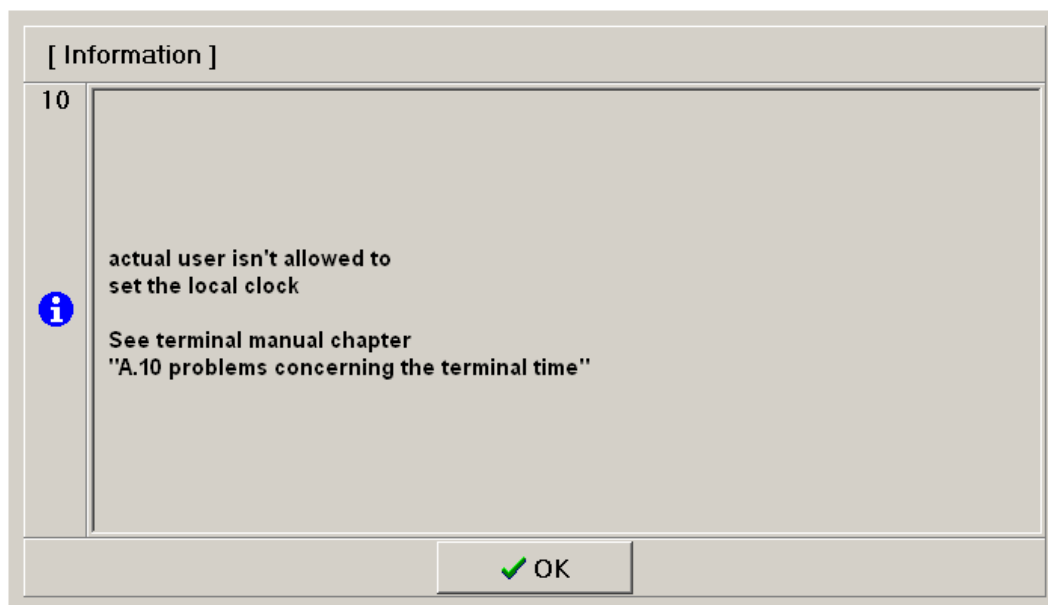

The following entry in the [system] section of the local configuration file CTAIP.INI prevents the time from being synchronized with the HYDRA server and, as a result, the above-mentioned error message is also suppressed.

```
[system]
NoLocalWatchUpdate=on
NoLocalWatchWarning=on
```

But if this configuration is enabled, the user has to make sure that the time of the HYDRA terminal PC is synchronized with another reliable source and that the time of the HYDRA terminal PC and the time of the HYDRA server are synchronous.

The user is responsible for disabling the time synchronization function. Wrong time stamps at the terminal may lead to unintentional problems when processing data, e.g. incomplete or wrong reports and evaluations or errors in posting times and durations.

1.4 Control of special watchdog hardware

New watchdog types are connected by a driver DLL, which is configured in ctaip.ini.

[DLL]

WdDLL=<Driver DLL>

Watchdog	Configuration	Required files
AEC6810	WdDLL= aaeondrv.dll	aaeondrv.dll aaeonWdt.dll

Watchdog	Configuration	Required files
		aaeonwrapper.dll

A watchdog may also be activated within the registry. The following entry has to be set:

HKEY_LOCAL_MACHINE\SOFTWARE\MPDV\CT\WdDLL=<Driver DLL>

In case both entries are set, the entry in the ctaip.ini file takes priority.

1.5 inst32.ini - Standard

Default settings for installing AIP2.

Entry	Comment
Section [install]	
PrgIniFile=C:\MPDV\AIP2\ctaip.ini	Path of the ctaip.ini file
PrgExeFile= C:\MPDV\AIP2\ctaip	AIP2 program to be started.
DisplayName=AIP2	The option DisplayName may only be used with an AIP2 terminal. The value AIP2 must not be changed.
ConfigEditorFile=aip2.mkf	Configuration file for the configuration editor. This file controls the GUI of the configuration editor.
ConfigHelpFile=iniedit.ini	Help file for the configuration editor.

The default settings should be sufficient in the inst32.ini file.

1.6 inst32.ini - application selection

The following optional configuration can be used if a terminal PC must support different installations during a transitional period (e.g. version upgrade from CTAIP to AIP2).



This configuration should only be used in exceptional cases.

Entry	Comment
Section [install]	
ApplicationChoiceAvailable=on	The application to be supported can be selected using this optional configuration.

Single "install*" sections for different applications must be configured with the above-mentioned configuration option.

Section for AIP2

Entry	Comment
Section [installaip2]	
PrgIniFile=C:\MPDV\AIP2\ctaip.ini	Path of the ctaip.ini file
PrgExeFile= C:\MPDV\AIP2\ctaip	AIP2 program to be started.
DisplayName=AIP2	The option DisplayName may only be used with an AIP2 terminal. The value AIP2 must not be changed.
ConfigEditorFile=aip2.mkf	Configuration file for the configuration editor. This file controls the GUI of the configuration editor.
ConfigHelpFile=iniedit.ini	Help file for the configuration editor.

Section for CTAIP

Entry	Comment
Section [installaip]	
PrgIniFile=C:\ctaip\ctaip.ini	Path of the ctaip.ini file
PrgExeFile=C:\ctaip\ctaip	CTAIP program to be started.

Section for CTWIN

Entry	Comment
Section [installctwin]	
PrgIniFile=C:\ctwin\ctaip.ini	Path of the ctwin.ini file
PrgExeFile= C:\ctwin\ctwin	CTWIN program to be started.

Default application

Entry	Comment
Section [system]	
Default=installaip2	When starting inst32, AIP2 is supported by default.

Sample configuration inst32.ini for AIP2/AIP:

The AIP2 has been designed to be configured by default. The AIP2 is selected by default when starting inst32.exe. The application can be changed in inst32adm.

```
[system]
Default=installaip2

[installaip2]
PrgIniFile=C:\MPDV\AIP2\ctaip.ini
PrgExeFile=C:\MPDV\AIP2\ctaip
DisplayName=AIP2
ConfigEditorFile=aip2.mkf
ConfigHelpFile=iniedit.ini


[installaip]
PrgIniFile=\ctaip\ctaip.ini
PrgExeFile=\ctaip\ctaip

[install]
ApplicationChoiceAvailable=on
```


Using this configuration the GUI shows the supported application. By double clicking, the selection dialog can be opened in inst32adm.



The application can be changed in the selection dialog.

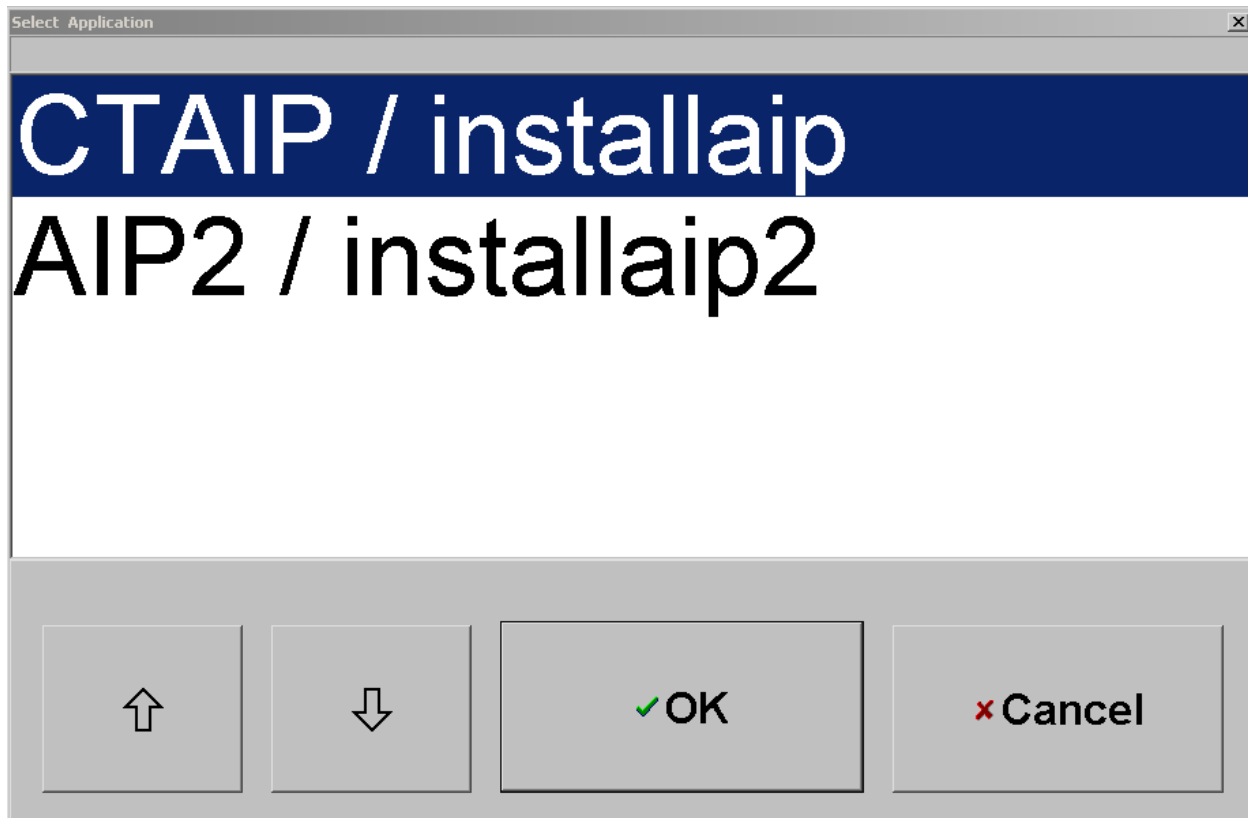

Inst32 now supports CTAIP.

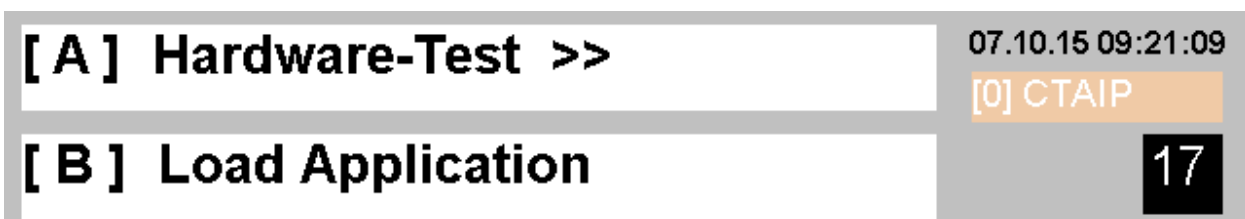

Sample configuration inst32.ini for AIP2/CTWIN:

The AIP2 has been designed to be configured by default. The AIP2 is selected by default when starting inst32.exe. The application can be changed in inst32adm.

```
[system]
Default=installaip2

[installaip2]
PrgIniFile=C:\MPDV\AIP2\ctaip.ini
PrgExeFile=C:\MPDV\AIP2\ctaip
DisplayName=AIP2
ConfigEditorFile=aip2.mkf
ConfigHelpFile=iniedit.ini


[installctwin]
PrgIniFile=\ctwin\ctwin.ini
PrgExeFile=\ctwin\ctwin

[install]
ApplicationChoiceAvailable=on
```


Using this configuration the GUI shows the supported application. By double clicking, the selection dialog can be opened in inst32adm.



The application can be changed in the selection dialog.

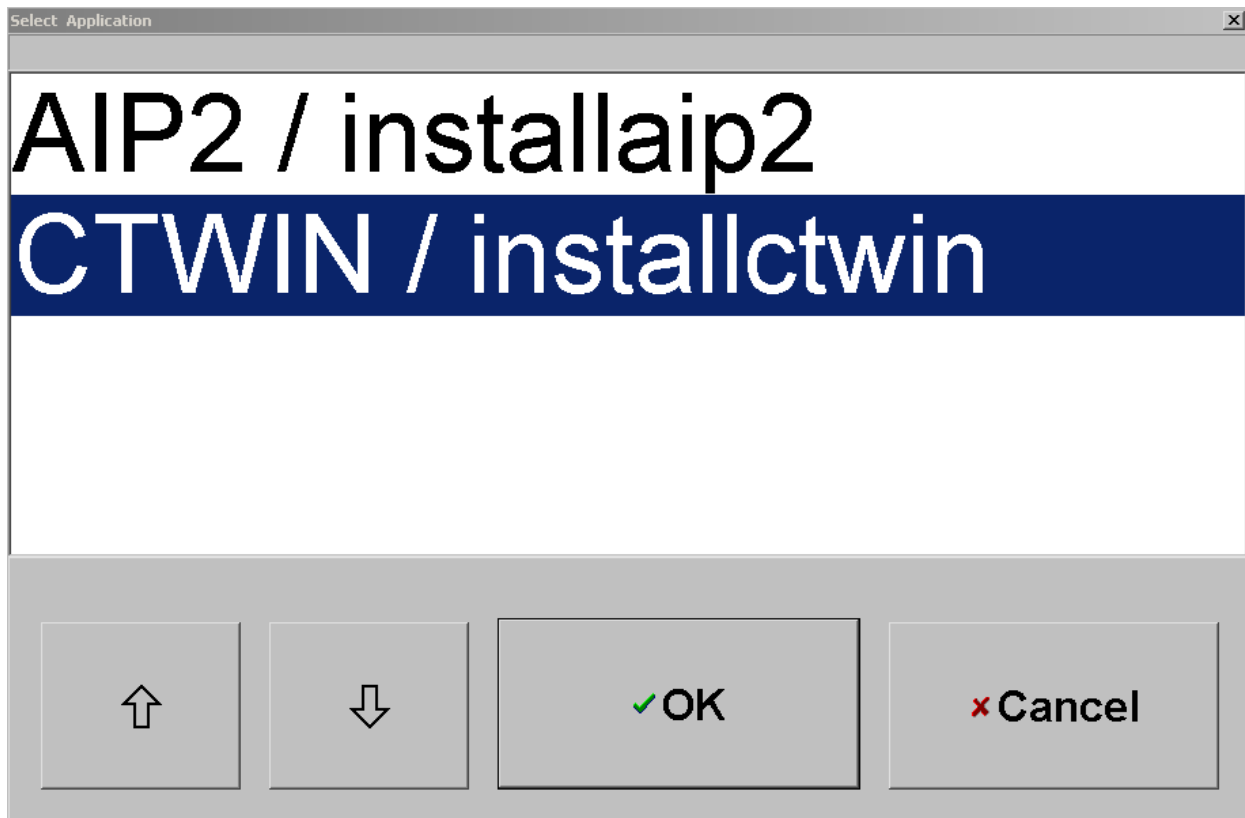

Inst32 now supports CTWIN.

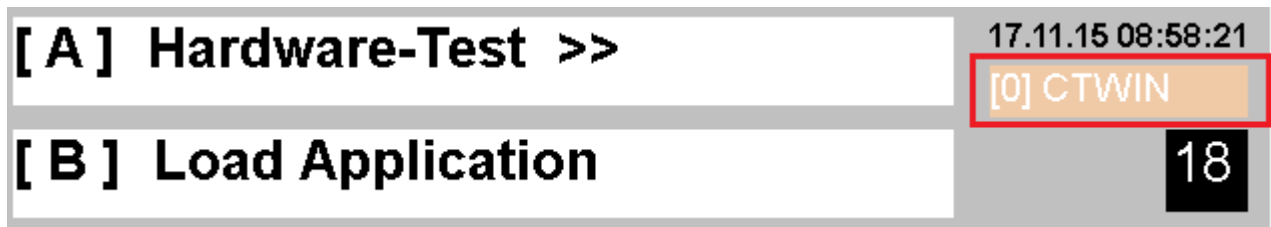


1.7 Migration: CTWIN/AIP --> AIP 8.2

The program *"iniconverter.exe"* is available in order to migrate a CTWIN/AIP installation to an AIP 8.2 installation. This program transfers relevant INI files or INI entries. This program can be loaded and started via the menu item "[A] Hardware test >>" of the sub-menu "[4] Test Apps >>" and by selecting "[iniconverter]".

A detailed description on how to operate "test apps" can be found in the chapter "Start menu Inst32" of section "Starting the function "test apps" using menu item "[4] Test apps >>".

The following application dialog is shown after loading and starting the test app "[iniconverter]".

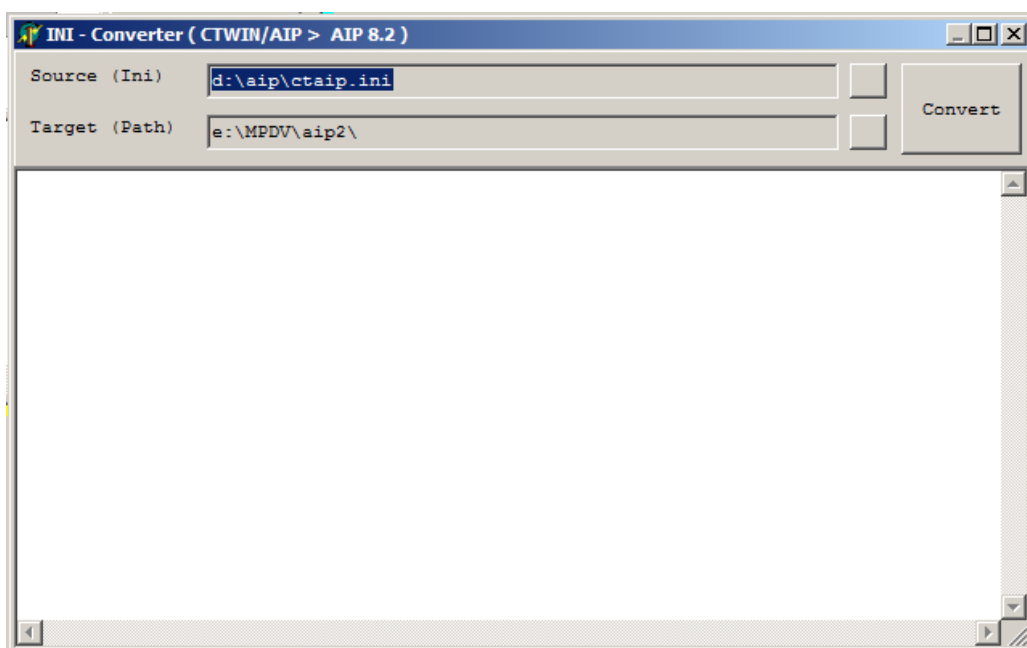

While starting the application, the required entries in "Source (INI)" and "Target (Path)" are assigned by default.

The following order applies for "Source (INI)":

- c:\aip\ctaip.ini
- d:\aip\ctaip.ini
- c:\ctwin\ctwin.ini
- d:\ctwin\ctwin.ini
- Registry "HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\Mpdv\CT\PATH\AIP"
- Registry „HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\Mpdv\CT\PATH\CTWIN"

The "Target (Path)" is pre-assigned via the following registry entry:

- Registry "HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\Mpdv\CT\PATH\AIP2"

If the values assigned by default are incorrect, they can be revised using the buttons  behind the input field.

The "Source (INI)" field can be changed using the standard dialog "open file".

The "Target (Path)" field can be changed using the standard dialog "search folder".



The button  converts/transfers INI files from the "Source" directory to the "Target" directory.

This command can be executed several times. In case the "Target" directory already includes several INI files, a dialog opens where updating/overwriting of these files must be confirmed. *(Please note: all dialogs can be confirmed provided that the AIP 8.2 terminal has not been implemented manually beforehand)*

The transfer result is documented in a memo field and stored in the file "iniconverter.txt" of the "Target" directory.

```

Started: 2015-12-01 12:02:09

Path : d:\aip\ >>> e:\MPDV\aip2\
+++ update < ctaip.ini > from < ctaip.ini >
>>> ctaip.ini <0> =====
>>> transfer section < System > to e:\MPDV\aip2\ctaip.ini =====
--- < hostname=win2008-7 >
--- < usr=241 >
--- < UpdateTime=1 >
--- < MaxProtSize=4194304 >
+++ set < hypath=./ > (CONST)
+++ set < loadfile=ctnet\win\aip2.txt > (AIP 8.2)
+++ set < backupfile=ctnet\win\aip2backup.txt > (AIP 8.2)
>>> transfer section < Comports > to e:\MPDV\aip2\ctaip.ini =====
--- < com15=LEGIC >
--- < com16=BAR >
--- < com1=MASTER >
--- < com2=MSS >
+++ set < com1=0 > (remove MASTER)

```

Please note:

- The configurations of PCC drivers, such as those included in the files mssmpdv.ini, opcmdv.ini, etc. must be checked and adjusted to the new installation, if necessary.
- The INI files used for the automatic transfer are filed together with the file "iniconverter.txt" in the sub-directory ".\ini-srce\<yyyymmdd-hhmmss>\" of the "Target" directory.