

1 Local Configuration File keyboard.ini

Settings for the virtual keyboard are configured for specific AIP terminals in the keyboard.ini file of the directory c:\ctaip.



Changes to the configuration file will not take effect until after the terminal software has been restarted.

Logic enabling the virtual keyboard:

The AIP terminal shows the keyboard for fields where data can be entered. The keyboard is positioned as described below:

Logic for positioning of the virtual keyboard:

As soon as the activation command has been sent, the keyboard receives the coordinates for the center as well as information on the height and width of the control element to which it is added.

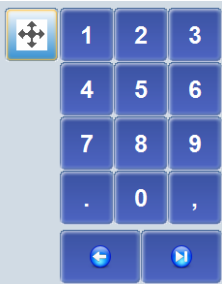
At first, an attempt is made to attach the keyboard directly below the control element. If the lower margin is not sufficient, an attempt is made to place the keyboard directly above the control field. If the space above the control element is not sufficient for the keyboard, an attempt is made to position the keyboard at the bottom margin of the screen. In case the space above the control panel is three times as large as the one below the control element, the keyboard will be positioned at the top margin of the screen.

These are the priorities for horizontal alignment:

- to the right of the control
- to the left of the control
- to the screen margin that is farther from the control

If the "VirtScreenSize" option is enabled, the virtual keyboard is not aligned within the virtual screen but still within the real screen. Consequently, the keyboard may also reach beyond the terminal program.

Entry	Comment
Section [User]	General settings

Entry	Comment
Key1=del,8,Delete Key2=<,37,Cursor left Key3=>,-39,Cursor right Key4=<<,36,Cursor at the beginning Key5=/	Definition of additional customer-specific keys displayed in the upper row:  Keys are configured with the following syntax in tasten32.ini within the section [User]: Key<i>=<CH>[,<Code>[,<Comment>]] Key<i>: Key1..Key5 <CH>: Characters displayed on the key and the code of which is sent successfully tested characters: \$=)/?'`{[]}#.;<>_*~:€äüöÖ²³@ªº¿®Çüéääæ/£ø£®½¼©¥ăµ Characters that lead to errors while testing: !"\$%(&,' <Code>: Code that is sent instead of the character code <Comment>: any comment
ButtonShift=ON	Show key "shift" The key has been designed for switching between upper case and lower case letters
ContextSensitive=off	Starting from version 2.0.1.5 of keyboard.exe (30 April 2012), the virtual keyboard automatically shows or hides letters. This depends on whether the current field is numeric or alphanumeric. This button disables the function so that the virtual keyboard is always "opened" ("dropped down"). 

Entry	Comment
HideTime=10 HideTime=0	Starting from version 2.0.1.5 of keyboard.exe (30 April 2012), there is a new button on the virtual keyboard allowing to disable/hide the keyboard for a configurable period of time (by default=10 sec.). Once switched to a new field, the virtual keyboard will immediately appear at the new position even if the hide period has not yet expired. The "hide" button is removed by configuring HideTime=0. 
HideMode=1 HideMode=2 Trace=1	HideMode=0 (by default) means the virtual keyboard appears, once another dialog (e.g. a message indicating "... is being loaded...") is opened and the input focus returns to the dialog. 1: The virtual keyboard is hidden over the indicated period, even though another AIP dialog is opened. The virtual keyboard is shown immediately after switching to another field of the dialog. 2: Like (1) but the virtual keyboard remains hidden even after switching to another field of the dialog. The virtual keyboard is only shown before the HideTime has expired, if the dialog is closed and reopened. Trace=1 enables logging (prot_kbd.txt) for the virtual keyboard. (AIP 2.0.3.25 / keyboard 2.0.2.3)
ScaleMultiplier=0.7	Additional scaling factor reducing or increasing the keyboard. This makes it possible to cover as less information as possible and to keep maximum user friendliness. This setting is useful, in particular, for large screens with low resolution and vice versa. (keyboard.exe V2.0.1.5)
KEYMODE=QWERTZ	Alphanumeric mode based on the German typewriter keyboard (keyboard.exe V2.0.2.2)
Section [SKIN]	General settings
[SKIN] Directory=..\..\..\tastatur\skins Name=mpdv Saturation=0 Hue=0 SkinButton=on	Configuration of the skin (normally, default values are sufficient – the section is not required) Shows a button enabling and disabling the skin