

1 Merging Serial Numbers on the AIP

Purpose

You use the dialog "Merge serial numbers" to group several materials that are listed by serial numbers. These materials are then listed under one number and can be used and planned more easily in the system. The system saves all serial numbers that are merged in one number.

Requirements

You must make different configurations in the system to use the dialog. For further details, refer to the document [Description of the configuration to use merged serial numbers](#).

Dialog *Merge serial numbers*

The "merge serial number" dialog (A_SNR_U) is a workflow dialog, which provides extensive possibilities for data collection. By default, the dialog includes the following workflow steps:

Workflow step / dialog	Technical name	Purpose
Merge serial numbers	WF_A_SNR_A	This workflow step shows basic data of the serial number or the user can enter this data here.
Merged batch attributes	WF_SNR_ATTR	Recording of batch attributes for the merged batch
Merged batch documents	WF_SNR_DOC	Recording of document links for the merged batch
Merge	A_SNR_MARRIED	Dialog to identify and assign the different ingoing serial numbers
Serial number data	SNR_DATA_MARRIED	Dialog to enter additional data specific to serial numbers. The dialog can only be started for a single serial number.

Depending on the active workflow step, different function keys are provided.

Basically, data is collected in two steps:

- Merge serial numbers


In the first step two or more serial numbers are merged. This process is completed and the "merge serial number" workflow step is opened again showing the superordinate serial number in the table.

Now either additional serial numbers can be added and merged or further data (batch attributes and document links) is recorded for an already merged serial number.

- Collection for merged batches

Basically, data is collected for the merged batch when the merged batch is completed; but data collection can also be started at an earlier point in time.

The following diagram illustrates the two cycles of data collection:

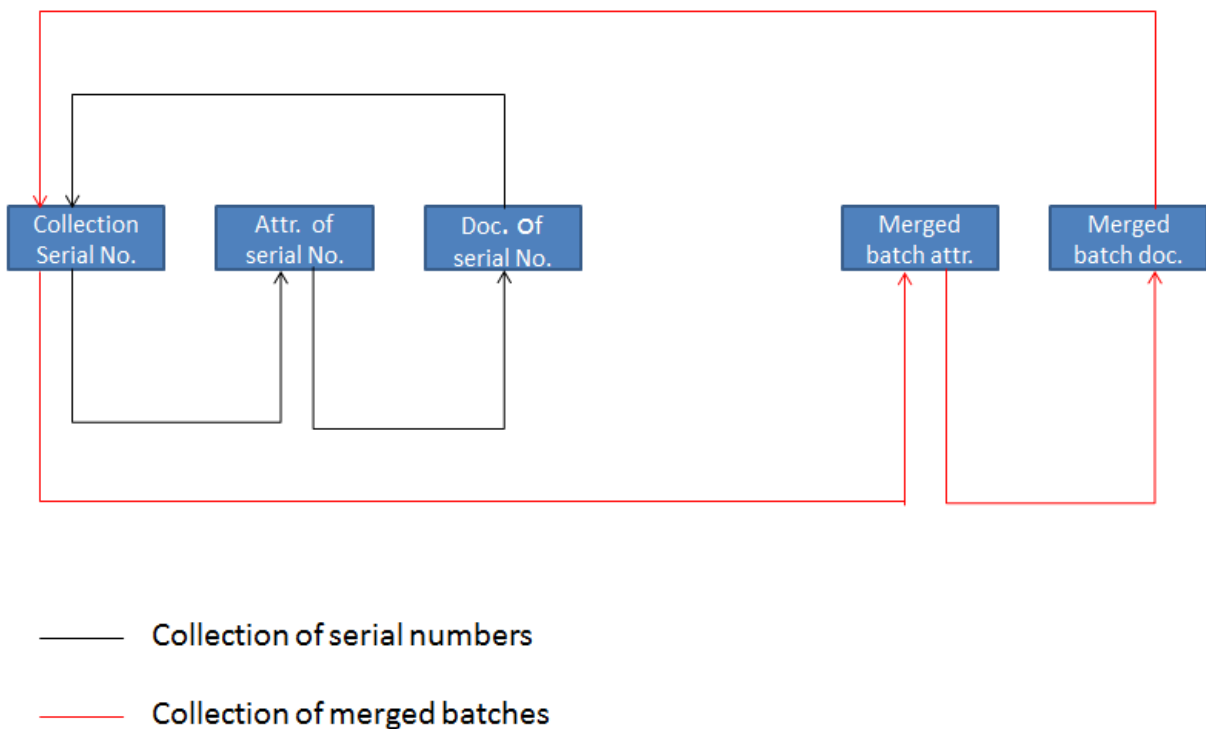

Workflow step: merge serial number

You use the workflow step "Collection of serial numbers" to enter data for one or several serial numbers.

The dialog shows the following data that cannot be modified:

Workplace

Current workplace that is selected in the main view on the terminal.

Operation

Currently running operation that is selected in the main view on the terminal.

Material

Material produced by the operation that is specified for the article of the operation.

Merged batch

Number that the system assigns to the next merged batch that is set up.

The user can enter the following data:

Staff badge number

The input of the staff badge number is mandatory.

Quality

The user can specify the quality. You must enter a reason for the qualities "scrap", "open" and "rework".

Material buffer (*1)

The material buffer defined for the machine is suggested as the target material buffer.

Comment (*1)

You can enter a comment on the merged batch.

Transport unit (*1)

The system preassigns the transport unit that is identified as default unit for the material type of the operation in the [Assignment material type - transport unit](#).

If no assignment is available, "SYSTEM" is entered.

Transfer of data (for each merged batch / all merged batches from now on)

For the fields labeled with (*1), you can specify if the field specifications only apply for the merged batch that is currently being processed or for this and all future merged batches of this operation.

This definition applies until the operation is interrupted and/or logged off, also if the shift changes.

The serial number table shows the superordinate serial numbers that have already been merged and, therefore, are part of the currently running merged batch.

Single serial numbers can be selected in the table by clicking on the relevant row.

The button bar provides several function buttons. Using the buttons, you can record data for a serial number or complete a posting:

Designation (name)	Purpose
--------------------	---------

Designation (name)	Purpose
Close	Closes the dialog. Already merged serial numbers remain.
Complete	The currently generated merged batch is completed for the entered/merged serial numbers. The merged batch number is displayed on the terminal. If the user confirms it, the dialog remains open and the user can enter additional data for merged batches.
Merge	Dialog to select and assign serial numbers that are to be merged.
Serial number data	Dialog to enter data for a specific serial number. You can call the dialog for one specified serial number only. The number can also be the number of an already merged serial number from the grid of serial numbers.
Next	Continues with the next workflow step

Dialog "Merge"

In the dialog "Merge", the ingoing serial numbers (of the available merged batches) are identified, grouped and transferred to the superordinate serial number. You must call the dialog for each superordinate serial number and enter the data in the dialog.

You must enter the following data:

Superordinate serial number

A selection list opens where the available, superordinate serial numbers may be chosen. You can identify the superordinate serial number via the [identifier Superordinate SNR = Superordinate](#) in the component list.

Assigned serial number

A selection list opens where you can select the available, ingoing serial numbers. All serial numbers of the registered merged batches are offered that have not yet been assembled and that do not pertain to the superordinate serial number.

1 – n serial numbers can be selected and taken over.

Overview grid

The table shows the selected serial numbers that are to be merged. For each serial number it is obvious if it is a superordinate serial number or an ingoing serial number.

The button bar provides several function buttons:

Designation (name)	Purpose
Cancel	Exits the dialog without modifying, accepting or posting of data.
Accept	If the superordinate serial number or assigned serial number is entered manually in the input field, this function key takes it over in the overview grid.
Delete	The entire assignment is deleted. A new assignment process may be started directly after deletion.
Complete	Directly posts the assignment made.  The assignment is posted on the terminal and server, once it has been completed. Corrections can only be made via the Separating/Rebuilding Serial Numbers dialog.

Dialog "serial number data - batch attributes"

Batch attributes may be entered for the serial number in the "serial number attributes" workflow step of the "serial number data" dialog.

The "attributes" function key allows entering attributes for a batch or for all serial numbers. The input dialog lists all attributes where the option "Capture attribute while generating batch" is enabled for the material type in the [Configuration of the batch attributes](#).

You can use the function key "Continue" to record document links for the serial number.



The list only shows recorded batch attributes. Other available batch attributes are not shown.

Dialog "serial number data – document links"

You can specify document links for a serial number using the dialog "serial number data", workflow step "document links".

The user selects one of the following input options:

- For each serial number

If this option is enabled, the entered document links are only saved for this serial number. The entered document links are stored and suggested the next time a serial number is recorded.

- All serial numbers in this merged batch

If this option is enabled, the entered document links are saved for all serial numbers of this merged batch. The entered document links are stored and suggested the next time when the serial numbers for a merged batch are recorded. It is helpful to enable this option when you start to record document links. This way, all serial numbers in the merged batch include the document links and you need not specify the links for each serial number.

The list only shows the document links recorded in this process. If document links of the serial number are inherited from previous processes, these links are not shown.



You only use this dialog to record document links and not to show the links. You can display all document links that are available for a serial number or a batch/merged batch if you call the batch information (if configured accordingly in the document management).

You can only use this dialog to record document links (URL). Another function is currently not available.

Workflow step - merged batch attributes

You can use the workflow step "merged batch attributes" to record batch attributes for merged batches.

You can use the "attributes" function key to enter attributes for the merged batch that is currently being processed or for this and all future merged batches of this operation. The input dialog lists all attributes where the option "Capture attribute while generating batch" is enabled for the material type in the [Configuration of the batch attributes](#).

You can use the function key "Continue" to record document links for the merged batch.



The list only shows document links recorded, document links that might already be available are not shown.

Workflow step - merged batch documents

You can record document links for a merged batch in the workflow step "document links" of the dialog main view.

The user selects one of the following input options:

- For each merged batch

If this option is enabled, the entered document links are saved for this merged batch only. The entered document links are stored and suggested the next time a merged batch is recorded.

- All merged batches from now on

If this option is enabled, the entered document links are saved for the current merged batch. And the values are saved for all further merged batches (that are generated from now on)

The list only shows the document links recorded in this process. If document links are inherited from previous processes, these links are not shown.



You only use this dialog to record document links and not to show the links. You can display all document links that are available for a serial number or a batch/merged batch if you call the batch information (if configured accordingly in the document management).

You can only use this dialog to record document links (URL). Another function is currently not available.