

1 Generate Transport Order

Overview

License	MPL-TRA
---------	---------

Usage

The functionality described below enables transport orders to be created manually at the shop floor terminal AIP.

Prerequisite

In order to use this function, the following [configuration](#) is required

Function at Terminal

The function is triggered manually by activating the button in the "Sequencing list" (TRANRLIST) screen.



If the terminal is offline, the posting function is available to a limited extent on the basis of the available data in the sequencing list. In the offline case, errors are not indicated if a posting fails at the server.

The operator enters the article number and the number of the object (batch or resource). The material buffers are used to determine from where to where the transport is to take place. The article numbers and order type are used to search for an active work plan through which the transport order is created. If no work plan is found, an escalation process (TRANR.TAP_NOT_FOUND) is triggered.

Layout screen:

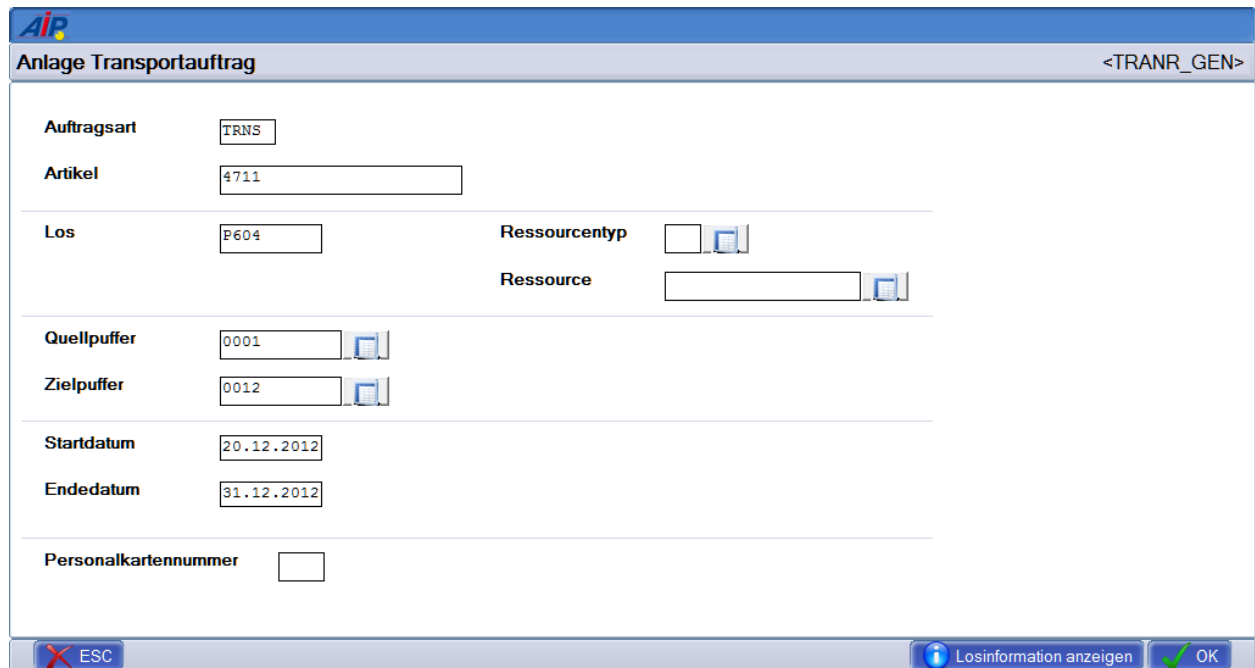


Fig.: Manual creation of transport order for a batch

Description of the input fields:

Order type

The order type is set automatically to TRNS and is required for creating the transport order from a work plan.

Article number

The article number determines which type of material is to be transported. The number is transferred to the transport order. If a batch is transported, the entry must match the article at the batch. If a resource is transported, the article number is irrelevant.

Batch number

For a batch-related transport, an existing and free batch must be entered for the transport. Upon successful generation, the batch is assigned to the transport order. The batch article number must correspond to the article number entered. If the batch is valid, the material buffer is set automatically in the source material buffer field.

Resource Type

For a resource transport, entry of the resource type is relevant to ensure a clear assignment.

Resource

For a resource transport, entry of the resource number and resource type is relevant to ensure a clear assignment. A resource may be transported if it has not yet been assigned to any transport order, does not have the locked status and is located in the material buffer. Upon successful transport, the resource status changes to "transport".

Source material buffer

For batch-related transport, the batch must be located in this material buffer. This material buffer corresponds to the material buffer from where the transport starts. Upon entry of the batch or resource, the current buffer of the entered object is set automatically in the field.

Target material buffer

This material buffer corresponds to the buffer to which a batch or a resource is to be transported.

Start date

Specifies the scheduled start date of the transport.

End date

Specifies the scheduled end date of the transport.

Staff badge number

To edit a transport order manually, the badge number of a person known to the system has to be entered.

Create Transport Order

The Create transport order function may be used by the operator to create a transport order for a batch or a resource.

The following items are verified upon creation:

- The transport order must have the 'Prepared' (V) status.
- The object to be transported (batch or resource) must be available in the source material buffer.

Result:

- Upon successful creation, a transport order is created and the generated order number is indicated in a notice dialog.
- The batch or resource is logically assigned to the transport order.