

1 Complaint Management

Overview

Menu	Quality management → Complaint management → Complaint management
Transaction code	cm
Function authorization	cm

Available user fields		
Where?	Object type/user field key	Source (type)
Complaint header: Table and detail view	CREKAUFT/REK	QM
Complaint detail: Table and detail view	CREKDET/REK	QM
Inspection points	CPANUMP/	PPUNKT
How to configure user fields? Which user field types are available?		

Purpose

You can use this function to create complaints of different types. By default, the types “customer complaint”, “supplier complaint” and “internal complaint” are provided. The complaint header should only include data that is not directly related to the item complained about. Details relating to the article/item must be defined in the lower-level complaint details.

Integration

This application provides data for the following reports/evaluations:

- Failure analysis of complaints
- Complaint analysis
- Analysis of complaint costs and
- Measure tracking
- Check for existing complaints when operations are logged on to the AIP (as of SP13)

When you log on operations on the AIP, the system can check if complaints are available for the article to be produced specified in the order header. To activate this function, manually create the CAQ option 1219. The option 1219 defines the complaint types, complaint results and complaint statuses, which are

checked. In the option, you also define the period of time that is checked. For details, refer to the procedure document of the option documentation "Configuration_QM_Options".

When creating this option with the value "Y", the system uses the configuration parameters in the *Addition* field during OP logon to check for existing complaints on the article or article + article index of the production order (order header). If complaints are found, then they are displayed in a message.

Different master data is used when a complaint is created, e.g.

- customers in case of a customer complaint,
- failures with the failure analysis,
- measures when defining measures,
- costs when costs are recorded and
- inspection requirements when a referenced inspection step is assigned.

Requirements

To create complaints, the relevant master data must be available. The intended use specifies which master data you must edit. As a general rule, you have to maintain the following master data:

- Articles,
- Failures,
- Measures,
- Costs,
- Companies,
- Departments and
- Persons

Selection criteria

Below, find a description of the selection criteria that are not self-explanatory.

Complaint tab

Complaint

Here, you can filter by the complaint number assigned manually or automatically.

Ext. complaint number

If the customer/supplier uses another complaint number than the number that is created for this complaint, it is specified in the "Ext. complaint number" field. This field may be filtered.

Complaining party tab

Complaining party type

The types "supplier", "customer", "department" and "person" are available. Subject to the selected type, an entry may be selected in the "complaining party" field.

Complaining party

You can filter by the contents of the party in charge list. In the master data, you specify the entries that are included in the list of parties in charge.

Designation

You can filter by the content of the field *Name 1* of the party in charge list. This is the department name with departments, the last name with external persons and the company name with companies.

Contact person tab**Contact person type**

Different types are available. Depending on the selected type, you can select an entry in field "Contact person".

Contact person

You can filter by the contents of the party in charge list. In the master data, you specify the entries that are included in the list of parties in charge.

Designation

You can filter by the content of the field *Name 1* of the party in charge list. This is the department name with departments, the last name with external persons and the company name with companies.

Tab *Party in charge***Party in charge type**

Different types are available. Depending on the selected type, you can select an entry in field "Party in charge type".

Party in charge type

You can filter by the contents of the party in charge list. In the master data, you specify the entries that are included in the list of parties in charge.

Designation

You can filter by the content of the field *Name 1* of the party in charge list. This is the department name with departments, the last name with external persons and the company name with companies.

Field descriptions

Complaint tab

Area

Selection list of the configured areas

Complaint

If you do not manually assign a complaint number, HYDRA automatically assigns a complaint number after saving. The combination of area and complaint number is unambiguous.

Complaint type

Customer complaint, supplier complaint or internal complaint.

Ext. complaint number

If the customer/supplier uses another complaint number than the number that is created for this complaint, it will be defined in the "ext. complaint number" field.

Received by

When the complaint is saved, the logged on user is entered here.

Date of receipt / time

The current system date/time is entered here when the complaint is saved.

Status

List of configured complaint statuses

Result

List of configured complaint results

Target date, time

Information field if you want to specify a date/time for the settlement of the complaint.

Actual date/time

If required, you can document a date/time when the complaint is regarded as "settled". No validation check is performed that checks the status currently set.

Complaining party type

Different types are available. No validation check is performed that checks the complaint type. In case of a customer complaint, enter the type "customer". The customer can then be entered as complaining party.

Complaining party

You can filter by the contents of the party in charge list. In the master data, you specify the entries that are included in the list of parties in charge. The selected entry is used as the complaining party.

Complaining party name 1, name 2, name 3

The contents of the fields name 1, name 2 and name 3 of the complaining party are shown. With customers, the fields display the customer name and the contents of address fields 1 and 2. With external persons, the fields display the last name, first name and initials.

Contact person type

Different types are available.

Contact person

The list of responsible parties is displayed. In the master data, you specify the entries that are included in the list of parties in charge. The selected entry is used as the contact person.

Contact name 1, name 2, name 3

The contents of the fields name 1, name 2 and name 3 of the contact are shown. With customers, the fields display the customer name and the contents of address fields 1 and 2. With external persons, the fields display the last name, first name and initials.

Party in charge type

Different types are available. This field does not have a special function, i.e. according to the context you must decide who is entered as party in charge. Normally, the person selected here is generally responsible for the entire complaint. However, this is not a monitored function.

Party in charge

The list of responsible parties is displayed. In the master data, you specify the entries that are included in the list of parties in charge. The selected entry is used as the party in charge.

Party in charge name 1, name 2, name 3

Displays the contents of the fields Name 1, Name 2 and Name 3 of the party in charge. With customers, the fields display the customer name and the contents of address fields 1 and 2. With external persons, the fields display the last name, first name and initials.

Additional data tab

Cost center

Information field to specify a cost center

Delivery note

Information field to state a delivery note number. No validation check is performed that checks the previously selected complaint type (e.g. supplier evaluation).

Delivery date

Information field to state a delivery date. No validation check is performed that checks the previously selected complaint type (e.g. supplier evaluation).

Storage location

Information field to specify a storage location.

Toolbar



Copy a complaint header

Function authorization: cm.copy

Use the copy function to open the selected complaint and to change the key fields. But only the complaint header is copied upon saving. The complaint details (i.e. documents, measures, costs and failure analyses) that might be included in the "copy template" are not copied.



Referencing complaints

Function authorization: none

To refer to other complaints (e.g. did a supplier complaint result from a customer complaint), a list/application is opened that shows complaints that have already been assigned or that can be used to create a reference to a complaint.



Calling the workflow history

Function authorization: none

Opens the graphic view of the workflow that is referenced in the complaint header. The graphic shows the current processing status. In addition to the graphic, a list shows every action included in the workflow.

Detail application *Assignment*

Function authorization	distrib
------------------------	---------

Main page

Assignment

Request data Cancel Print preview Print all

Insert Delete Save

Help on operation Help on application Help on detail application

Selection

Complaint	Area	Complaint type	Complaint	Date of receipt	Time	Status	Result
> Product...		customer compl...	001	2/7/2017	19:31	captured	indefinite

Complaint

Identification

Complaint type:

Area:

Complaint:

Date of receipt: Time:

Complaining party

Complaining party:

Complaining party name 1:

Complaining party name 2:

Complaining party name 3:

Status

Status:

Result:

Use this detail application to create relations between different complaints. Example: If you find out that a failure is caused by a supplier when treating a customer complaint and you then create a supplier complaint, then you can assign the triggering customer complaint to this supplier complaint.

For the assignment, select the area of the complaint and then open the complaint list to assign the required complaint.

Field descriptions

The fields are not described because they are self-explanatory.

Detail application *Complaint detail*

Function authorization	cmd
------------------------	-----

Details		Additional data		User fields		Administration	
Details							
Complaint	002			Detail no.	1		
Id	23 9383 712			Article designation	Headlight XA 77		
Drawing issue number	B						
Supplier							
Supplier No.	928762			Supplier designation	SANYO Co. Ltd.		
Purchase order number							
Serial number							
Batch							
Status							
Status				Result			
Party in charge							
Party in charge type	ext. Pers.						
Party in charge	0219						
Party in charge name 1	Miles						
Party in charge name 2	Betty						
Party in charge name 3	OVERHEAD						
Team				Team name			

Store all pieces of information that are directly connected to the article/material complained about in the complaint details because the article you complain about is assigned here.

This enables you to record "collective complaints". Consequently, you can complain about different items/articles using one complaint number. You can create and separately analyze a complaint detail for each article/item complained about. You can also create several complaint details for one article/item. This is required, for example, if different batches, etc. are complained about and need to be analyzed separately.

The field "complaint" is assigned to the complaint number of the currently selected complaint, when editing or creating new complaint details. The numeric value of the "detail" field is generated automatically, once this new data record has been saved and cannot be changed anymore.

Field descriptions

Tab *Details*

Complaint

Shows the complaint number of the higher-level complaint.

Detail no.

If you edit the complaint, this field shows the complaint detail number. This field is empty when a new data record is created. A complaint detail number is automatically assigned upon saving. This number is unique for this complaint.

Article number, article designation, drawing issue number

To enter the article complained about, you can open the selection list of the article master data and select the relevant article. The article designation is displayed in the complaint details. You need not select the article using the master data, you can also enter the article and drawing issue number directly. In this case, the article designation is identified and displayed using the master data catalog when the complaint detail is saved.

Supplier no.

Direct input of the supplier number or selection via supplier catalog. The supplier name is then displayed after saving.

Purchase order number

Information field to enter a purchase order number. This field input does not depend on the selected complaint type.

Serial number

Information field to enter a serial number.

ERP batch

Information field to enter an ERP batch.

Status

Selection/display of the complaint detail status

Result

Selection/display of the result of the complaint detail

Party in charge type

For the input, different types are available. This field does not have a special function, i.e. according to the context you must decide who is entered as party in charge. Usually, the person selected here is responsible for the detailed processing of the complaint, i.e. provide information on the article complained about. However, this is not a monitored function.

Party in charge

Displays the list of parties in charge or the assigned party in charge. In the master data, you specify the entries that are included in the list of parties in charge. The selected entry is used as the party in charge.

Party in charge name 1, name 2, name 3

Displays the contents of the fields Name 1, Name 2 and Name 3 of the party in charge. With customers, the fields display the customer name and the contents of address fields 1 and 2. With external persons, the fields display the last name, first name and initials.

Team

Input or selection of a team. Teams are defined in the master data. After saving, the name and the team number are displayed.

Additional data tab**Delivery value**

Information field to enter/display a delivery value. This field is available for all complaint types.

Complaint value

Information field to enter/display the complaint value.

Delivery quantity

Information field to enter/display a delivery quantity. This field is available for all complaint types.

Complaint quantity

Information field to enter/display the quantity of the complaint.

Complaint share

Information field to enter/display the proportion complained about. The content of this field is not calculated automatically.

Checked quantity

Information field to enter/display the quantity checked. The customer must decide whether this refers to the quantity checked by the customer or by the complaining party.

Share of defects

Information field to enter/display the faulty quantity. The customer has to decide whether this refers to the defective quantity identified by the customer or by the complaining party.

Percentage of defects

Information field to enter/display the share of defects. The content of this field is not calculated automatically.

Insp. requirem. 1

Displays the assigned inspection requirement or provides the option to select an inspection requirement from the list of inspection requirements. The selection list provides all inspection

requirements from all sectors. When the inspection requirement is selected, this field displays the inspection requirement number. The relevant sector is also displayed, e.g. "E" for goods receipt or "F" for production.

Insp. requirem. 2

Displays the second inspection requirement assigned or provides the option to select an inspection requirement from the list of inspection requirements. The selection list provides all inspection requirements from all sectors. When the inspection requirement is selected, this field displays the inspection requirement number. The relevant sector is also displayed, e.g. "E" for goods receipt or "F" for production.

Toolbar



Copy

If you click this button, the selected complaint detail is copied and saved with a new complaint detail number. The copied complaint detail includes the assigned failure types, all assigned failure information (failure location, failure cause, documents, characteristics, etc.). You can use the standard editing functions to make the required changes in the copy.

Measures, costs and documents assigned to the source complaint detail are not copied.



The function to copy complaint details is only available, if the extension [CopyComplaintMangament](#) is activated.



Calling the workflow history


Function authorization: none

Opens the graphic view of the referenced workflow for the complaint detail. The graphic shows the current processing status. In addition to the graphic, a list shows every action included in the workflow.

Detail application *Measures* in the complaint header and complaint details and in the failure analysis

Function authorization	cmme for measures in the complaint header
------------------------	---

	cmdme for measures in the complaint detail
	cmdfa for measures in the failure analysis

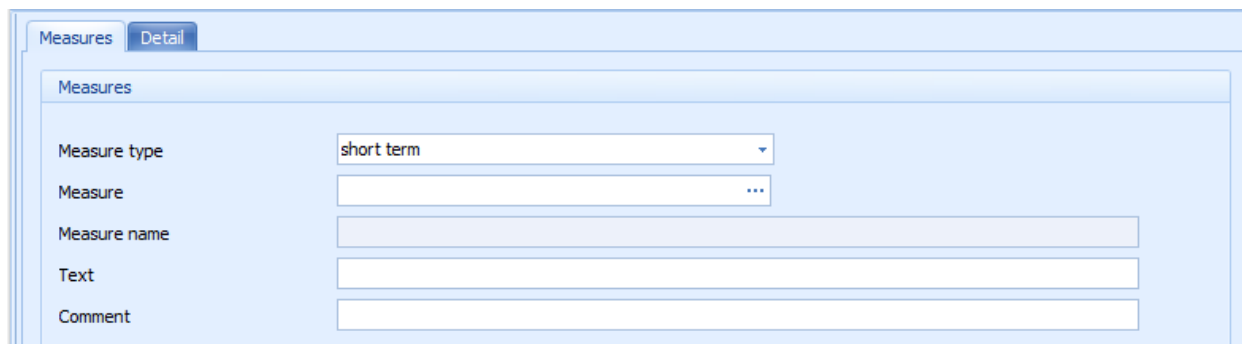

Measures Detail

Measures


Measure type: short term

Measure: ...

Measure name:

Text:

Comment:

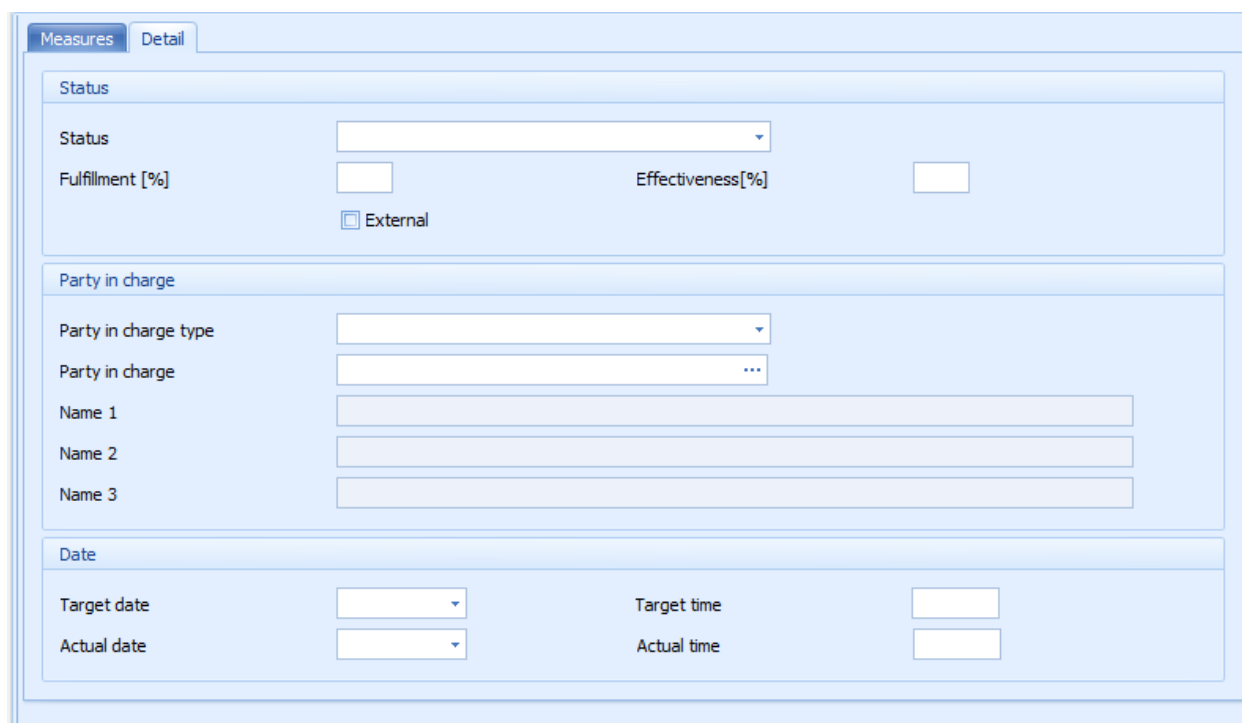

Measures Detail

Status

Status:

Fulfillment [%]:

Effectiveness[%]:

☐ External

Party in charge

Party in charge type:

Party in charge: ...

Name 1:

Name 2:

Name 3:

Date

Target date:

Target time:

Actual date:

Actual time:

A list of assigned measures is available for each selected complaint or complaint detail. You can add further measures or change, complement or delete existing measures at any time. The measures created here are also displayed in the application *Measure tracking* where the measures can be centrally edited.

When you create a new data record, you must enter a "measure". Only then, the data is saved. Next to the field *Measure*, you can open the "Measures" master data catalog, select a measure and assign it. You need not select an entry, direct input is also possible.

The statuses "pending", "read", "in process" and "finished" are available by default. For the measure type, you can select "no assignment" or "short-term", "medium-term" and "long-term". These statuses can be extended via system customization according to the customer's requirements.

Subject to the *Party in charge type* selected, you can use the selection function to open the pre-filtered list of parties in charge. The list only shows entries that are assigned to the option "responsible" in the master data. The types that you can select in the list are the same than the types described for the complaint header.

It is important to specify a target date. The target date can be used in the *Measure tracking* to filter the data.

Use the fields *Fulfillment* and *Effectiveness* to finally assess the defined measure.

Field descriptions

Measures tab

Measure type

Display or selection of the available measure types. The following types are available by default: "short-term", "medium-term", "long-term" and "no assignment".

Measure

Display of the measure number or selection or direct input of a measure number. Open the relevant master data catalog to select an entry.

Measure name

The name of the assigned measure number is displayed. If the measure number is directly entered, the name is only shown upon saving.

Text

Free text field to enter an additional measure text.

Comment

Free text field to enter an additional comment for the measure.

Detail tab

Status

Display or selection of the available measure types. The types "in process", "read", "done" and "pending" are provided by default.

Fulfillment [%]

Fulfillment in % can be displayed or entered.

Effectiveness [%]

Effectiveness in % can be displayed or entered.

External

This field can be used in the future to control the printout of forms. However, this field does not have a special function.

Party in charge type

For the input, different types are available. The type *External person* is usually entered here because persons are normally responsible for the processing of measures.

Party in charge

Displays the party in charge or you can select the party in charge from the list. In the master data, you specify the entries that are included in the list of parties in charge. The selected entry is used as the party in charge.

Party in charge name 1, name 2, name 3

Displays the contents of the fields *Name 1*, *Name 2* and *Name 3* of the party in charge. With customers, the fields display the customer name and the contents of address fields 1 and 2. With external persons, the fields display the last name, first name and initials.

Target date/time


Display or entry of a date and optionally a time specifying when the measure must be completed. It is not automatically monitored whether or not this time limit is respected. In the application *Measure tracking*, the content of this field is used for an important function because you can manually identify for all measures which measures have exceeded the target date, for example.

Actual date/time

You can display or enter a date and optionally a time by which the measure was finished. However, this field does not have a special function. In the application *Measure tracking*, you can use the content of this field to manually identify measures that have been completed with delay.

Detail application Costs in the complaint header and complaint detail

Function authorization	cmco for the costs in the complaint header cmdco for the costs in the complaint detail
------------------------	---

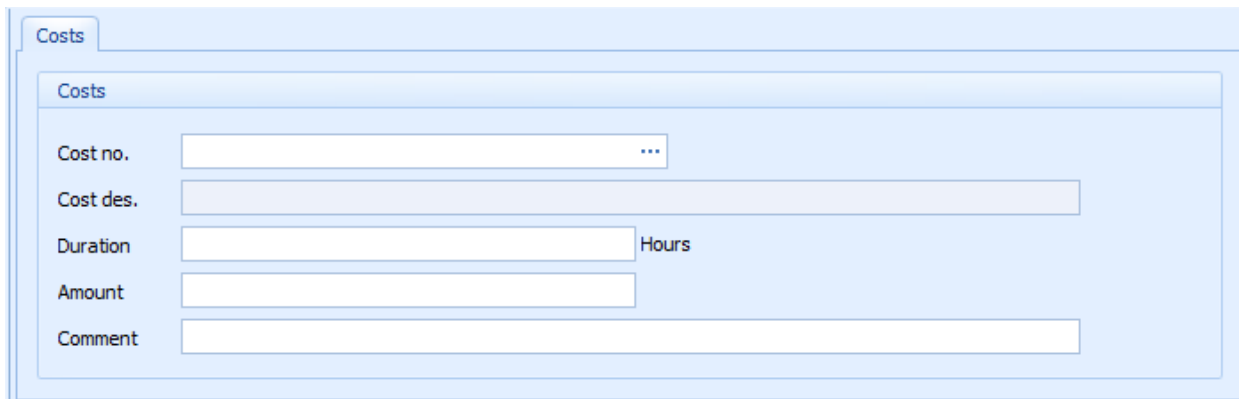

The list of assigned costs is available for each selected complaint or complaint detail. You can add additional costs or change/delete existing costs at any time. You can evaluate the costs specified here in the report *Analysis of complaint costs*.

If you create a new data record, you must enter a *Cost type*. Only then, you can save the costs. Next to the field *Cost number*, you can open the master data catalog *Cost types* where you can select and assign a cost type. You need not select an entry, direct input is also possible.

If you assign an initial duration ("init duration" field) and an amount ("cost rate amount" field) to the cost type in the cost types catalog, then in the *Complaint costs* dialog the field *Duration* is assigned the value from "init duration" and the field *Amount* is assigned the product from "init duration" and "cost rate amount". If you create new costs and the field *Duration* is changed or taken over unchanged, then the field *Amount* is automatically recalculated after saving. The *Amount* is only calculated once when a new data record is created. If the data record is changed after the initial creation, then the fields *Duration* and *Amount* must be changed manually, because they are not automatically recalculated.

Field descriptions

Costs tab

Cost no.

Display of the cost number or selection or direct input of a cost type number. Open the relevant master data catalog to select an entry.

Cost des.

The name of the assigned cost number is shown. If the cost number is directly entered the designation is only displayed after saving.

Duration



The duration is entered or displayed in format "hh:mm:ss". When you transfer a cost type from the master data, this field is initially populated using the content of the field "init. duration" of the master data.

Amount

The (calculated) amount is entered or displayed. When you transfer a cost type from the master data, this field is initially populated using the content of the field "init. amount". When you create a new data record, the value of this field is calculated after saving by multiplying the field content *Duration* and the original content of this field.

Detail application *Documents* in the complaint header and complaint details and in the failure analysis

Function authorization	cm for documents in the complaint header cmd for documents in the complaint details cmdfa for documents in the failure analysis
------------------------	---

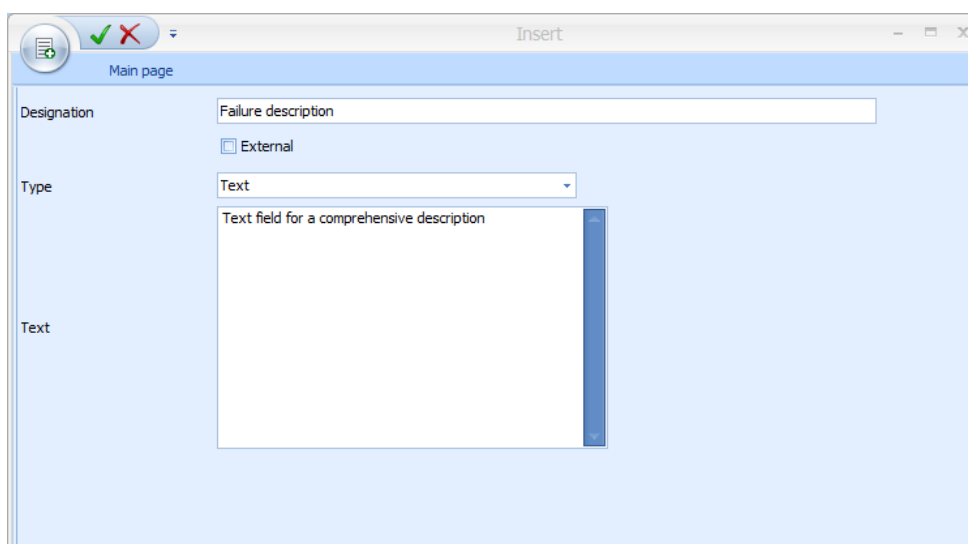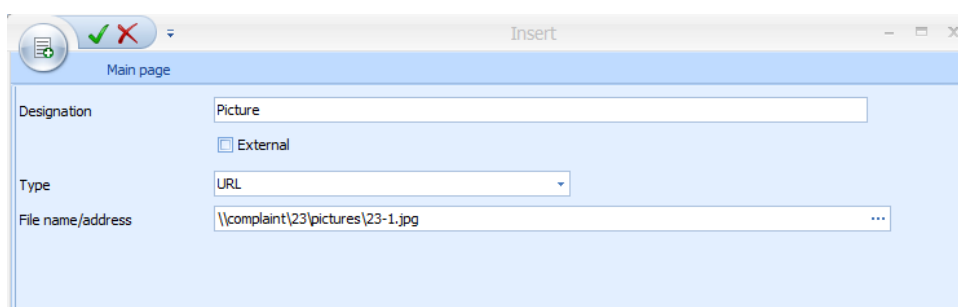If the tab *Documents* is activated, you can assign any number of documents to each complaint header, complaint detail and failure analysis. If you activate this tab, the toolbar provides the relevant buttons to edit documents. The *Documents* tab shows a list of already assigned documents.

You can use all formats registered by Windows when you assign documents. You can assign simple documents (e.g. written in Word), drawings of any format and videos. To display the format used, the

relevant program must be installed. To open the documents, the program linked in Windows to the format is used.

The file types "File", "URL", and "Text" are available. If you select the type "file", you can enter the file name including path manually. Select the file type "URL" to access the internet or intranet. Select the file type "text" to directly enter a text.

You can assign a designation/name to each document. Once saved, a consecutive item number (numeric) is automatically assigned to each document entry. Additional feature: If you enable the checkbox *External*, the document can also be used in an 8D report of the *Failure analysis*. You then specify in the 8D report whether or not this field is used as filter.

Toolbar

In addition to the standard functions, the application also provides the button to show documents.




Show documents

If a document link is stored, click this button to open and show the linked document. Condition: a program, which can show the linked file type, must be installed on the PC. To call the documents, you must make a relevant HYDRA path configuration.

Detail applicaiton *Failure type* (failure analysis)

Function authorization	cmdfa for failure types in the failure analysis
------------------------	---

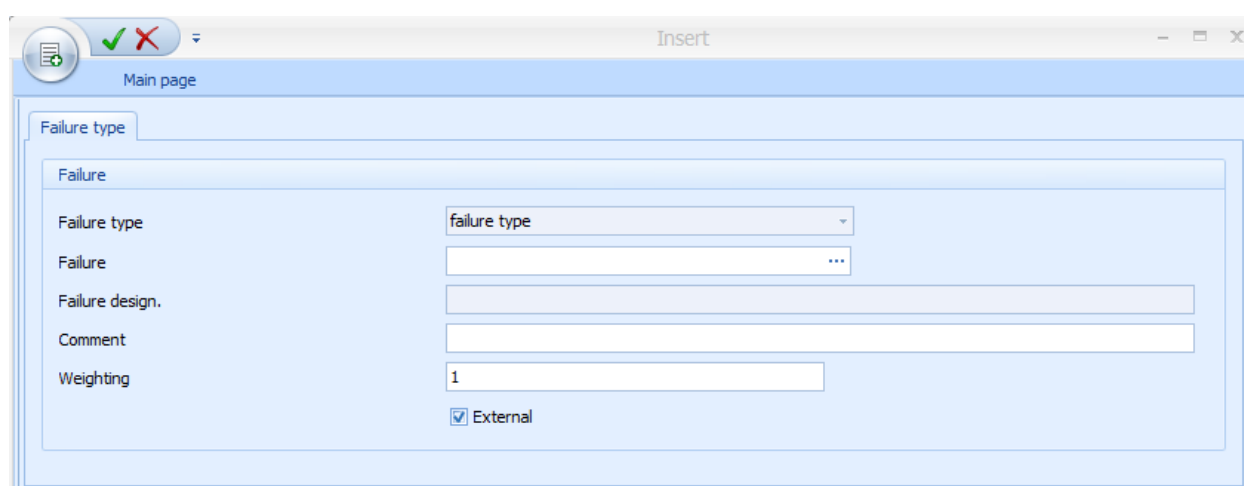

You can assign any number of failure types to each complaint detail. To print out an 8D report, it is mandatory to have a failure type assigned. To assign a failure type, you must open the list of failure types. When you create a new data record, you can directly enter the required failure type or select the


failure type from the master data catalog. If the failure number is entered directly, the relevant name is shown after saving.

You can also add a comment.

The specified weighting affects the failure analysis of the complaint management. If the error occurs 10 times, i.e. 10 items are defective, the relevant value should be entered here.

Toolbar

In addition to the standard functions, the function to print forms (8D report) is available.

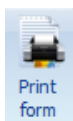

Print form

Function authorization: cmdfa.print

This function opens the detail application *Print form*. Here, the print of the 8D report is triggered. The 8D report only includes contents that reference the selected failure type; the *External* option must be enabled for the contents.

Print detail application

Function authorization	cmdfa.print for printing the failure analysis (8D report)
------------------------	---

The print dialog of the failure type opens a list of available reports. By default, printing is restricted to the 8D report. These are Word forms. The web services that are available in the respective context specify the potential content of these forms. In the master data of the quality management, you can define the form entries, i.e. the contents of the form list of the print dialog. Here, you can also specify the basics for new forms and the form properties. You require a license in order to change the forms with respect to content and design.

Print toolbar

There are no other special function buttons in addition to the standard functions/features.

Detail applications *Failure location, Failure cause, Originator* for the failure type

Function authorization	cmdfa for failure locations, failure causes, origins in the failure analysis
------------------------	--

You can assign any number of failure locations, failure causes and origins to each failure type. Several tabs are displayed.

Failure type								Failure location							
Administration								Measures							
Failure type	Failure	Failure design.	External	Weighting	...	Created	Created by	Changed	Failure type	Failure	Failure des...	External	Weighting	Comment	Created
> error type	02-010	Diameter too small	☒	1		12/10/20...	Miller	11/23/2016							
error type	01-01-001	Scratch	☒	1		12/10/20...	Miller	11/23/2016							
error type	01-01-007	Rust/Stain	☒	1		12/10/20...	Miller	11/23/2016							
error type	01-02-002	Surface too rough	☒	1		2/14/201...	Miller								

Select a failure type, then assign the contents. Subject to the tab selected, the toolbar provides the option to create a relevant entry.

To create an entry, follow the steps described in the detail application *Failure type* (Failure analysis).

Note: only if the option *External* is checked, the respective data is included in the 8D report.

Detail application *Measures* for the *Failure type*

Function authorization	cmdfa for measures in the failure analysis
------------------------	--

You can assign any number of measures to each failure type.

Failure type								Measures							
Administration								Measures							
Failure type	Failure	Failure design.	External	Weighting	...	Created	Created by	Changed	Measure type	Measure	Measure name	Text	Comment	Status	External
> error type	02-010	Diameter too small	☒	1		12/10/20...	Miller	11/23/2016							
error type	01-01-007	Rust/Stain	☒	1		12/10/20...	Miller	11/23/2016							
error type	01-01-001	Scratch	☒	1		12/10/20...	Miller	11/23/2016							
error type	01-02-002	Surface too rough	☒	1		2/14/201...	Miller								

Select a failure type, then assign the contents.

To create a measure, follow the steps described in the detail application *Measures* in the complaint header and complaint details and in the failure analysis.

Note: only if the option *External* is checked, the respective data is included in the 8D report.

Detail application *Documents* for the *Failure type*

Function authorization	cmdfa for measures in the failure analysis
------------------------	--

You can assign any number of documents to each failure type.

Failure type								Documents							
Administration								Measures							
Failure type	Failure	Failure design.	External	Weighting	...	Created	Created by	Changed	Documents	Failure cause	Characteristics	Documents	Failure location	Originator	Administration
> error type	02-010	Diameter too small	☒	1		12/10/20...	Miller	11/23/2016	Designation	Type	File name/address	External	Text	Assignment	Created
error type	01-01-007	Rust/Stain	☒	1		12/10/20...	Miller	11/23/2016							
error type	01-01-001	Scratch	☒	1		12/10/20...	Miller	11/23/2016							
error type	01-02-002	Surface too rough	☒	1		2/14/201...	Miller								

Select a failure type, then assign the contents.

To create a document, follow the steps described in the detail application *Measures* in the complaint header and complaint details and in the failure analysis. You can additionally add an assignment category

here. This is important to the 8D report. By default, the categories "comment", "forecast", "control of success" and "no assignment" are available.

Note: only if the option *External* is checked, the respective data is included in the 8D report.