

1 Splitting Batches in the AIP

Usage


You use the function to split up a batch into several batches in the AIP terminal. Subject to the batch type, batches may be split in the following ways:

- Splitting off quantities into individual batches
- Splitting off individual batches from existing merged batches into a new merged batch

Dialog configuration

Dialog configuration (CNR.SPLIT)

Define the function key "split batch" by copying the layout *gui\l_anr.xml* to *gui\l_anr_ln.xml* and the key "BDE comments". Then the following entries must be changed in the configuration of the copied key:

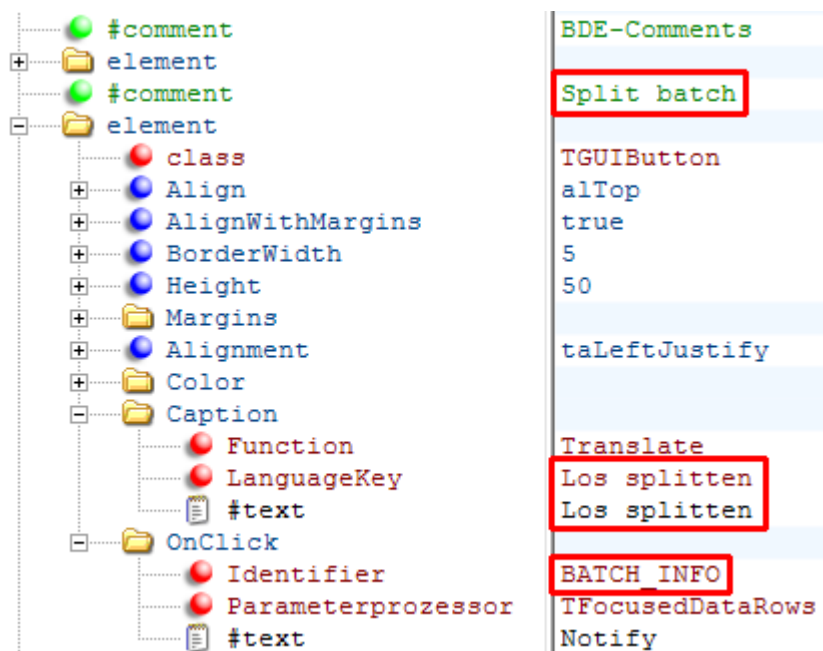

If you do not use tiles for the AIP2, define the function key in the file **ctaipbut.ini**:

[ANR-LN-Page3]

...

3=BATCH_INFO,L,Los splitten,Los splitten.png

The sections [BATCH_S_SPLIT] and [BATCH_SPLIT] are required for the layout configuration of *ctaisplay.ini*, irrespective of the used design:

```
[BATCH_S_SPLIT]

GRID_FONT=Arial

GRID_FONTSIZE=9

GRID_COLOR=clBlack

GRID_BACKGROUND=clWhite


GRID_CELLPAINT=ON

EXAMINE_CELLBKCOLOR=SELECT,SELECT,X-clLime


SELECT=C1,50,Z,*

DLL=C20,150,Z,batch

ATK=C20,150,L,article

SGR:REST=N12.0,100,R,quantity

EINH=C3,60,Z,unit

;CKL=C1,150,Z,class


[BATCH_SPLIT]

GRID_FONT=Arial

GRID_FONTSIZE=9

GRID_COLOR=clBlack

GRID_BACKGROUND=clWhite


GRID_CELLPAINT=ON

EXAMINE_CELLBKCOLOR=CKL,CKL,G-clLime|A-clRed|N-clBlue|O-clYellow


EGR=N12.3,250,R,quantity

CKL=C1,150,Z,class

EGG=C4,100,Z,reason
```

System configuration

Further system configurations are not required to split batches.