

Manual

Entry of Serial Numbers and Batch Numbers AIP-ESC 8.1

Version 1.0.23049

Last changed on: 01.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	Entering Serial and Batch Numbers.....	4
2	Entering Serial and Batch Numbers.....	5

1 Entering Serial and Batch Numbers

Purpose

The function enables the entry and management of batch and/or serial numbers of an order/operation that is logged on.

Implementation considerations

You should use the function package if you also wish to record batch and/or serial numbers for an order/operation on AIP in the course of shop floor data collection.

Integration

This function can be used in the course of mere shop floor data collection (BDE).

Features

- Batch numbers can be entered in parallel to order/operation log-ons (configurable per operation and workplace)
- Validation check regarding documentation required for batches when logging on an operation (use of operations requiring batch management)
- Recording of batch changes during order processing with indication of the batch numbers entered last.
- Entry of batch numbers via keyboard and/or barcode.
- Batch-related quantity and time entry



Posting dialogs are activated during HYDRA customizing (chargeable customization service).

2 Entering Serial and Batch Numbers

Usage

When entering individual batches, another batch can be entered at the terminal in addition to the operation and, depending on the production situation, may be defined as an input or an output batch.

Integration

Data are entered as part of the shop floor data collection (BDE) process. The type H BDE log records resulting from the data entry and illustrating the individual batch postings in chronological order can be displayed or edited in the "[order-related postings](#)" application.

Prerequisite

The following configurations are mandatory:

HYDRA basic settings

Using the "*Create unknown batches*" option in the HYDRA basic settings ("MPL" tab), a batch can be created automatically at the terminal by entering the batch number.

If automatic batch generation is not active, the batches must be created manually in HYDRA, since HYDRA will perform a validation check regarding the existence of a batch when batches are posted at the BDE terminal.

Manual batch generation can be activated through an interface or Client application after consultation with MPDV (not included in this license).

Terminal assignment

Batch entry may only be activated on machines assigned to terminals of the BDE and/or MDE operation mode.

Workplace/ Resource configuration

"Workplace configuration" tab → "MPL" category → "Batch management" category → select "Individual batch tracing".



Operations not requiring batch management can also be logged in at machines using batch management. In this case, entry of the batch number is not required. Please note that this is only possible for so-called workflow posting dialogs.

Operation data

For entry, the operation must be identified as requiring batch management.

The "Batch management requirement" flag can be preset by the ERP system (e.g. interface: HY72PPS Segment: HY72_AG_HD_001 (operation) field: OPT:CNR), or else set manually using the editing function in the MOC (presumes proper licensing/authorization).



Attempting to log on an operation requiring batch management at a workplace without active batch management will be refused by indication of a validation error.

Logging on an operation requiring batch management

The screenshot displays the AIP software interface. The top section, 'Machines/Workplaces', shows a table with columns: Machine/Workplace, Status, Status since, and Note. It lists three items: R000 (Roll stand), R001 (Slitter winder), and P000 (Packaging place), all with a status of 'PRODUCTION' and a status since date of '13.10.10' and time of '14:00'. Below this is a 'Page 1 • Page 2' indicator and buttons for 'Change view', 'Lock prod.status', 'Modify status', and 'Log OP on'.


The middle section, 'Operations on workplace', shows a table with columns: Article, Order, Operation, Target qty., Yield, Scrap, N, and T. It lists two operations for article '5468-41-0010': one with order 'M-RF0001' and target qty '1000 M' (yield 3525, scrap 18), and another with order 'MPL00001' and target qty '1000 M' (yield 503, scrap 34142).

Below the operations table are buttons for 'Batch Info', 'Enter GR batch', 'Repost batch', 'Batch logs', and 'Re-print'.

The bottom section, 'Produced output batches', shows a table with columns: Q, S, Batch No., Article, Length UOI, Weight UOI, Surface, UOM, Time, and Article Designation. It lists several batches for article '5468-41-0010', including 'PR4RD97117', 'PR4RD97116', 'PR4RD97115', 'PR4RD97114', 'PR4RD97113', 'PR4RD97112', 'PR4RD96116', and 'PR4RD96115'. Each batch entry includes its quantity, status, length, weight, surface, unit of measure, and time.

The interface includes a status bar at the bottom with the AIP logo and the date/time '01.07.13 11:50:48'.

The operation is selected in the "Select operation" tab. The status of the workplace/machine can be modified in the next tab, "Select status". This tab is only available at "single user workplaces".

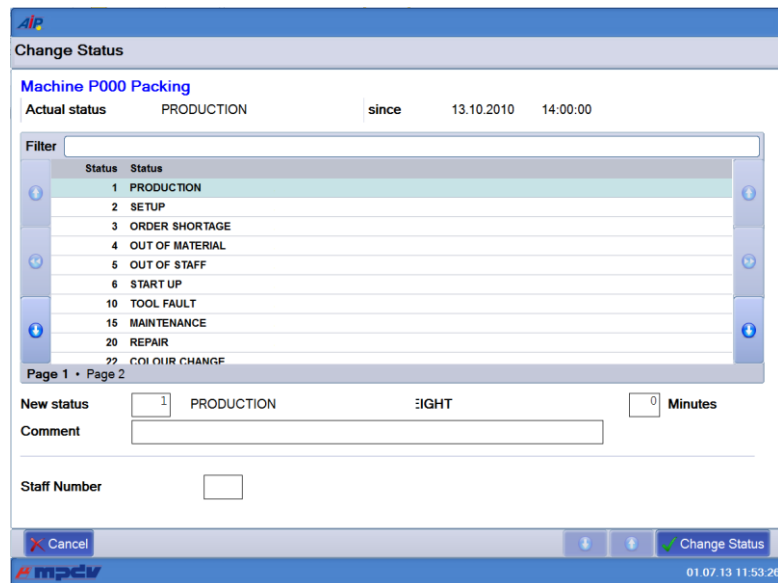


The batch number and the staff badge number are entered in the "Batch entry/confirmation" tab. For this purpose, an alphanumeric batch number with a maximum of 20 digits must be entered. It can be entered either manually or by barcode.

Changing batches at the terminal

While the operation requiring batch processing is logged on, you can switch to a new batch by means of the "Change of batches" function key.

The production data (quantities produced and duration) are posted to the operation and the current batch simultaneously.

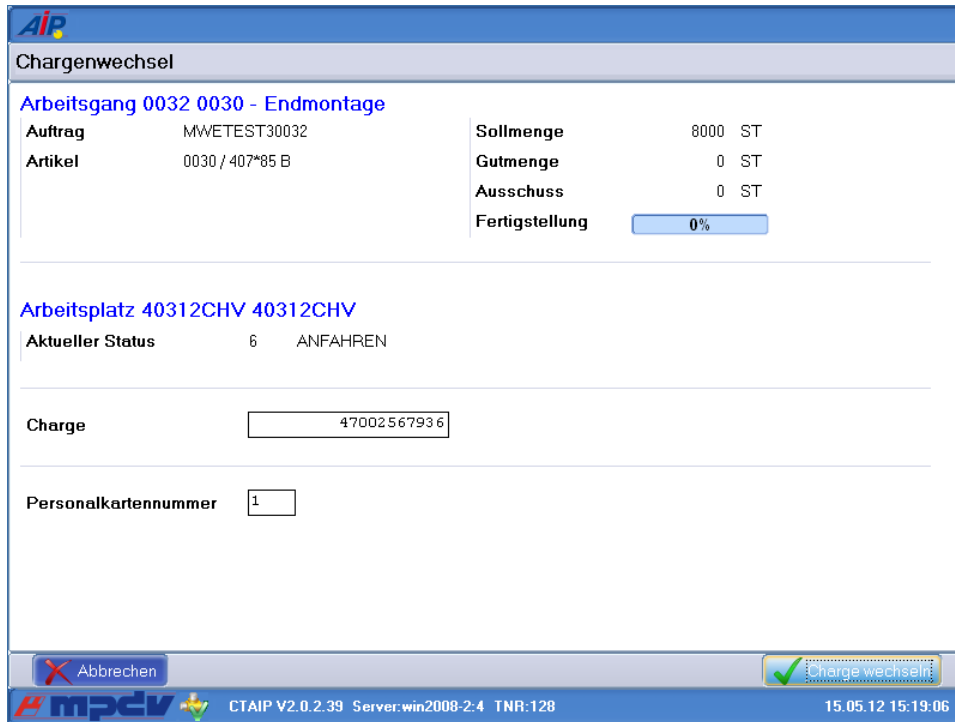

Chargenwechsel

Arbeitsgang 0032 0030 - Endmontage

Auftrag	MWETEST30032	Sollmenge	8000	ST
Artikel	0030 / 407*85 B	Gutmenge	0	ST
		Ausschuss	0	ST
		Fertigstellung	0%	

Arbeitsplatz 40312CHV 40312CHV

Aktueller Status 6 ANFAHREN

Charge

Personalkartennummer

Buttons: Abbrechen, Charge wechseln

Footer: CTAIP V2.0.2.39 Server: win2008-2:4 TNR: 128 15.05.12 15:19:06

The new batch number can be entered manually via the keyboard or by barcode. As is the case when logging on an operation, the person implementing the batch change must possess BDE authorization in order to post the operation.

Please note

The batch currently logged on can be displayed in the OP info, provided it was integrated into the appropriate dialog by customizing. Please note that this field can only be displayed either system-wide or specifically for a terminal group. It is not possible to show/hide the field based on a dialog control defined at the workplace as well as in the input field.



Scrap quantities recorded via the "Partial confirmation" (A_TR) dialog are posted to the order, but not to the batch. As a consequence, such quantities are not included in the log record type "H", either.