

Manual

Connection of KABA Access Terminals and Readers SCS-HCKZ 8.1

Version 1.0.23049

Last changed on: 02.09.2020

Copyright

©Copyright 2020 All rights reserved.

SAP® and R/3® are registered trademarks of SAP AG.

WINDOWS® is a registered trademark of Microsoft Corporation.

MPDV® and HYDRA® are registered trademarks of MPDV Mikrolab GmbH.

ORACLE® is a registered trademark of ORACLE Corporation, California, USA.

Copying and distribution of this documentation or any part thereof, for any purpose or in any form, is prohibited without prior written permission from MPDV Mikrolab GmbH.

The information contained in this documentation is subject to change without prior notice.

Contents

1	Connection of dormakaba biometric readers	4
2	Badges	5

1 Connection of dormakaba biometric readers

Purpose

You can use the product *SCS-BHCKZ 3.0* to connect the ZKS biometric hardware of dormakaba (biometric readers) to HYDRA.

Implementation notes

You use the product *SCS-BHCKZ 3.0* if the following conditions are true for you:

- You want to connect ZKS biometric hardware of dormakaba to HYDRA.
- You want to use the functions *Verification* or *Identification* in the dormakaba configuration.
- You want to transfer the alternative input options for verification and identification in HYDRA to ZKS hardware of dormakaba.

Integration

To use the product *SCS-BHCKZ 3.0*, you require the KABA communication software *B-COMM*, the HYDRA software *SCS-HCKZ 3.0* and *ZKS 8.2*.

Features

- Interface to transfer the alternative input options if the biometric data of persons cannot be read.
 - RFID via badge
 - Badge number via keypad

2 Badges

Overview

Menu	Human resources management → Access control → Badges Master data → Access control → Badges
Transaction code	badg
Function authorization	badg

You use this application to manage the existing badges and the respective owners.

The screenshot shows the 'Badges' application window. It has a menu bar with 'Main page' and 'Profile'. Below the menu bar is a toolbar with icons for 'Request data', 'Cancel', 'Print preview', 'Print all', 'Insert', 'Copy', 'Edit', 'Delete', 'Badge handout', 'Badge return', 'Badge printing', 'Modify image', 'Access authorizations', 'Go to', 'Save', and 'Help'. The main area is divided into two panes. The left pane shows a list of badges with columns: Badge, Valid from, Valid until, Badge type, and Name. The right pane shows the details of a selected badge, including fields for Badge, Badge type, Person, Company, Last name, First name, Pin code, Responsibility area, Validity (Valid from, Valid until, o'clock), and a checkbox for 'Block badge'.

Badge	Valid from	Valid until	Badge type	Name
0149	2/27/2006		Employee	Hoffman, Paul
1458	2/1/2000		Employee	Meyers, Joseph
2005	3/1/2000		Employee	Baker, Jake
2010	6/6/2001	6/6/2001	Visitor	Schmitt, Stefan
2011	9/1/1999		Employee	Berry, Claire
2012	4/1/2001	4/1/2001	Replacement	Berry, Claire
2049	9/1/1999		Employee	White, Susan
2223	1/1/2000		Employee	Miller, Steven
2455	6/1/1990		Employee	Albert, Claudia
2458	9/1/1970		Employee	Meyers, Harald
2514	3/1/1979		Employee	Brown, Albert
3434	1/23/2002		Employee	Flint, Eric
4125	1/31/2002	6/13/2008	Employee	Pernikova, Lisa
4125	6/14/2008		Employee	Pernikova, Lisa
4563	1/31/2002	6/13/2008	Employee	Green, Mary
4563	6/14/2008		Employee	Green, Mary

Available user fields

Where	Object type/user field key	Source (type)
Table and detail view	KNR/SYSTEM	Badges (HR)

[How to configure user fields?](#)

[Which user field types are available?](#)



If you create a person, a badge is automatically created for this person, if a badge number has been entered in the [HR master data](#).

Field descriptions

Badge

The badge number can include numbers (0-9) and the letters A-F.

Badge type

Define the badge type. The following badge types are available:

Employee	An employee's badge
Replacement	An employee's replacement badge
Visitor	Visitor's badge
Free	Free badge that is currently not used. It can be assigned to a new person.



The badge types *Replacement*, *Visitor* and *Free* are only available, if the license *Advanced access control* (ZKS-EZK) or *Management of visitor badges* (ZKS-BAV) is available.

Person, company

In case of staff badges and replacement badges, you must assign the badges to a person and a company. Visitor badges are created with the personnel number 0.

Last name, first name

Enter the person's last name and first name. If you select a personnel number, the two fields are automatically populated with the person's names from the HR master data.

PIN code, Confirmation

If you enter a PIN code in the reader, the badge cannot be misused by unauthorized persons. This function is not available for all terminal types. For Kaba Benzing terminals, this PIN code must be numeric and requires four digits. If you change the PIN code, the digits are masked by asterisk and must be entered a second time in the field *Confirmation*.

Responsibility area

You use the responsibility area to control the users who have access to a badge.

Valid from, to

You can define a validity period for a badge. If you do not enter an end date, the validity of the badge is unlimited. You can restrict the validity time on the first and last day of validity using the time fields. The validity time is only processed by terminals of type CT-385. You can restrict the validity time, but you cannot create a badge for multiple time periods of one specific day.

Input with keyboard

This option specifies if you can enter the badge number instead of using the biometric data for identification. You can use this option if the biometric data cannot be read.



For security reasons, we recommend to use this option only in combination with additional PIN code entry.

Input with badge

This option specifies if you can read the badge via RFID instead of using the biometric data for identification. You can use this option if the biometric data cannot be read.

Block badge

You use this option to block a badge. Blocked badges are not allowed to enter any access points. They are used to document the previous function and user.

Comment, Comment 2

You can enter any information in the comment fields. For example, it might be useful to enter a comment for visitor badges (company and purpose of the visit).

Contact person

For visitor badges, you can store the personnel number of the contact person.

Number plate

You can store the number plate of the badge owner in this field.

Badge handout, Badge return

Point in time when the badge is issued or returned.

Picture recording

Point in time of the last image assigned to the person.

Badge printing

Point in time when the function *Badge printing* was last called for this badge.

Badge layout

In this field, enter the badge layout to be used for this badge.

Badge layout printed

This field shows the badge layout that was last used for this badge.

Additional info

In tab *Additional info*, up to 30 fields are available. Name, length and position of the user fields can be configured in the [Configuration of badge fields](#).

Toolbar



Edit all selected badges

Function authorization: badg.massedit

You can use this function to edit data of several badges at the same time. You can select up to 10 HR master data fields and assign a value:

The screenshot shows a software window titled "Edit all selected badges". Inside the window, there is a section labeled "Main page". This section contains a vertical list of 10 rows. Each row consists of a text label "Please select field" followed by an empty rectangular input box. The window also features a standard title bar with a green checkmark icon, a red X icon, and a small dropdown arrow on the left, and standard minimize, maximize, and close buttons on the right.



Badge handout

Function authorization: badg.handout

Opens a dialog to enter the point in time when the badge is issued. The point in time of the badge generation is preassigned.

**Badge return**

Function authorization: badg.return

Opens a dialog to enter the point in time when the badge is returned. Returned badges are automatically blocked and the validity end date is set to today if the end date is empty or the date is in the future.

**Badge printing**

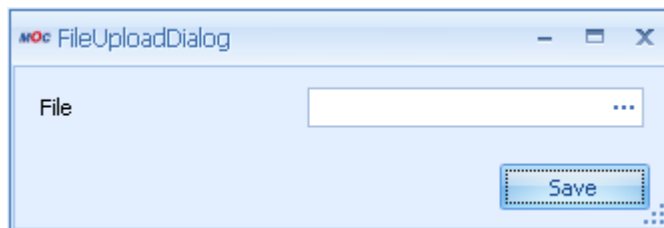
Function authorization: badg.print

Opens a window to print the selected badges.

**Modify image**

Function authorization: badg.picture

To assign an image, the following dialog opens:

**HR master data**

Calls the [HR master data](#).

**Access authorizations**

Shows the [Access profile assignments](#) for the selected badge.

**Access log**

Calls the [Access log](#) of the selected badge.

**Room zone overview**

Calls the [Room zone overview](#) of the selected badge.

**Badge layouts**

Function authorization: bala

Calls the configuration of the [Badge layouts](#).



Report designer

Function authorization: bala

[Design](#) of the selected badge layout. You must first request data, then you can call the function.

Integration

Synchronization of HR master data and badges

If you make changes in the HR master data, specific badge data are synchronized.

Company

Name and first name

PIN code

Picture

Additional information (configured HR master data and badge fields)

Date of joining and date of leaving

The system only synchronizes the additional information that has the same designations, data types and field formats.

Badges that were valid in the past are not changed. If you change name, company or an additional info field in the HR master, a new version is created in the badges, if required. Picture and PIN code are synchronized for all versions.

If the date of joining specified in the HR master data und the start of validity of a badge were identical, the start of validity changes if you change the date of joining. The same applies for the date of leaving in the HR master data.

For the date of joining and leaving, there are some restrictions. For example, you cannot change dates of the past and the validity time of badge versions must not overlap. The badge version is deleted if the start of validity of a badge is later than the end of validity after synchronization of the date of joining or leaving. Start and end of a badge validity can be moved, but not to an earlier point in time than the start of validity and not to a later point in time than the end of validity specified in the changed HR master data version.

And also vice versa, changed badge data is synchronized with specific data fields in the HR master data. For further details, refer to the documentation of the HR master data.